





Assembly Instruction


• SCREW ACCESSORIES

S1

5mm x1

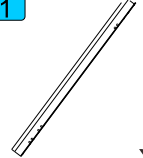
S2

M6*16 x42

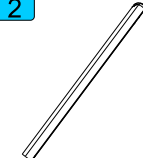
S3

x44

 
S4

x8

 
S5

x1

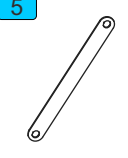
• PARTS ACCESSORIES

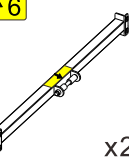
1

x2

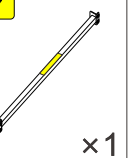
2

x2


3

x2

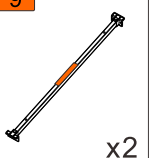
4

x6

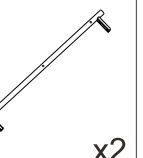
5

x1

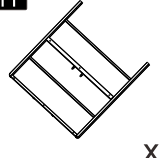
6

x2


7

x1


8

x2

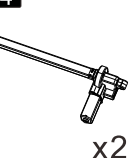
9

x2

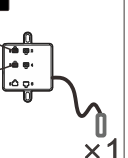
10

x2

 
11

x2

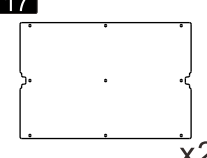
12

x4

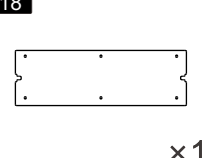
13

x1

14

x2

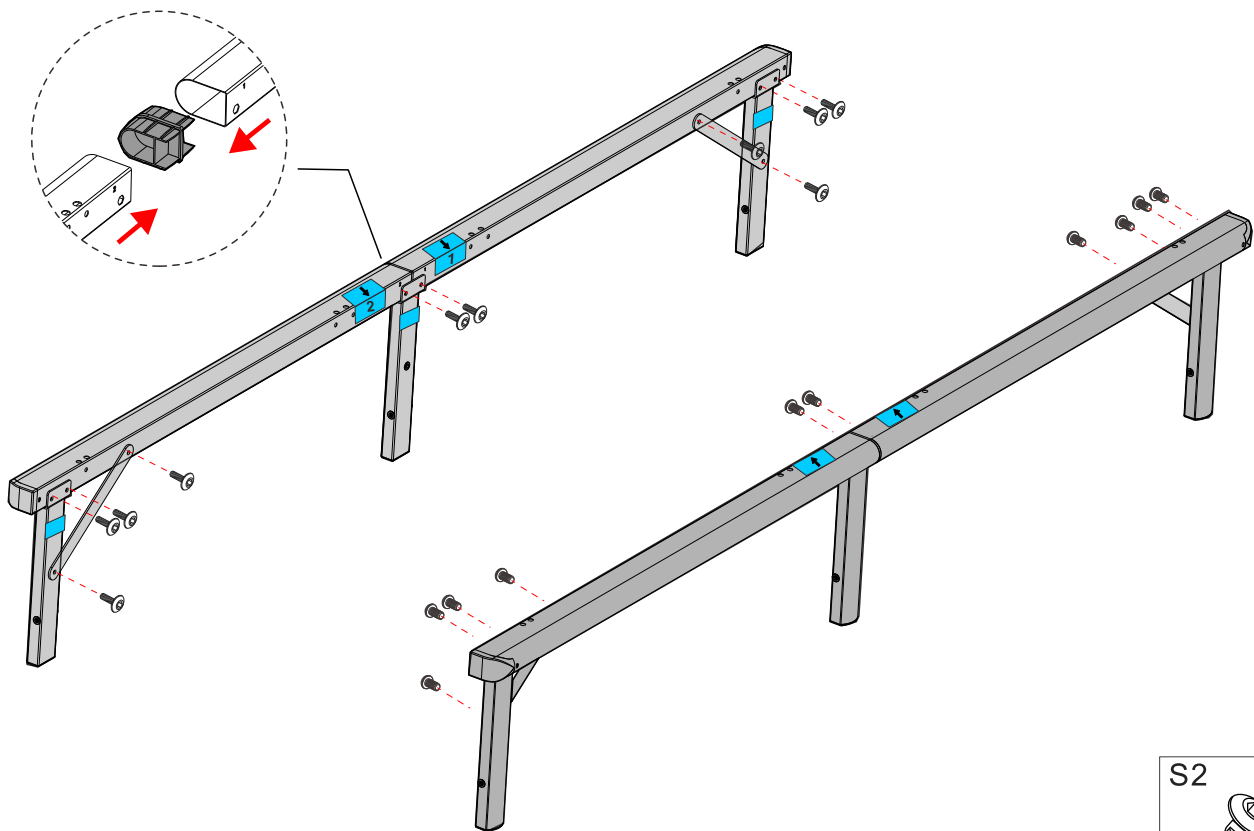
15

x1

16

x1

17

x2

18

x1

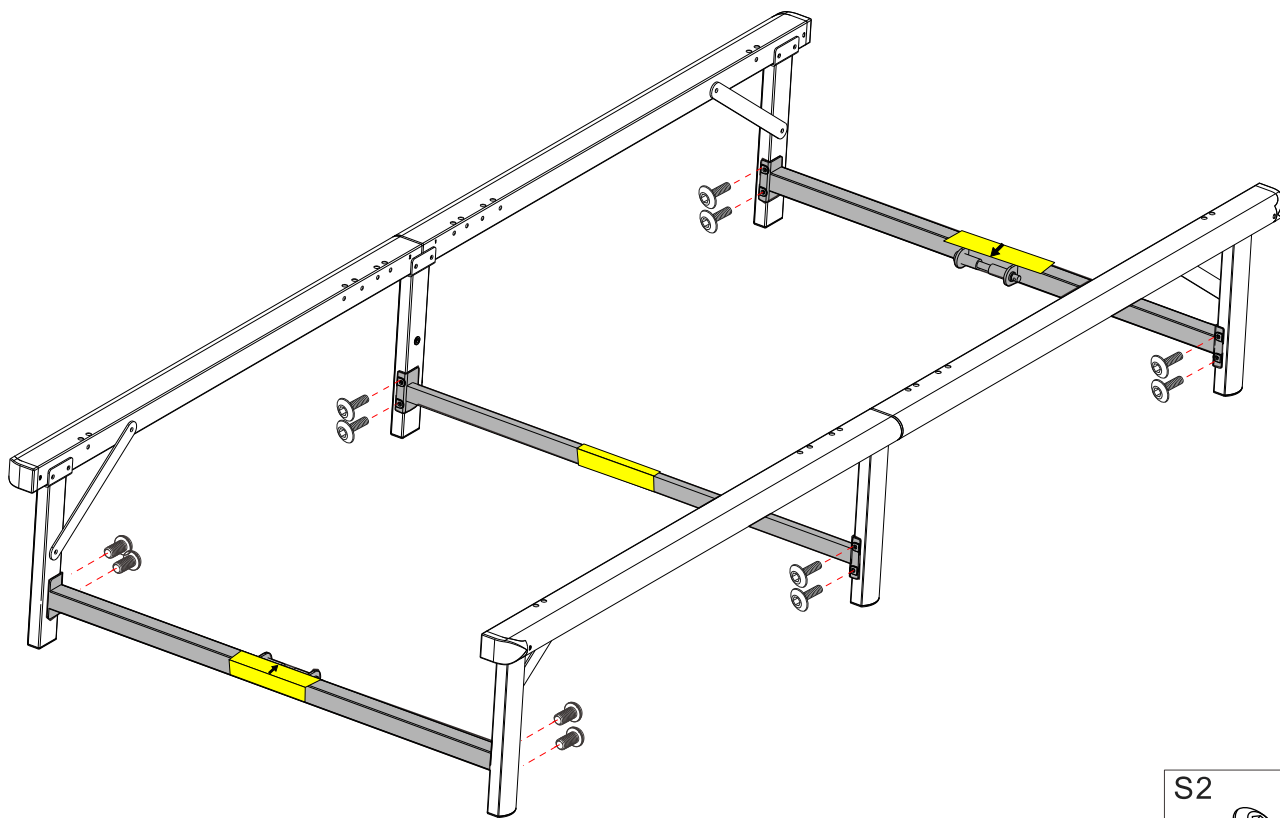
1




S2

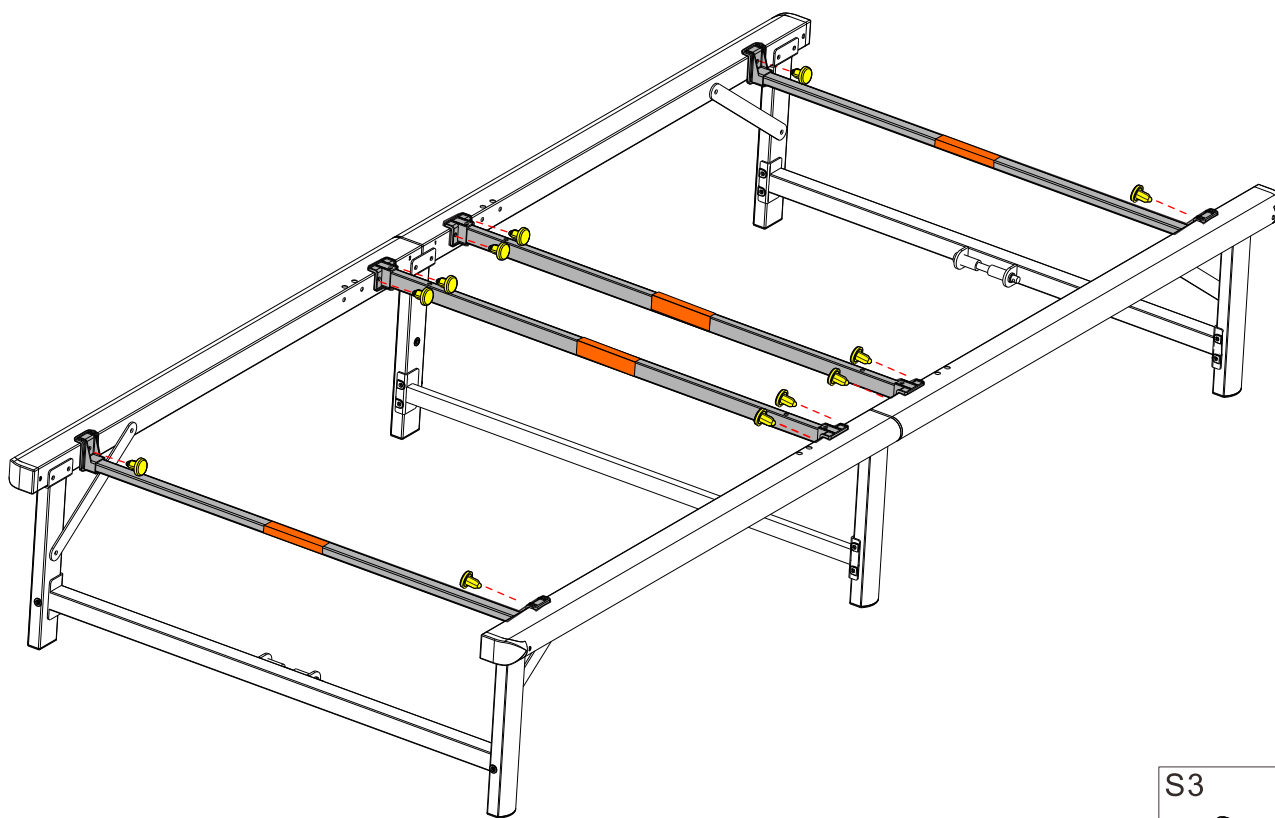
M6*16 x20


2



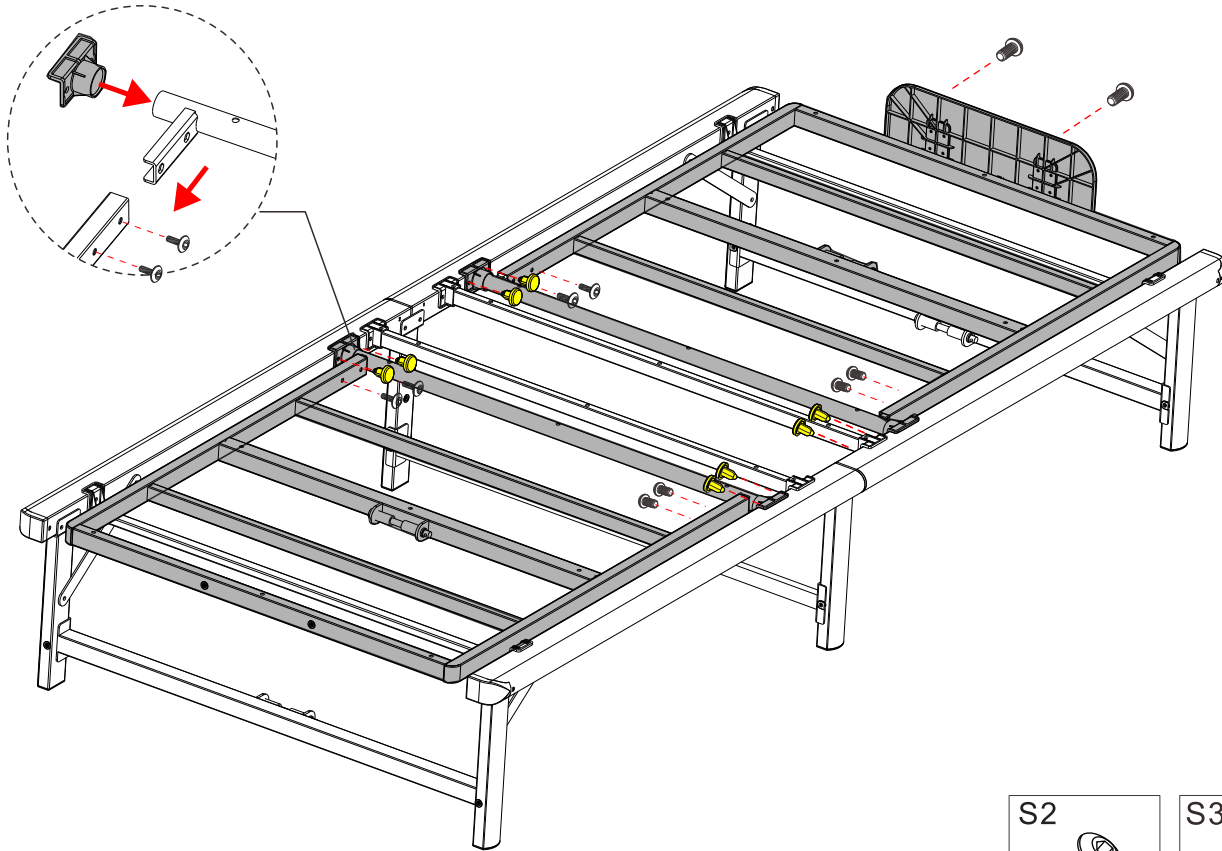
S2

M6*16 x12

3



S3

x12

4



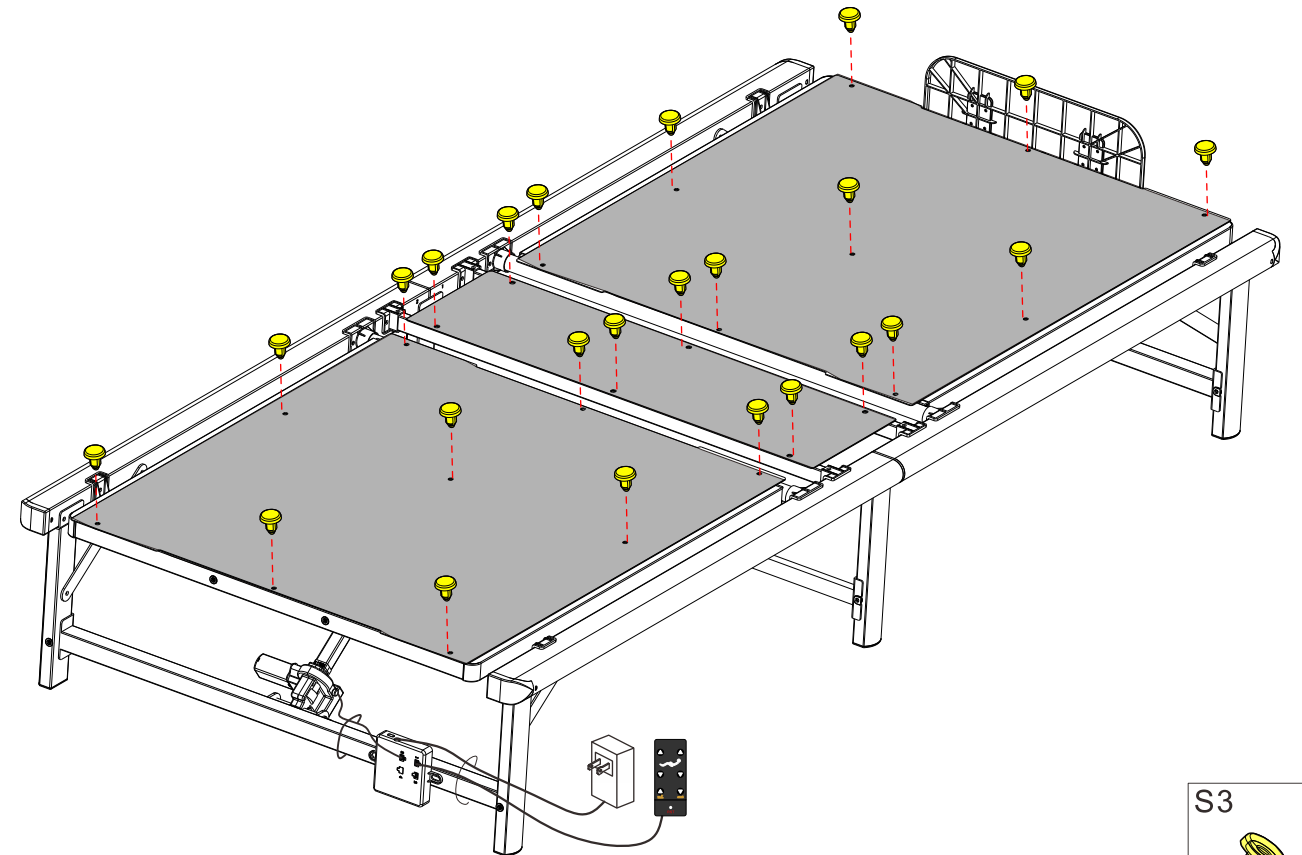
S2



S3



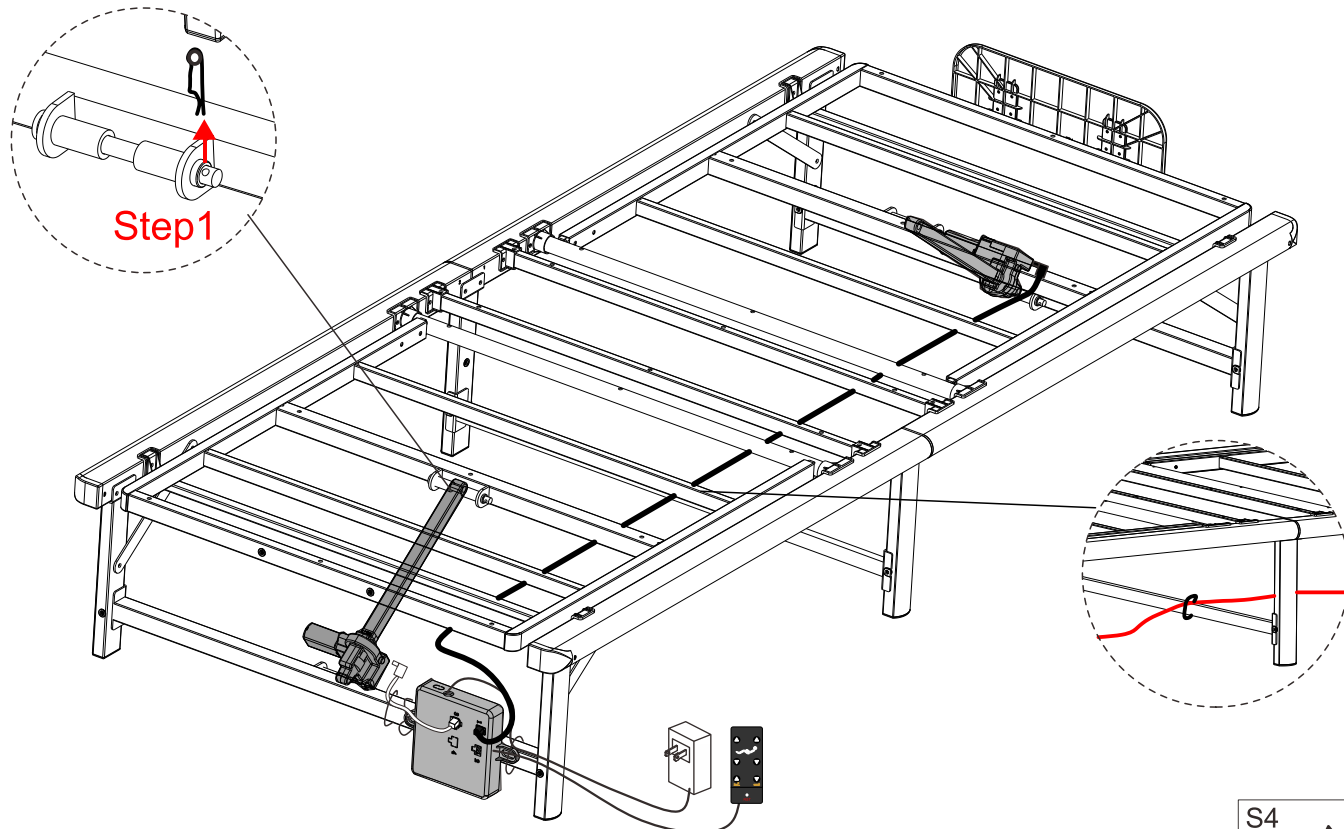
6



S3



5

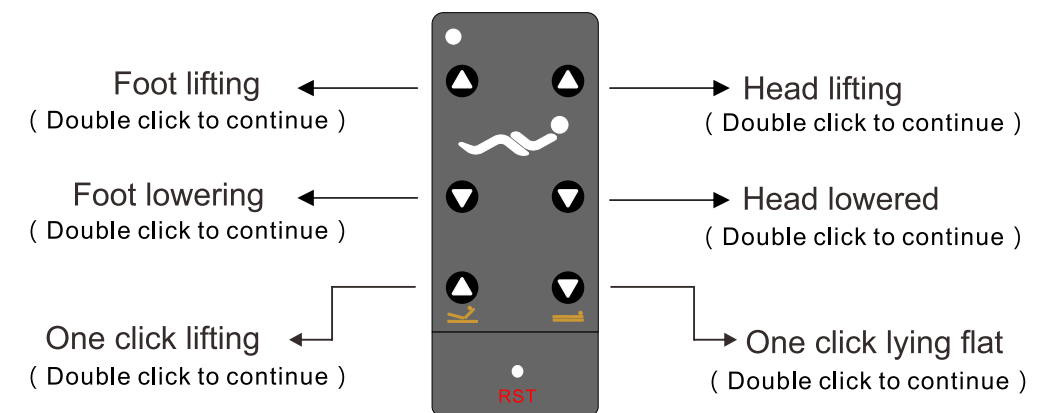


S4



It can be adjusted by rotating the aluminum tube to fit the motor installation.

Instruction Manual



1. After the installation of the electric bed is completed, if the frame is uneven or the lifting is not synchronized, etc You can press the "RST" button for 5 seconds to perform a reset operation. During the reset process, the electric bed will run automatically for 1 minute until it stops, and the reset is complete

2. During use, if the button does not respond, please check if the connecting cable is securely plugged in