



Electric Lift Chair

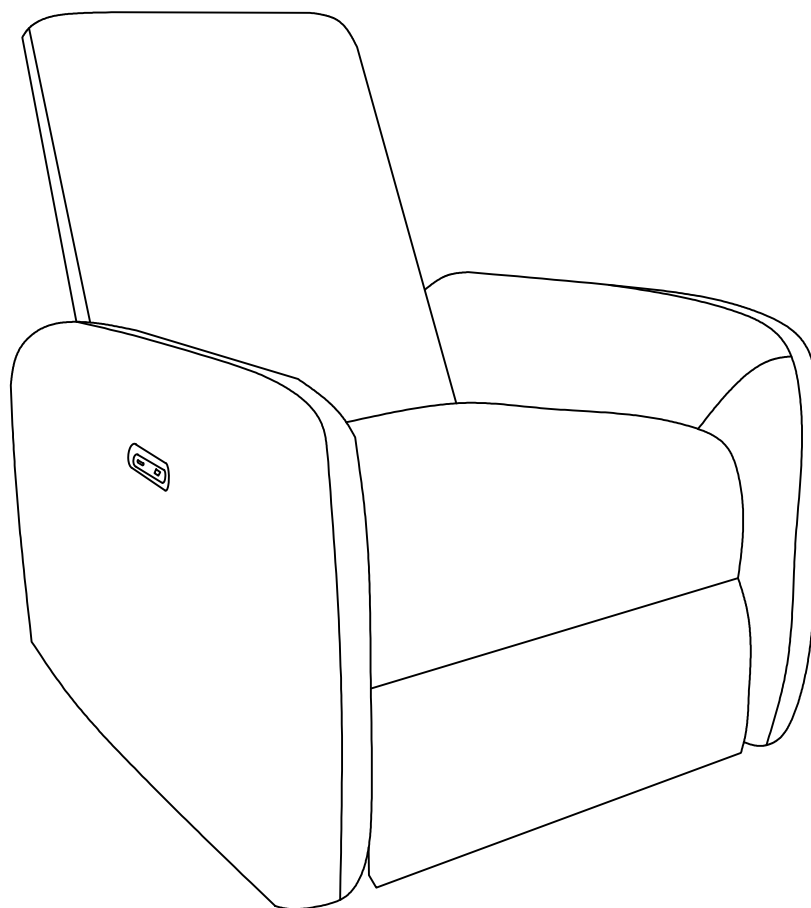


Parts List

A

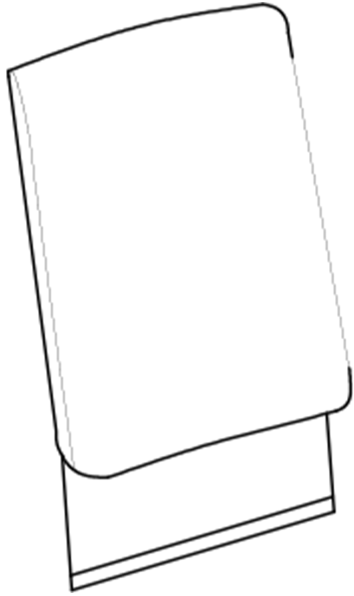

Backrest

B

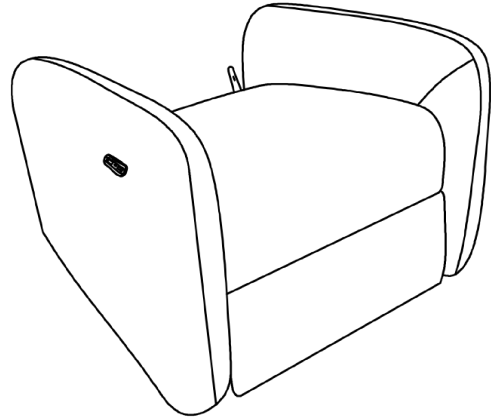


Chair Base

C




Power Source


Step 1

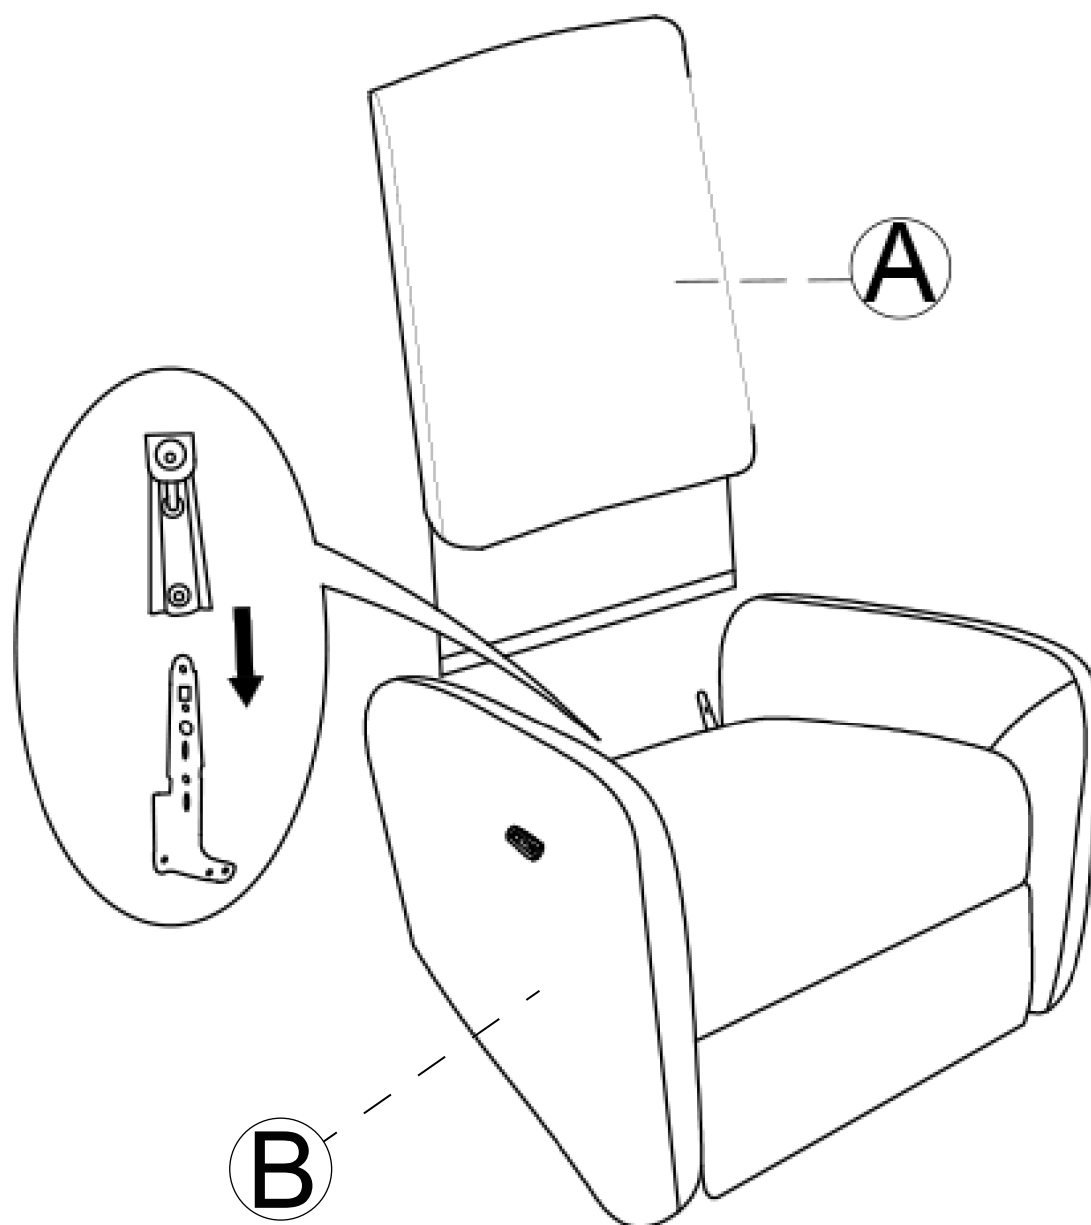

Step 2

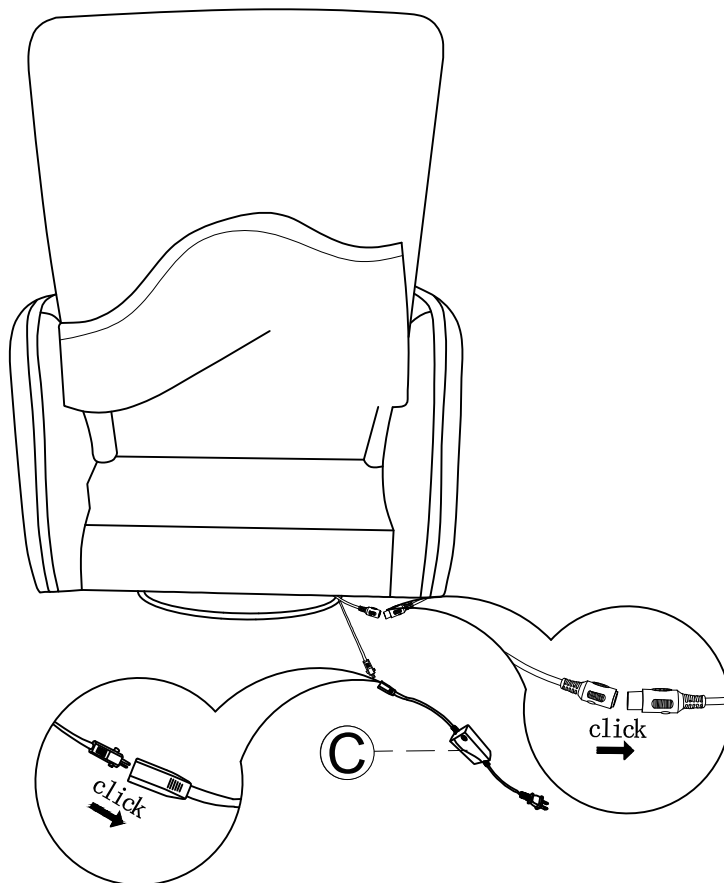

Step 3

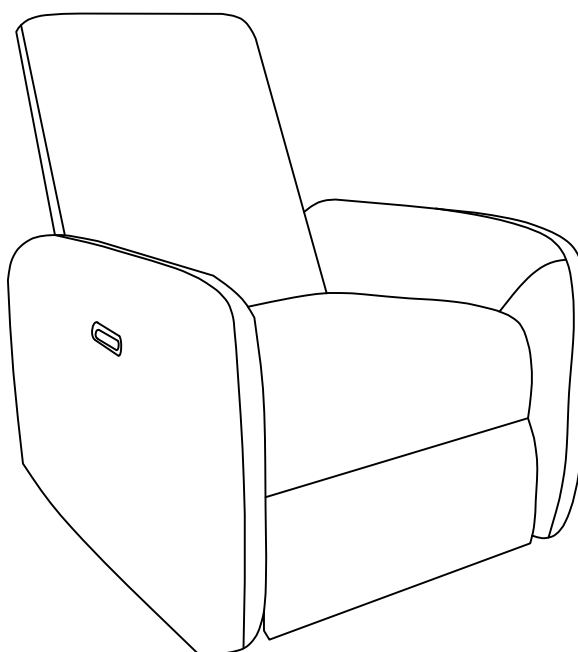

FAQ

Q: The chair is stuck in a lifting or reclining position and does not respond when pressing the buttons.

A: Please check if the power source and control panel are properly connected to the lift motor. Sometimes, these connections can come loose or disconnect.

If all cables are securely connected, check the motor for any anomalies—such as unusual noises when you press the lift or recline buttons. If you confirm that the motor is defective, please contact us for a replacement.

