 
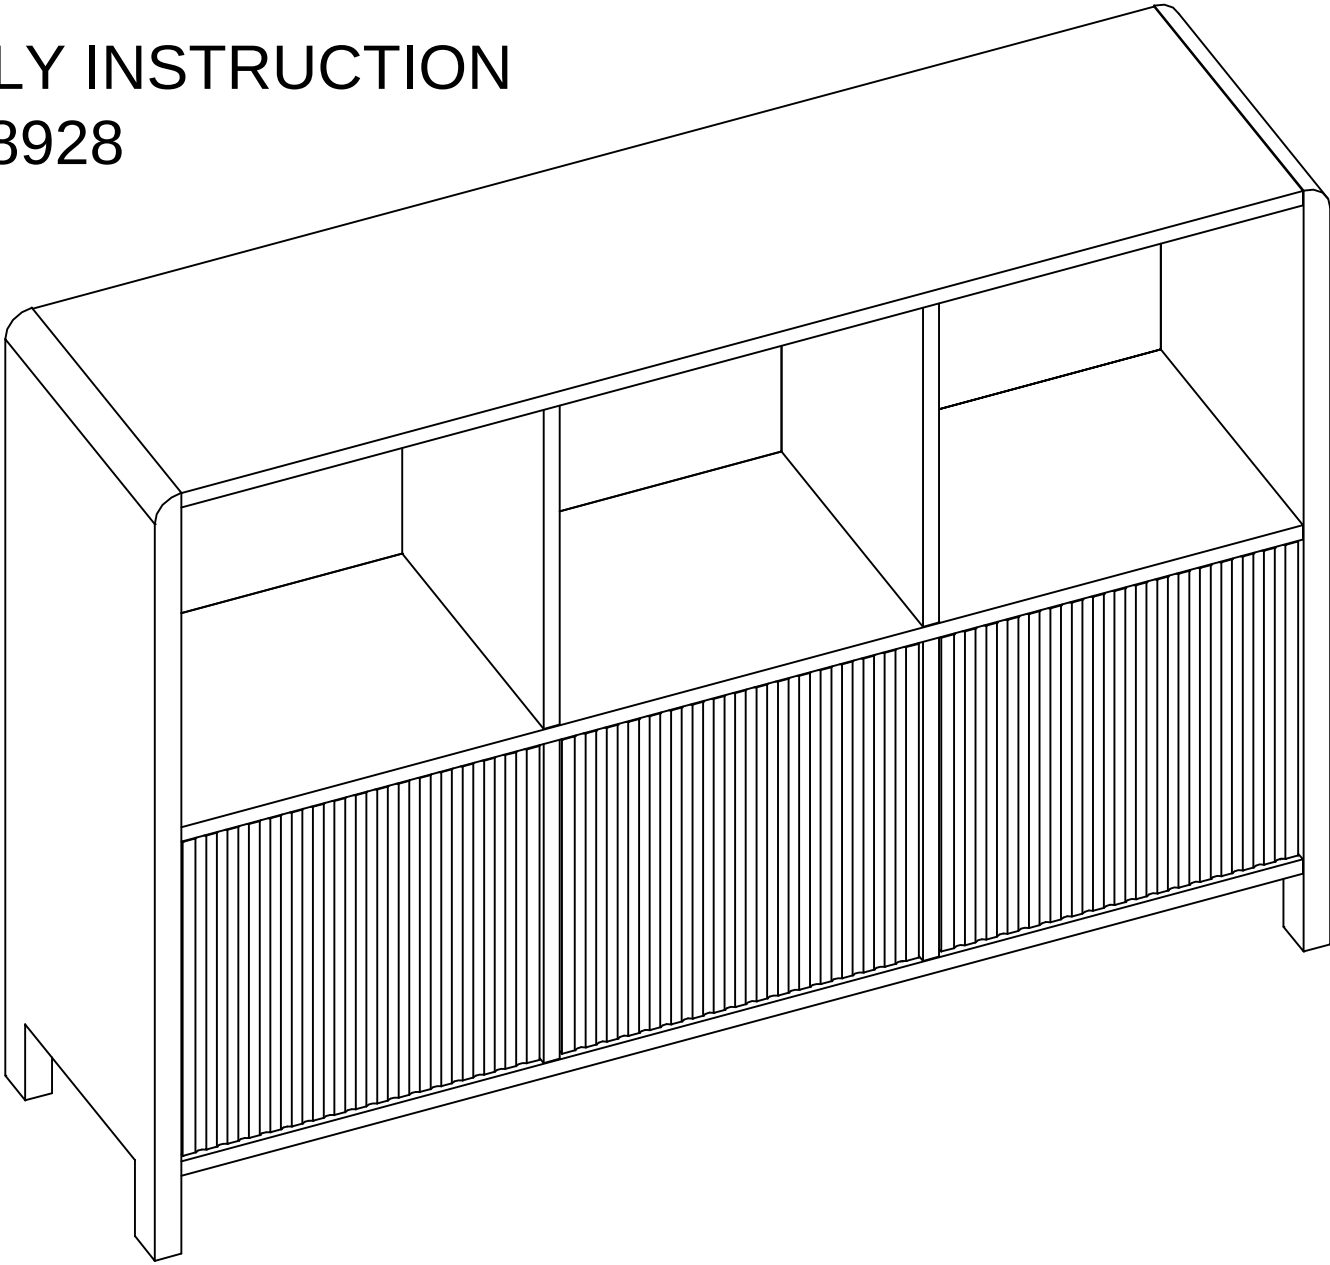 
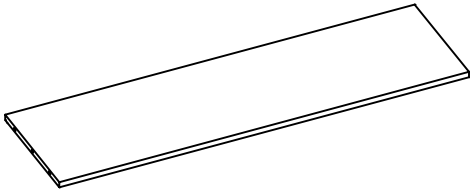 
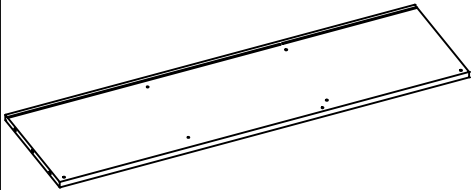 
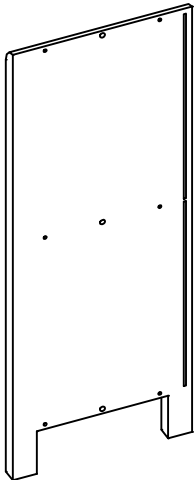 
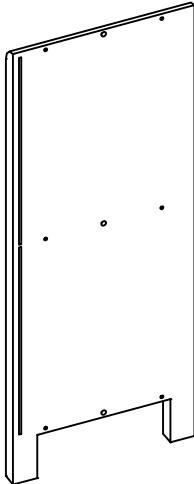 
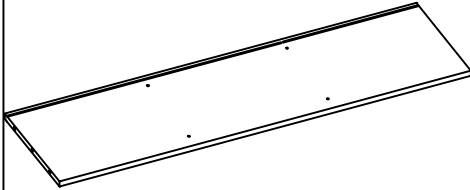 
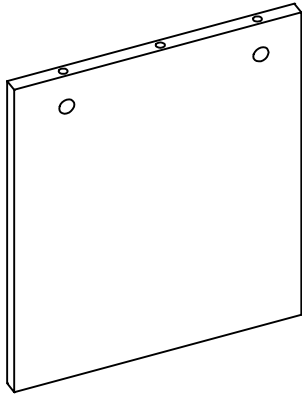 
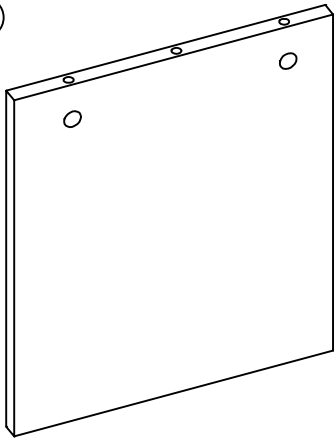 










ASSEMBLY INSTRUCTION
N751P488928

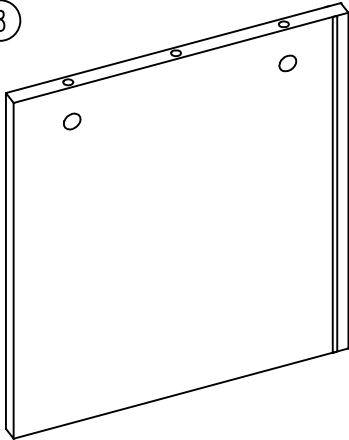









PARTS LIST-N751P488908

①  Quantity: 1 PC	②  Quantity: 1 PC	③  Quantity: 1 PC	④  Quantity: 1 PC
⑤  Quantity: 1 PC	⑥  Quantity: 1 PC	⑦  Quantity: 1 PC	⑧  Quantity: 1 PC

        
PARTS LIST-N751P488908

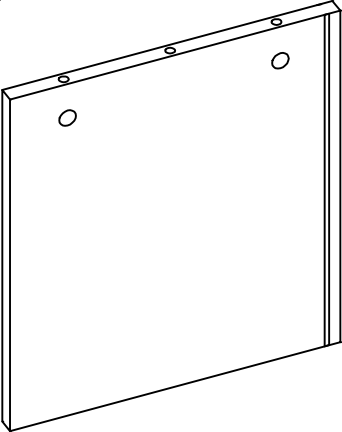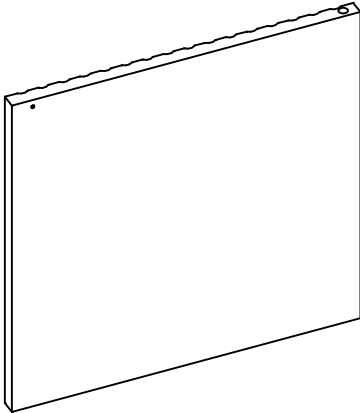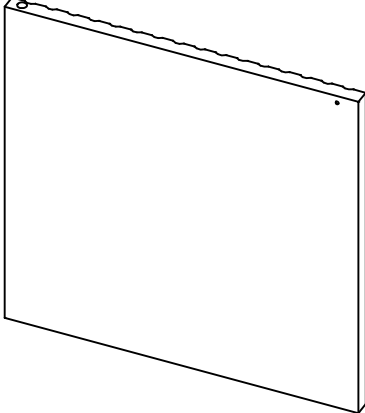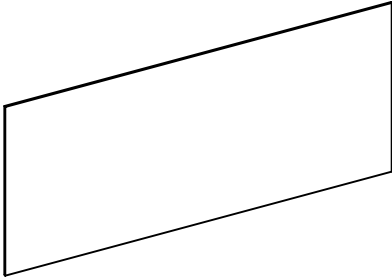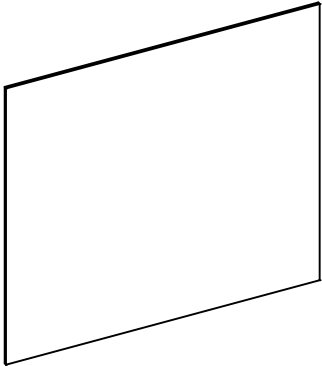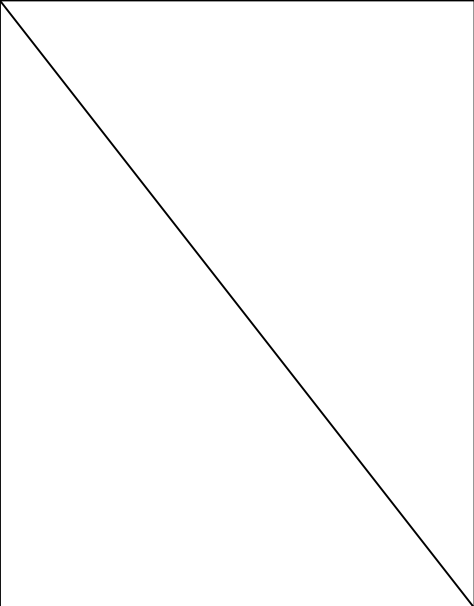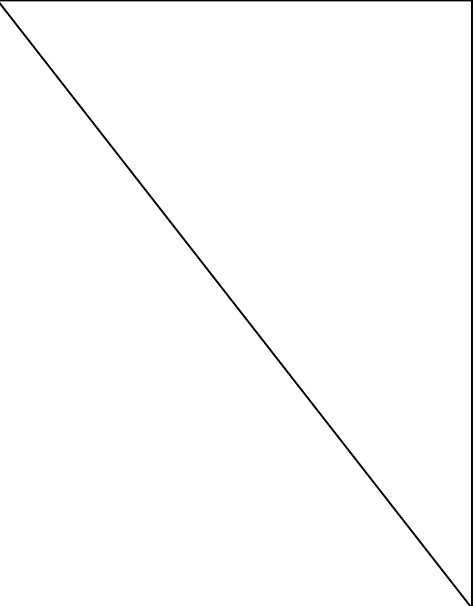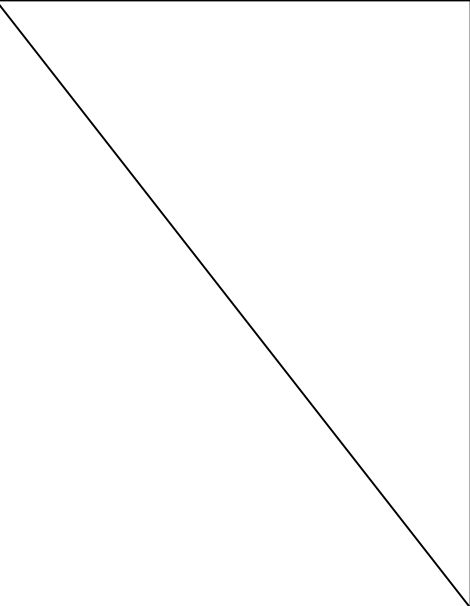
9  Quantity: 1 PC	10  Quantity: 1 PC	11  Quantity: 2 PCS	12  Quantity: 2 PCS
13  Quantity: 2 PCS			

        HARDWARE LIST

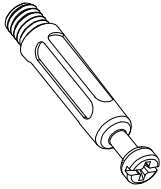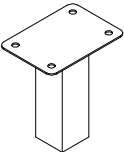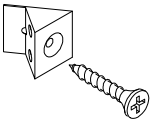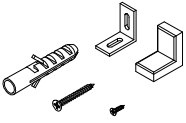
A  Cam lock pin Quantity: 20 PCS	B  Cam lock Quantity: 20 PCS	C  Φ8*40 Quantity: 10 PCS	D  M5*40 Quantity: 8 PCS	E  Quantity: 3 PCS	F  Quantity: 6 PCS	G  Quantity: 2 PCS	H  M3.5*14 Quantity: 8 PCS
J  furniture glide Quantity: 4 PCS	K  back panel clip Quantity: 16 PCS	L  anti-tip device Quantity: 2 PCS					

  
COMPONENTS-KEY DIAGRAM

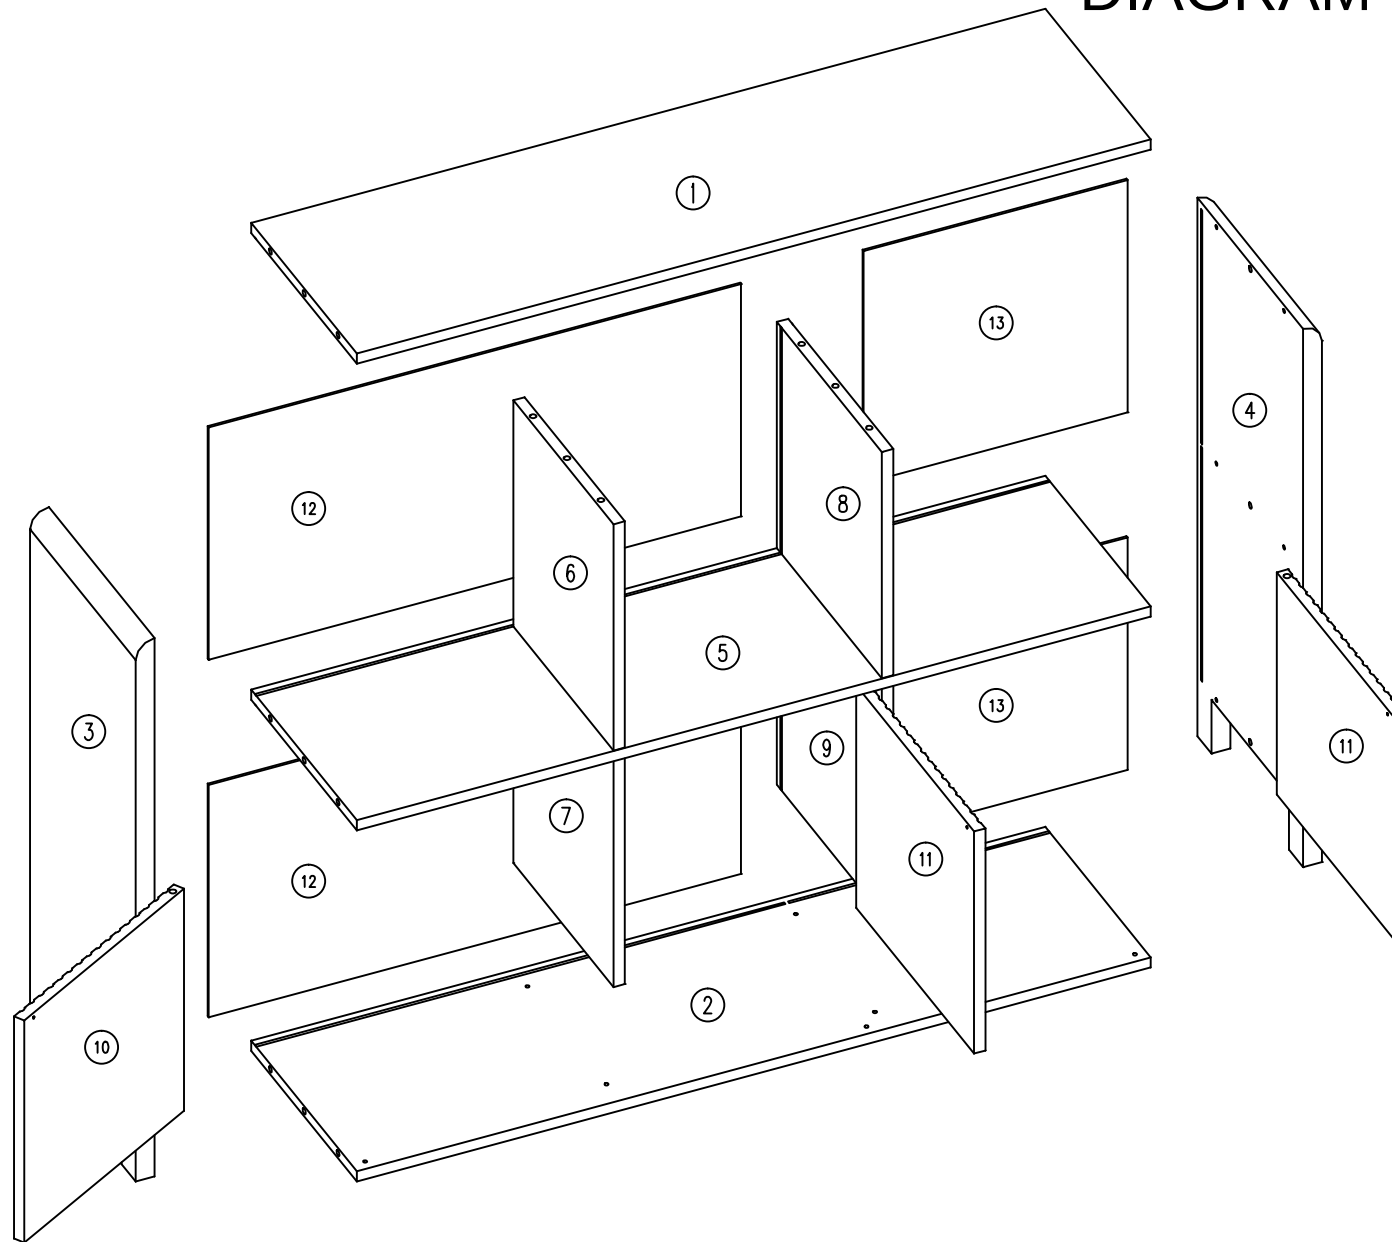

A	
	8 PCS
E	
	3 PCS

  
STEP 1

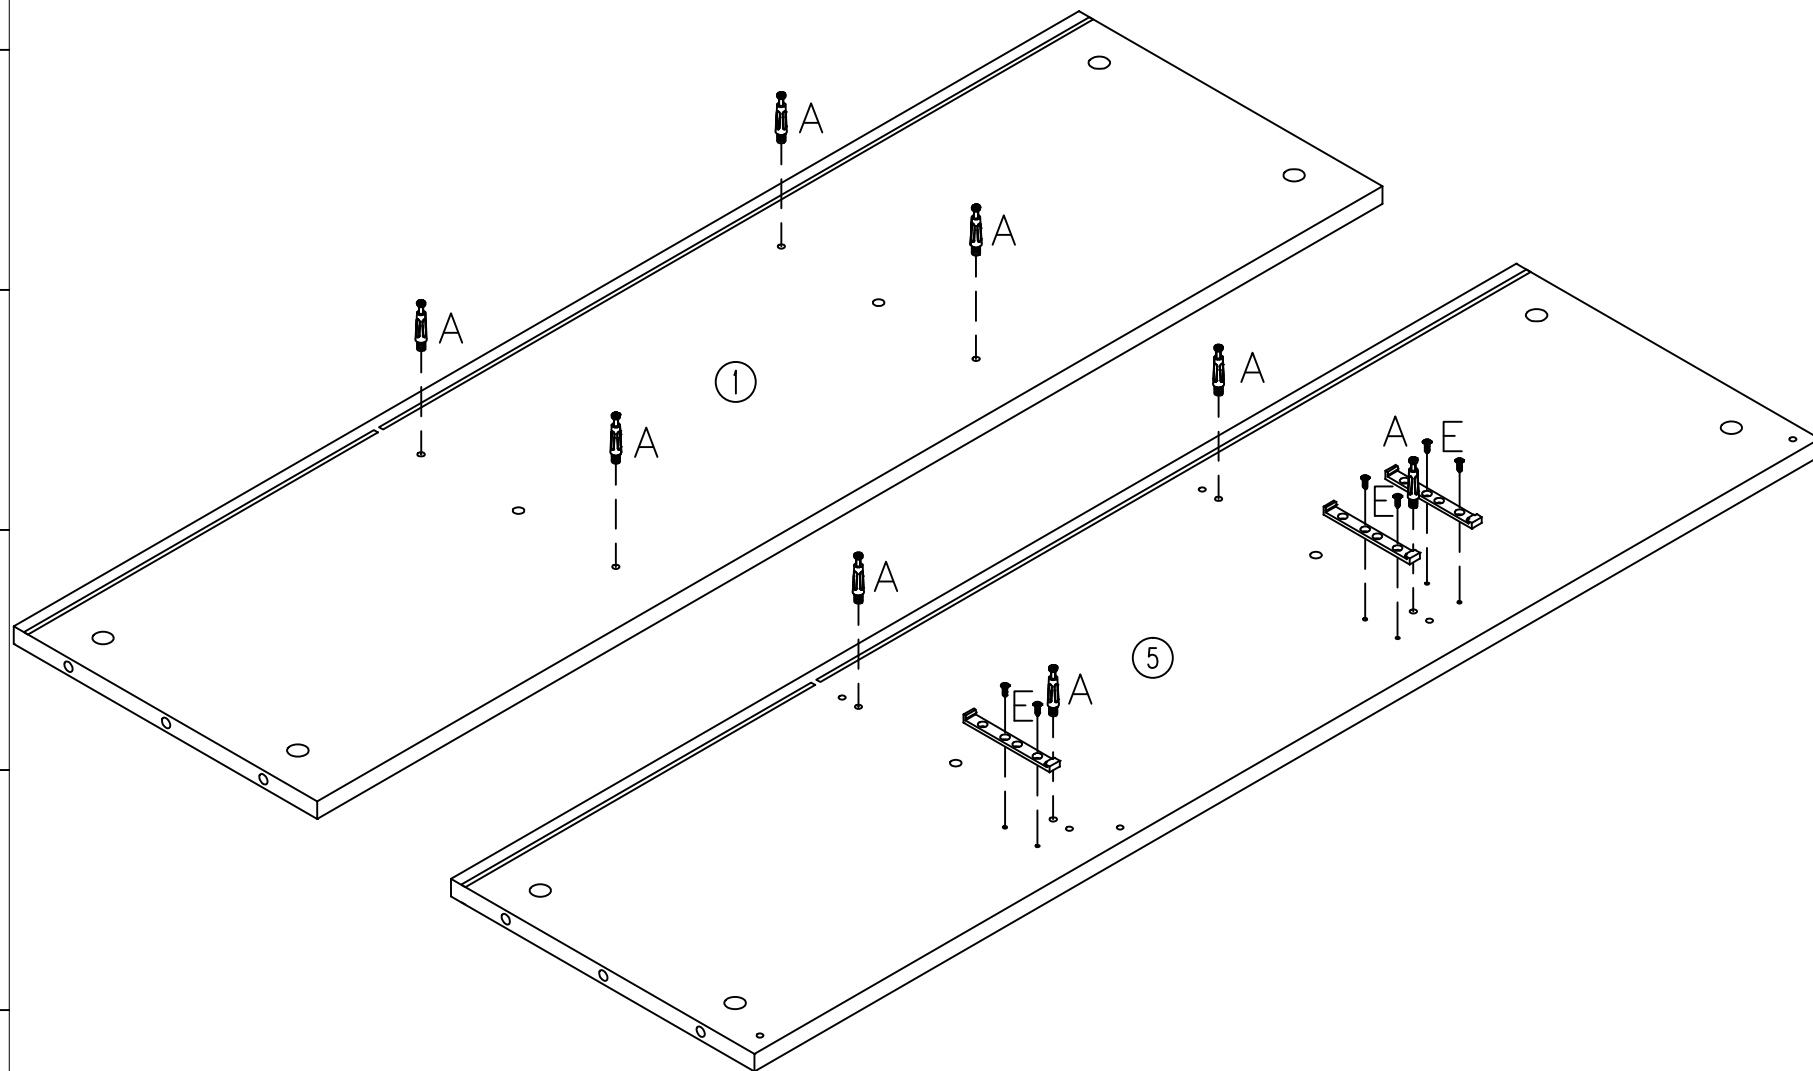

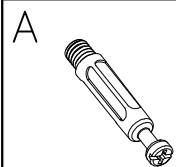


12 PCS

 STEP 2

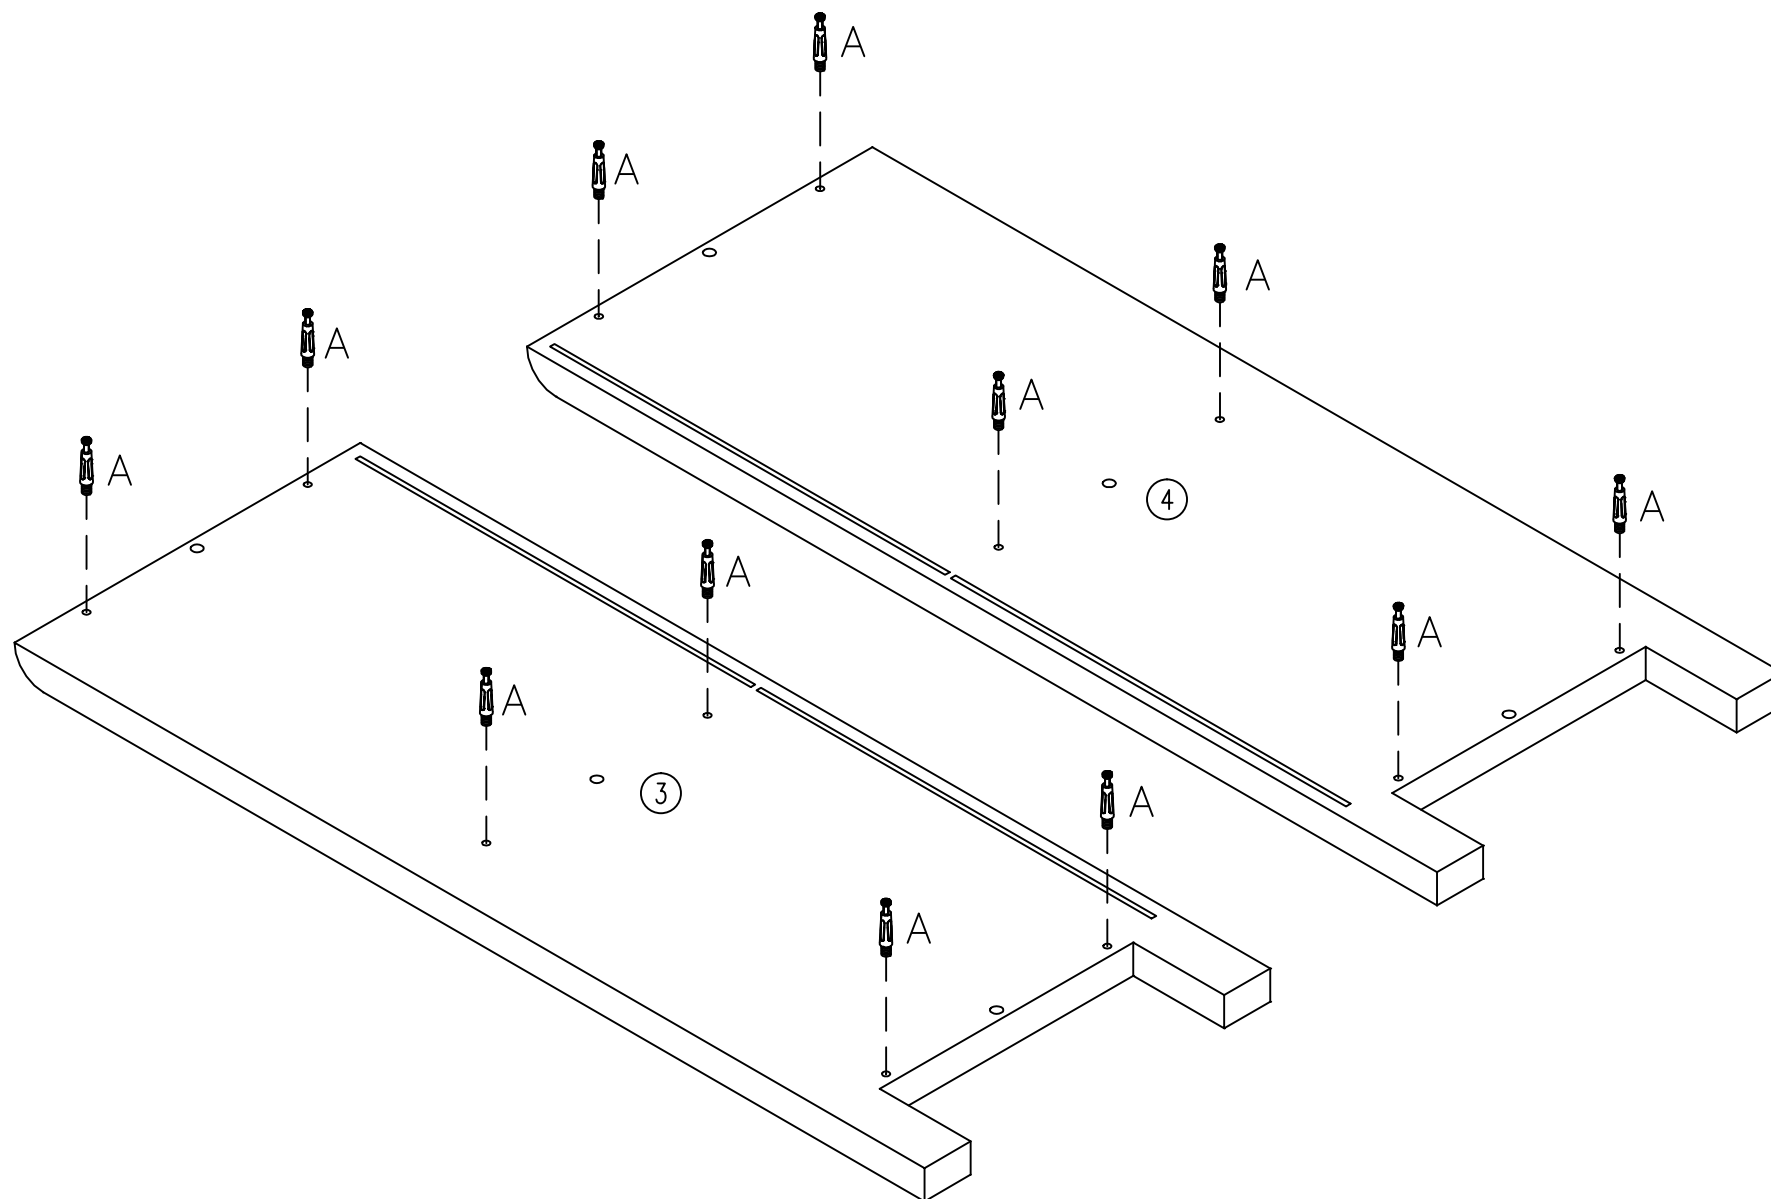


B	
4 PCS	
C	
Φ8*40	
2 PCS	
D	
M5*40	
4 PCS	

 STEP 3

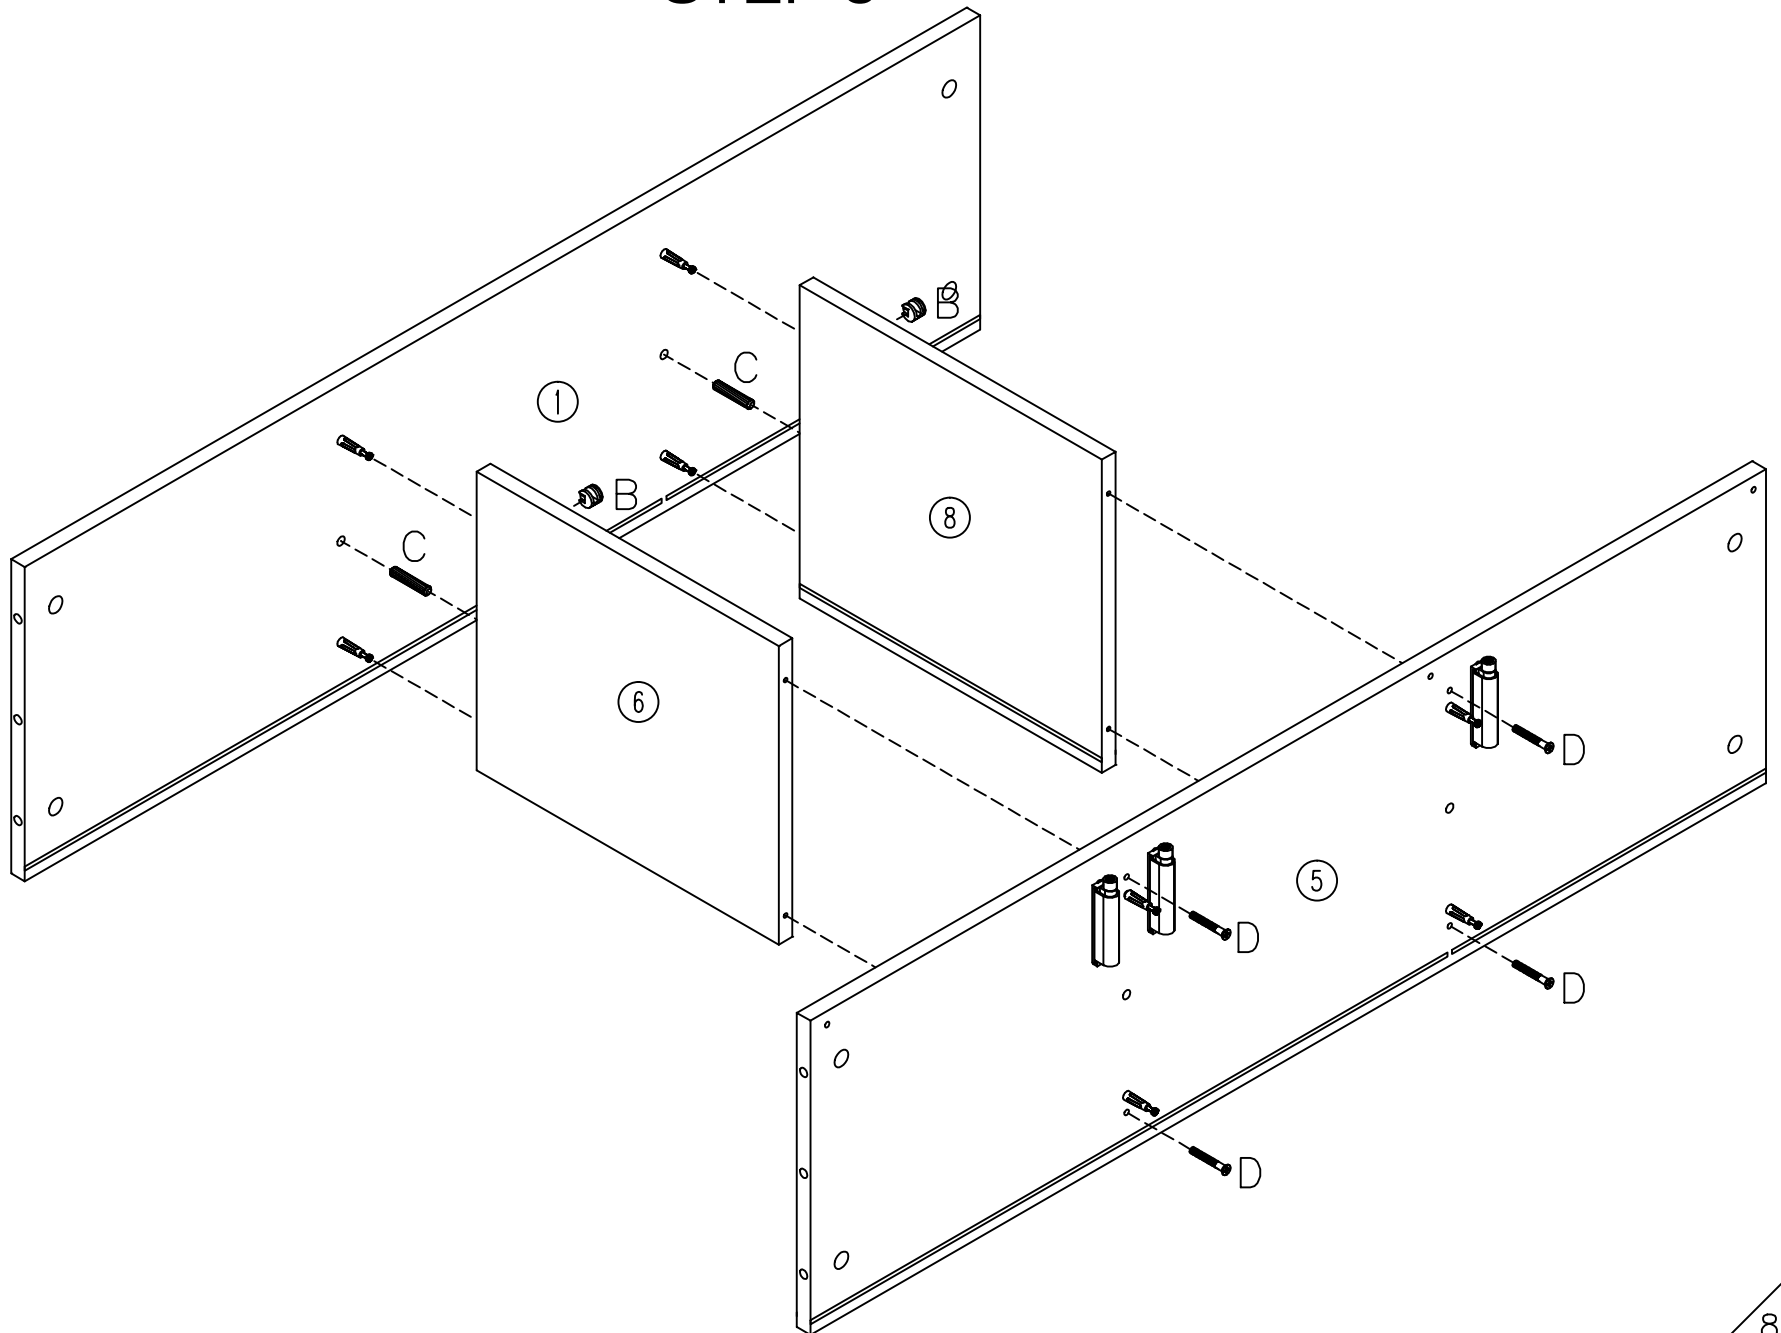

B  4 PCS	C  Φ8*40 2 PCS	
---	---	--

 STEP 4

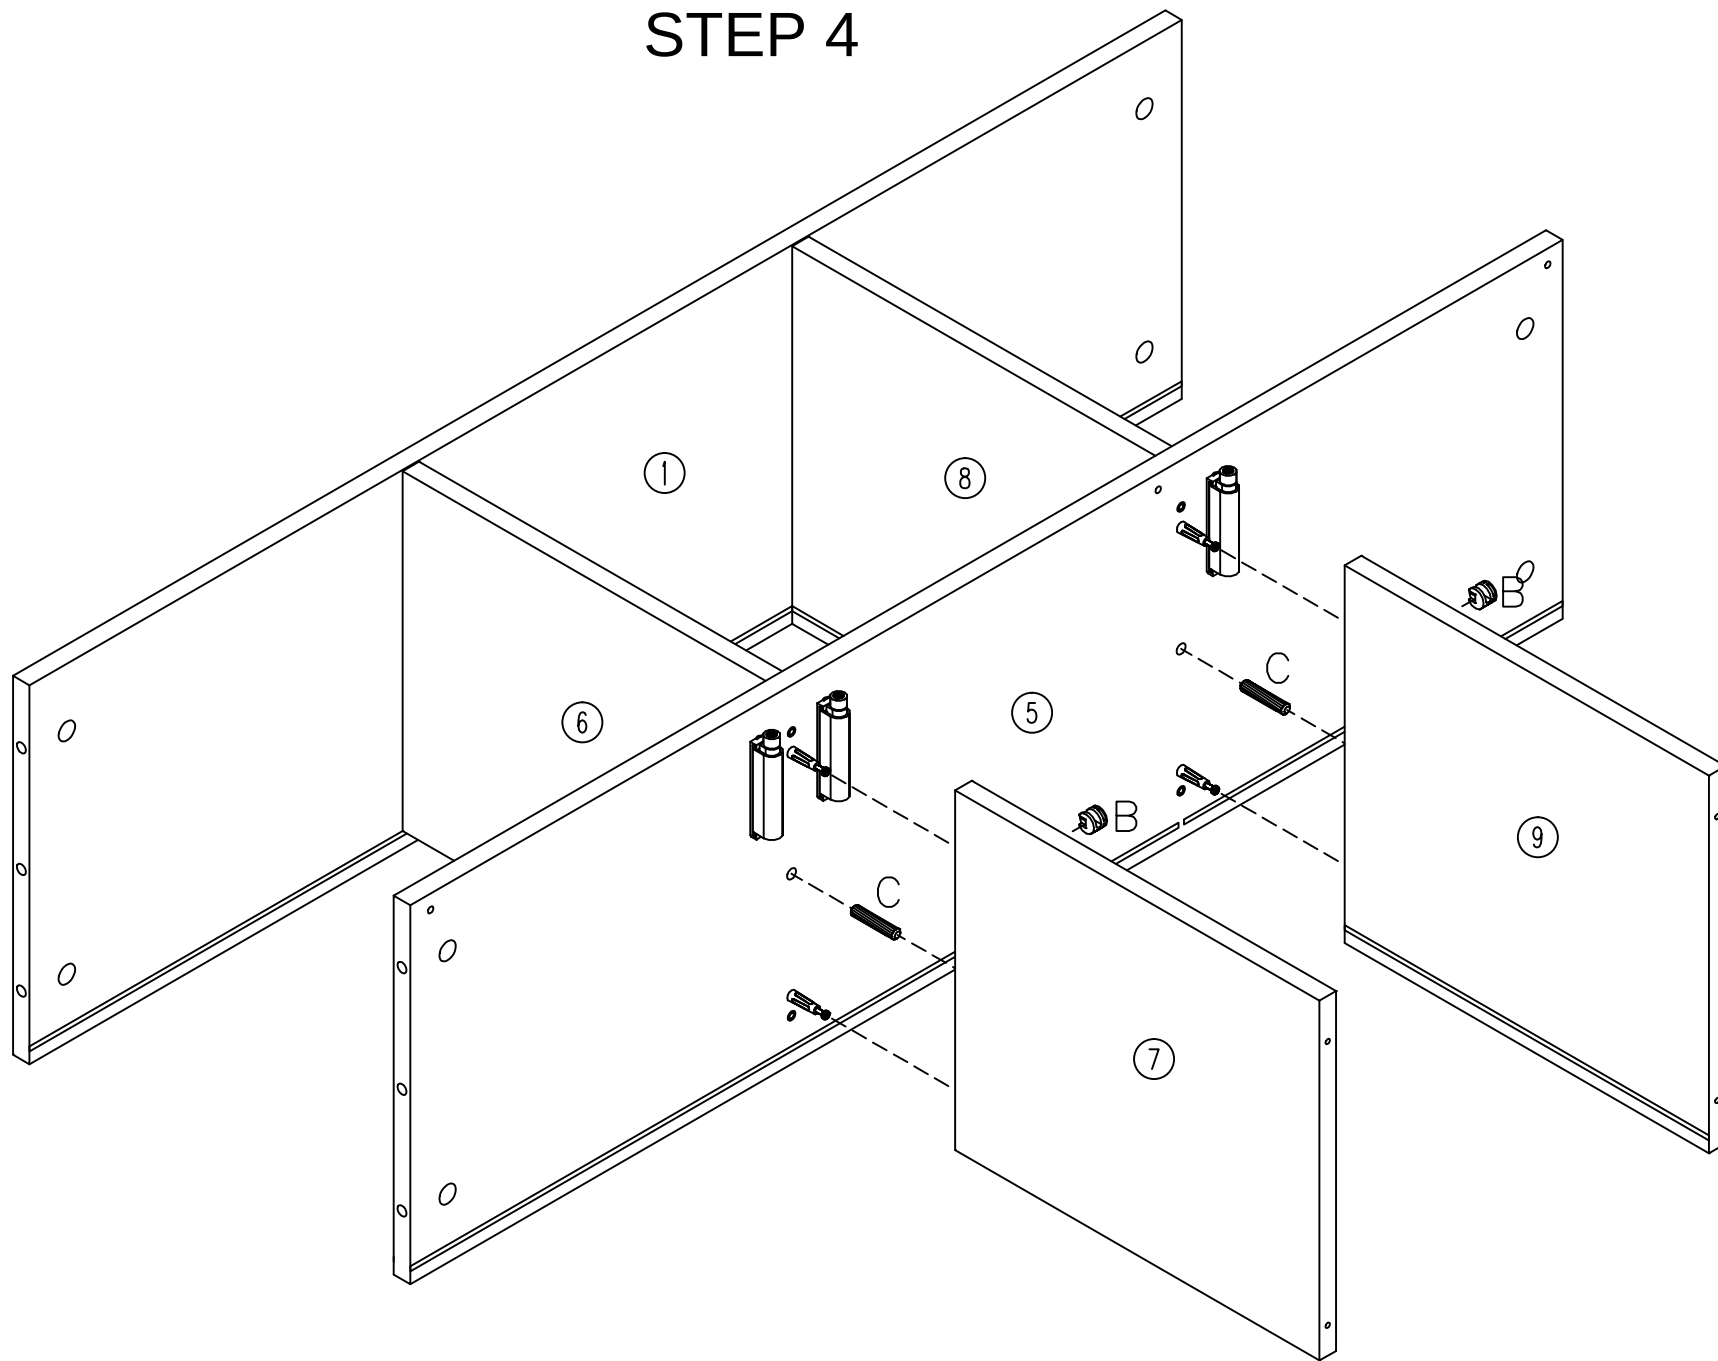


D




M5*40
4 PCS

 STEP 5

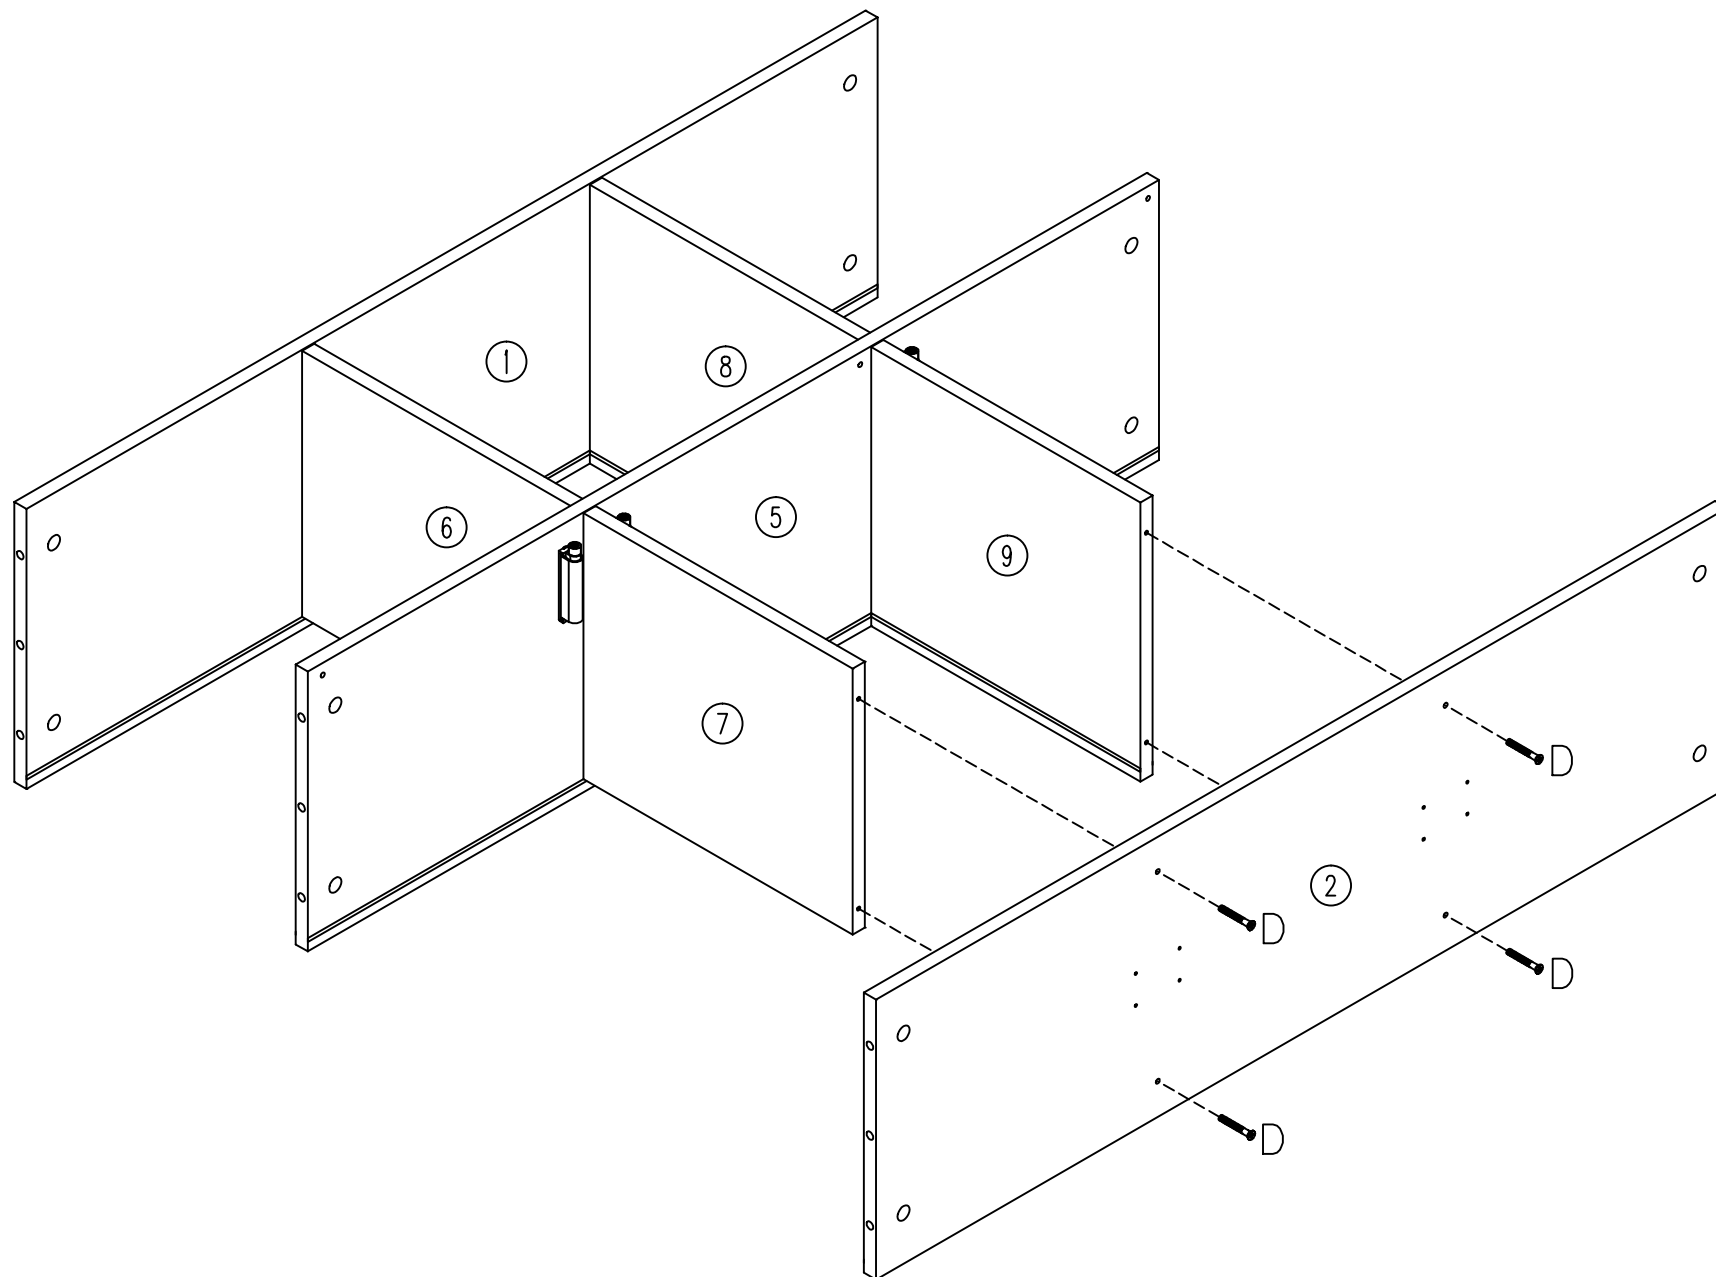


 
STEP 6

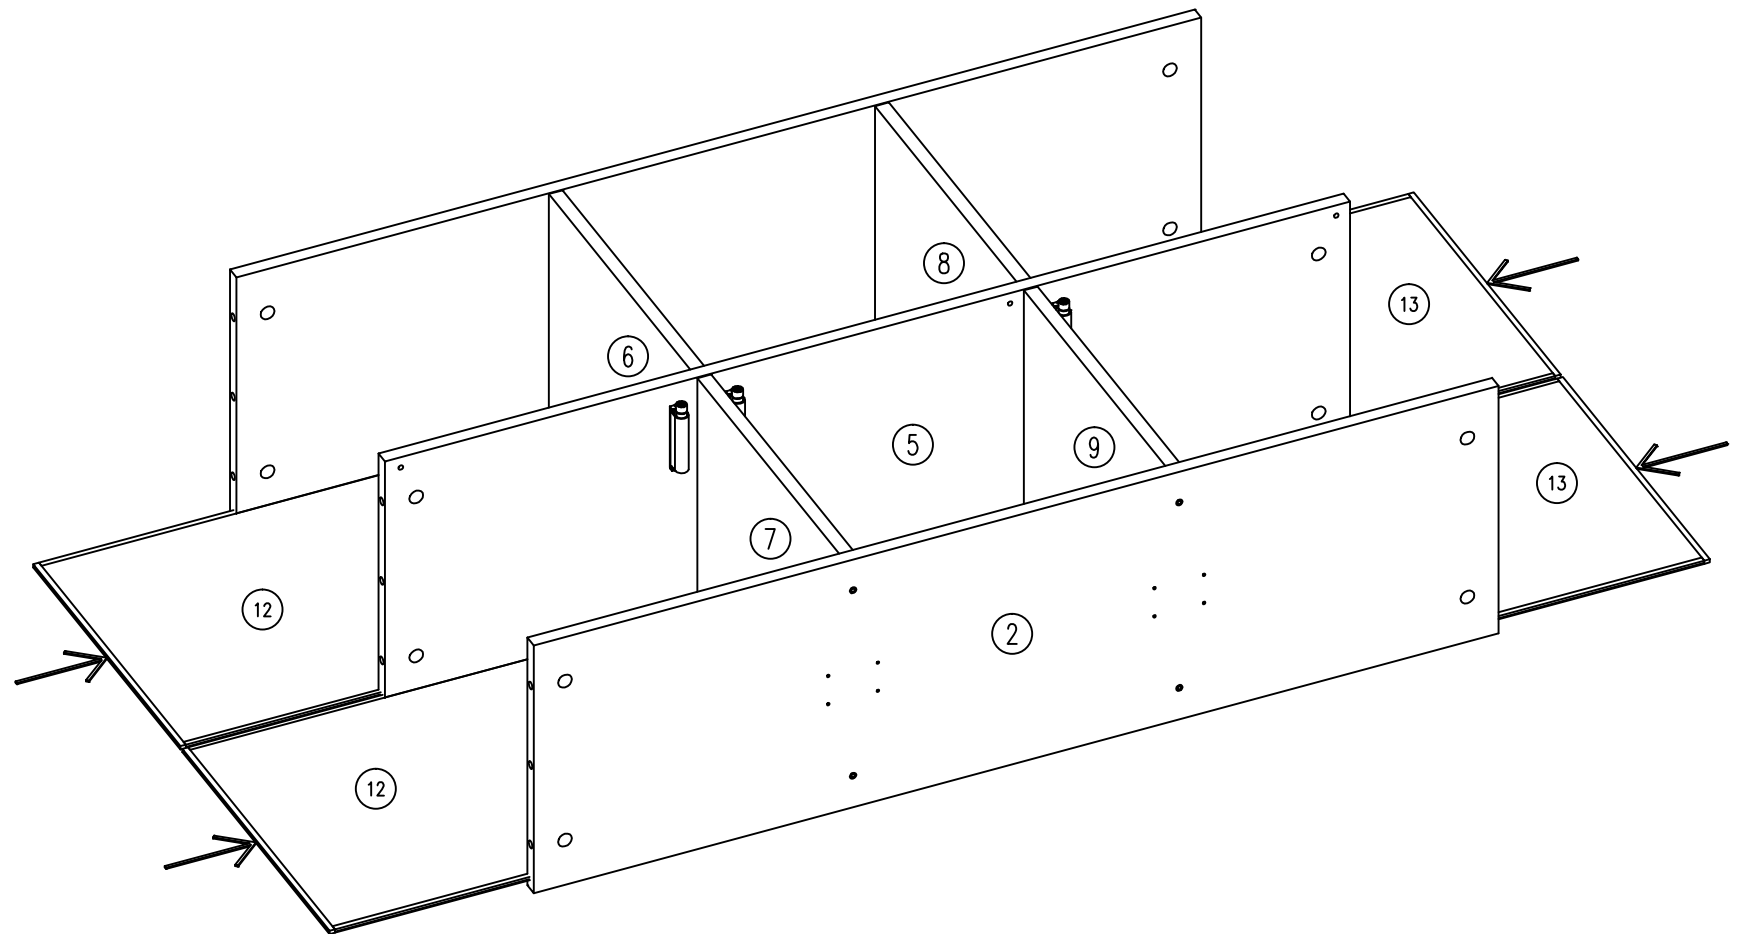


B	
12 PCS	
C	
Φ8*40	
6 PCS	

  STEP 7

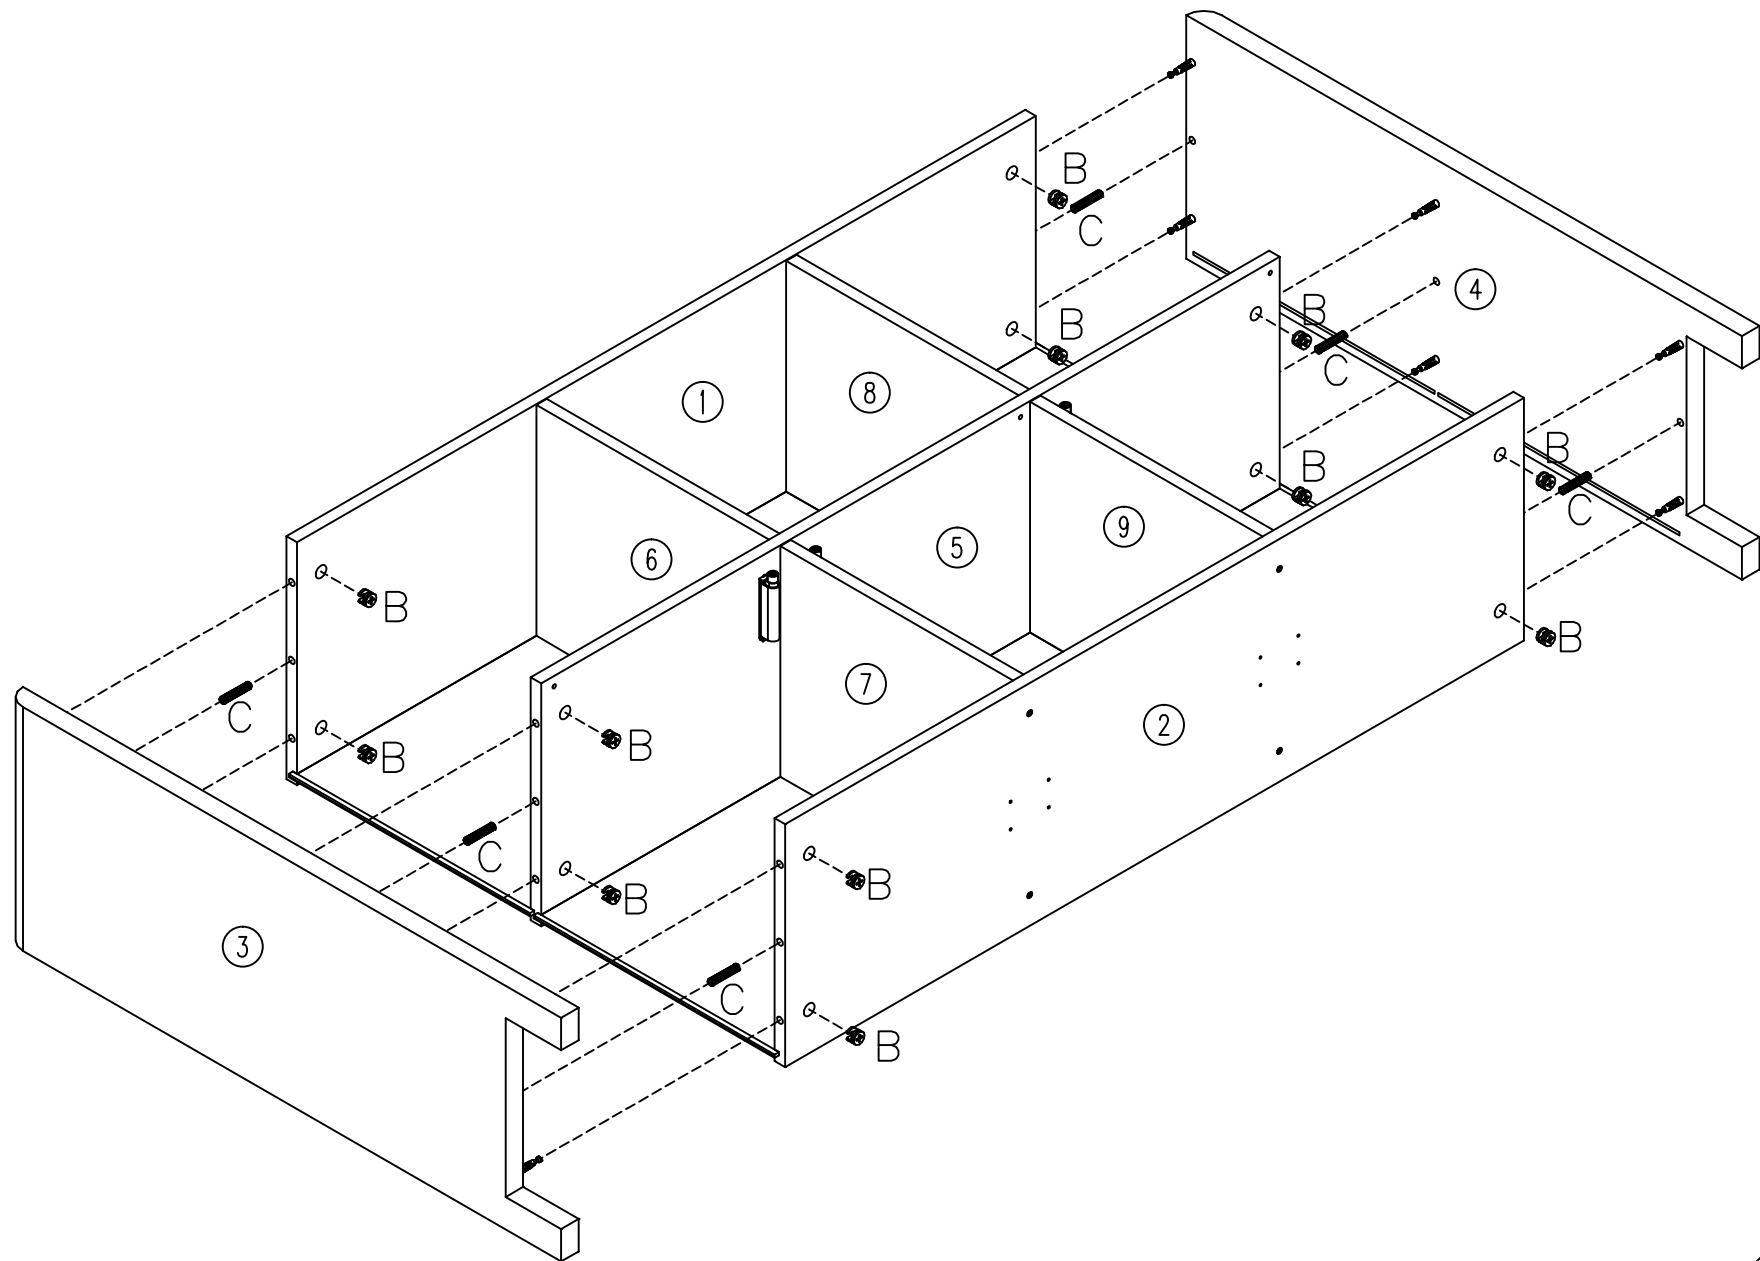


G	
	2 PCS
H	
	M3.5*14
	8 PCS
J	
	4 PCS

 STEP 8



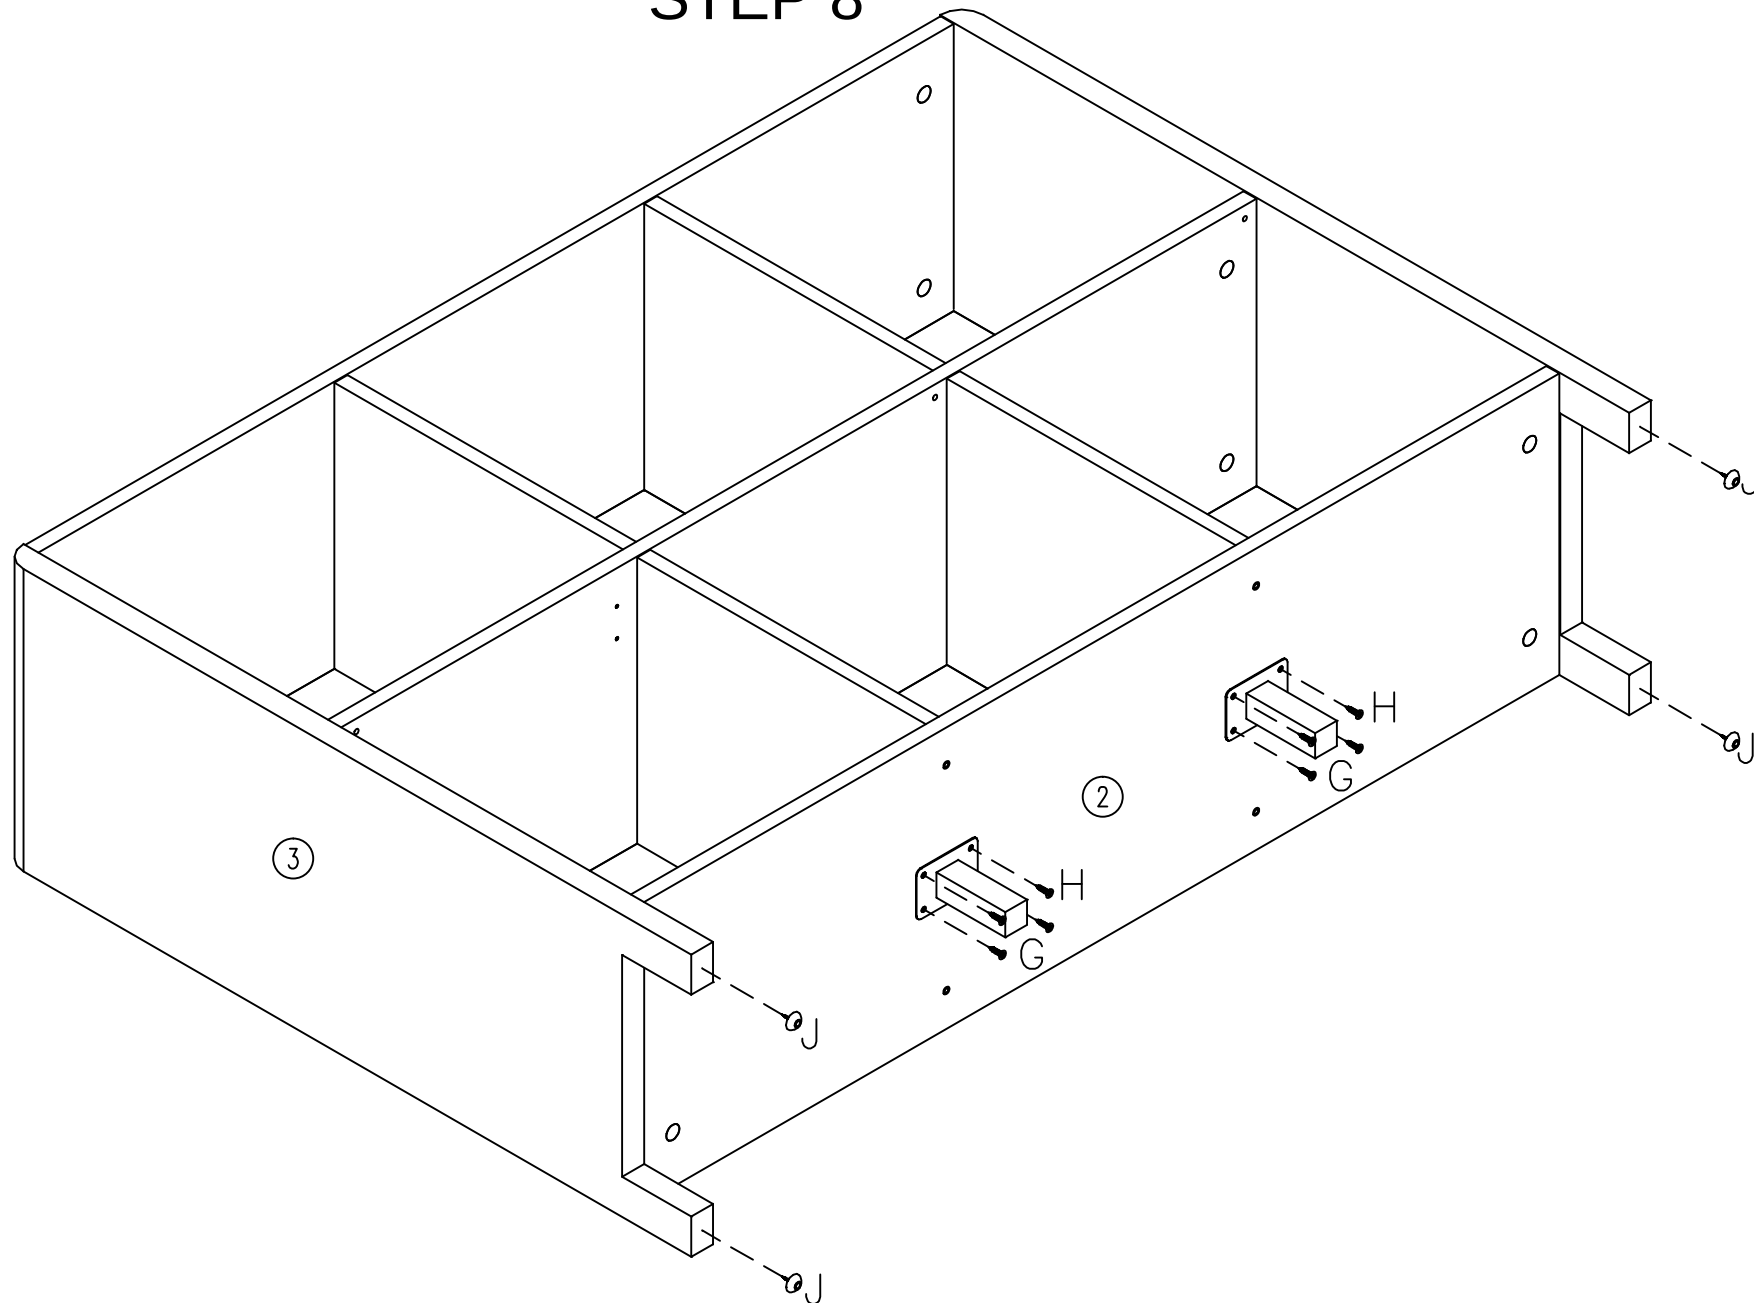


K

 


16 PCS

   STEP 9

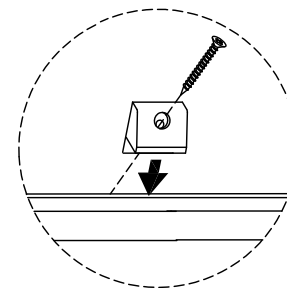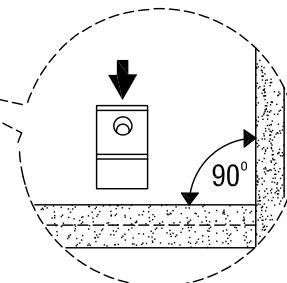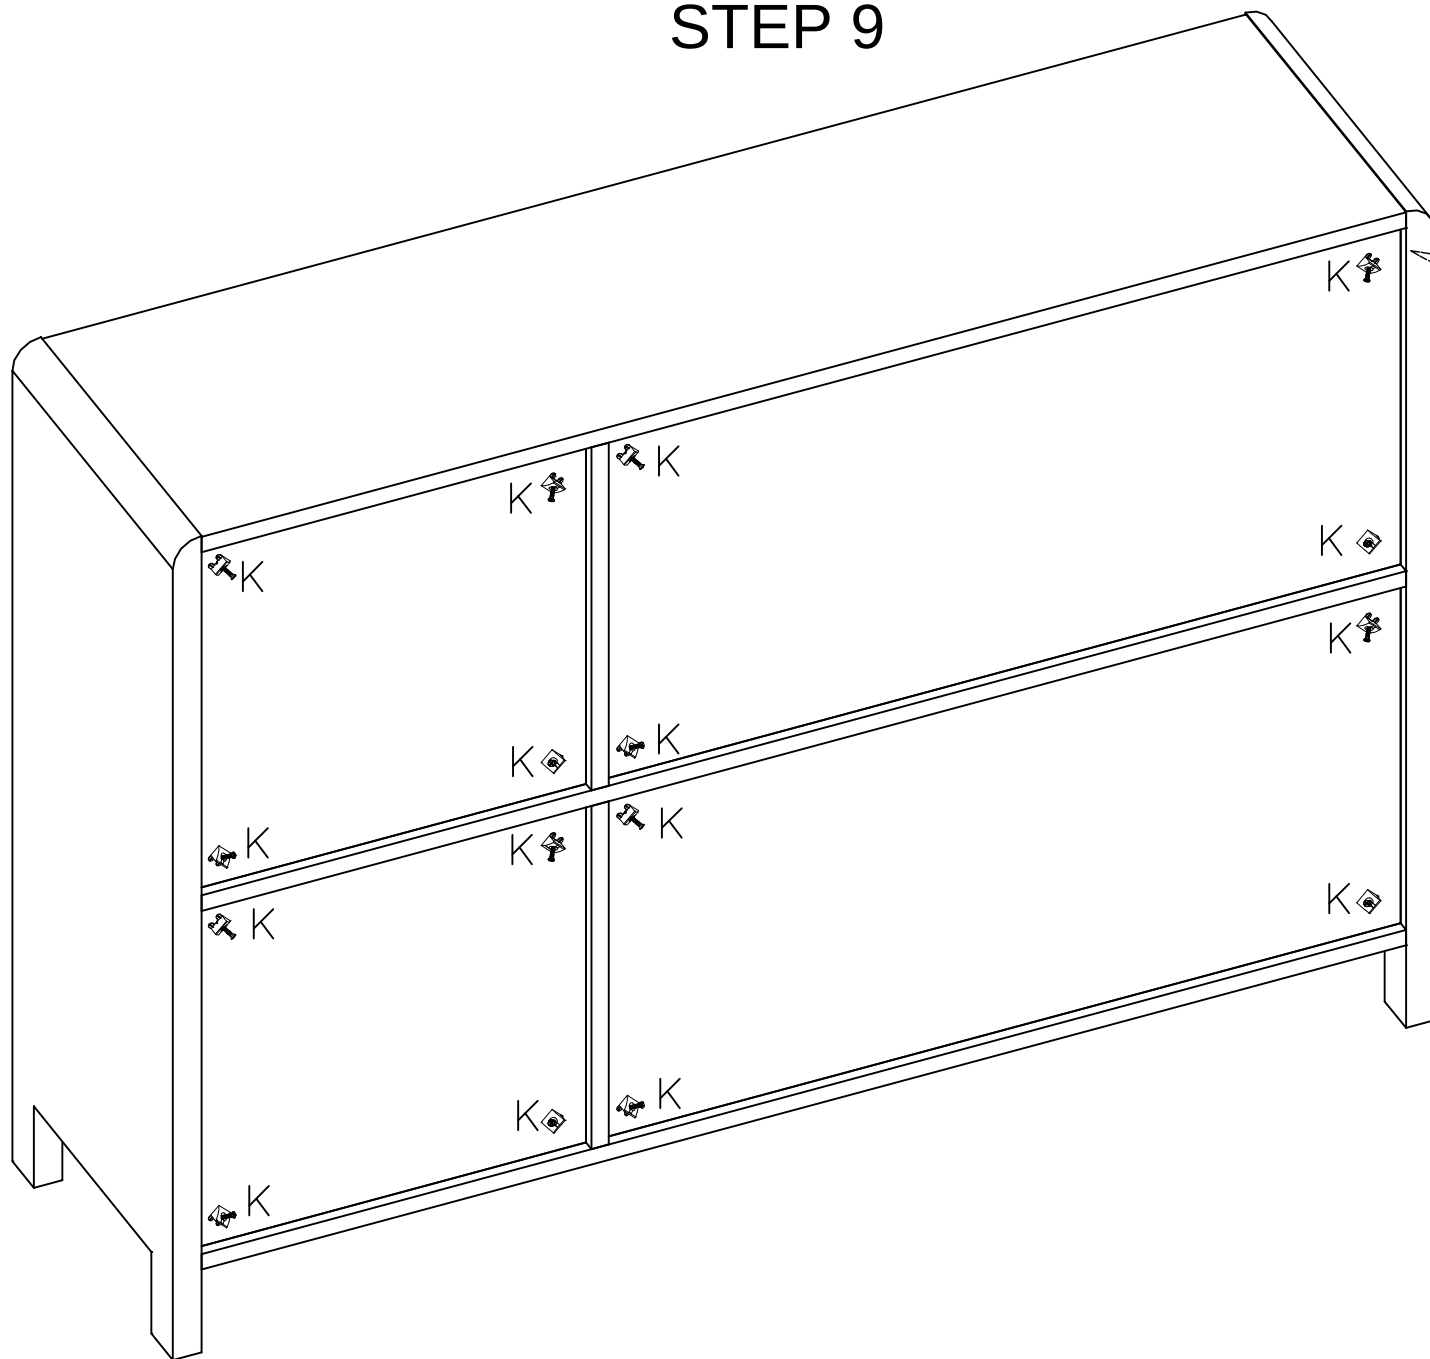


E

 

3 PCS

 STEP 10

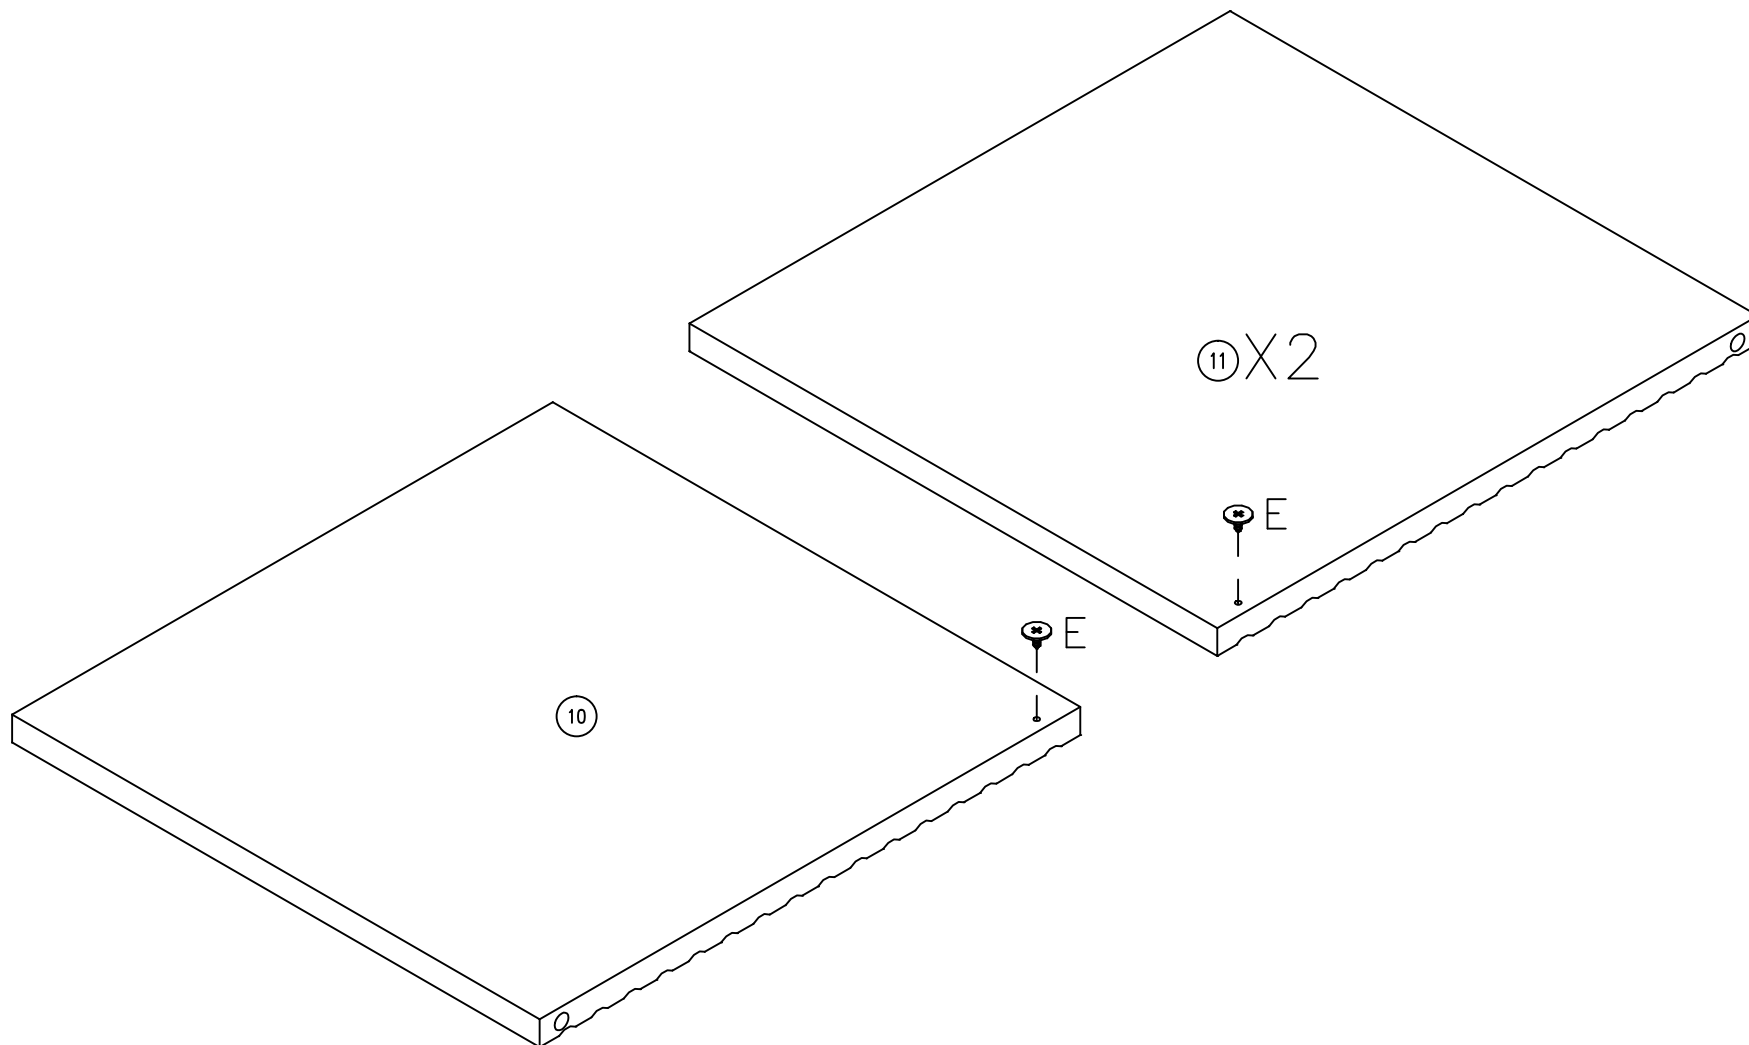

F



 
 
 
 
 
6 PCS

L




2 PCS

STEP 11

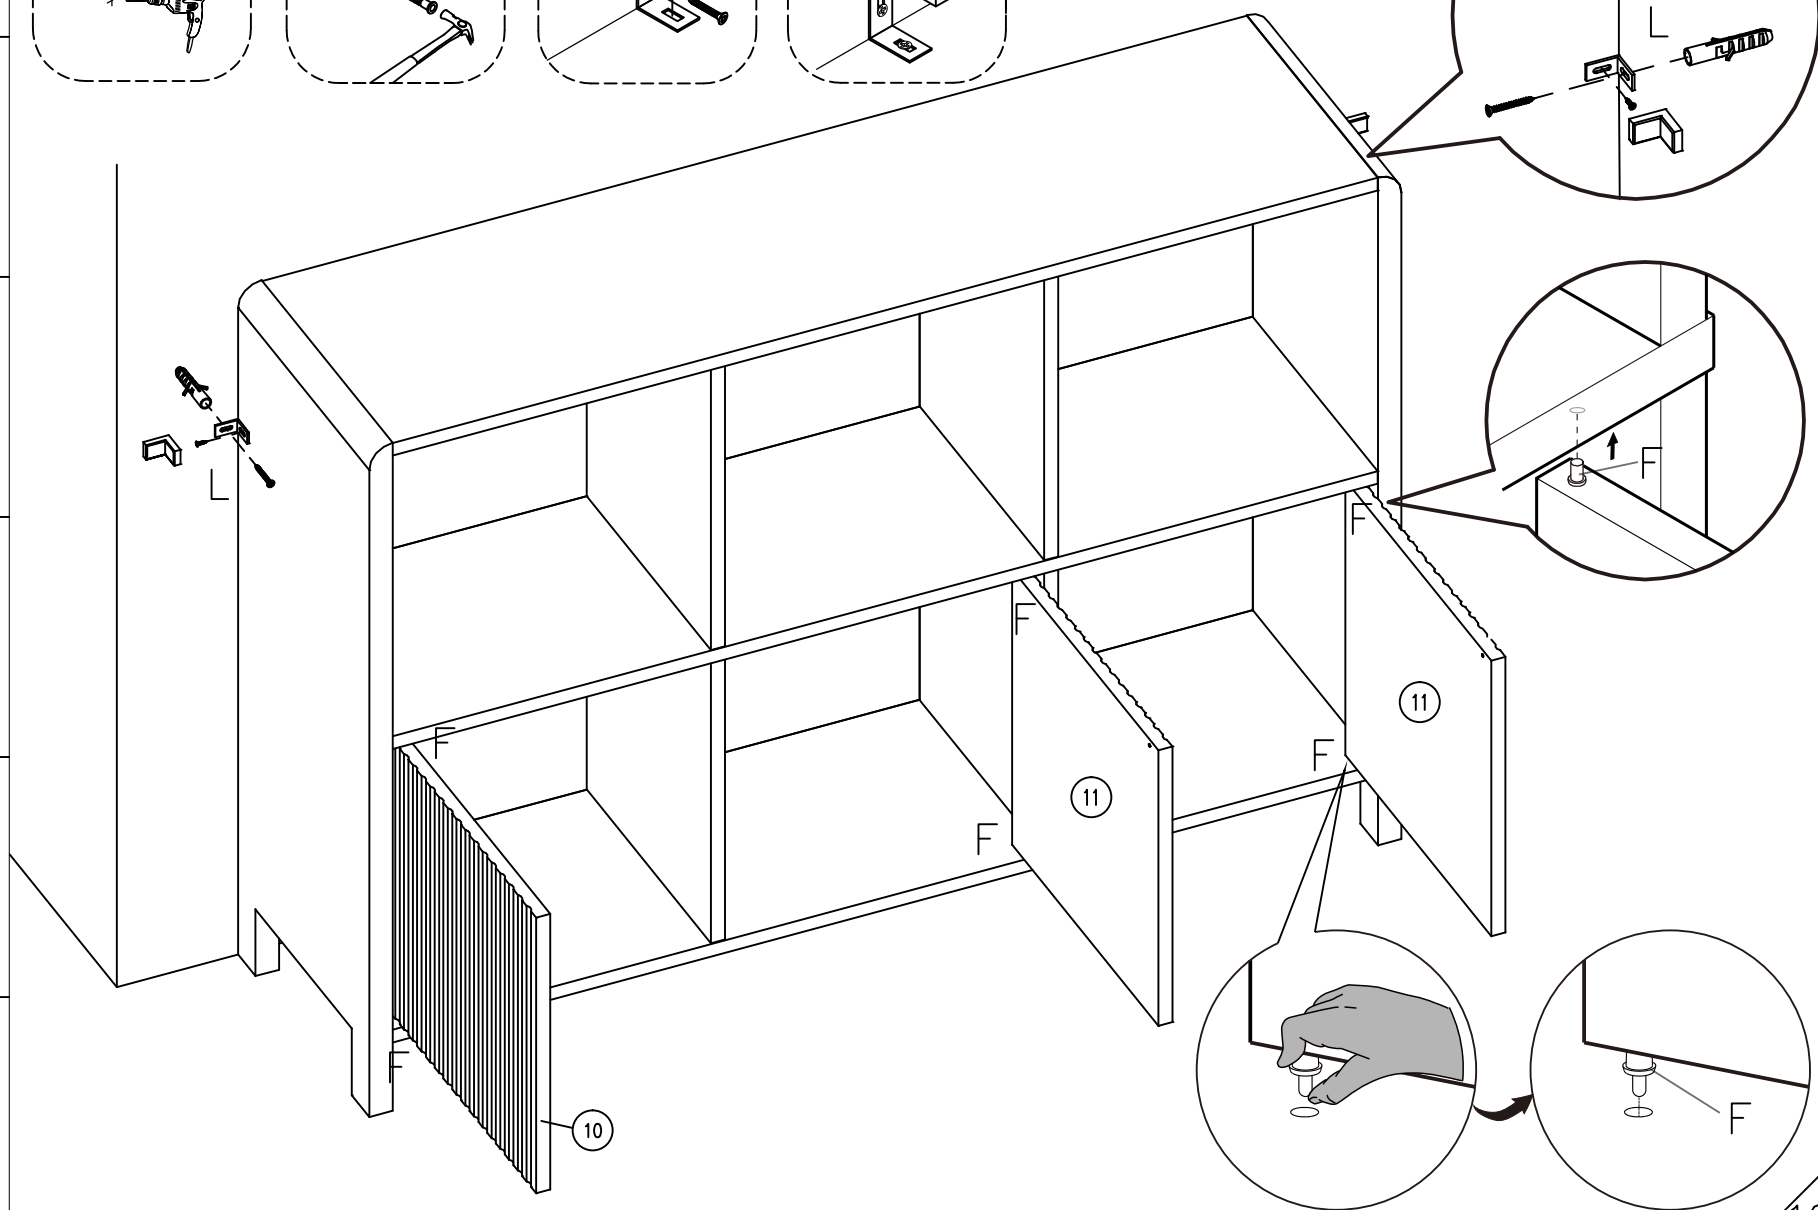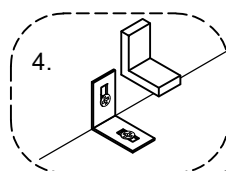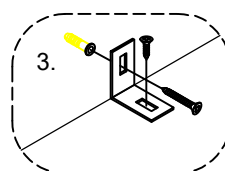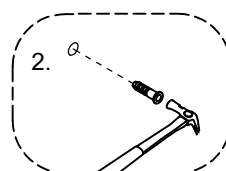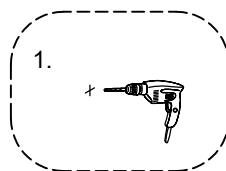

 STEP 12

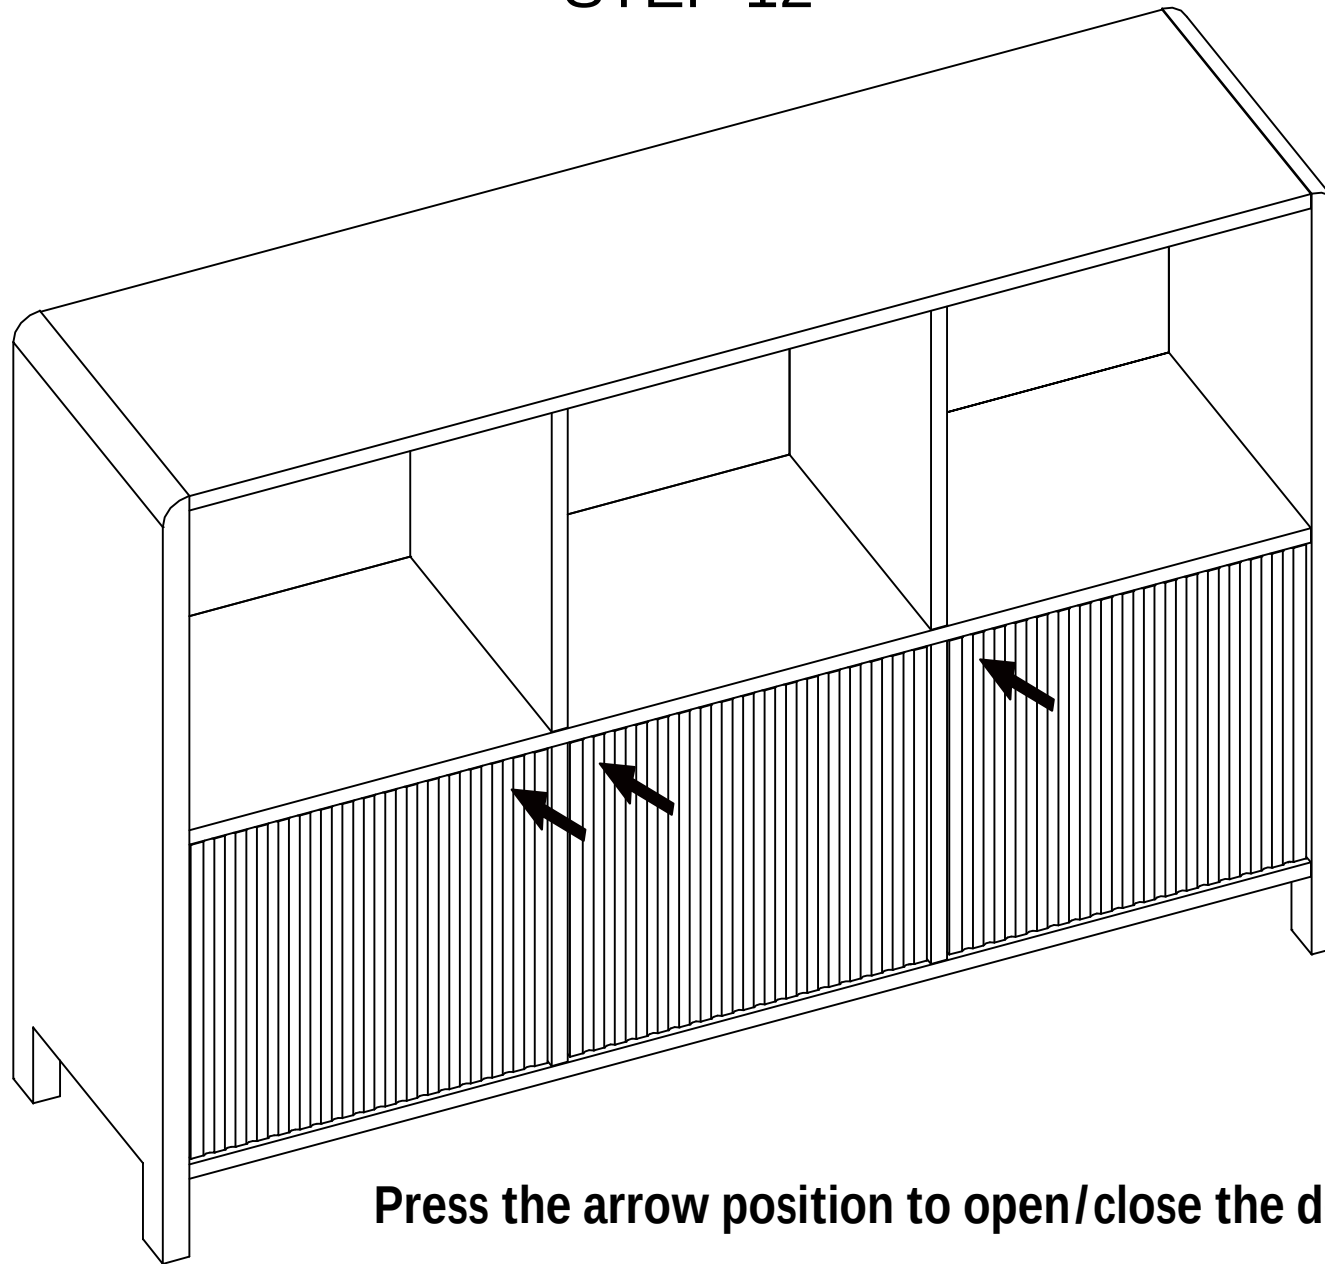

Press the arrow position to open/close the door.