


CEILING FAN

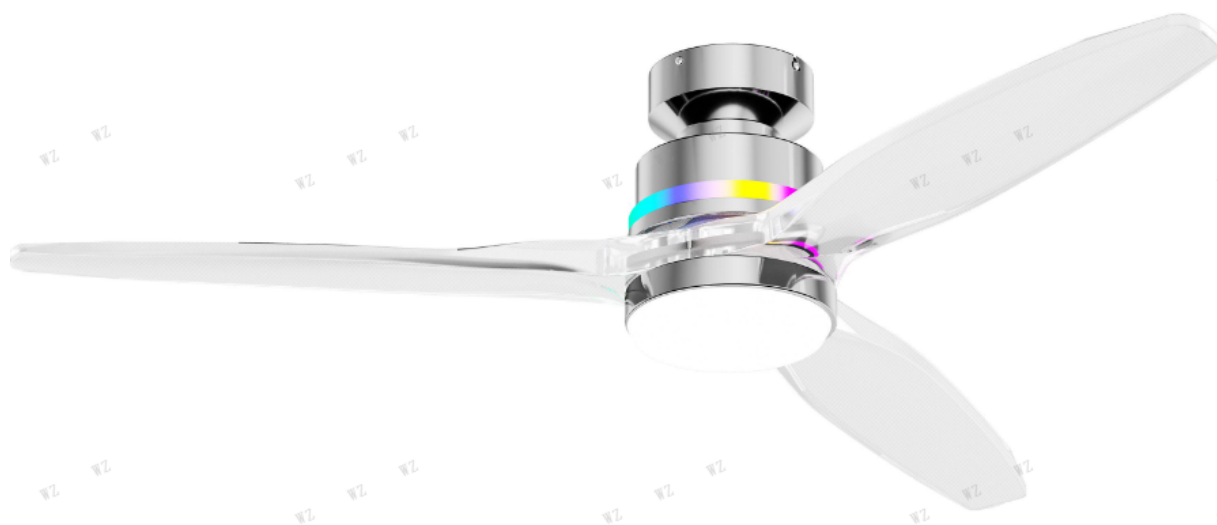

USER MANUAL

Limited Warranty

The supplier warrants the fan motor to be free from defects in workmanship and material present at the time of shipment from the factory. This warranty will be valid for a lifetime from the date of purchase by the original purchaser.

The supplier also warrants that all other fan parts are free from defects in workmanship and material at the time of shipment from the factory. This warranty covers one year after the date of purchase by the original purchaser.

A receipt indicating the purchase date is required for any claims, so please keep it properly. We agree to correct such defects without charge or, at our option, replace the product with a comparable or superior model if the product is returned. However, all costs of removing and reinstalling the product are your responsibility.

Damage to any part caused by accident, misuse, improper installation, or by affixing any accessories is not covered by this warranty. Additionally, this warranty does not cover any changes in brass finish, including rusting, pitting, corroding, tarnishing, or peeling, due to varying climatic conditions. A certain amount of "wobble" is normal and should not be considered a defect.

Servicing performed by unauthorized persons shall render the warranty invalid. We hereby disclaim all warranties, including but not limited to those of merchantability and fitness for a particular purpose, to the extent permitted by law.

The duration of any implied warranty that cannot be disclaimed is limited to the period specified in the express warranty. Some states do not allow a limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

The retailer shall not be liable for incidental, consequential, or special damages arising out of or in connection with product use or performance, except as may otherwise be accorded by law. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion or limitation may not apply to you.

This warranty gives specific legal rights, and you may also have other rights that vary from state to state. Shipping costs for any return of product as part of a claim on the warranty must be paid by the customer.

Pre-Installation

Required Tools for Advance Preparation



Phillips screwdriver



Dril



Adjustable wrench



Electrical tape

 


Step ladder

Hardware that Comes with the Package




AA



BB



 CC



DD




EE



NOTE: Hardware not shown to actual size.

AA	Mounting Screws	4pcs
BB	Expansion Bolts	2pcs
CC	Wire Connecting Nut	3pcs
DD	Balanced Parts Package	1pc
EE	Blade Attachment Screw and Fiber Washer	6pcs


Safety Rules

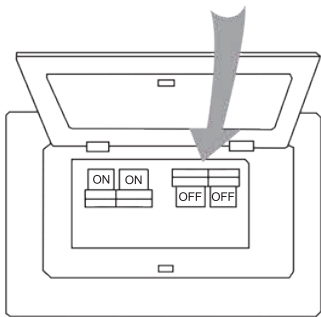

1. Turn off the main circuit power switch and wall fan switch.




Failure to disconnect the power supply prior to installation may result in serious injury or death.

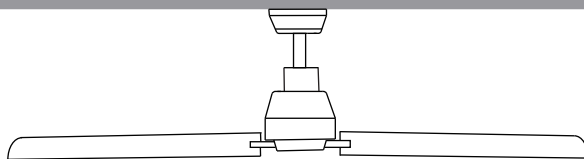

Horizontal ceiling installation

1. Proper installation: The ceiling fan must be mounted vertically on a sturdy ceiling, and the fan must be installed in a manner capable of supporting a weight greater than 66 lbs. If the fan is mounted on a slanted ceiling, the hanger's opening should be tilted upward, and the slot should be inserted into the ear.

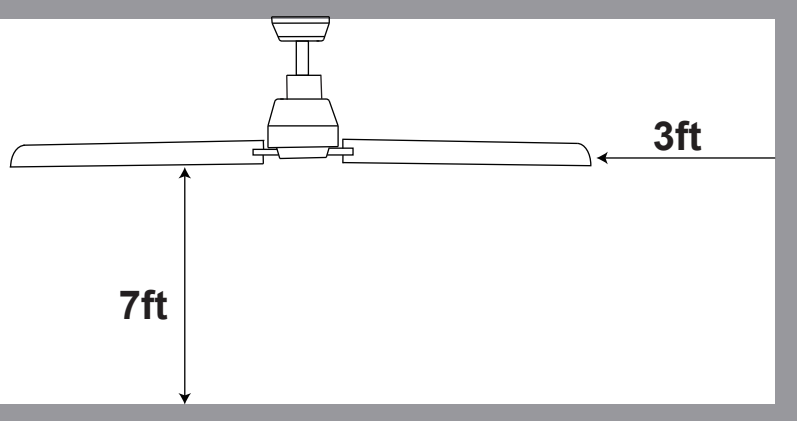





1. Ensure the blades will be at least 3ft from any obstruction. Also check the downrod length to ensure the blades will be at least 7ft above the floor.

Components of Ceiling Fan




NOTE:Hardware not shown to actual size.

A	Mounting Bracket	1pc
B	Canopy	1pc
C	Lid	1pc
D	20cm (8inch) Ball/Down Rod Assembly	1pc
E	R PIN	1pc
F	Canopy Cover	1pc
G	Coupling Cover	1pc
H	Fan-motor Assembly	1pc
I	LED Light Kit	1pc
J	Lamp Cover	1pc
K	Ceiling-mounted pendant disc	1pcs
L	Blade	5pcs
M	Remote Contorl(Receiver)	1pc
N	Remote Contorl(Transmitter)	1pc
O	Ceiling hanging	1pc

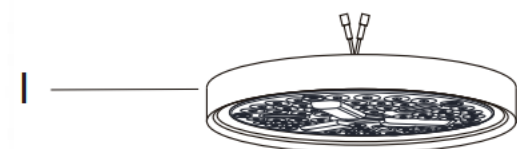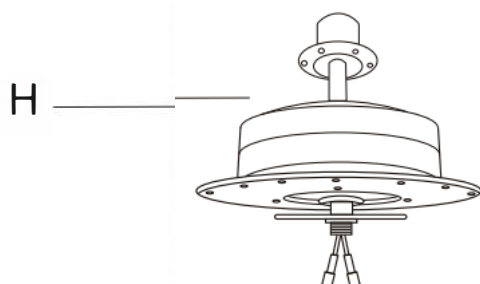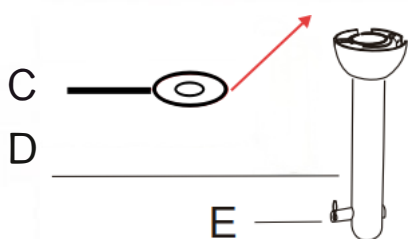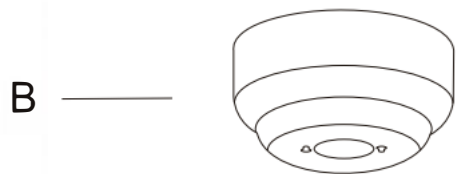

L

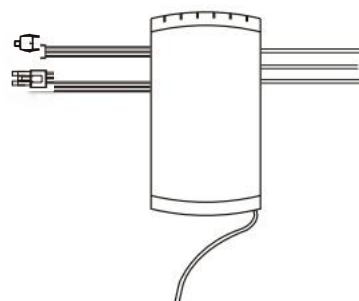

M



N

Installation of the Hanging Bracket (Suspension Part)


For the wooden ceiling, use AA screws to drill on the wooden beam to fix the hanging bracket (selection is made according to actual requirements of the customers).

FOR WOODEN CEILING

SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX.

- ① Use the Mounting Bracket(A) as a guide, mark the spots where the 4 Self Mounting Screws(AA) will be drilled.
- ② Remove the Mounting Bracket(A), drill 4 holes for 3MM diameter, install the mounting bracket onto wooden ceiling with the 4 Self Mounting Screws(AA).

⚠ IMPORTANT :SCREWS MUST BE TIGHTENED TILL SNUG

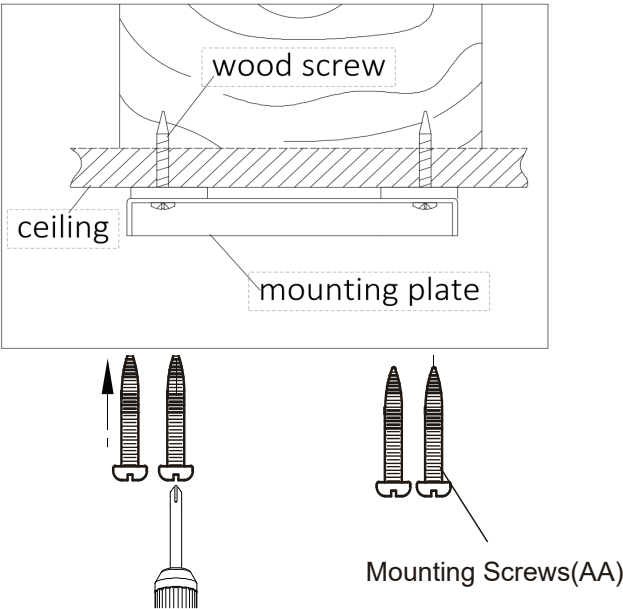


For concrete ceiling, use the percussion bit with diameter 8mm to drill holes according to the length of expansion screws. Then use the attached expansion screws to fix the hanging bracket onto the ceiling (selection is made according to actual requirements of the customers).

FOR CONCRETE CEILING

SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX.

- ① Use the Mounting Bracket(A) as a guide, mark the spots where the 2 Expansion Bolts(BB) will be drilled.
- ② Remove the Mounting Bracket(A). Drill 2 holes for 8MM diameter and insert 2 Expansion Bolts(BB) into the concrete ceiling, install the mounting bracket and secure with Flat Washers(BB1), Spring Washers(BB2)and Nuts(BB3).


⚠ IMPORTANT :SCREWS MUST BE TIGHTENED TILL SNUG

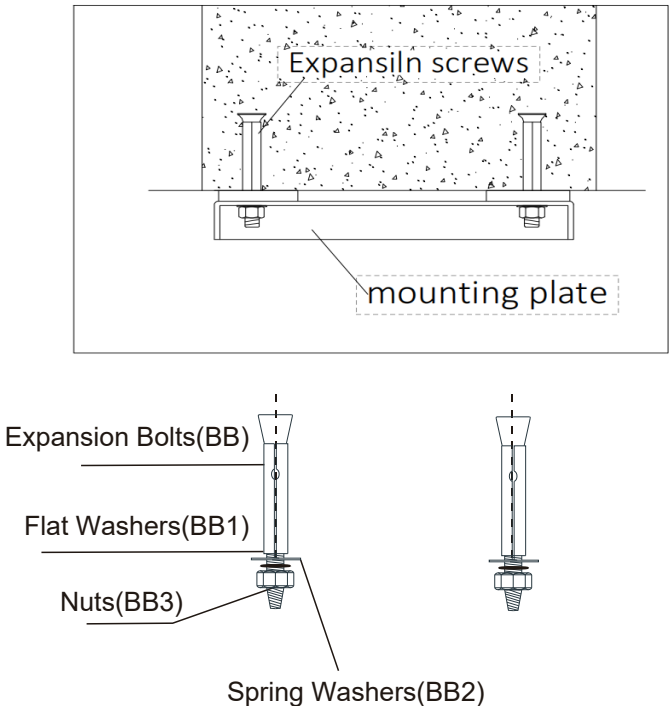

Install The Hanging Part of the Ceiling Fan



1. Remove the suspension ball

- ① Remove the Hanger Ball from the Down Rod Assembly by loosening the Set Screw, then removing the R-shaped clip and metal pin as shown. Keep these parts

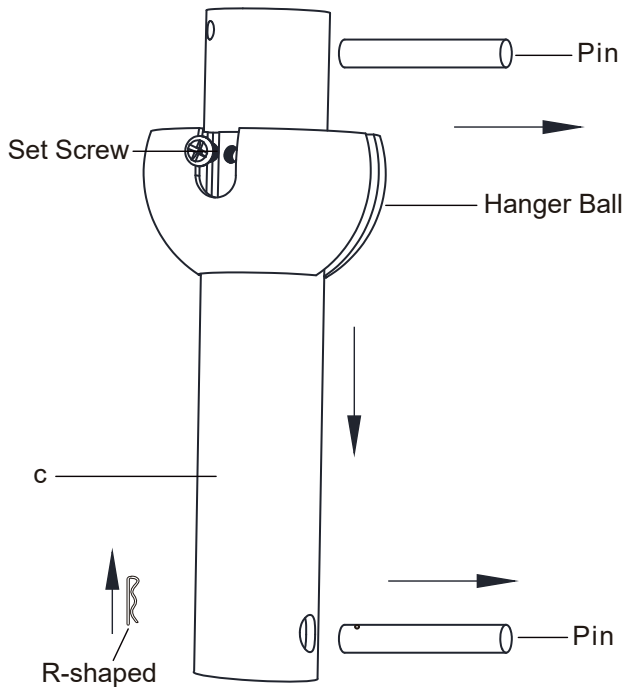

2. Install downrod assembly

- ① Thread the Down Rod(D/E/F) through the Coupling Cover.
- ② Then insert the tail of the suspender from the lifting head of the motor.
- ③ After the lateral pin is threaded out from the suspended head position, insert R-shaped Pin.
- ④ Tighten the lifting head screws.
- ⑤ Hang the fan of the hanging pipe into the hanger.

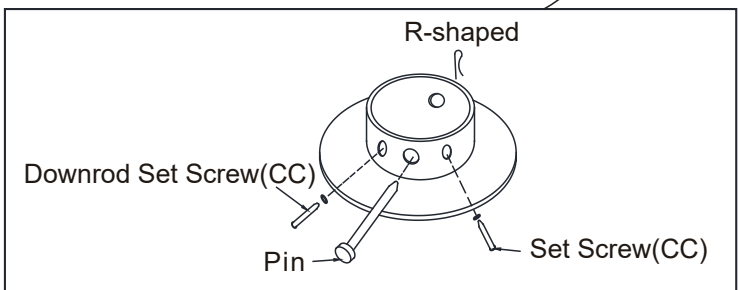
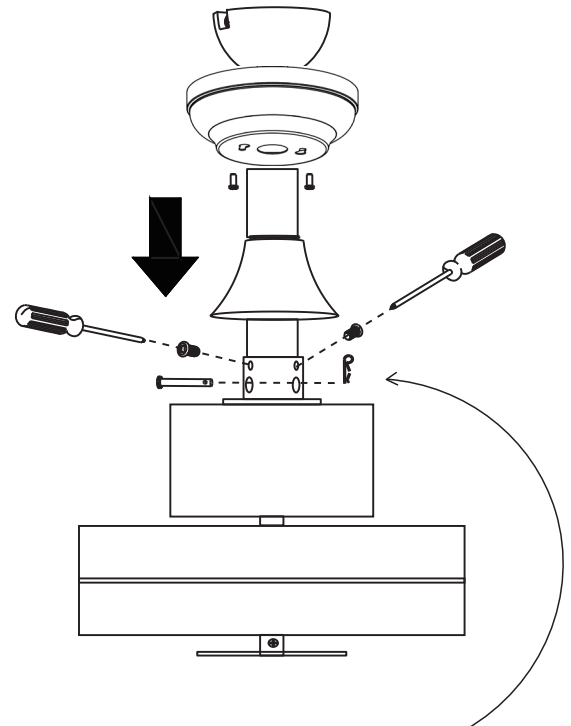


Assembly-Hanging the Fan

1. Mount fan to bracket



 **NOTE:** Seek the help of another person to hold the stepladder and hang the fan body for you.

- ① Lift the fan assembly onto the mounting bracket. Ensure the registration slot of the hanger ball is positioned on the stopper of the mounting bracket to prevent the fan from rotating when in operation.

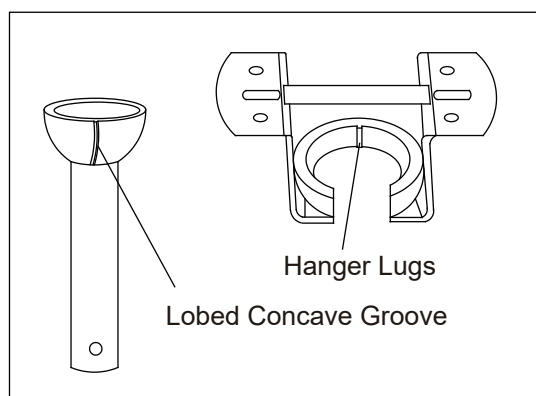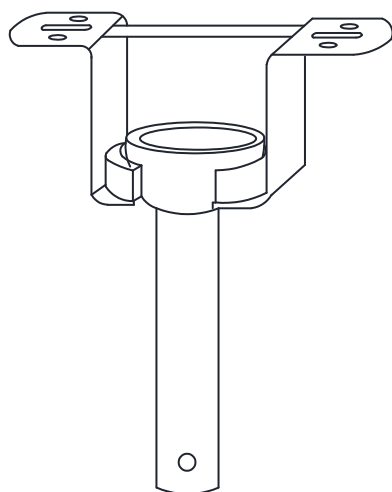

2. Install remote control


- ① Carefully push the canopy to the bottom of the mounting bracket, make two sliding holes aligned to the two prominent screws on the mounting bracket, and then turn clockwise until tight.
- ② Push the canopy ring to the bottom of the canopy, slide the inner holes aligned to the two prominent screws on the mounting bracket again, and turn the canopy ring clockwise until tight.
- ③ Use wiring terminals to connect the blue wire of the Receiver(N) to the household zero wire.

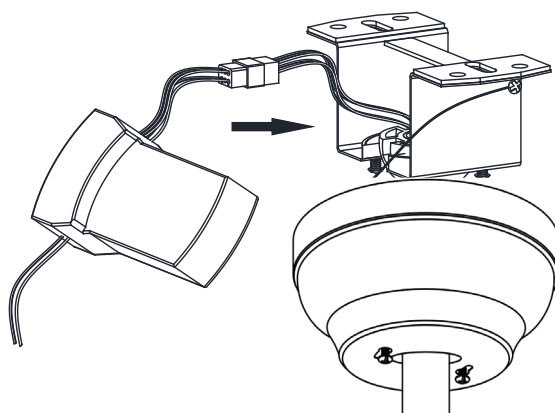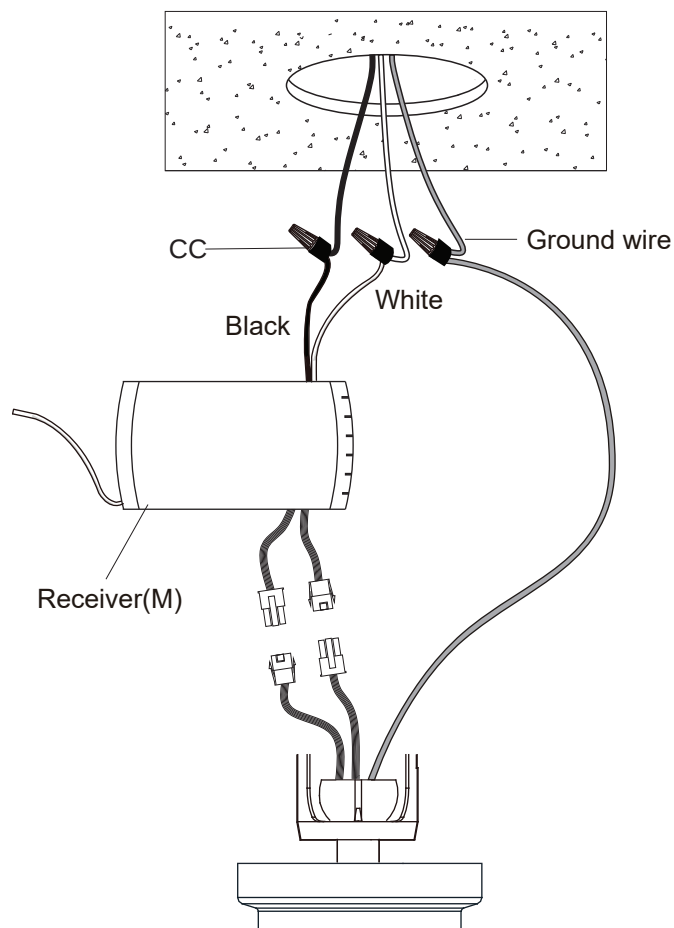



Assembly-Hanging the Fan

3. Preparing for mounting


- ① Remove the mounting bracket from the canopy by loosening the two canopy screws located in the L-shaped slots.
- ② Remove and save the two canopy screws in the round holes. This will enable you to remove the mounting bracket.

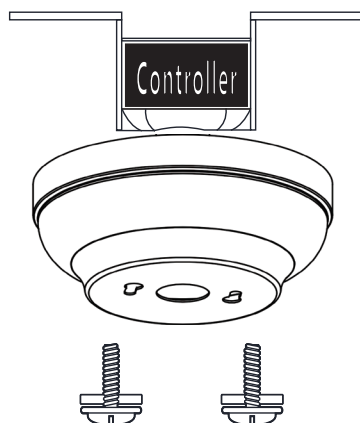



4. Ceiling-mounted installation method

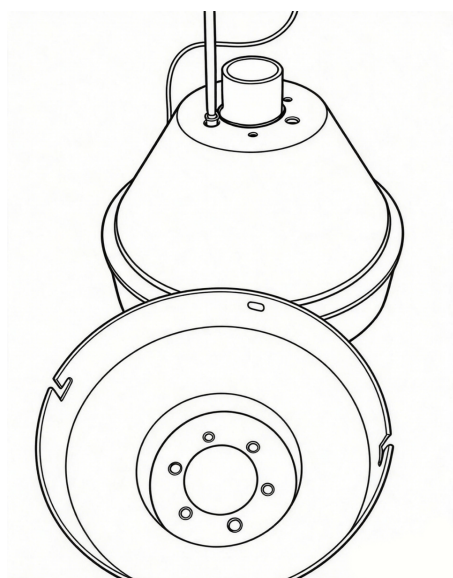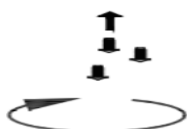

Remove the screws on the lifting head

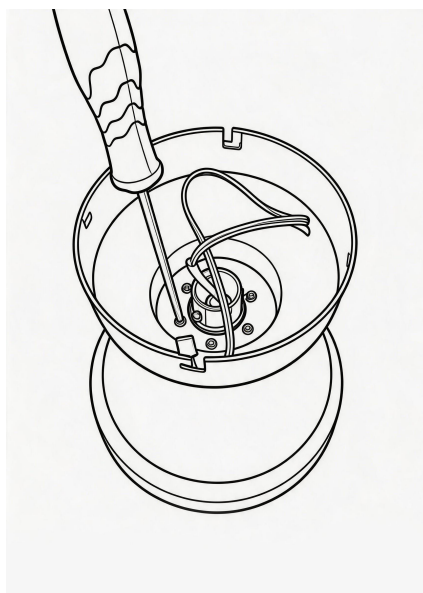


Place the ceiling clock onto the screw hole position of the hanging head, and use the removed screws to retighten it

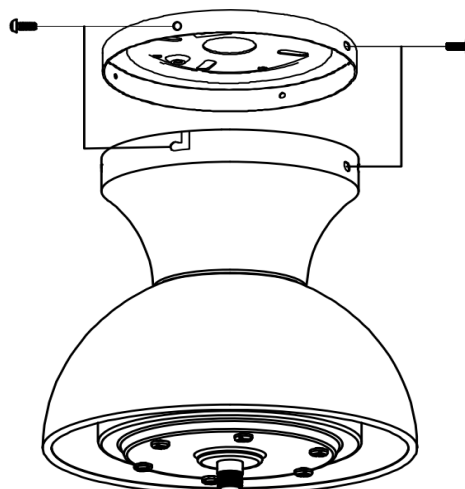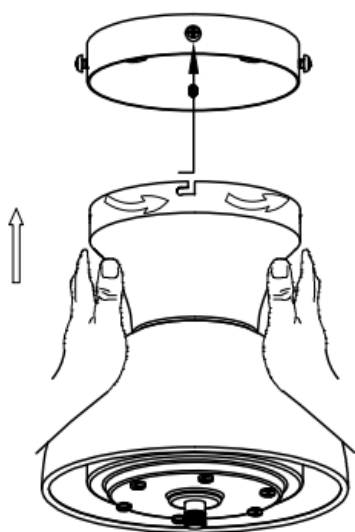

Assembly-Attaching the Fan Blades

- ① Attach 3 fan arms to the motor with screws, making it an assembly.
- ② Fasten the fan blades to the fan-motor assembly with screws.

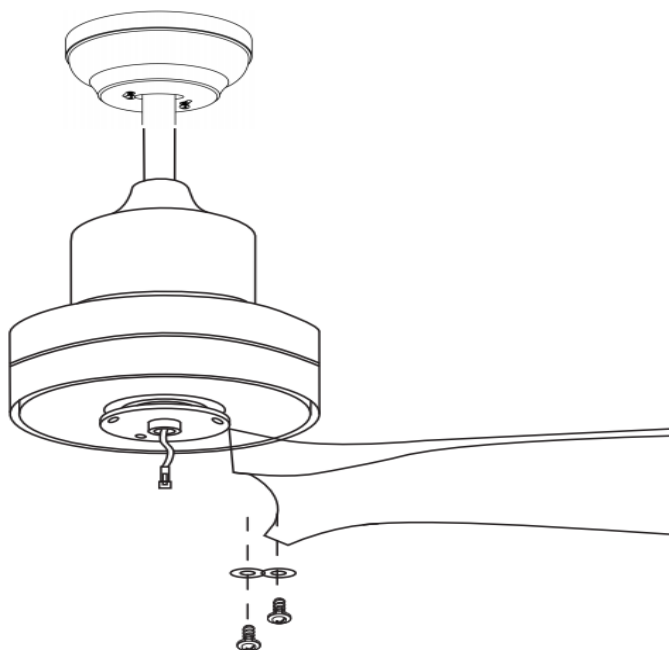


**Phillips
screwdriver**

Assembly-Attaching the Lights




WARNING: Take care not to over tighten when installing the glass shade.

- ① Remove three screws from the plate which on the motor.
- ② Use these three screws to install the LED Light Kit(I).
- ③ Connect cables to the fan and light source.
- ④ Install the Lamp Cover(J) as shown.

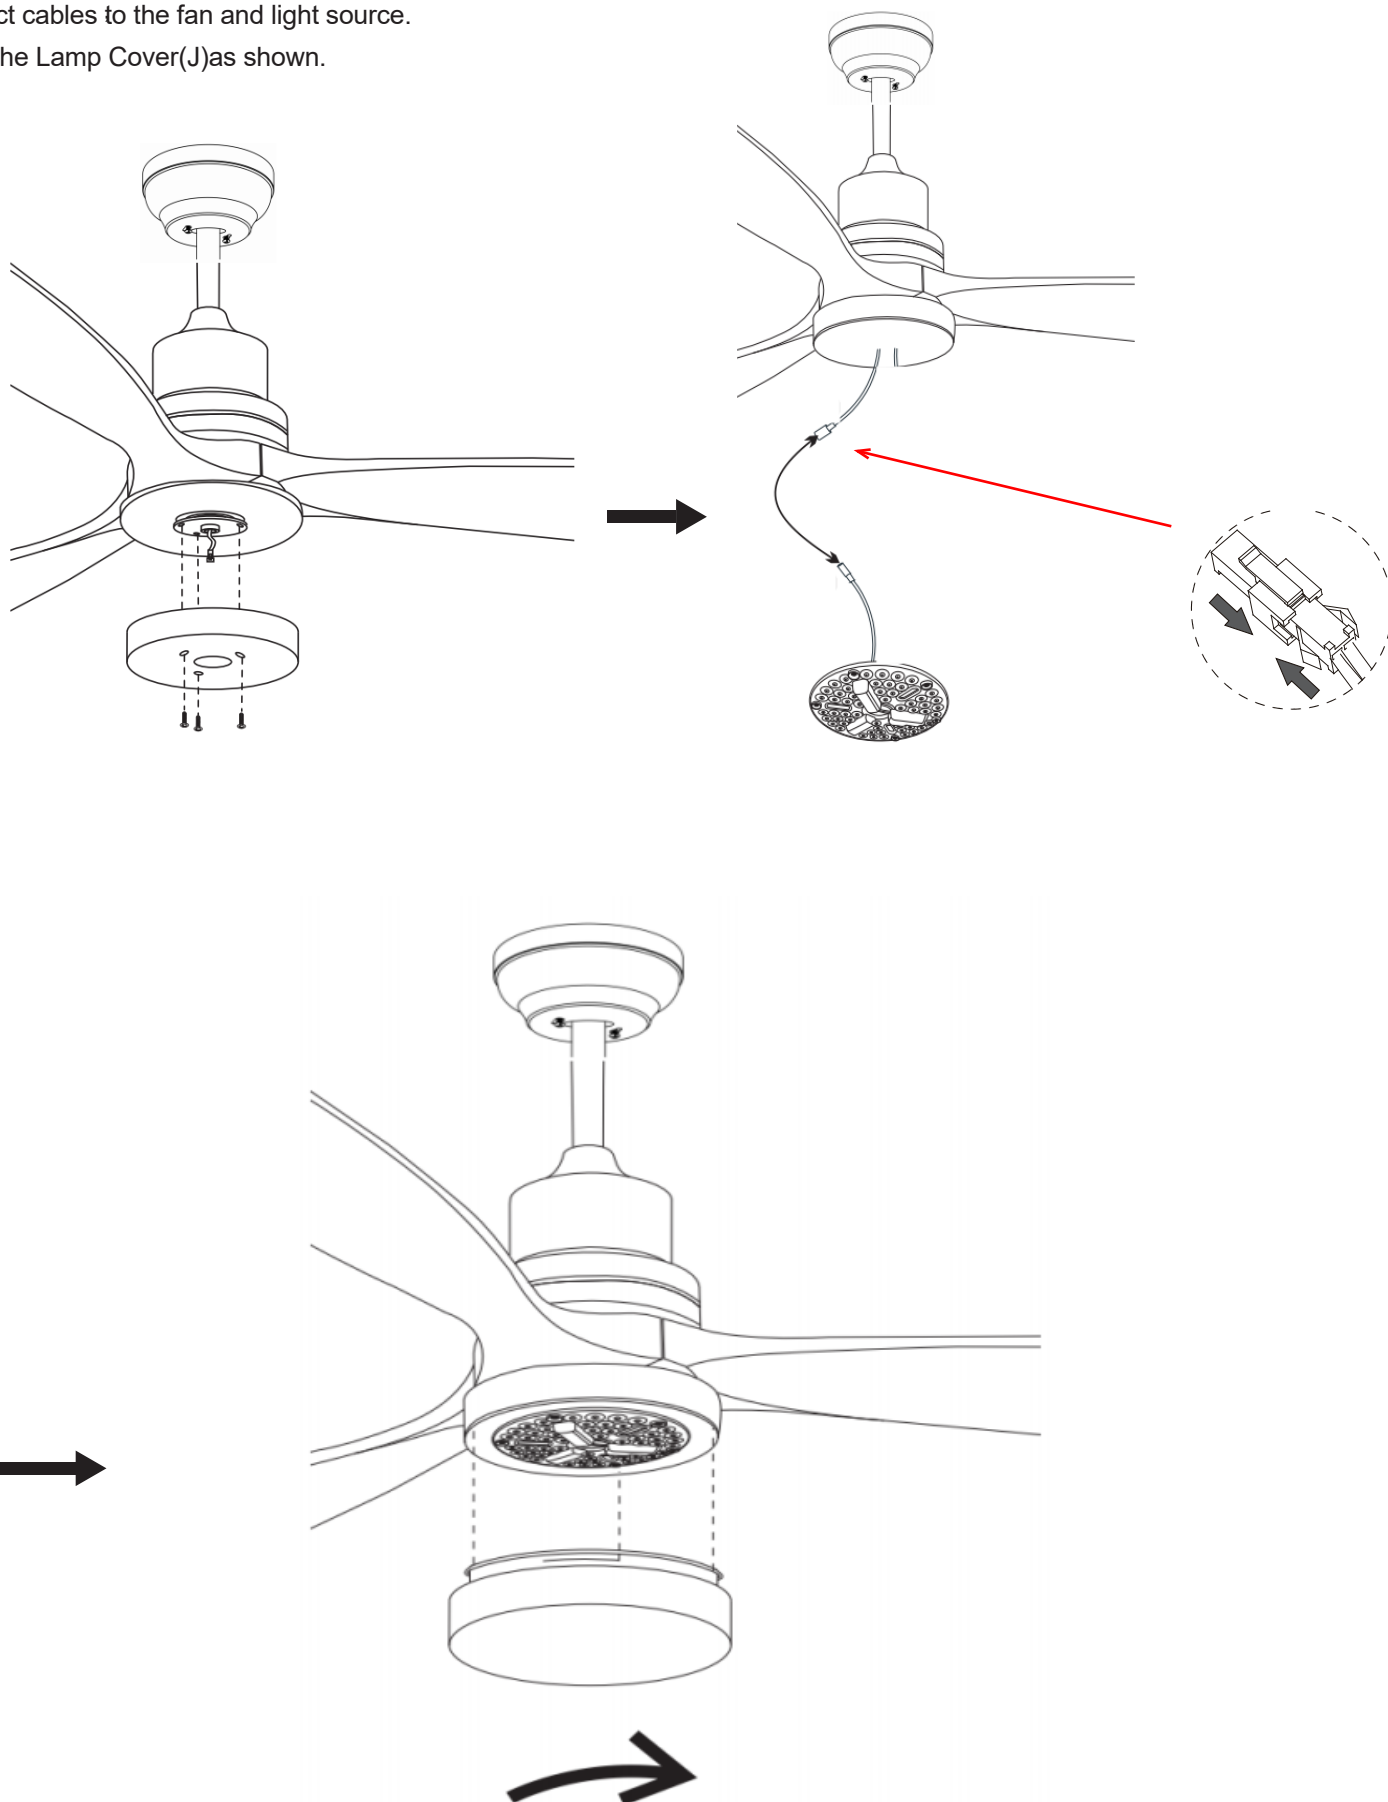

Function Instruction of Emitter

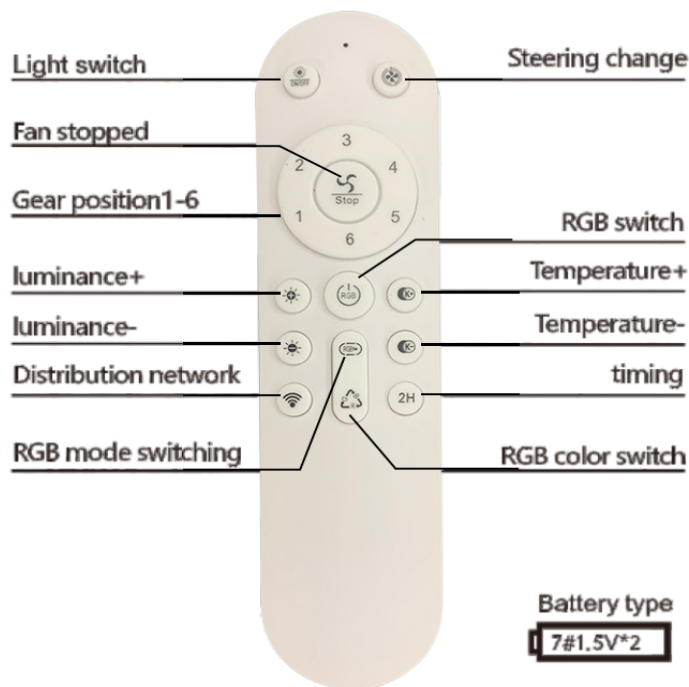

REMOTE CONTROL PAIRING

- ① The remote control that shipped with your fan is already paired.

Note: When pairing a new remote control, you **MUST** disconnect power (at the wall switch, breaker, or fan from other ceiling fans within range) to prevent faulty operation.

If you lose your remote control or purchase a new one, please follow the steps below to pair the control to your ceiling fan.

DIGITAL MATCHING

- ① Turn off the power, wait for 10 seconds and turn on the power again, meanwhile press and hold the “PAIRCODE” button for 5 seconds. Press any button, the fan can work normally, pairing is completed. If it does not work properly, please turn off the power and repeat the operation.

Operation

OPENRATING YOUR FAN

- ① Turn on the power and check the operation of the fan, the remote controls the fan speed and light.
- ② The appropriate speed settings for warm or cool weather depends on factors such as the room size, ceiling height, and number of fans.




NOTE: Wait for the fan to stop before reversing the sirection of the blade rotation

A.Warm Weather-(Forward)


A downward airflow creates a cooling effect. This allows you to set your air conditioner on a higher setting without affecting your comfort.

B.Cool Weather-(Reverse)

An upward airflow moves warm air off the ceiling. This allows you to set your heating umit on a lowering setting without affecting your comfort.

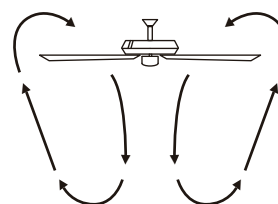

A.Warm Weather
(summertime)

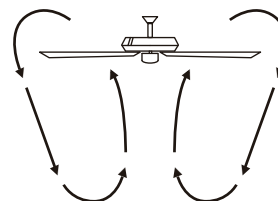

B.Cool Weather
(wintertime)


Care and Cleaning

 **WARNING:** Make sure the power is off before cleaning your fan.

- ① Because of the fan's natural movement, some connections may become loose. Check the support connections, brackets, and blade attachments twice a year. Make sure they are secure. It is not necessary to remove the fan from the ceiling.
- ② Clean your fan periodically to help maintain its new appearance over the years. Do not use water when cleaning, as this could damage the motor or the wood, or possibly cause an electrical shock. Use only a soft brush or lint-free cloth to avoid scratching the finish. The plating is sealed with a lacquer to minimize discoloration or tarnishing.
- ③ You can apply a light coat of furniture polish to the wood for additional protection and enhanced beauty. Cover small scratches with a light application of shoe polish.
- ④ You do not need to oil your fan. The motor has permanently-lubricated sealed ball bearings.

Fans Balance

The balancing kit should only be used if there is an unacceptable amount of fan wobble after completing all the steps.

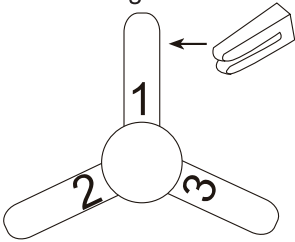


- ① Put the clip in the center of a blade, turn on the fan, and if the rolling persists, put the clip in another blade until the rolling is reduced. The blades of a ceiling fan need to be weight balanced.
- ② Place the clip on the blade where you need to balance the weight, and try to position it in the best position, from the center of the blade to the tip, until the wobble disappears.
- ③ Glue the counterweight to the blade surface at the height of the clip.

Remove the clip and test the fan. If the fan is still staggering, place another counterweight. If it gets worse, try another better area to place the counterweight.


Troubleshooting

Problem	Solution
The fan will not start	☐ Check the main and branch circuit fuses or breakers. ☐ Check the line wire connections to the fan and wire connection in the switch housing.
The fan has noise	☐ Ensure all motor housing screws are snug. ☐ Ensure the screws that attach the fan blade bracket to the motor hub are tight. ☐ Ensure the wire nut connections are not rattling against each other or the interior wall of the switch housing. ☐ Allow a 24-hour "breaking in" period. ☐ Most noises associated with a new fan disappear during this time. ☐ If you are using the ceiling fan light kit, ensure the screws securing the glassware are tight. ☐ Check that the light bulbs are also secure. ☐ Ensure the canopy is a short distance from the ceiling. ☐ It should not touch the ceiling. ☐ Ensure your outlet box is secure and rubber isolator pads were used between the mounting plate and outlet box.
The fan wobbles	☐ Check that all blade and blade arm screws are secure. ☐ Most fan wobble problems are caused when blade levels are unequal. ☐ Check this level by selecting a point on the ceiling above the tip of one of the blades. ☐ Measure from a point on the center of each blade to the point on the ceiling. ☐ Measure this distance. ☐ Rotate the fan until the next blade is positioned for measurement. ☐ Repeat for each blade. ☐ Any measurement deviation should be within 1/8 in. ☐ Run the fan for ten minutes. ☐ If the fan continues to wobble please refer the page 11 .


USE TUYA SMART APP TO CONTROL FAN

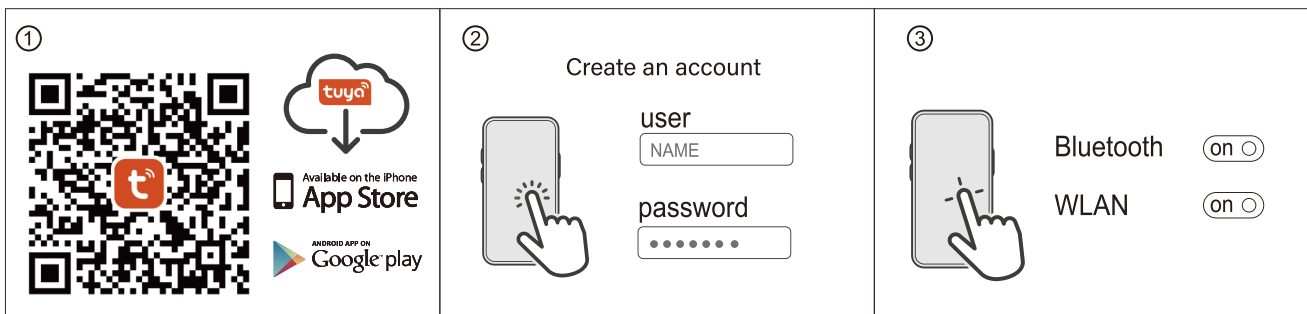


1. Scan the QR code to download and install "Tuya Smart" or download it from the App Store.
2. Open the app and follow the new account creation guide to set up your account.
3. Turn on Bluetooth and Wi-Fi, then connect to a Wi-Fi network. Note: Only 2.4G routers are supported.

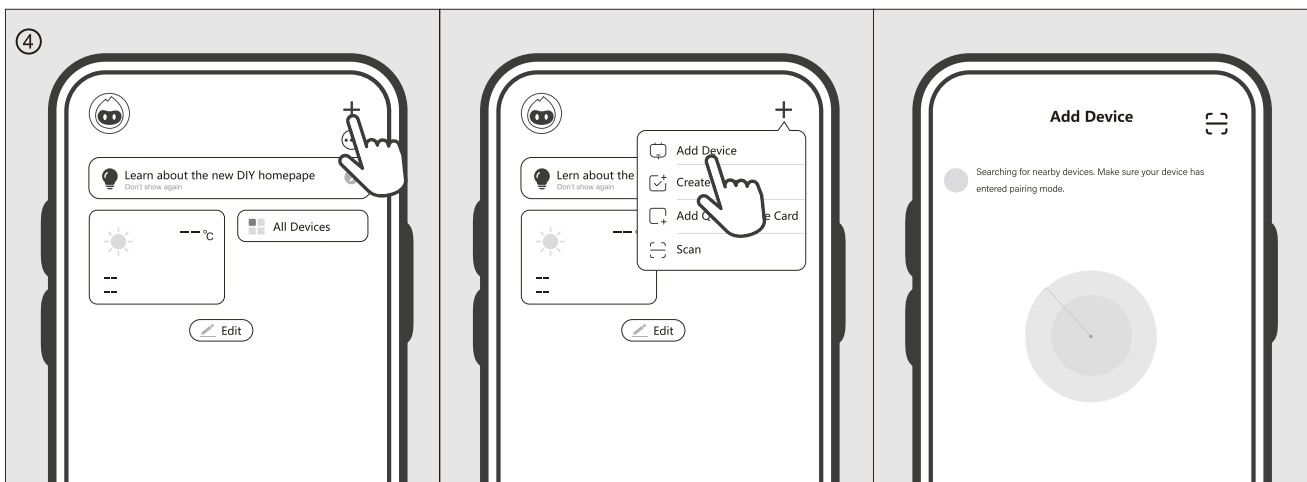

4. Tap the "Add Device" button in the app.

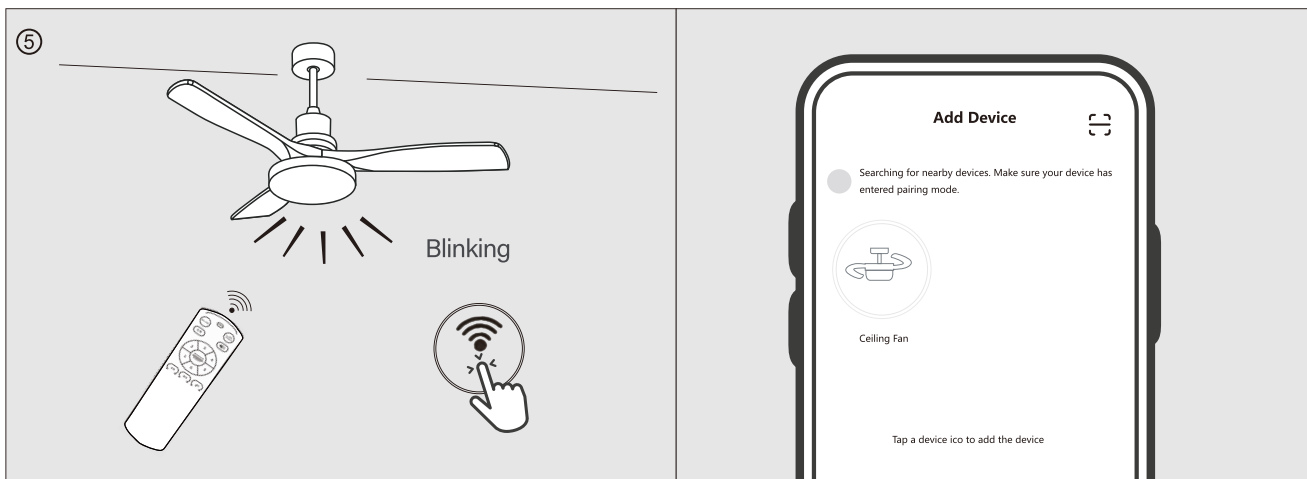

5. To enter network distribution mode, turn off the wall switch, wait for 10 seconds, then turn on the power again. Once the light turns on, immediately press and hold the "  " button on the remote for 10 seconds until the fan light starts flashing. The device connection icon will appear in the app, indicating successful connection.

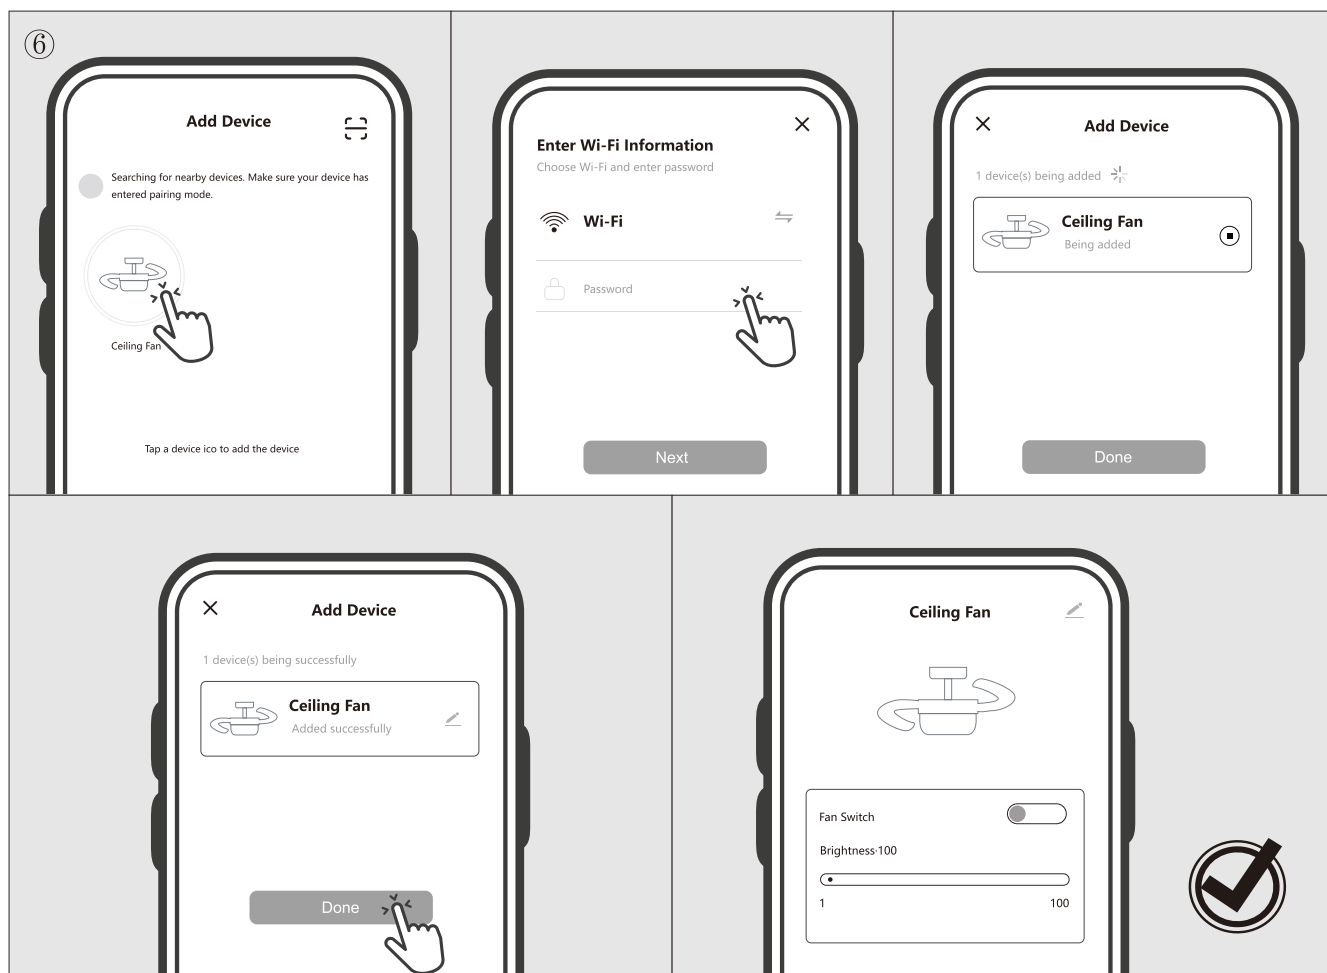

6. Tap the device connection icon and enter the Wi-Fi password for the current network. Wait for the device to be successfully added. Then, you can enter the app control interface to control the fan.



Note

When pairing via Bluetooth, the fan should not be in operation.