

Parameter Table

Material: Stainless Steel Body

Function: Decoration & Flame Viewing

Style: Smart Version

Size: Standard Size

Application: Household, KTV, Bar, Reception Desk, Office and other scenarios

When the atomizing fireplace malfunctions, the following situations need to be checked:

1. Check if the atomizing fireplace is powered on normally.
2. Check if there is water in the water tank; excessively high or low water levels will affect the normal operation of the atomizer.
3. Check whether internal fireplace components (wiring assemblies, light strips, water pumps, fans, etc.) are functioning properly.
4. Improper manual operation, such as spilling water into the unit while refilling water.
5. Please read the product user manual carefully.

3D Atomizing Fireplace Instruction Manual

Installation Instructions

1. The 3D atomizing fireplace shall be installed horizontally on a stable, immovable location with minimal air convection.
2. When cutting the opening size for the fireplace mantel, reserve ventilation openings if conditions permit for a better flame effect.
3. The 3D simulated atomizing flame is susceptible to external environmental interference. The flame startup time will be slightly longer in winter. Airflow at the installation site will alter the flame's color and floating shape.
4. Take care during refilling water; do not spill water outside the water inlet and strictly avoid water flowing into the unit interior to prevent damage to internal electrical components. A full water tank typically lasts 8-10 hours of operation.
5. During water refilling, disconnect the water hose once the voice prompt announces that filling is complete. Excess water will stop the atomization function.
6. If the unit needs to be moved, fully drain all water from the water tank and cut off the power supply before transportation.
7. The 3D atomizing fireplace is laid flat inside the mantel opening. A three-prong power socket must be reserved on the right side of the opening's bottom. (Note: The power socket shall be flush with the inner groove of the opening during installation.)
8. This unit comes with a built-in filtration system for safe use. Processed tap water or purified water is recommended to extend the overall service life of the machine.

Watering/Draining Instructions

Automatic Water Intake Operation

Plug in the power supply first, then take out the water hose from the packaging bag and insert the tube fully into the automatic water inlet. Ensure the hose is fully inserted to prevent water leakage. Place the other end of the hose into a water bucket. Press the Power button; the unit will alert you of insufficient water level and then start automatic water intake. The water filling process takes about 5–6 minutes: the machine preheats for the first 1 minute, then the simulated flame emerges. The fireplace will stop water intake automatically once the tank is full, and the control panel will display normal operating status. Unplug and store the hose afterward. You may adjust the flame effect via 1–8 speed levels.


Automatic Water Drainage Operation

Insert the hose into the automatic water outlet first, then turn off the fireplace power switch.


(Note: Drainage function only works under standby mode.)

Point the remote control at the touch panel and long-press the Drain button to start draining water.

Convenient and intelligent remote control

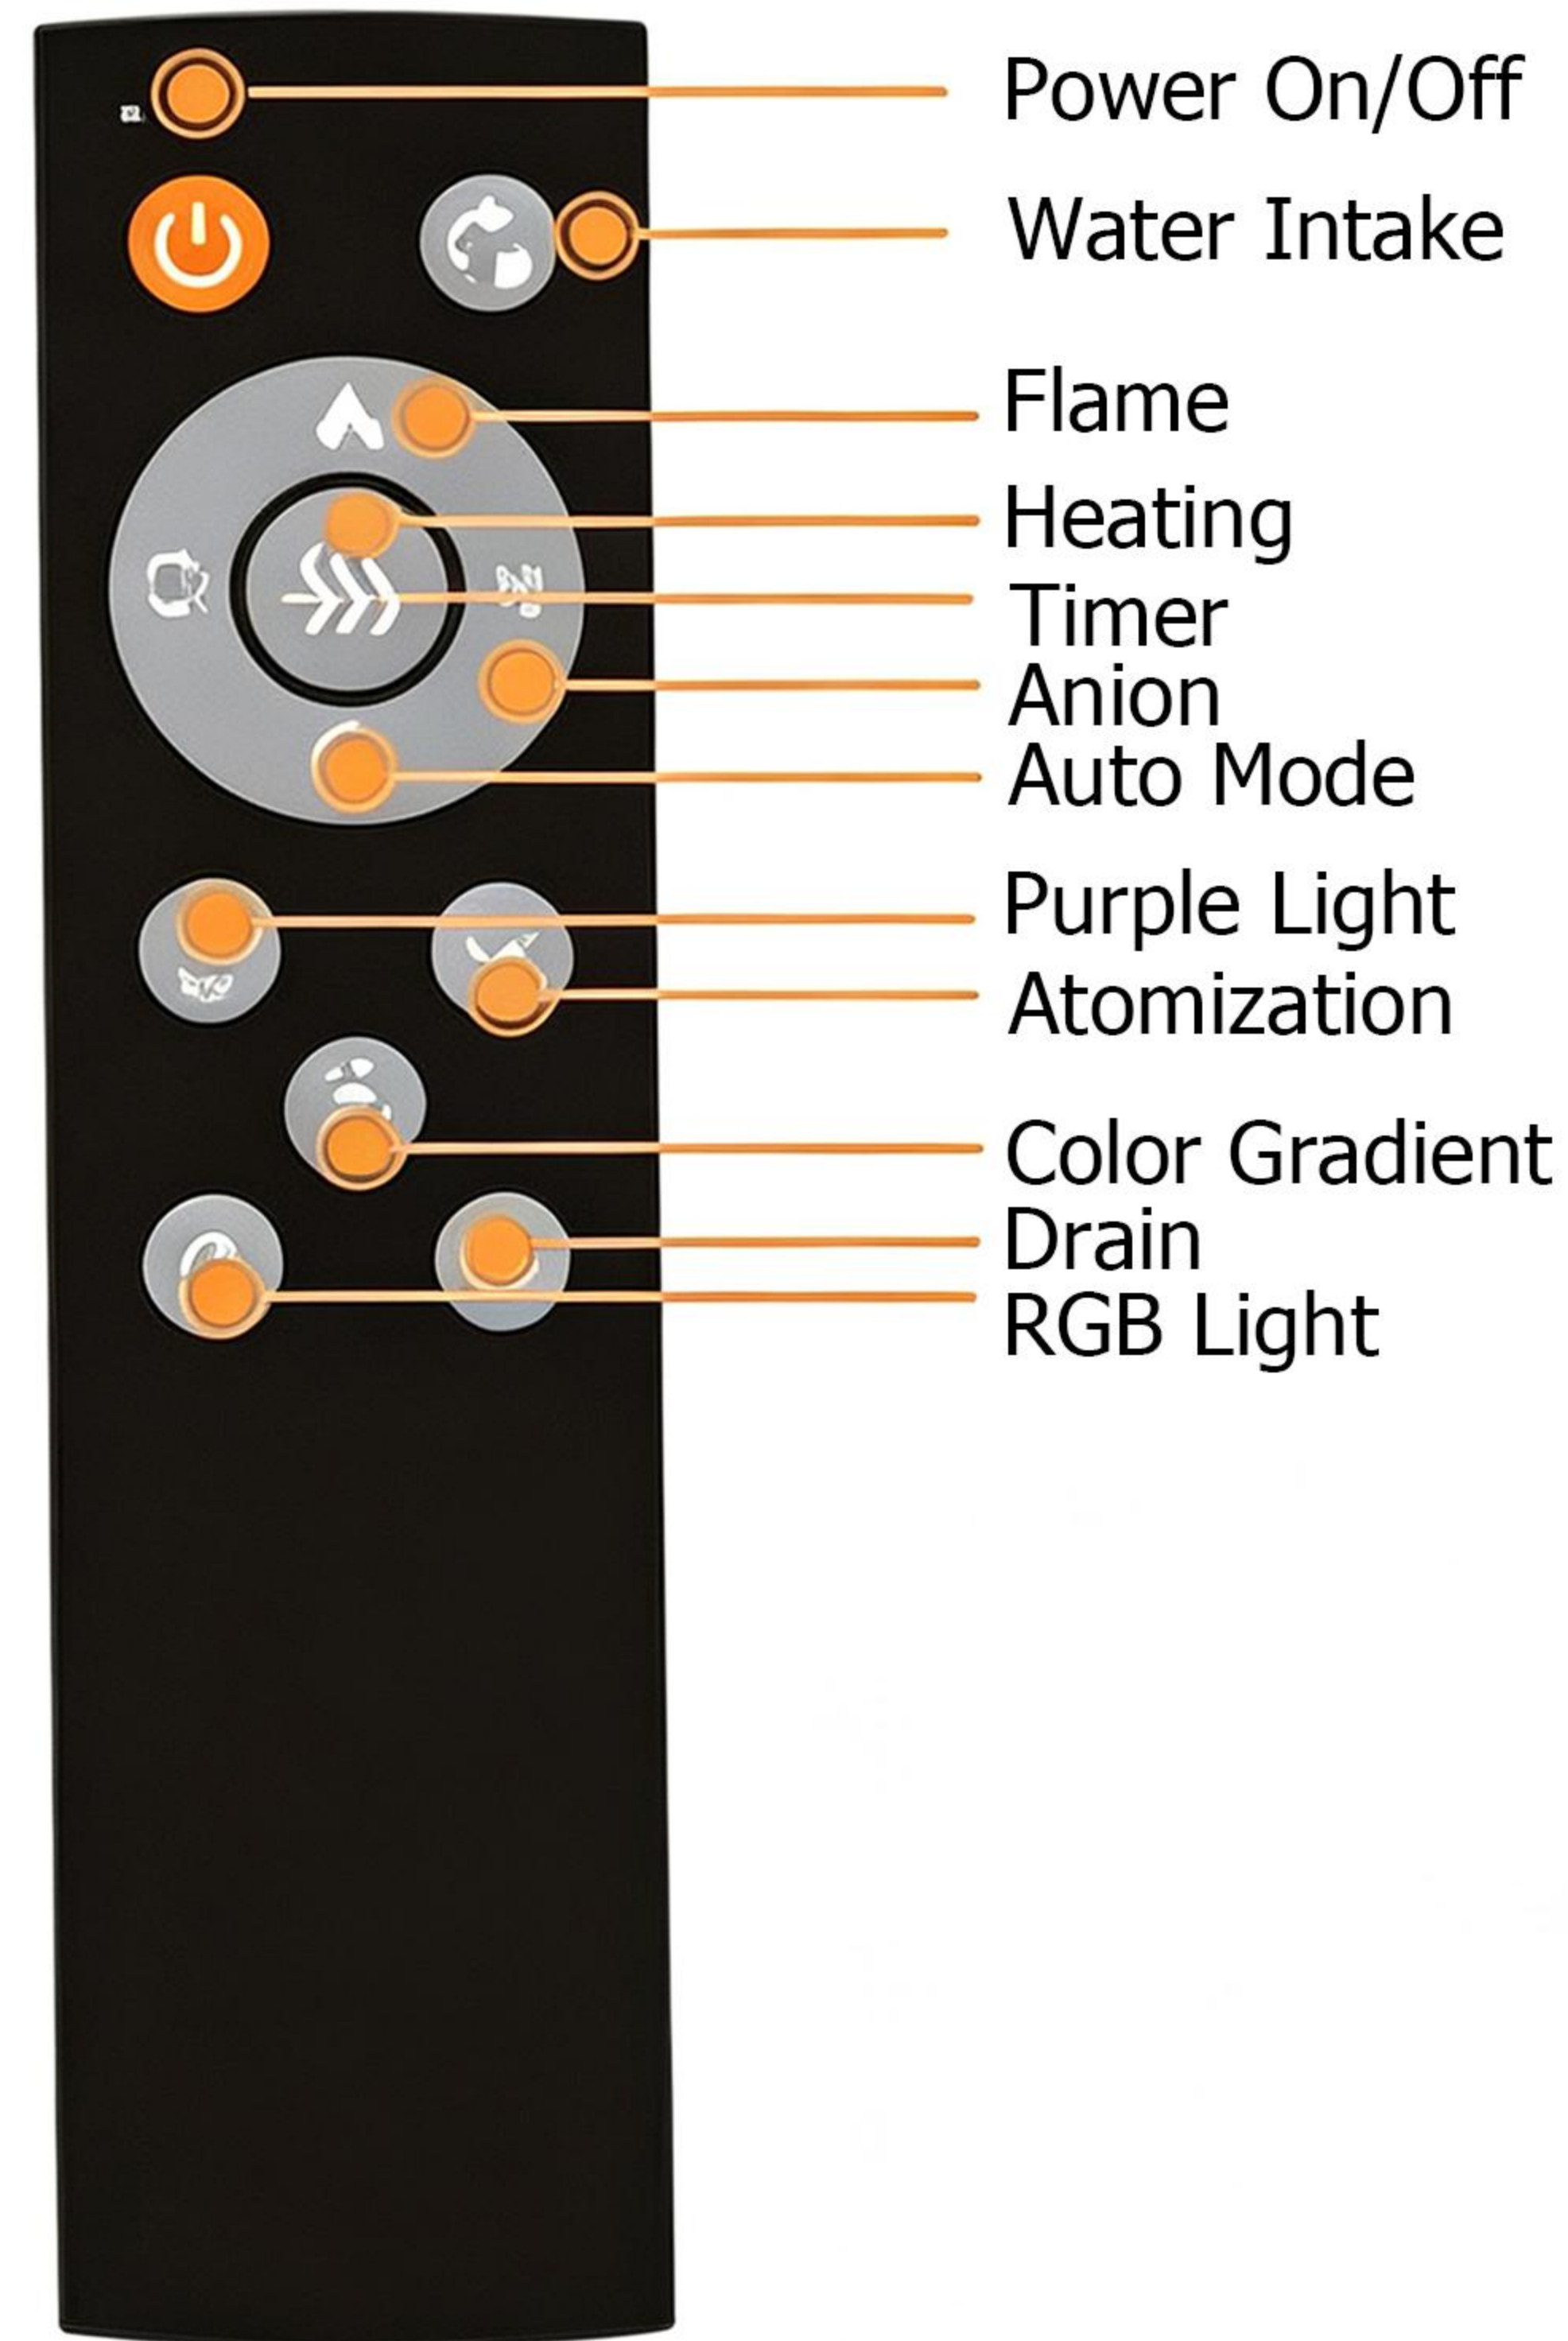

Full-screen touch screen of the body

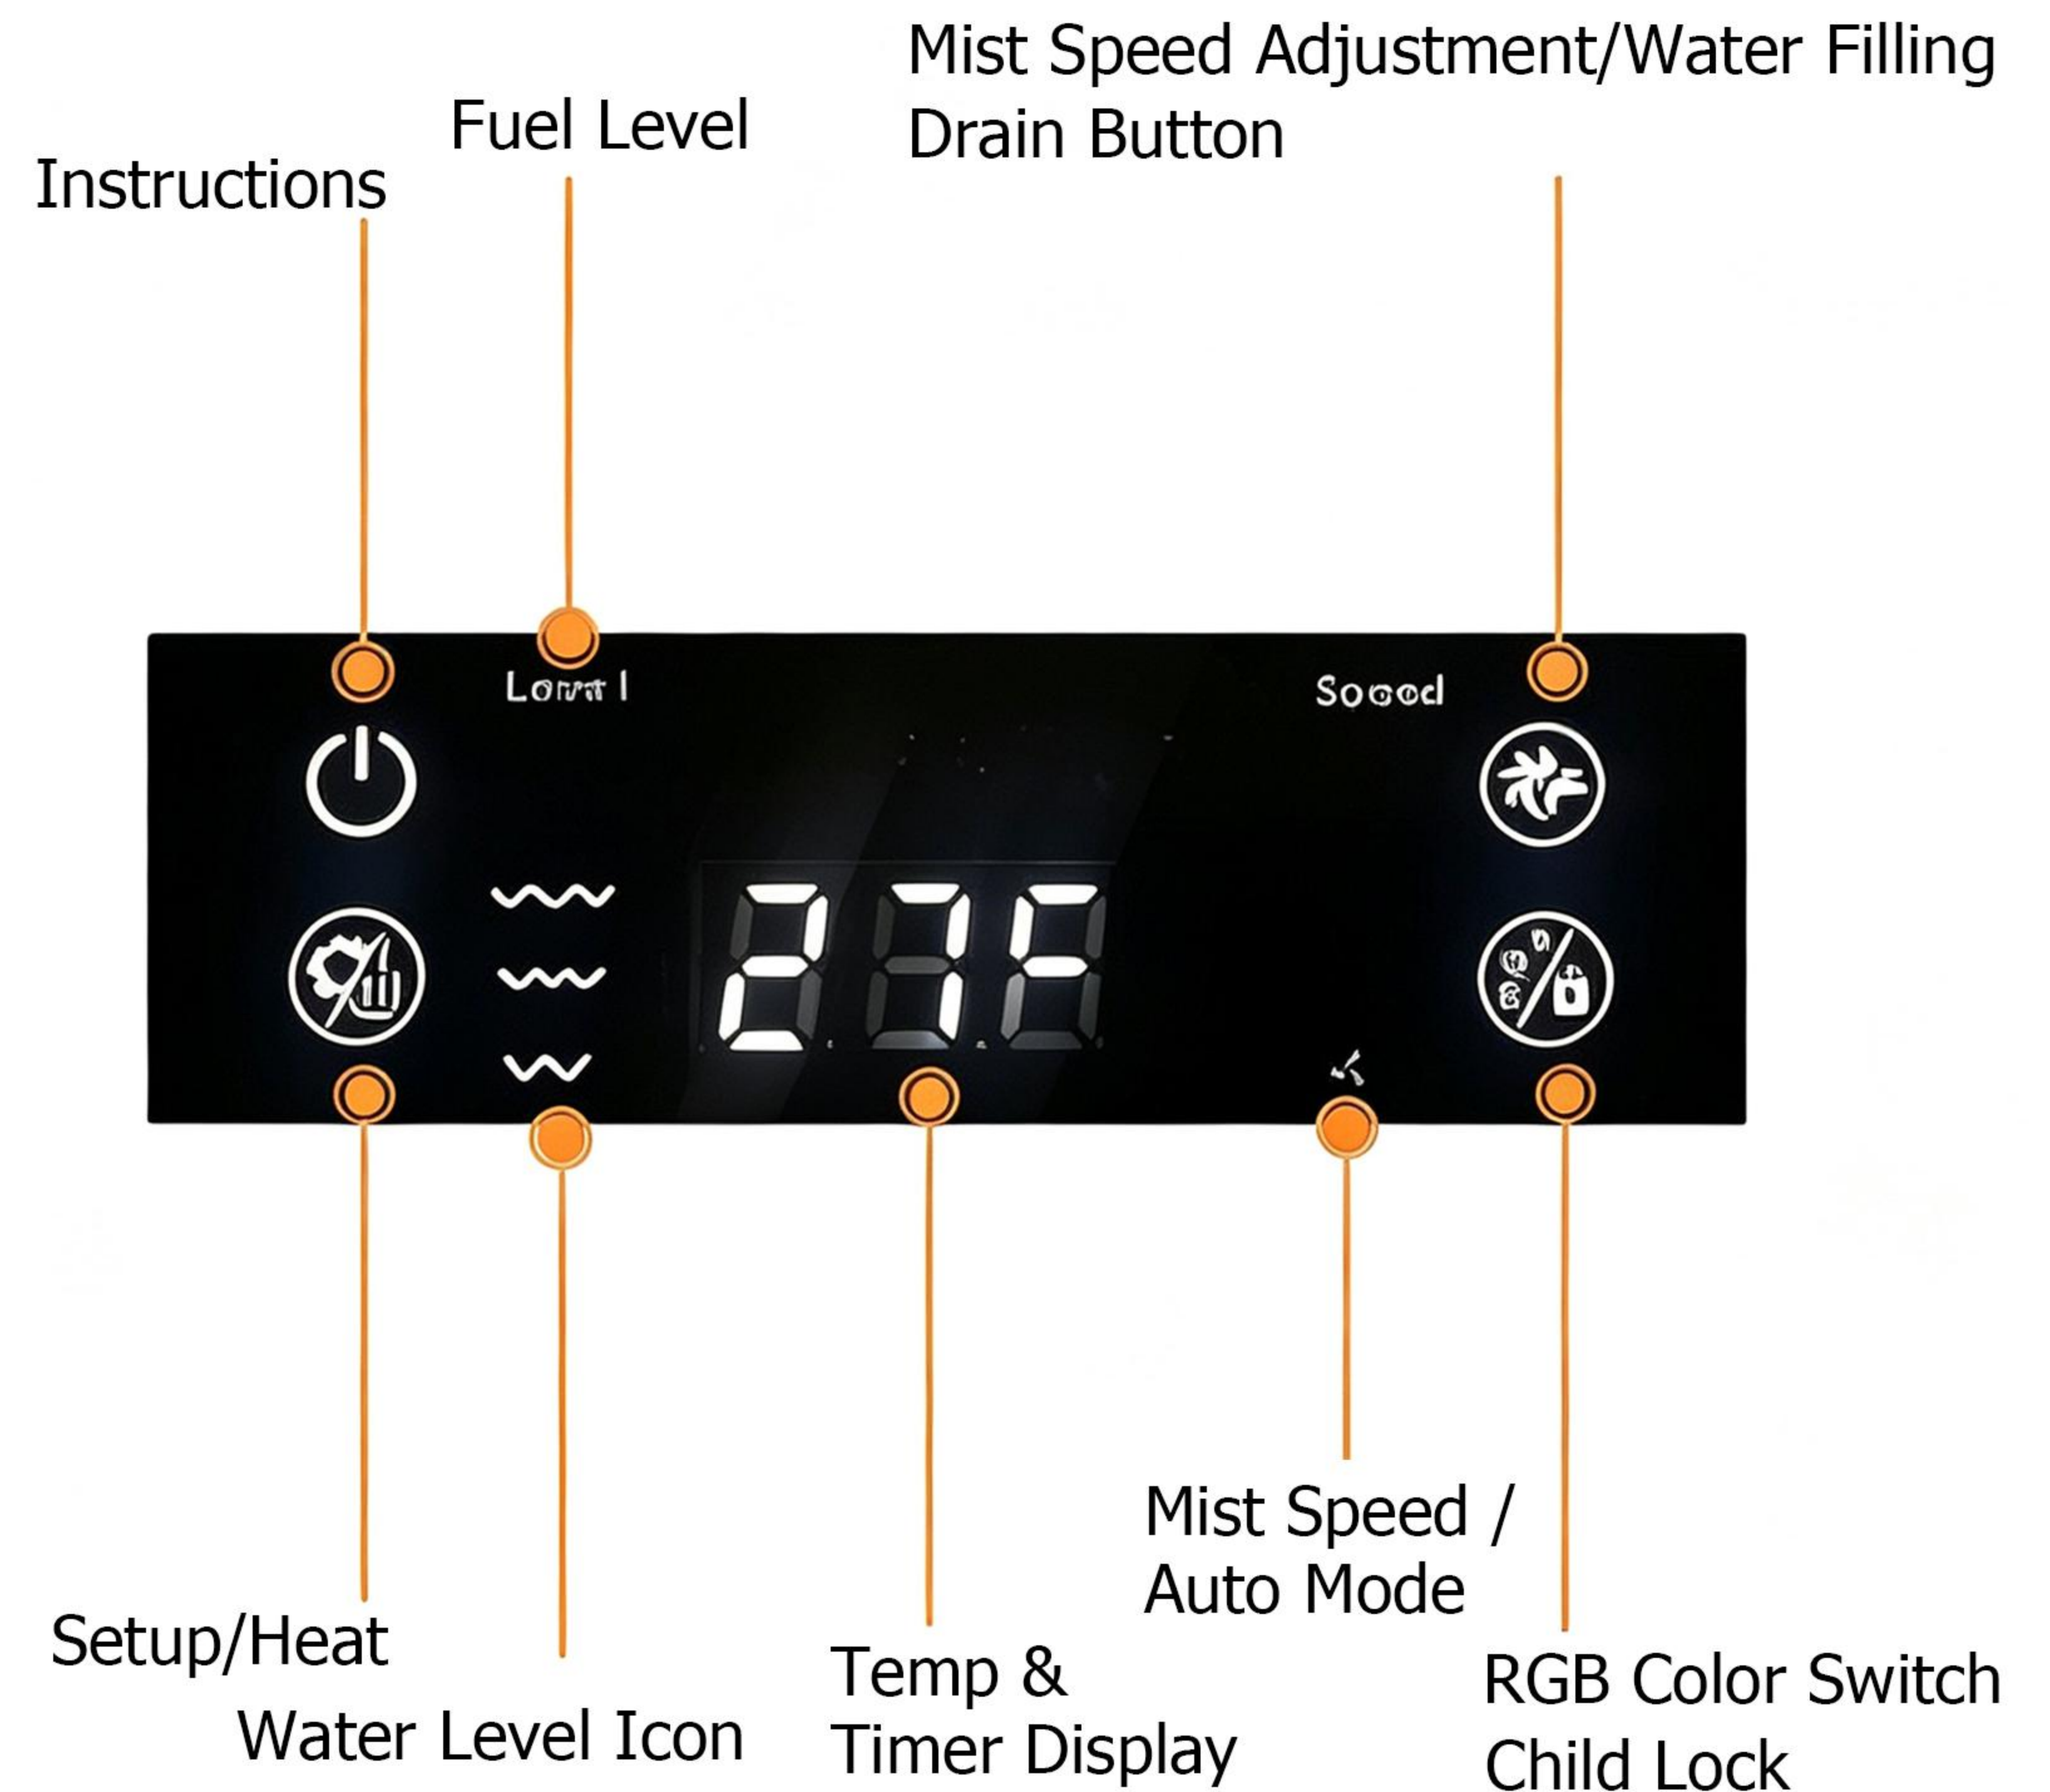

The functions of the four buttons on the display screen

1. Power Button: Upon valid tap, the main control board runs under default program.
2. Mist Speed/Water Fill / Drain Button: Short press to adjust mist speed (8 speed levels in total). Long press while powered onto start water filling; long press when powered off to drain water.
3. Child Lock/ RGB Color Switch Button: Short press to cycle through light colors long press to activate child lock.
4. Settings/ Heating Button: Long press to enter temperature setting mode; short press to adjust heating power levels.

Voice Control Command Words



NO	Command Words	Feedback Prompt Tone	NO	Command Words	Feedback Prompt Tone
1	Fireplace classmate	Hello, I'm here	14	switch off atomization function	Atomization function has been turned off
2	Turn on fireplace	Fireplace has been turned on	15	Change the color Change the color again	Color changed successfully
3	switch off fireplace	Fireplace has been turned off	16	Brighter light	Brightness level one, two , three, four
4	Automatic watering	Water has been added automatically for you	17	Dim the light	Brightness level four, three, two one
5	Bigger flame Much bigger flame	Flame level one、 two、 three four、 five、 six	18	Automatic drainage	The motor is pumping water
6	Smaller flame	Flame level six、 five、 four、 three, two、 one	19	Stop	Drainage has stopped Water addition has stopped
7	Higher combustion speed Much higher combustion speed	Combustion speed level one、 two、 three、 four、 five、 six、 seven、 eight	20	Turn on ultraviolet disinfection	Disinfection mode has been turned on
			21	switch off ultraviolet disinfection	Disinfection mode has been turned off
8	Lower combustion speed	Combustion speed level eight、 seven six five four three two one	22	Turn on heating Set heating to level one	Heating has been turned on please do not cover the air outlet
9	Increase timing	Timing has been increased for you	23	Set heating to the maximum Set heating to level two	Heating has been set to the maximum level
10	Reduce timing	Timing has been reduced for you			
11	Turn on auto mode	Auto mode has been turned on	24	switch off heating	Heating has been turned off
12	switch off auto mode	Auto mode has been turned off	25	Turn on gradient	Gradient has been turned on
13	Turn on the atomization function	Atomization function has been started	26	switch off gradient	Gradient has been turned off

NO	Command Words	Feedback Prompt Tone	NO	Command Words	Feedback Prompt Tone
27	Turn on negative ions	Negative ions have been turned on	37	switch off lights for heating	Okay, light haacs been turned off
28	switch off negative ions	Negative ions have been turned off	38	Turn on light	Light has been turned on
29	Tum on aromatherapy function	Aromatherapy function has been turned on	39	Turn up the volume	Sound has been turned up
30	switch off aromatherapy function switch off aromatherapy	Aromatherapy function has been turned off	40	Turn down the volume	Sound has been turned down
			41	Raise temperature	Temperature has been raised for you
31	Turn on cleaning function	The fireplace has activated its automatic cycle cleaning function. Please be patient and wait. During the cleaning process, please ensure that the water supply and drainage are unobstructed, thank you.	42	Lower temperature	Temperature has been lowered for you
			43	Child lock setting	Child lock has been set
			44	Child lock release	Child lock has been released
			45	Wireless pairing	WiFi connected successfully
32	switch off cleaning function	Cleaning function has been turned off	46	Remote control pairing	Start pairing/Paired successfully
33	Turn on firewood sound	Firewood sound has been turned on	47	AI Intelligence (AI Model Only)	It is equipped with AI functions such as music playback, interactive chatting, story-telling and weather forecast inquiry.
34	switch off firewood sound	Firewood sound has been turned off			
35	Turn on audio (External Speaker)	Audio has been turned on for you			
36	switch off audio (External Speaker)	Audio has been turned off for you			