

INSTALLATION

Product Manual



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer- could be a rug.



IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.



ANTI-TOPPLE WARNING !

Overturnd furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

 
It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.




Please prepare the following tools

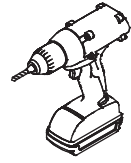

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 91+4  Ø6 x 35 mm	B x 91+4  Ø15 x 10 mm	C x 64+4  Ø6 x 30 mm	D x 33+3  Ø4 x 35 mm	E x 26+2  Ø4 x 14 mm
F x 4 	G x 8 	H x 2  Ø4 x 18 mm	J x 52+4  Ø3 x 12 mm	K x 6  Ø4 x 8 mm
L x 3 	M x 2 	N x 16+2  Ø5 x 45 mm	O x 1 	P x 36+4  Ø3 x 14 mm
Q x 36 	R x 8 	S x 2 	T x 2 	CL x 3 
CR x 3 	DL x 3 	DR x 3 		

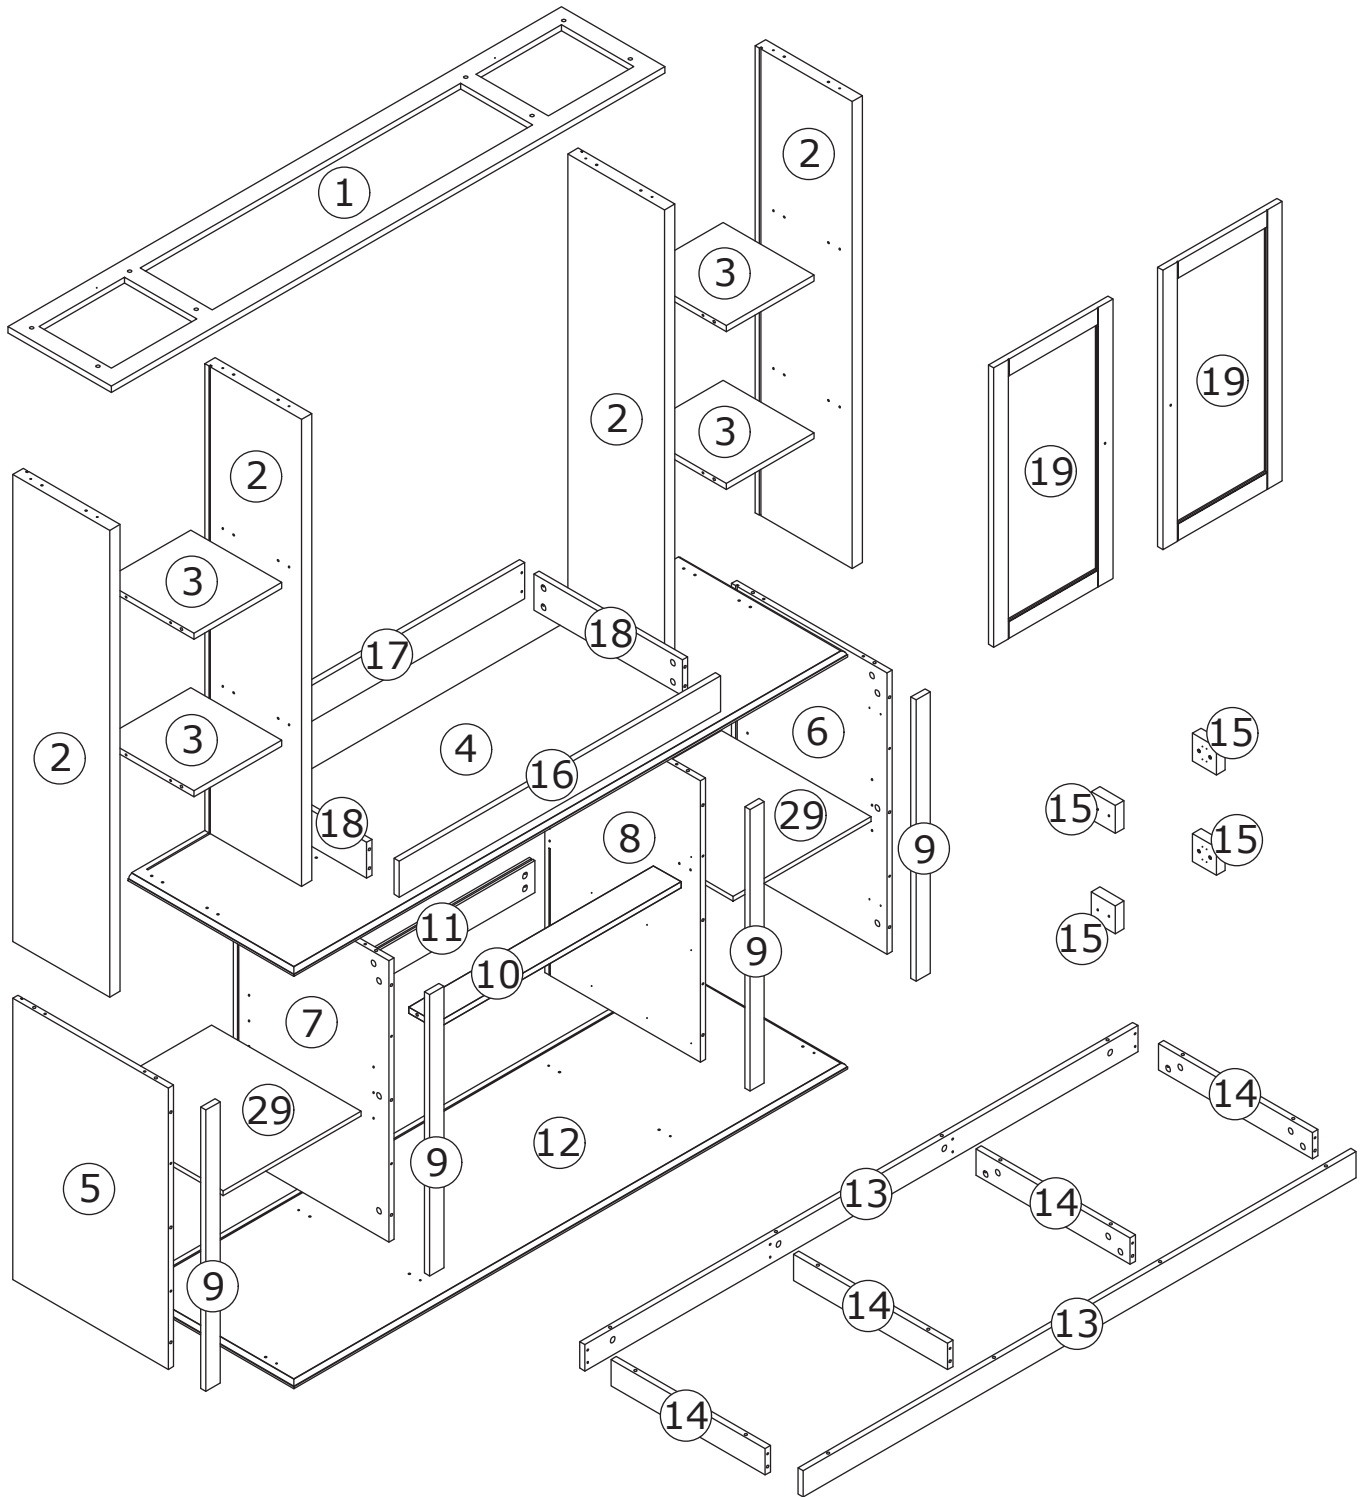 

⚠ WARNING



 
Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.



*This is a permanent label.
Do not remove!*



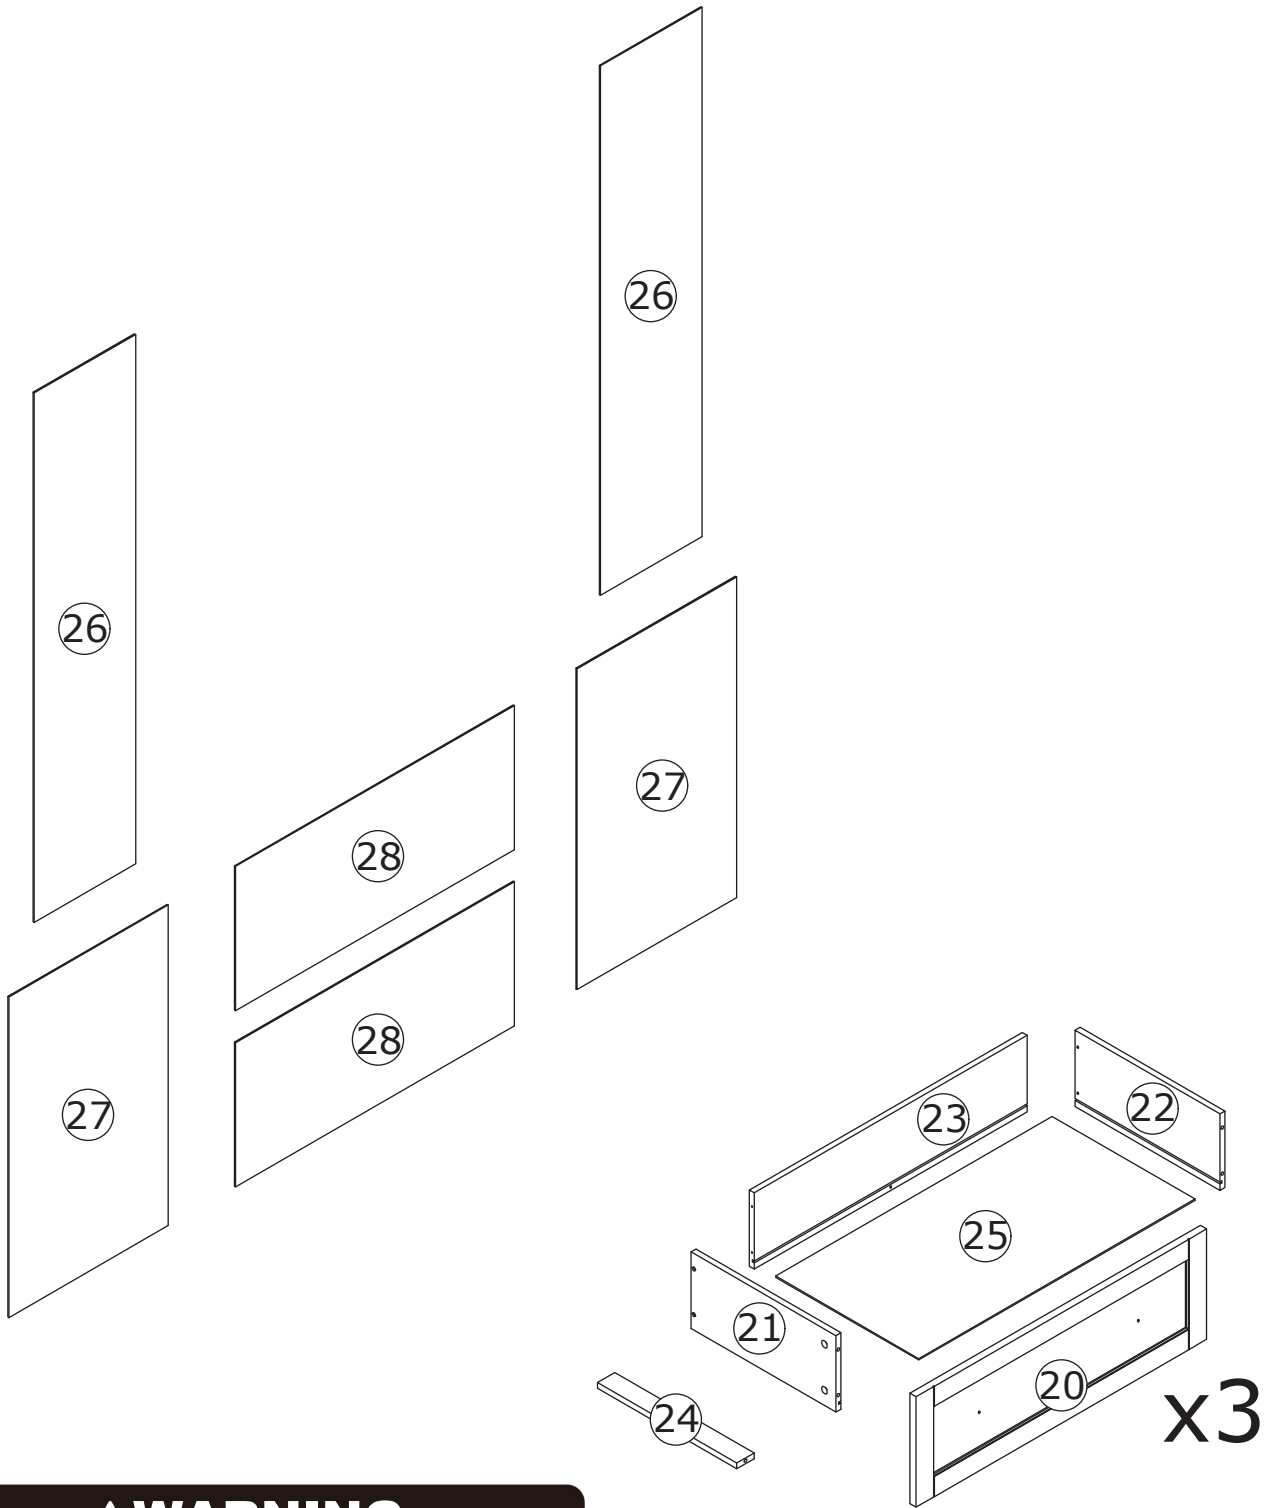

⚠ WARNING

 


Children have died from furniture tipover. To reduce the risk of furniture tipover:


- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.




*This is a permanent label.
Do not remove!*

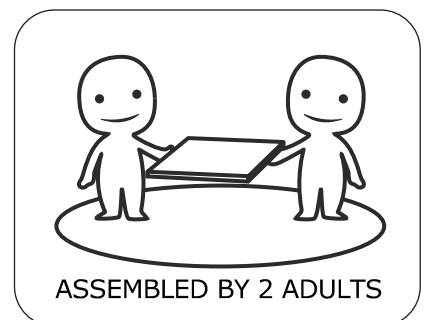


① x1

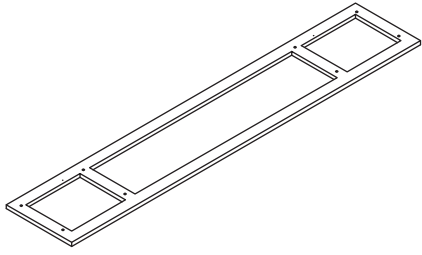 


② x1

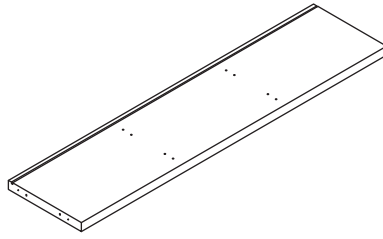 


③ x1

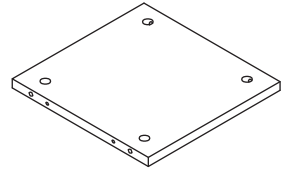 


④ x1

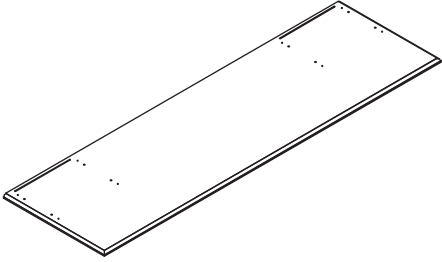 


⑤ x1

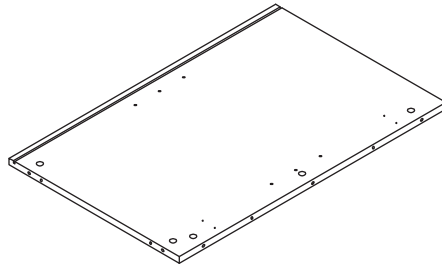 


⑥ x1

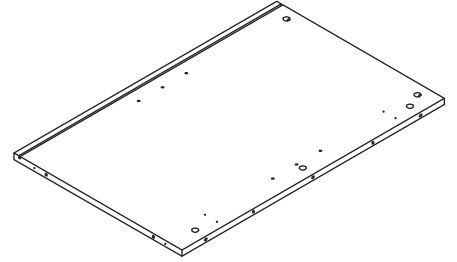 


⑦ x1

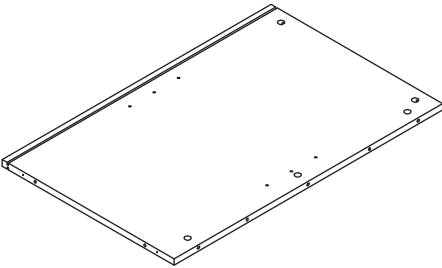 


⑧ x1

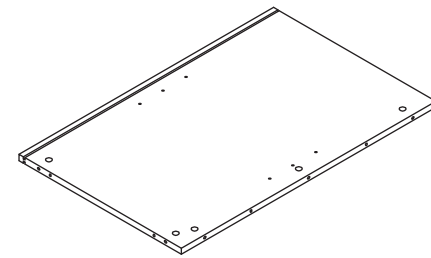 


⑨ x4

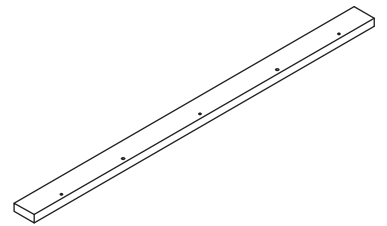 


⑩ x1

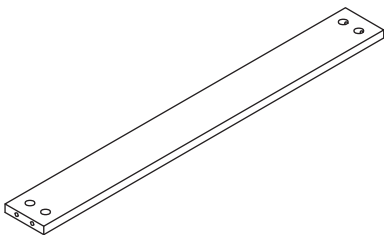 


⑪ x1

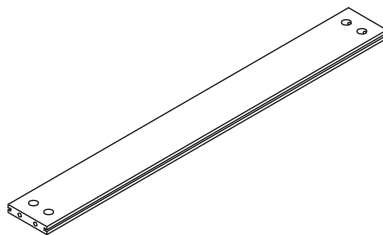 


⑫ x1

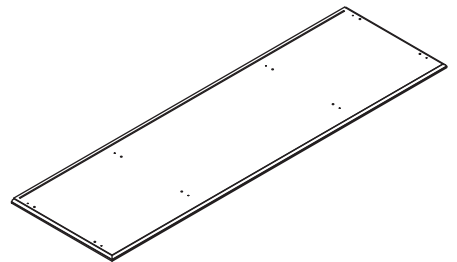 


⑬ x2

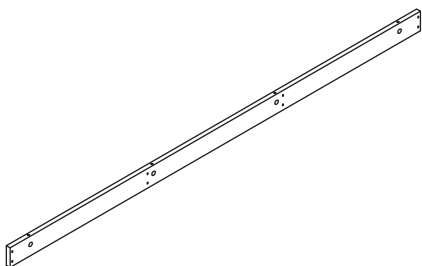 


⑭ x4

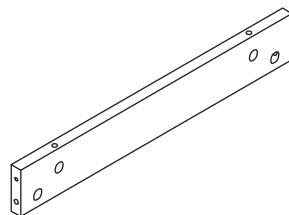 


⑮ x4

 


16x1

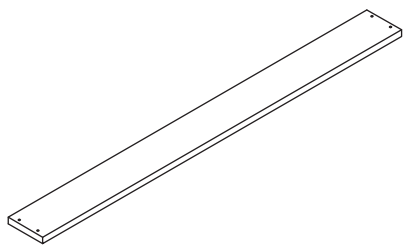 


17x1

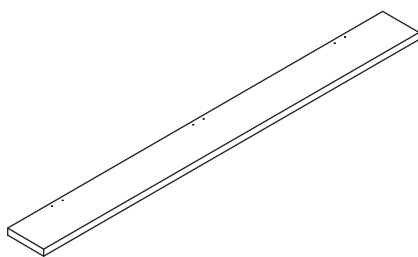 


18x2

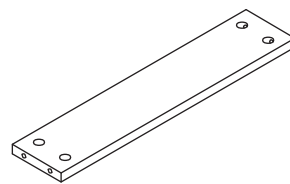 


19x2

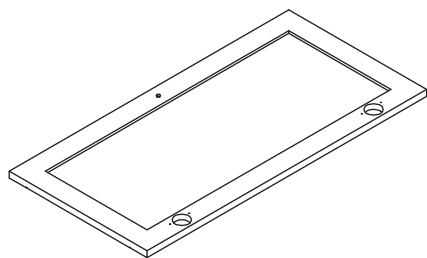 


20x3

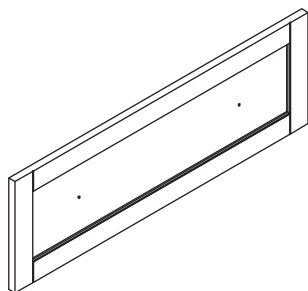 


21x3

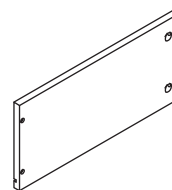 


22x3

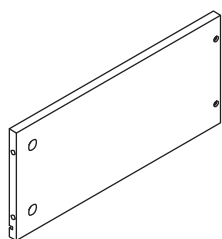 


23x3

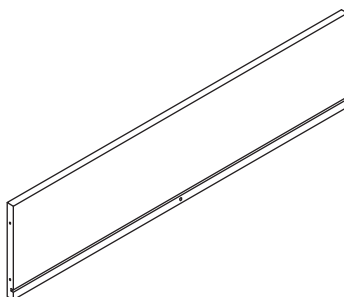 


24x3

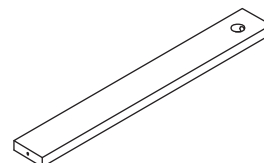 


25x3

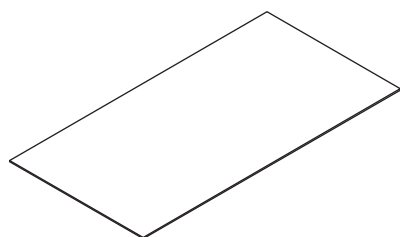 


26x2

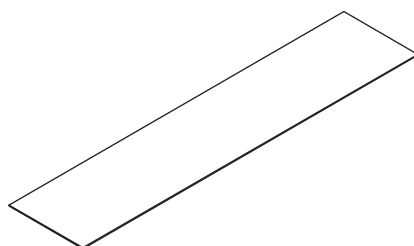 


27x2

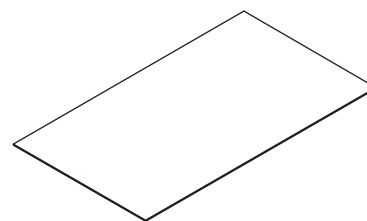 

28x2

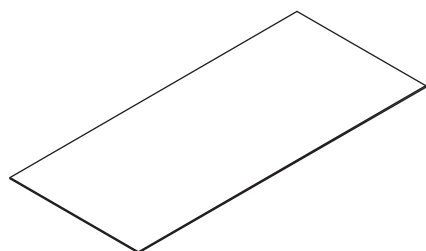 






29x2

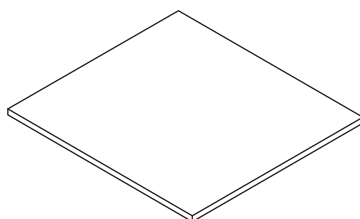 



1



    
 
Screw eccentric rod A onto boards No. 9, 13, and 12 respectively.

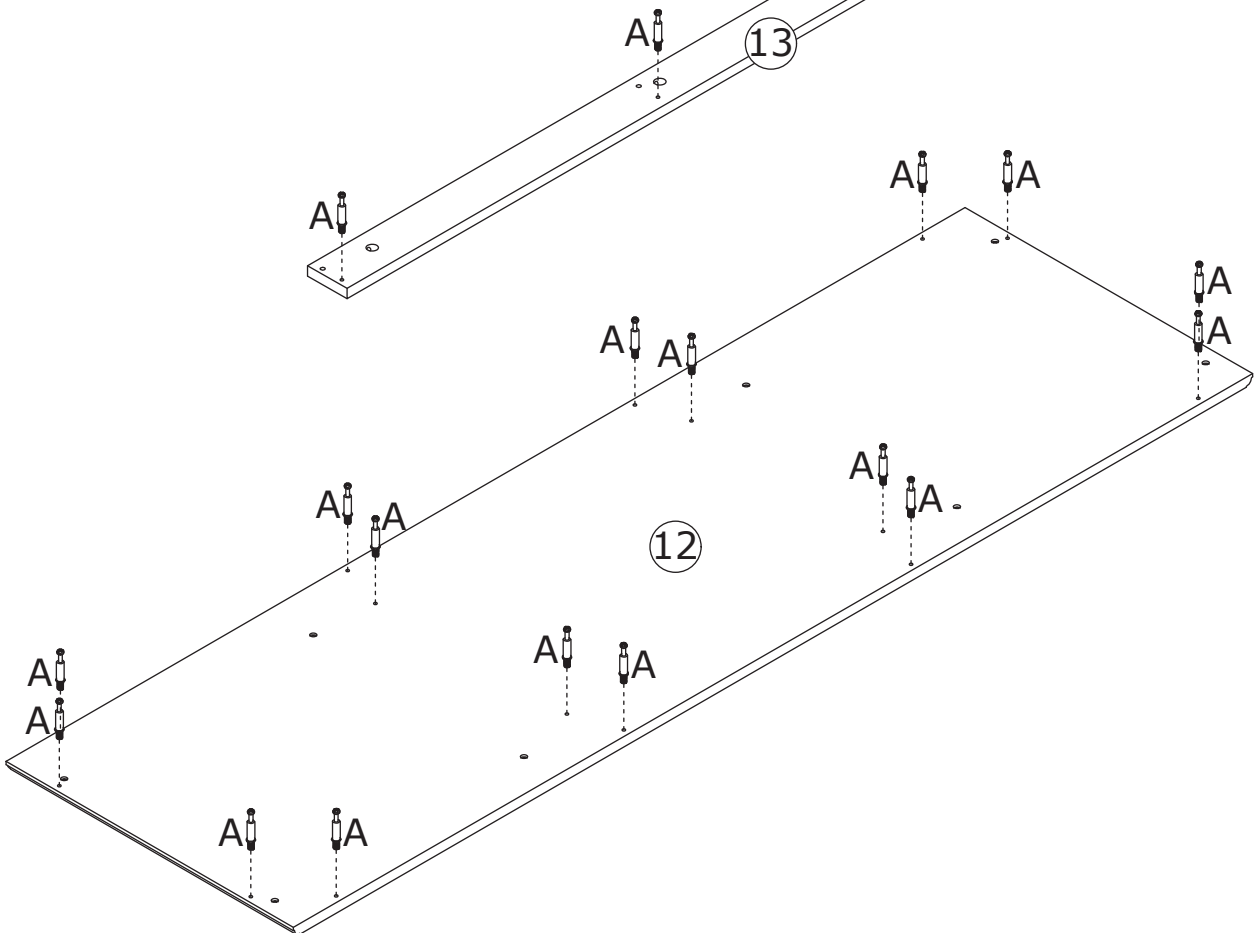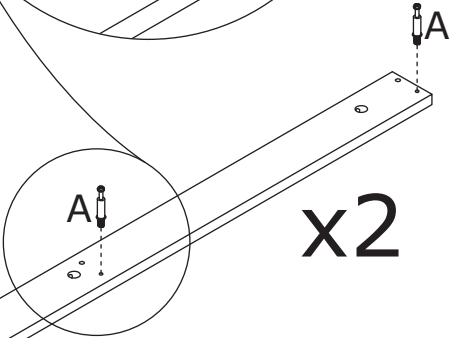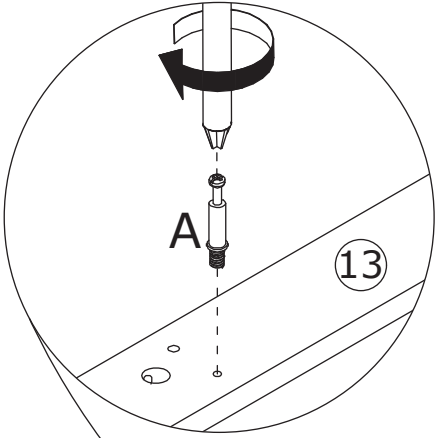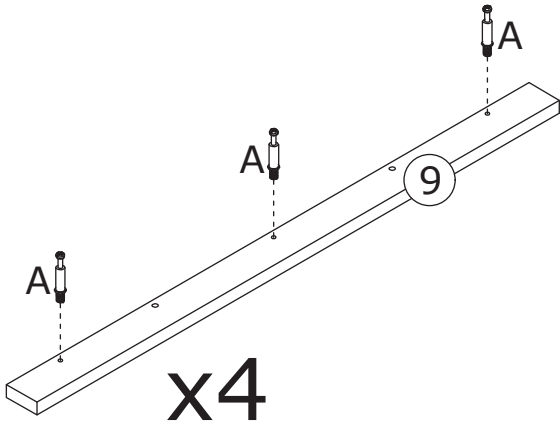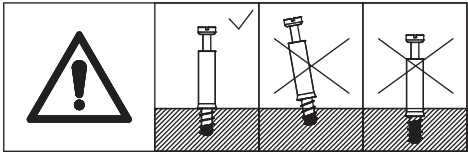


2

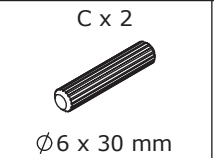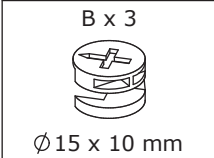  

 
 
Connect board 9 to board 5 with dowel C and tighten with cam lock B.
Secure block 15 to board 5 with screw D as shown.

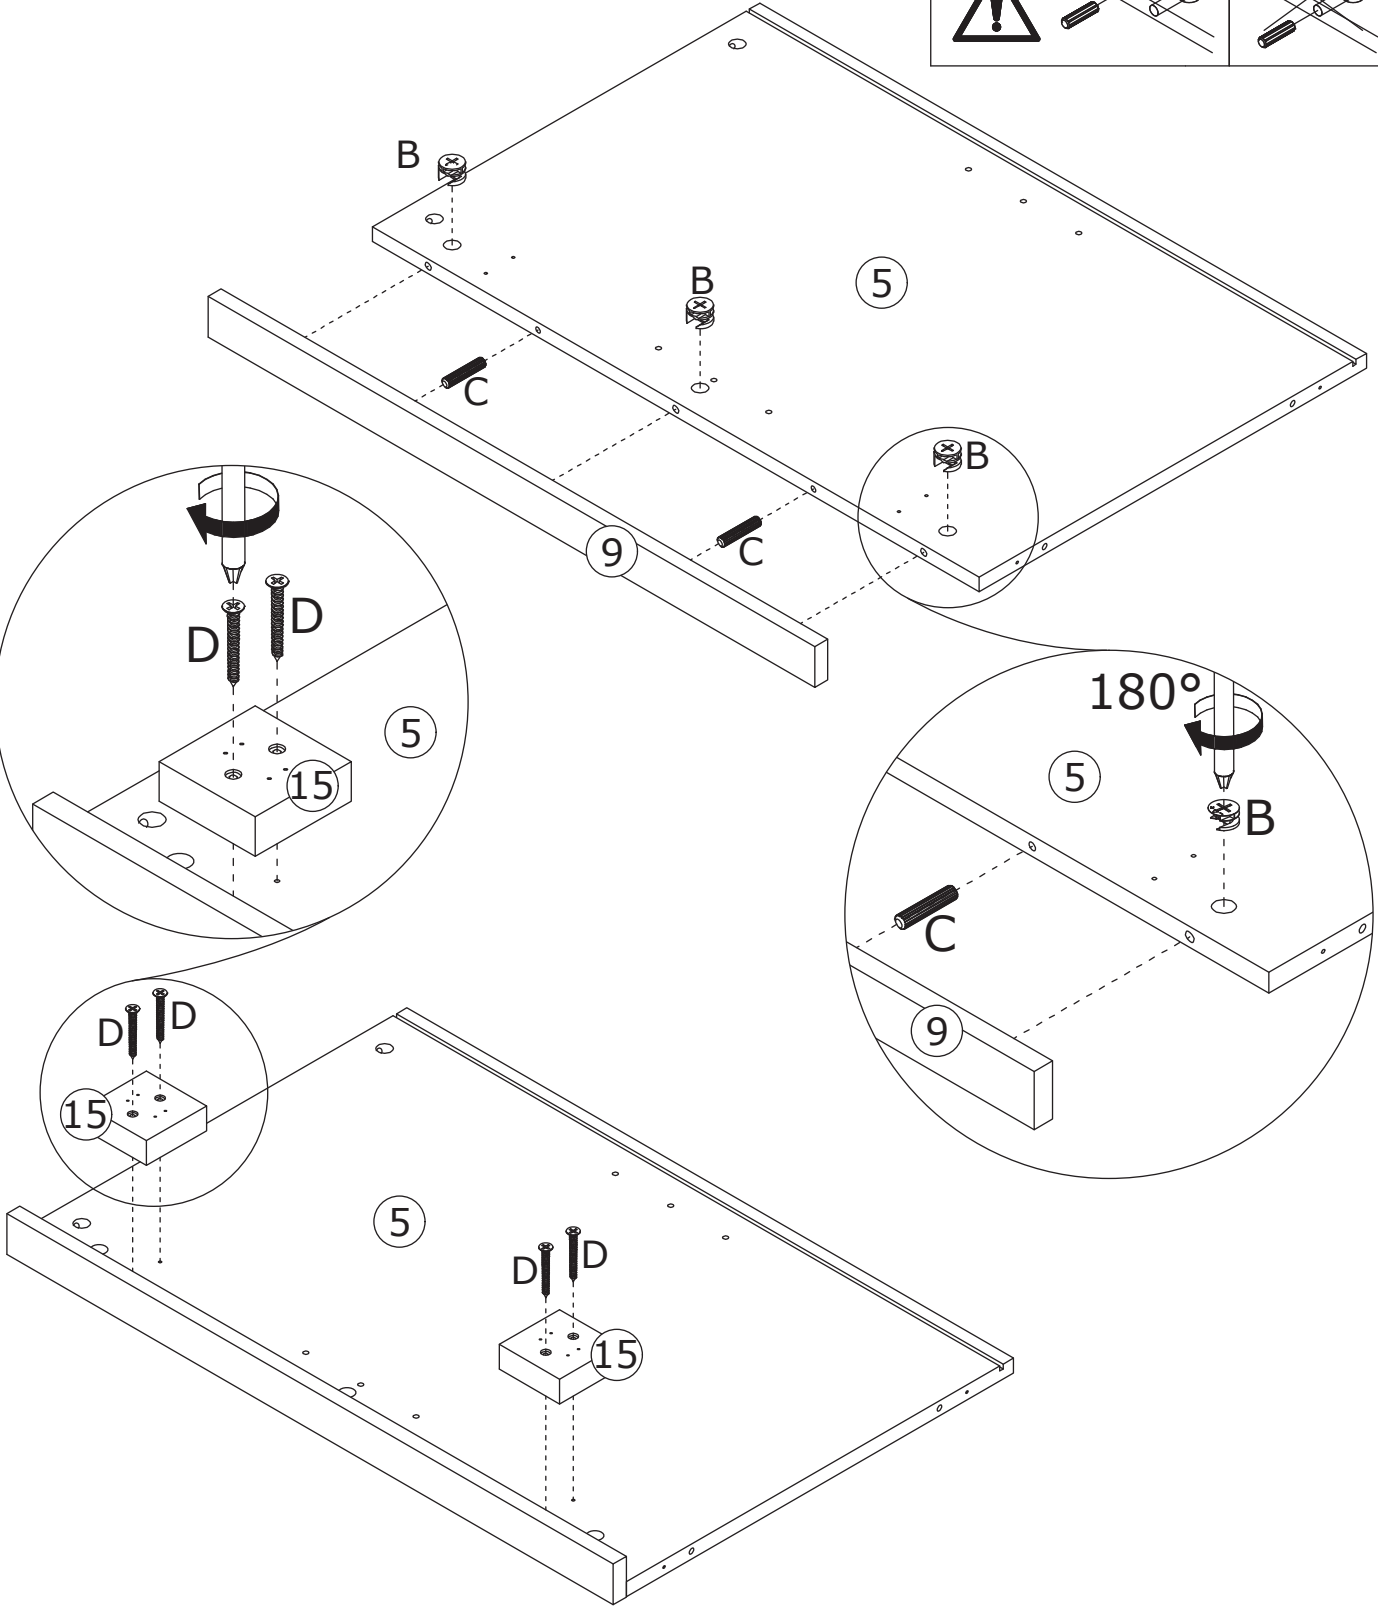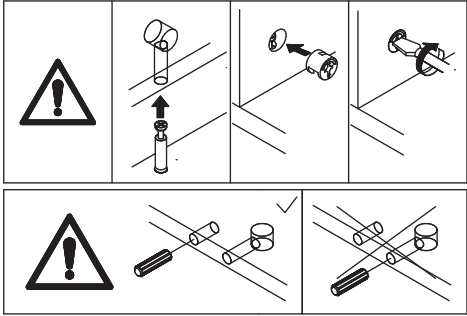




3

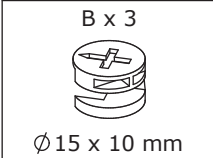 

 
 
Connect board 9 to board 6 with dowel C and tighten with cam lock B.
Secure block 15 to board 6 with screw D as shown.

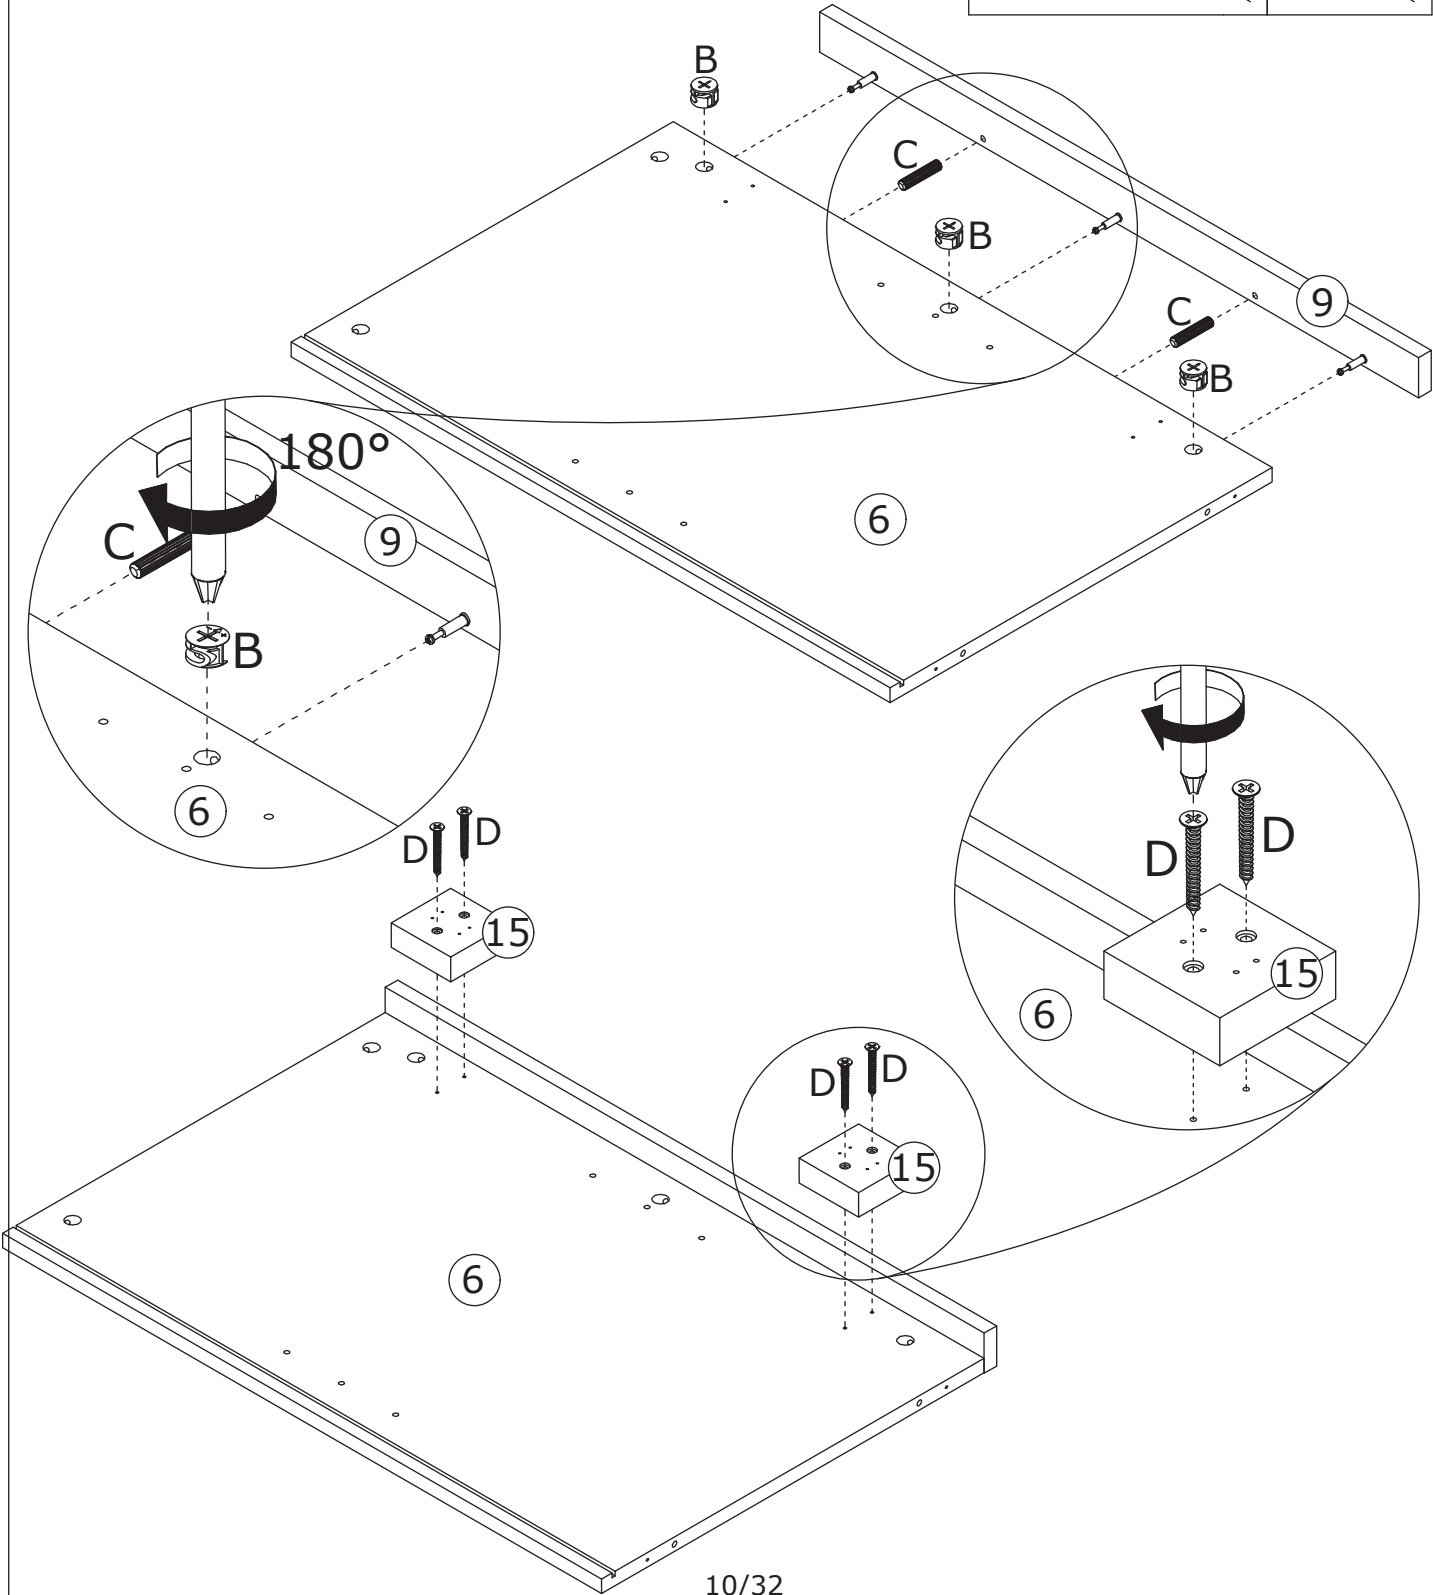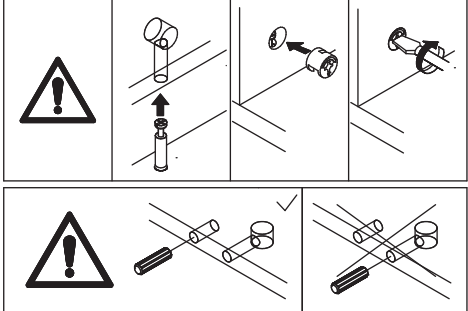


4

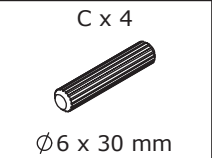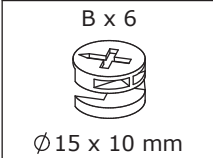   

 
 
Connect board 9 to board 7 and 8 with dowel C and tighten with cam lock B.

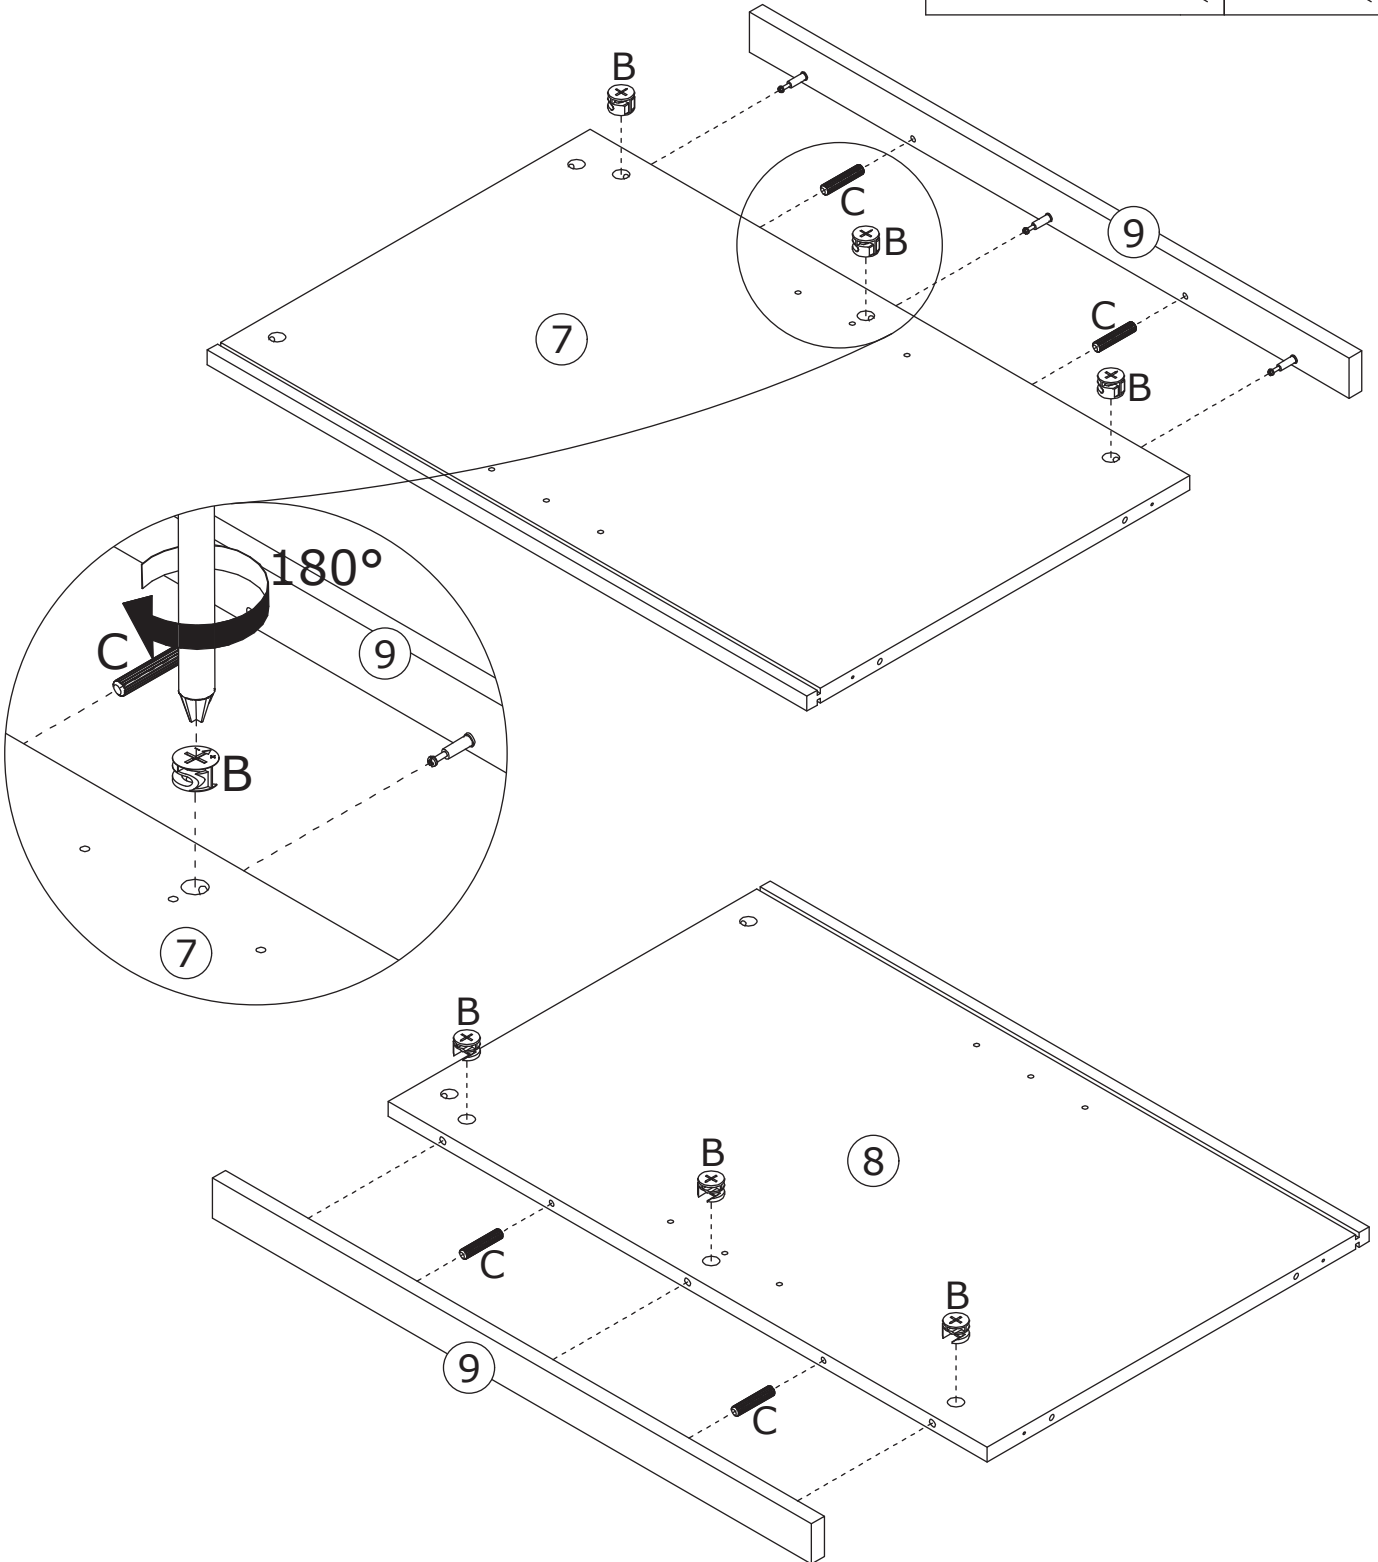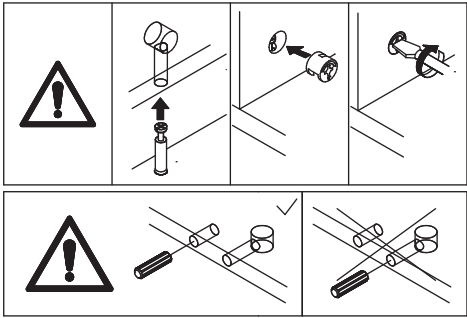

5


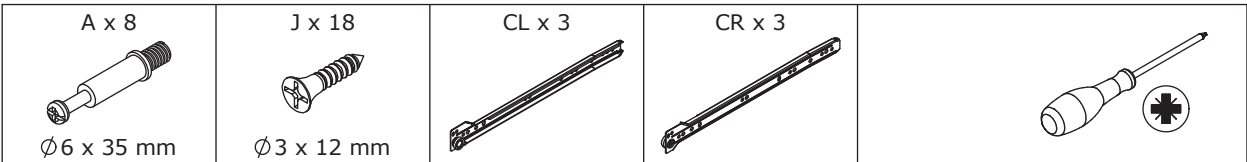 


  Screw eccentric rod A onto boards 7 and 8 respectively.
Secure slide CL and CR to board 7 and 8 with screw J as shown in the figure.

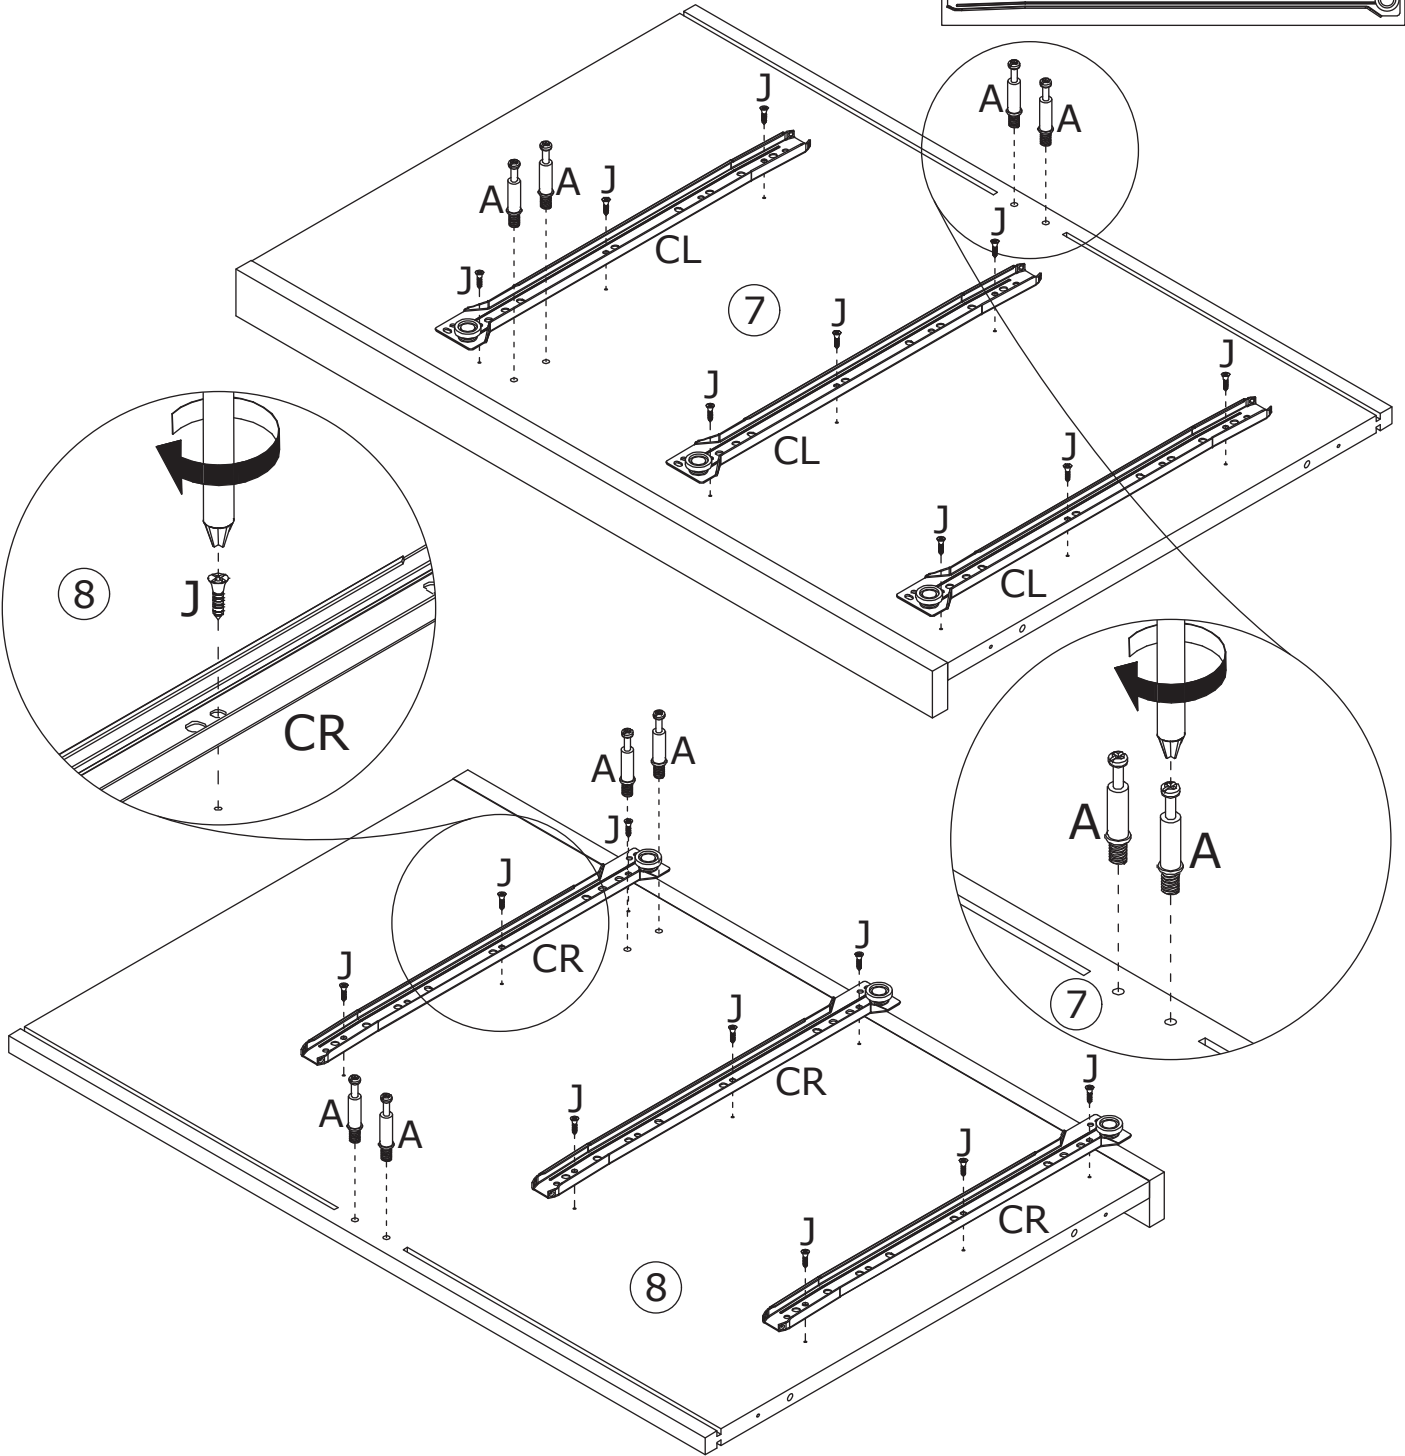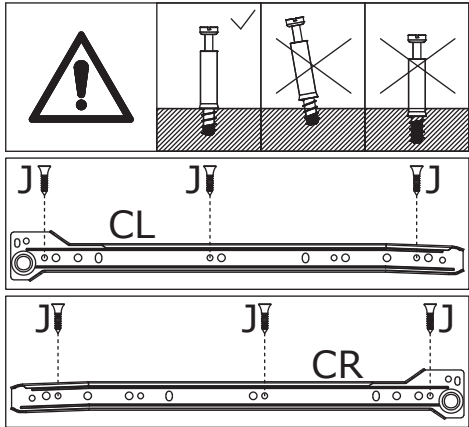


6

  B x 8
Ø 15 x 10 mm


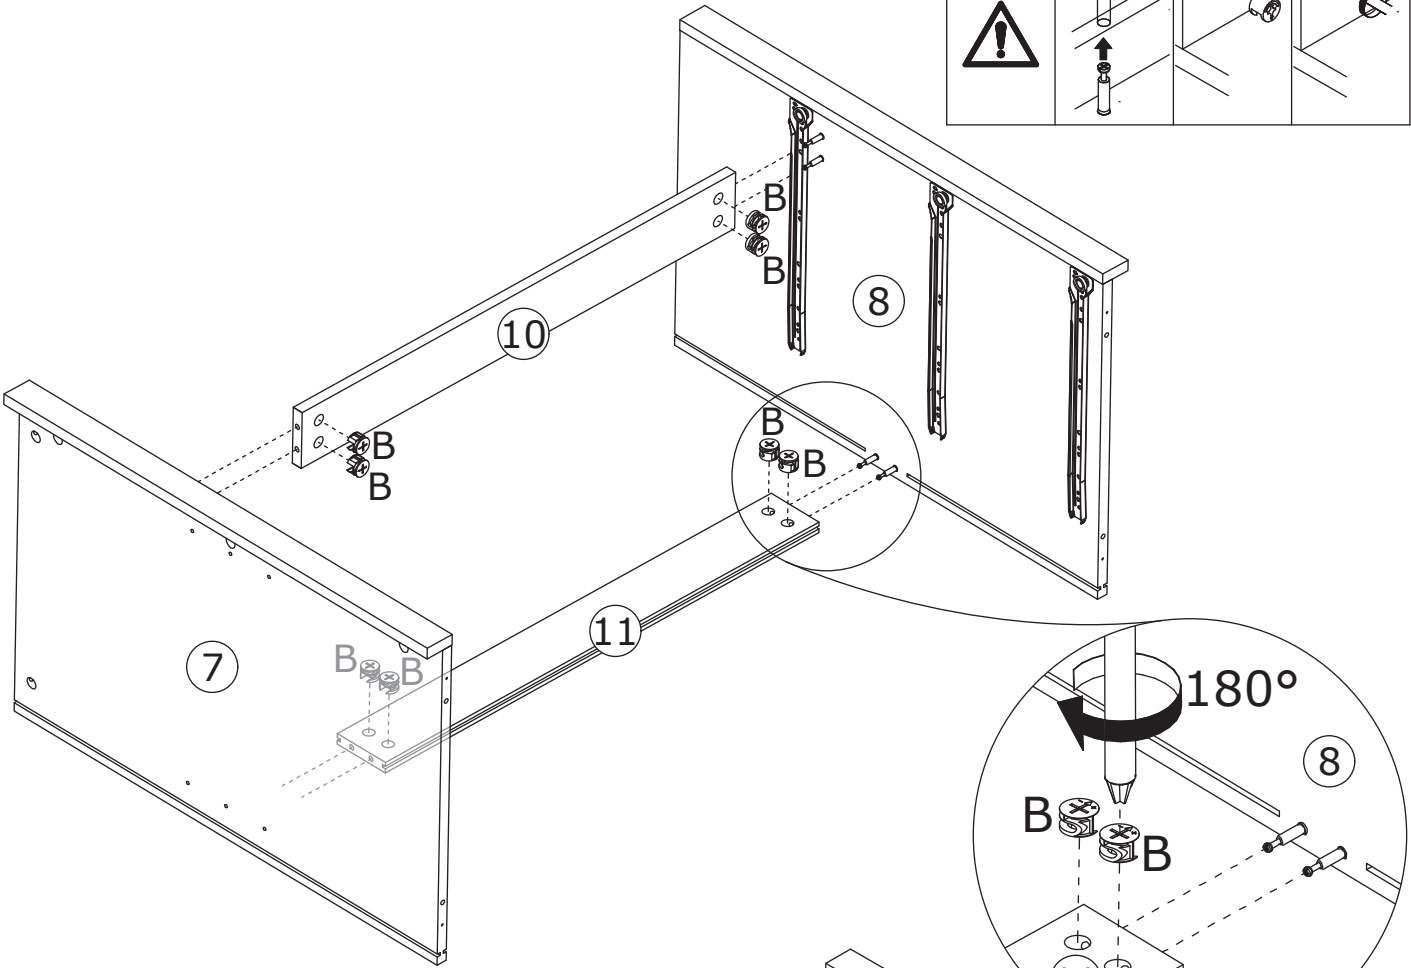
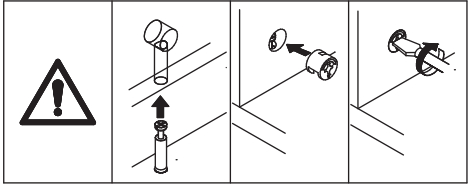


 Connect boards 10 and 11 to boards 7 and 8, and tighten with cam lock B.


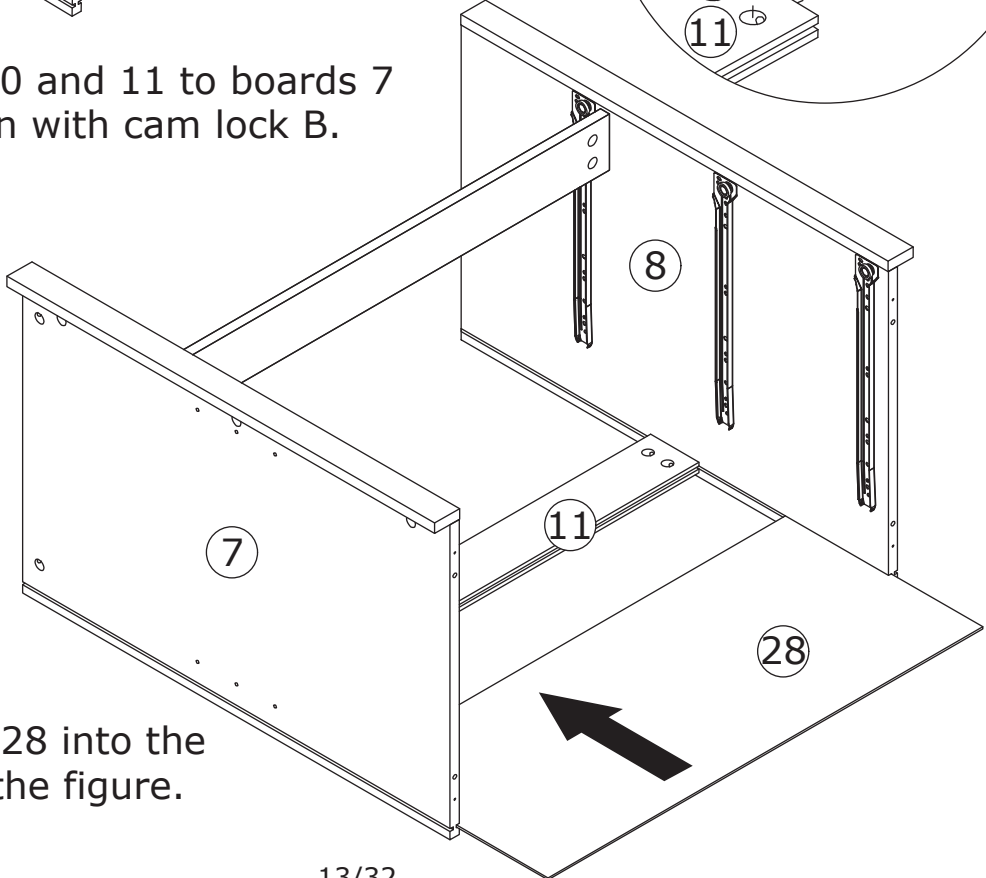


Insert back board 28 into the slots as shown in the figure.

   7

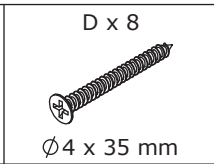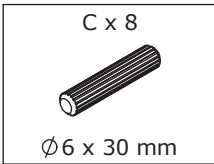

 
 
Connect board 12 to boards 5, 7, 8 and 6 with wooden dowel C, and secure with screw D as shown.

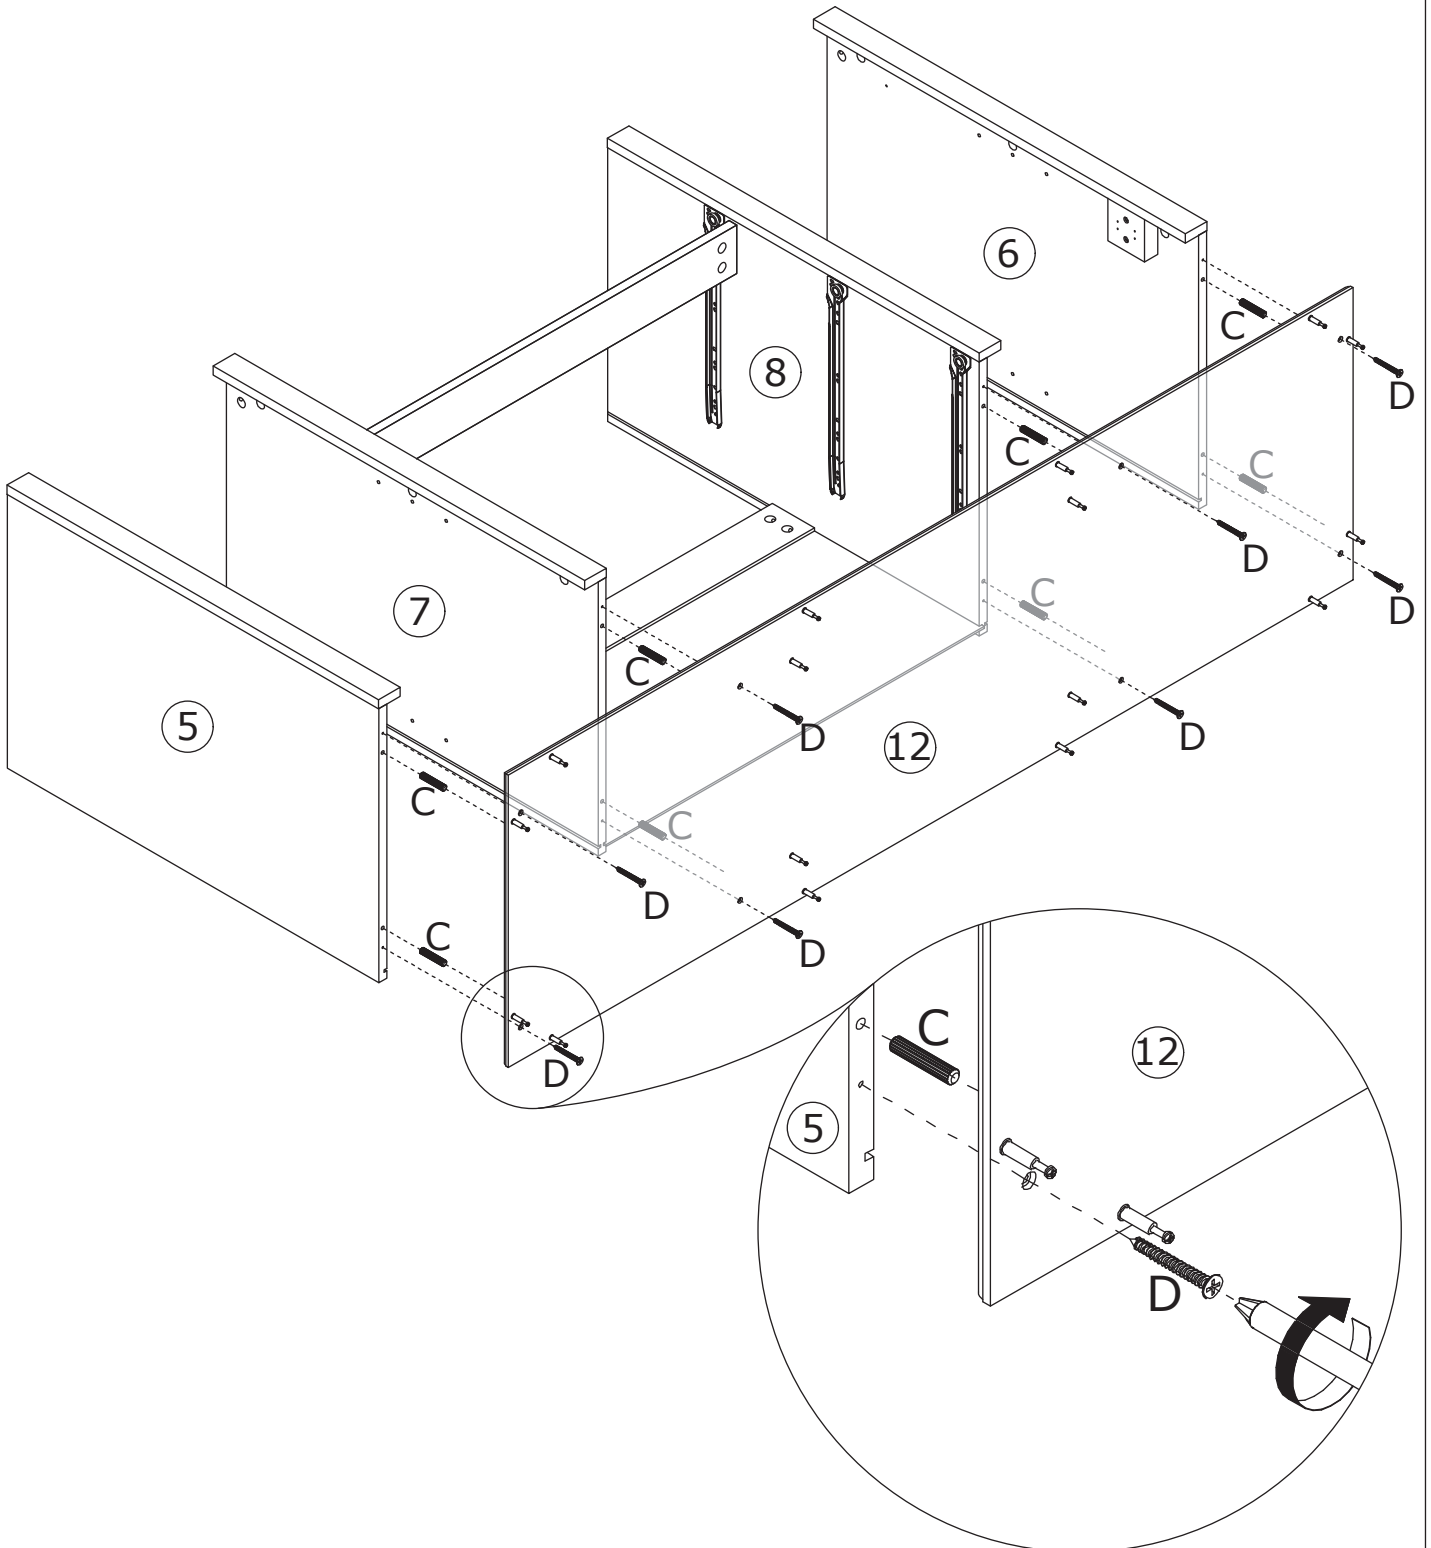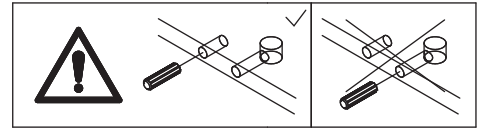

8




  Connect board 13 to board 14 with dowel C and tighten with cam lock B.
Attach the component to board 13 and tighten with cam lock B.



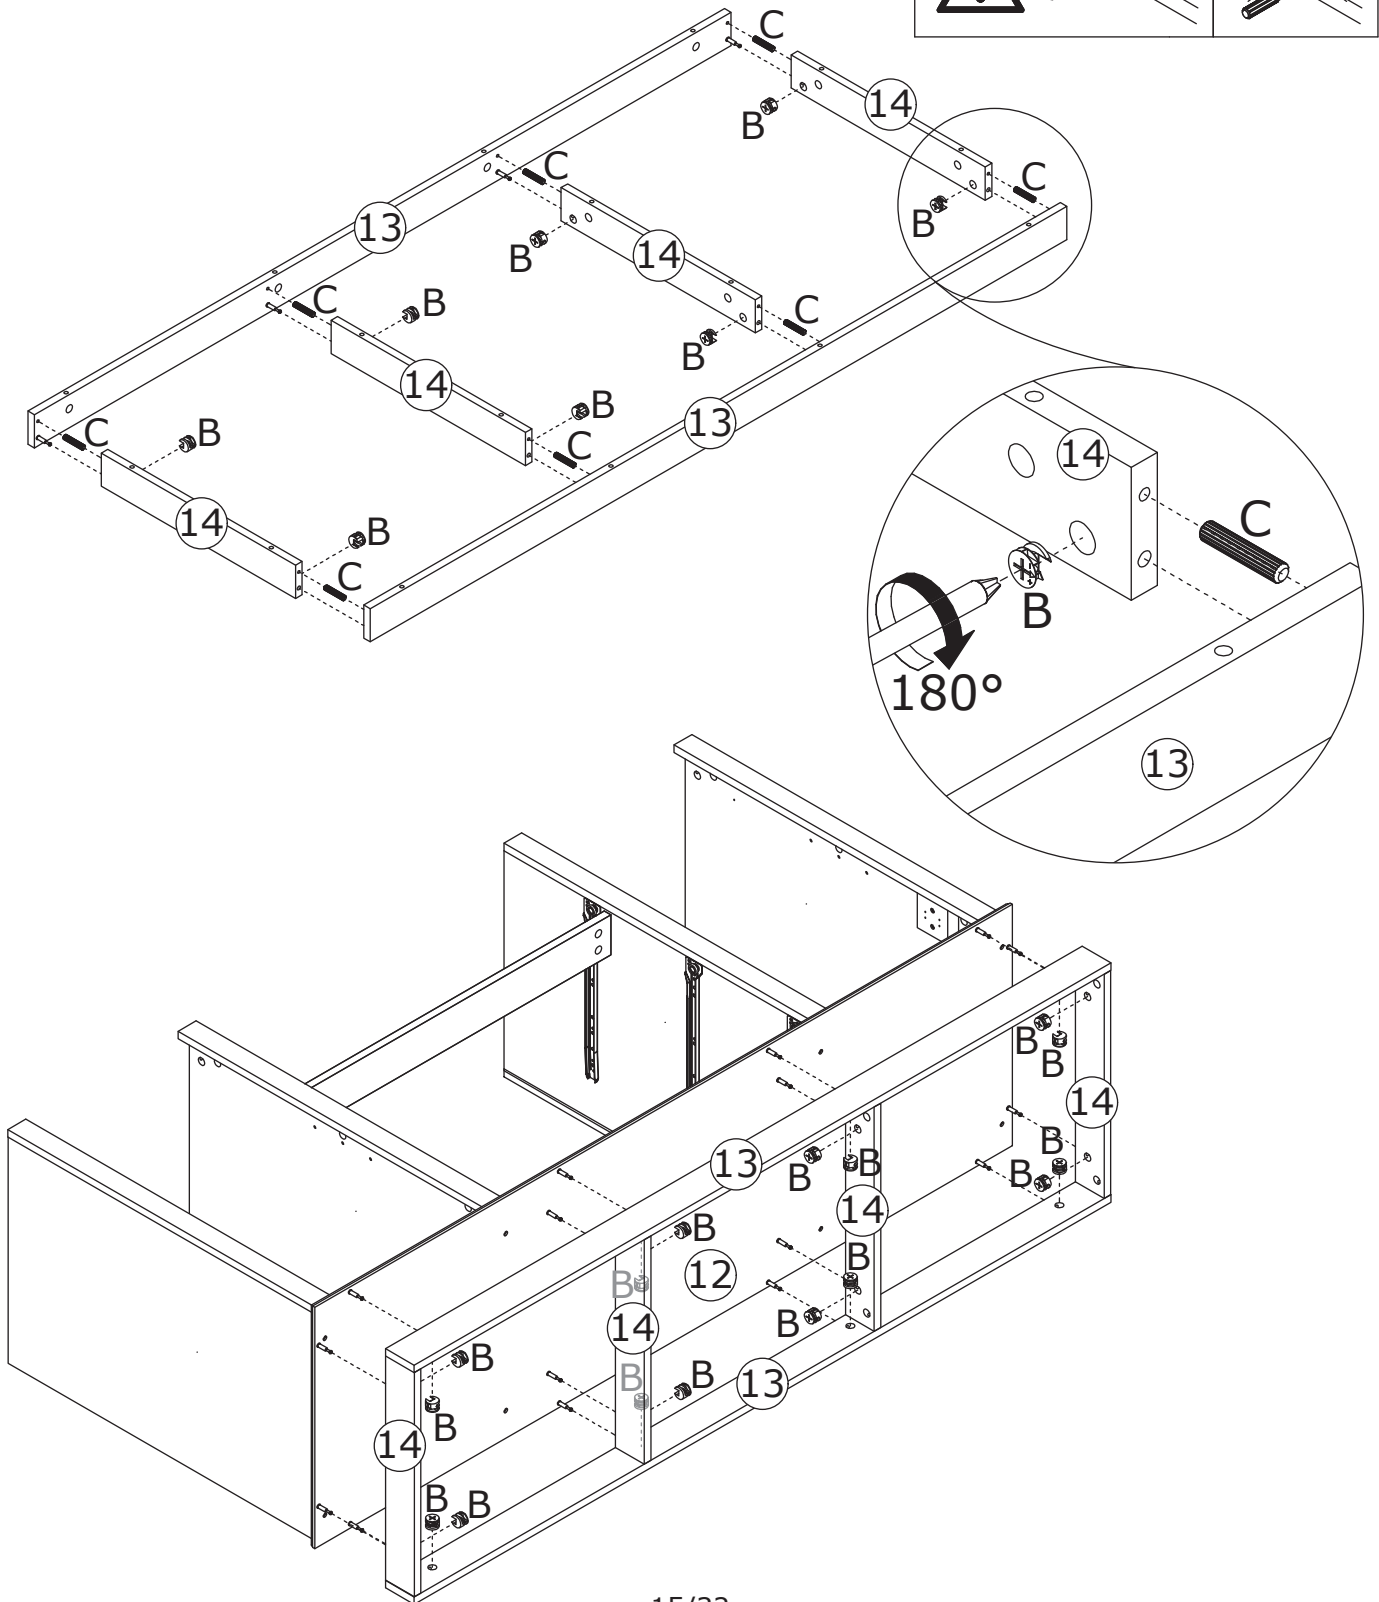
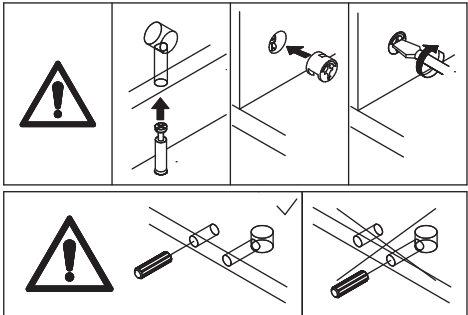


9

 Insert back boards 27 and 28 into the slots as shown in the figure.



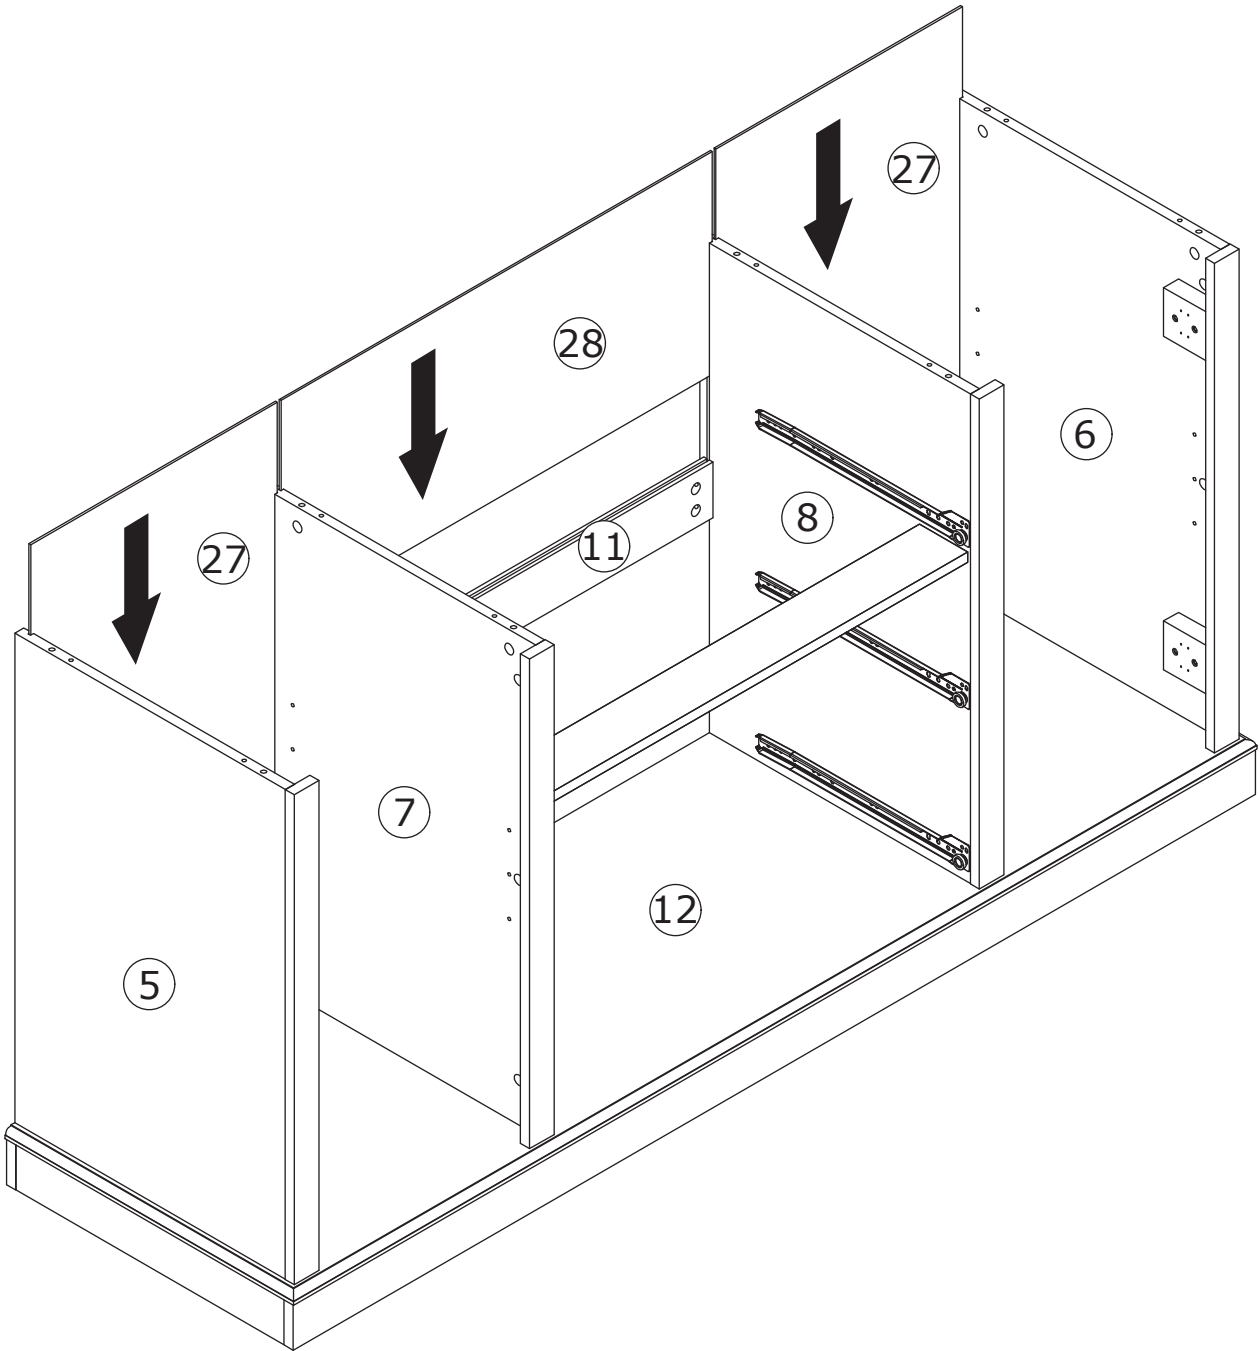


10

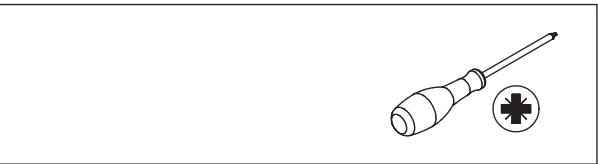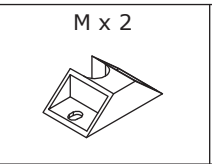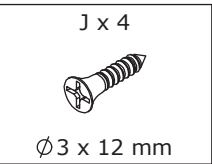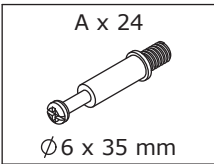    


Screw eccentric rod A onto boards 2 and 4 respectively.

   Secure part M onto board 4 with screw J as shown.

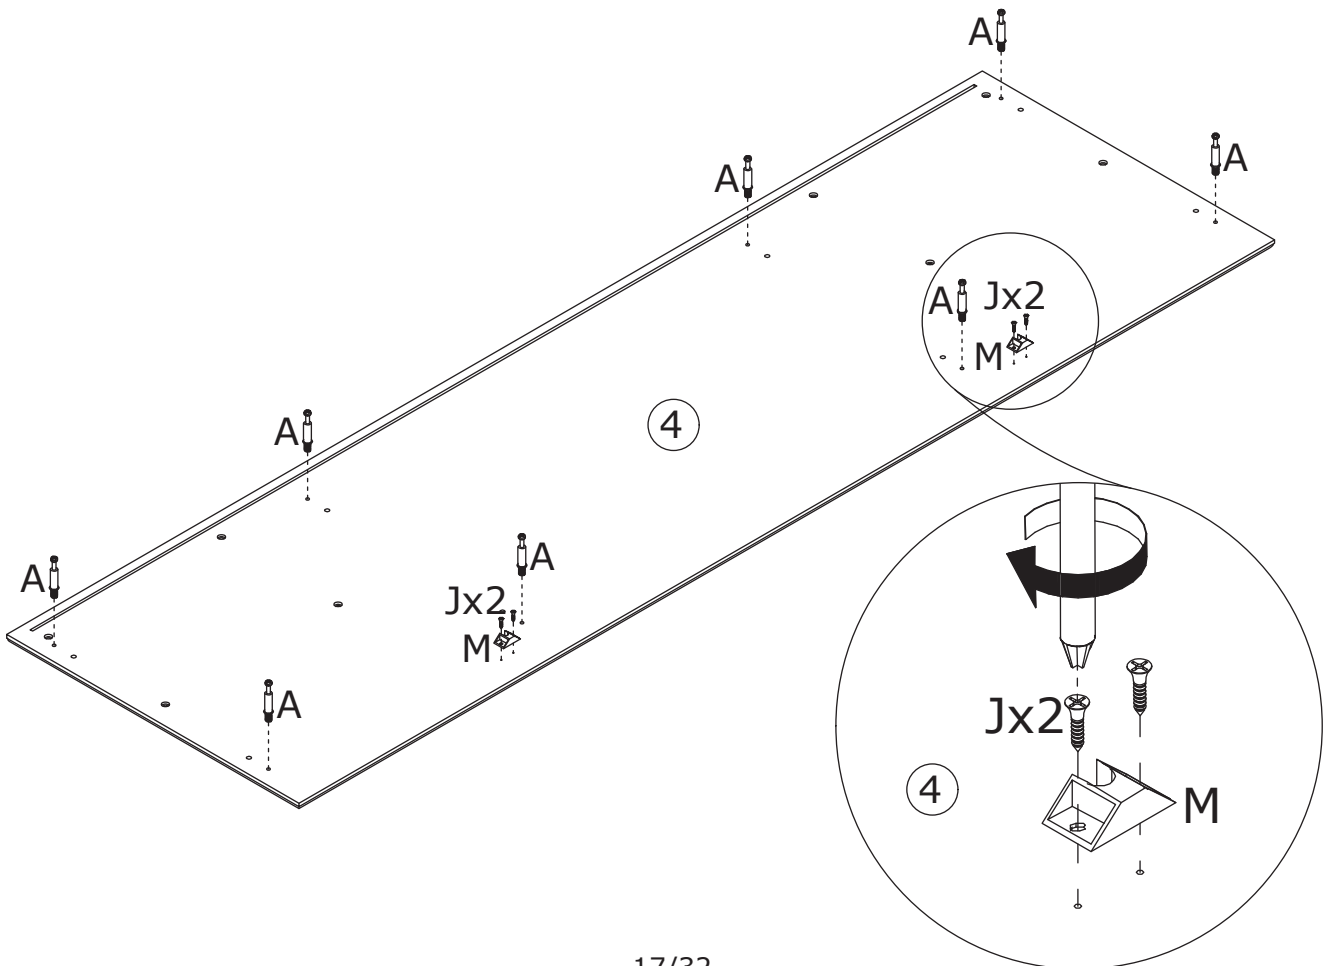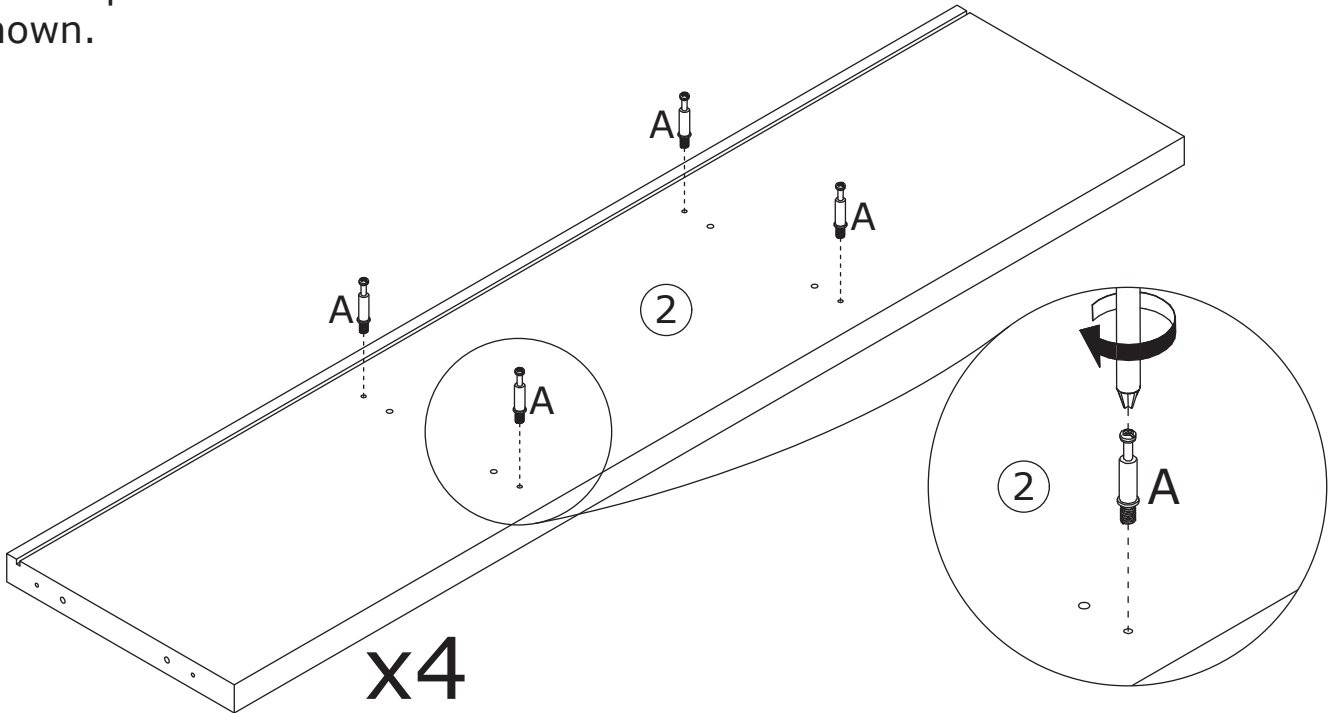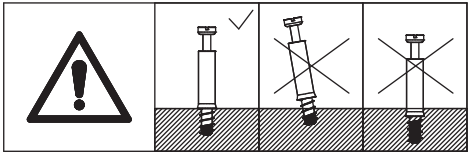


11



<p>B x 16</p>  <p>Ø 15 x 10 mm</p>	<p>C x 16</p>  <p>Ø 6 x 30 mm</p>	 
---------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------

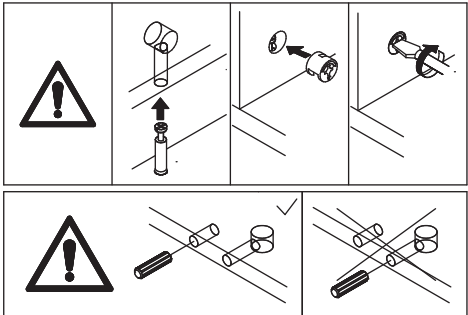 

 
Connect board 2 to board 3 with wooden dowel C and tighten with cam lock B.

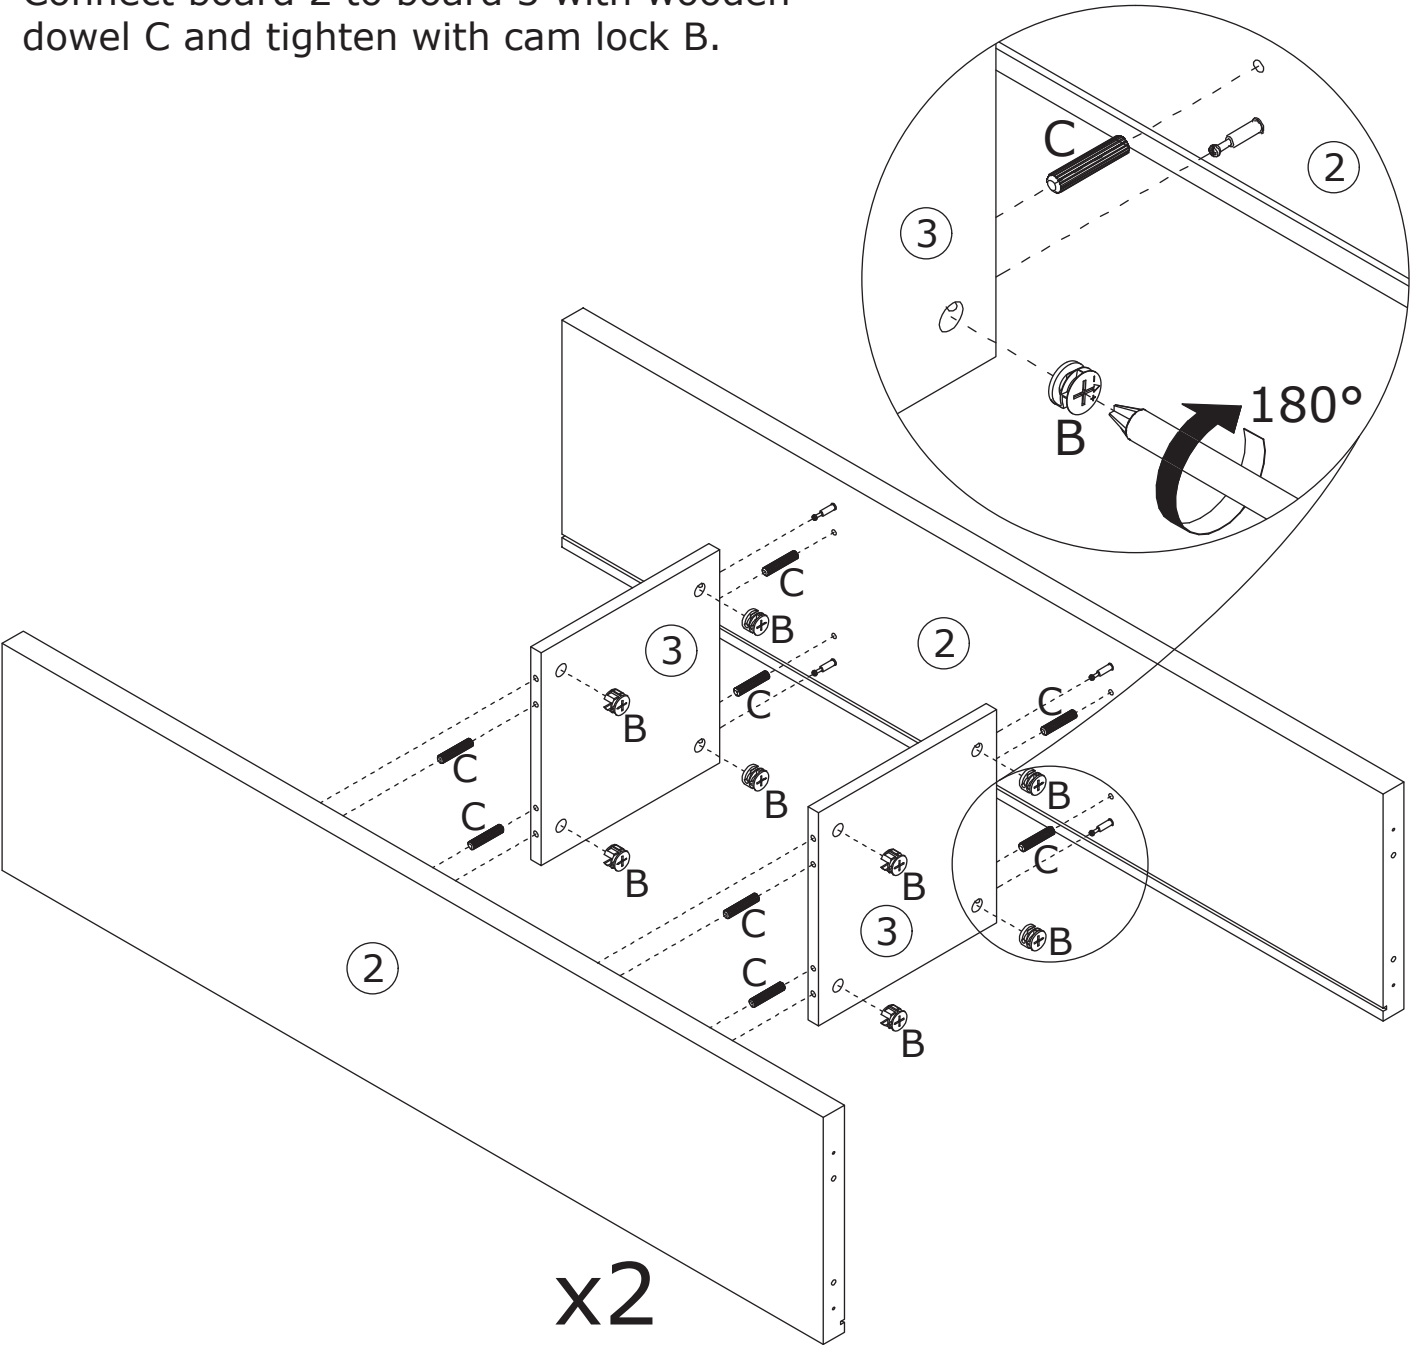

12

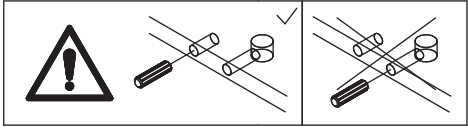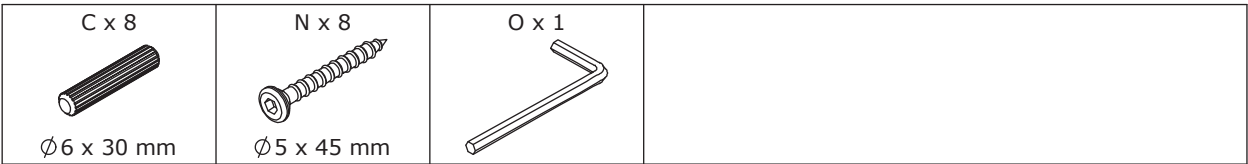  


  Attach board 4 to board 2 with wooden dowel C, and secure with screw N as shown.

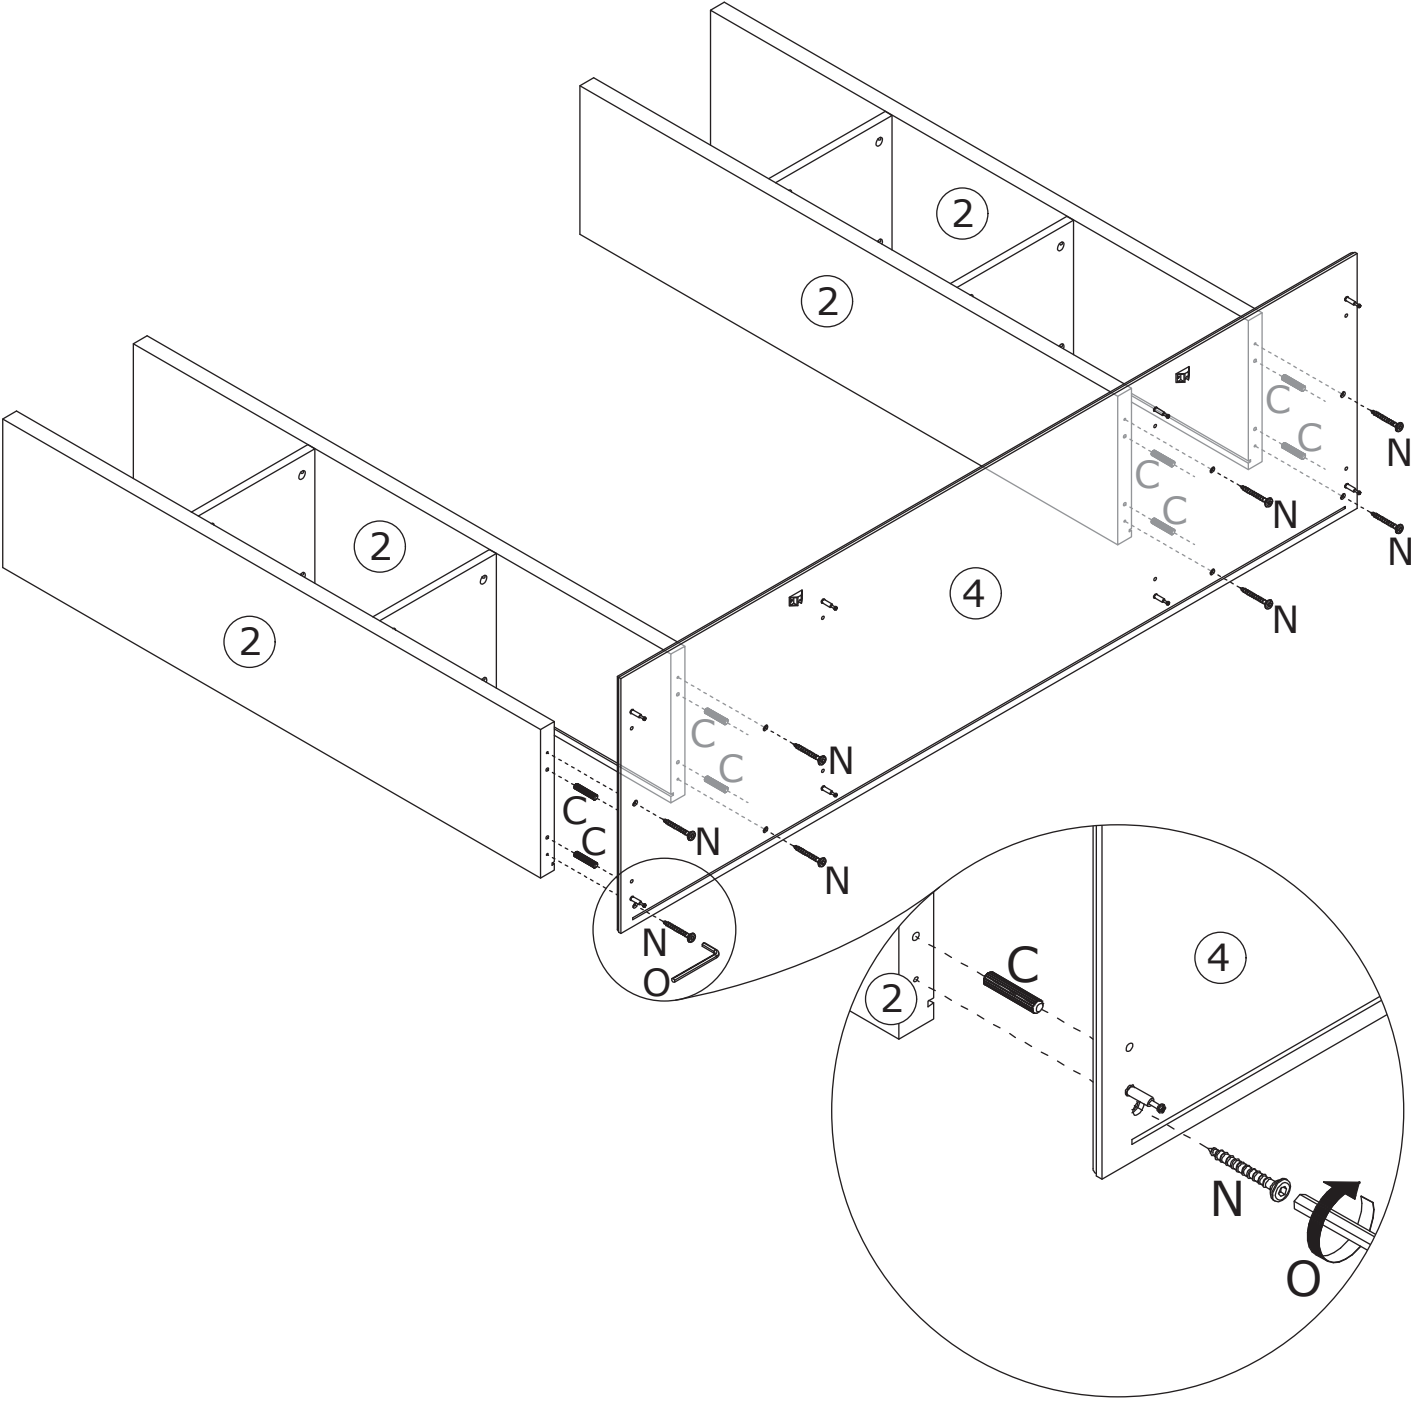


 
 
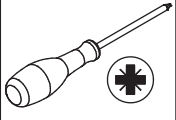 



13

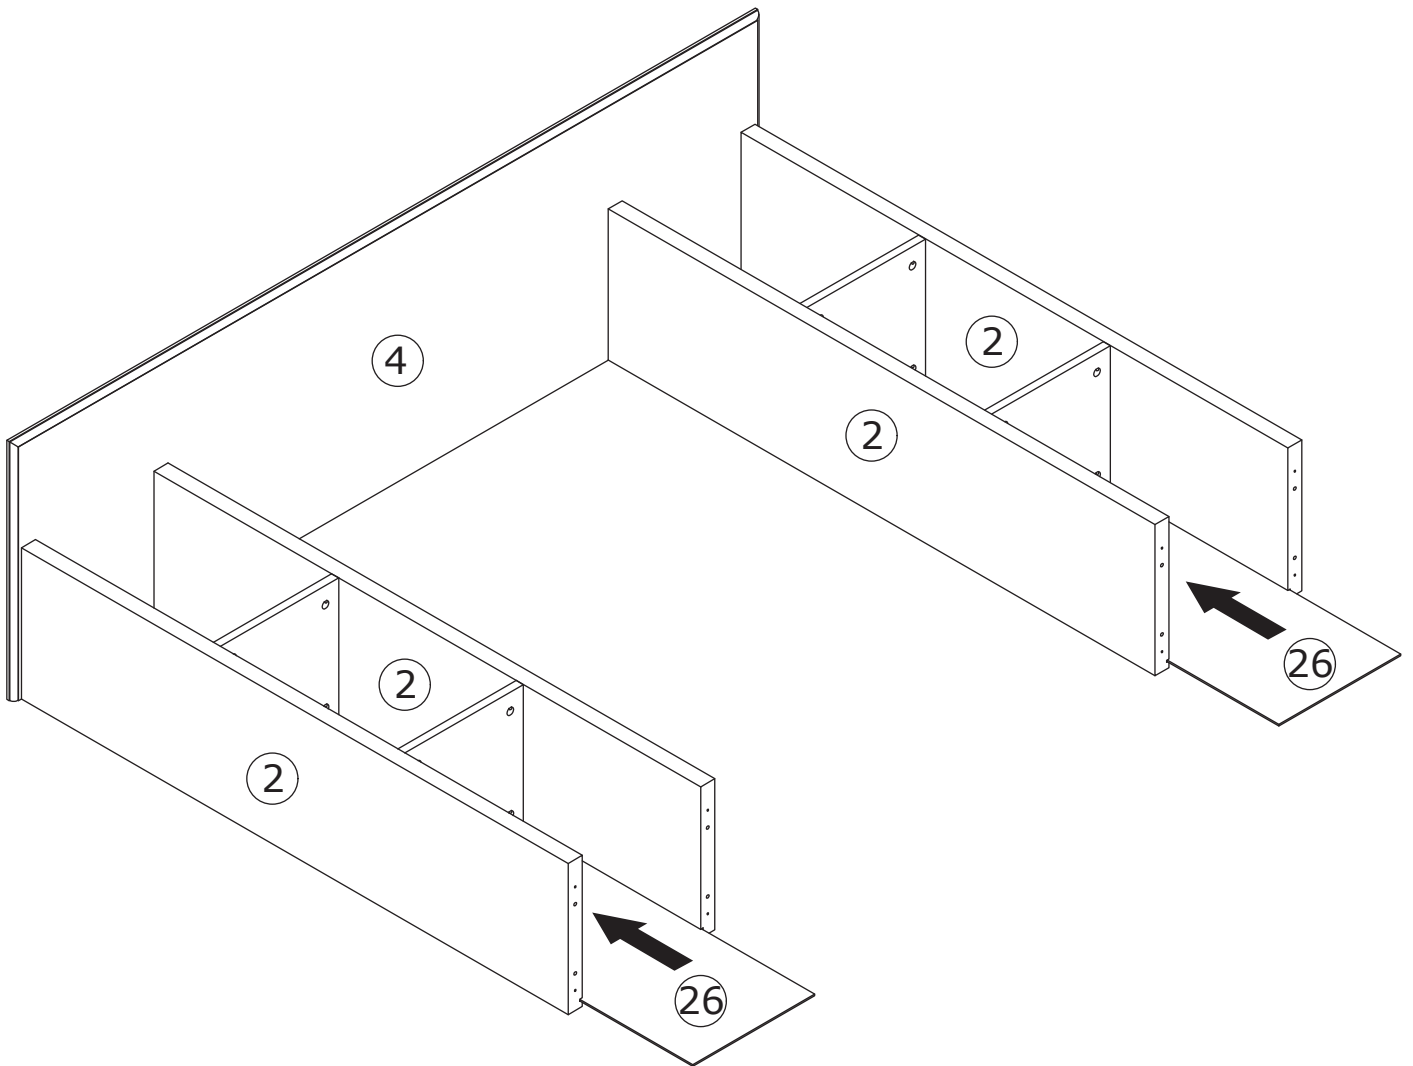Insert back board 26 into the slots.




14




<p>C x 8</p>  <p>∅6 x 30 mm</p>	<p>E x 2</p>  <p>∅4 x 14 mm</p>	<p>N x 8</p>  <p>∅5 x 45 mm</p>	<p>O x 1</p> 	<p>S x 2</p> 	
------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------

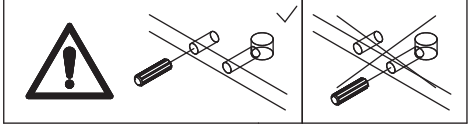 



 
Attach board 1 to board 2 with wooden dowel C, and secure with screw N as shown.
Secure part S to board 1 with screw E.

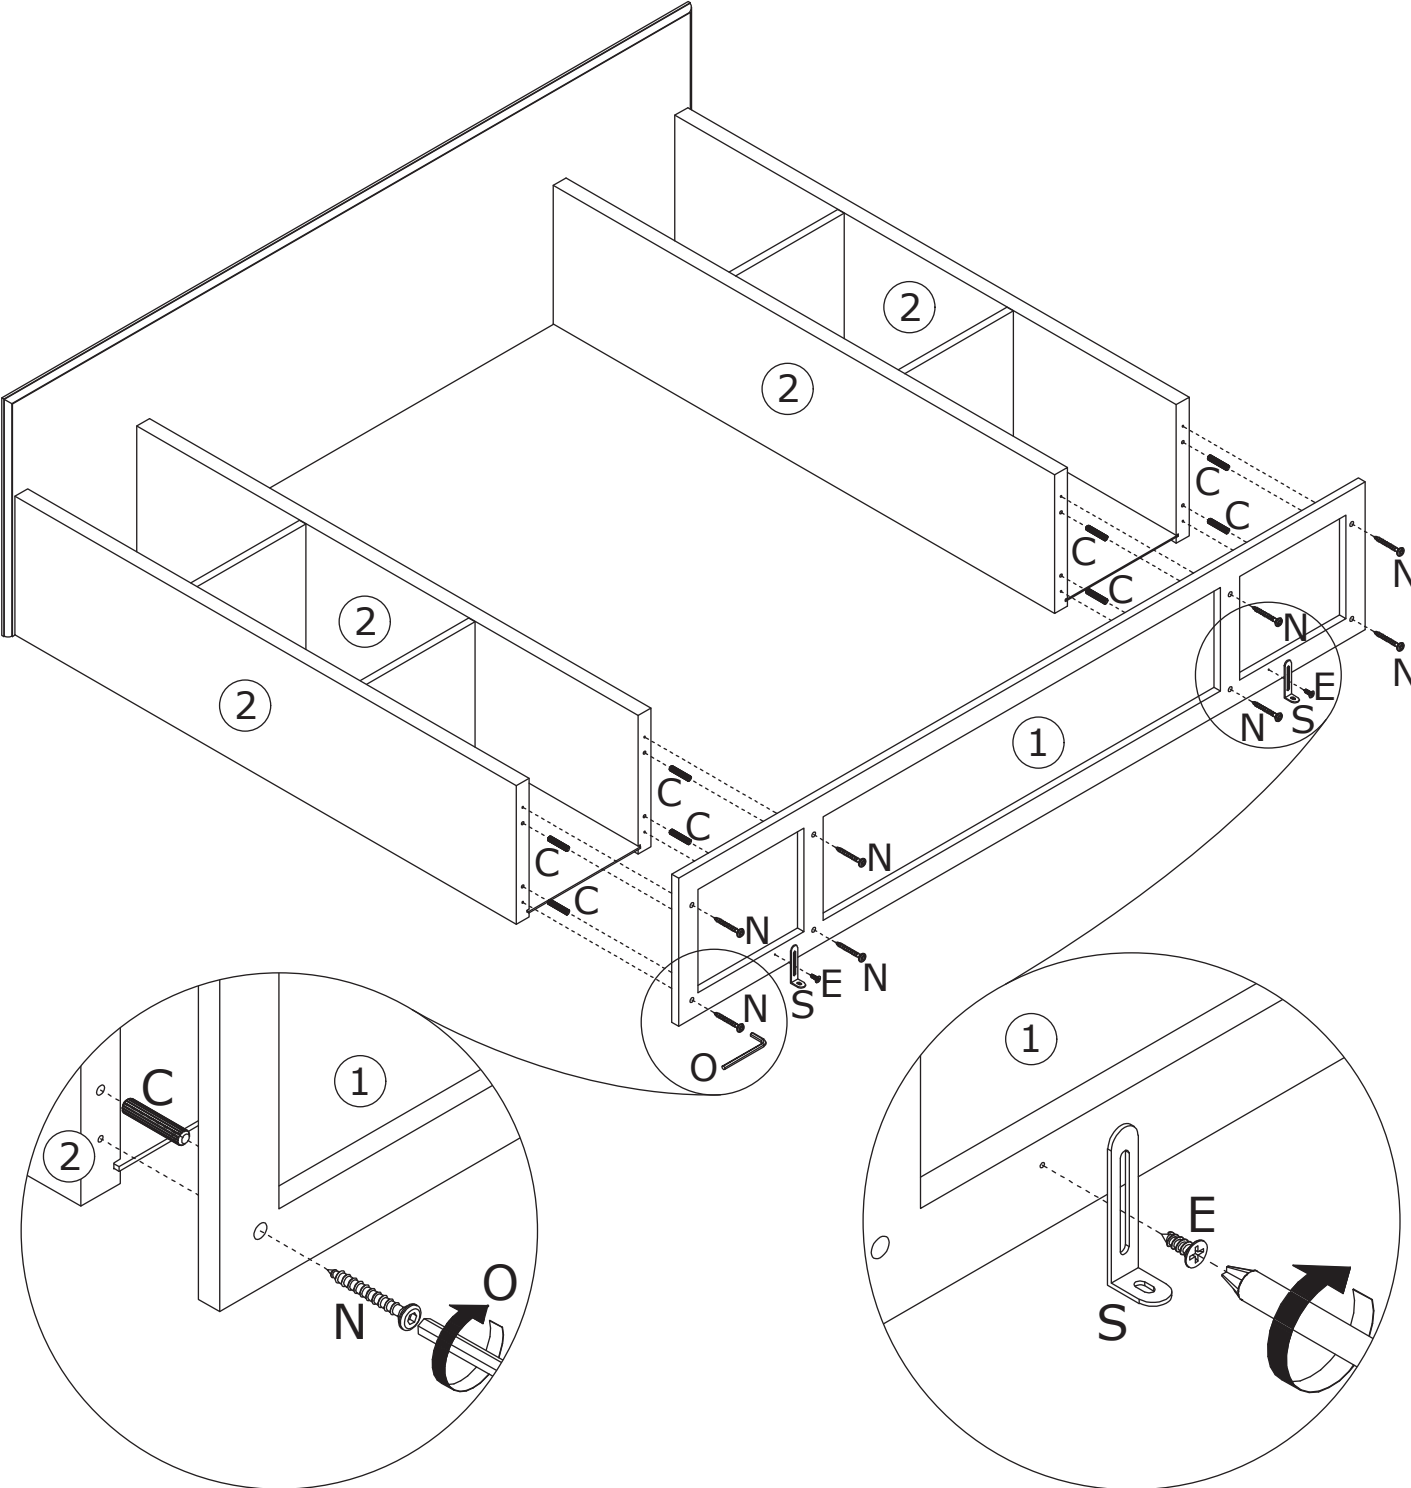








15

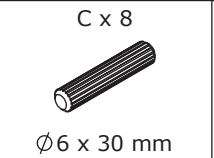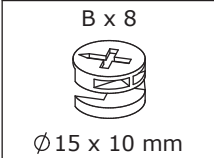   

  
 
Connect the two components with wooden dowel C and tighten with cam lock B as shown.

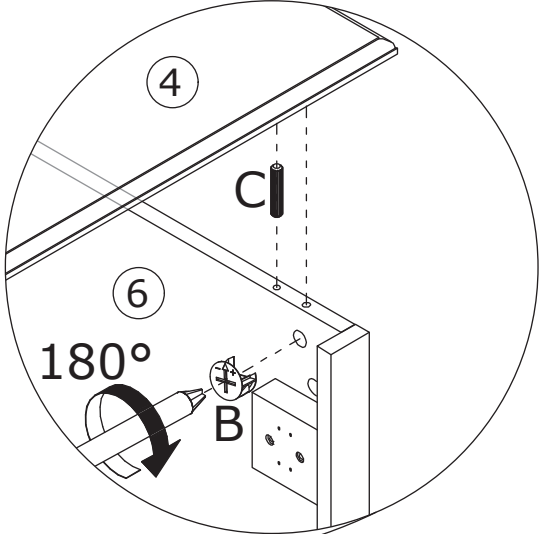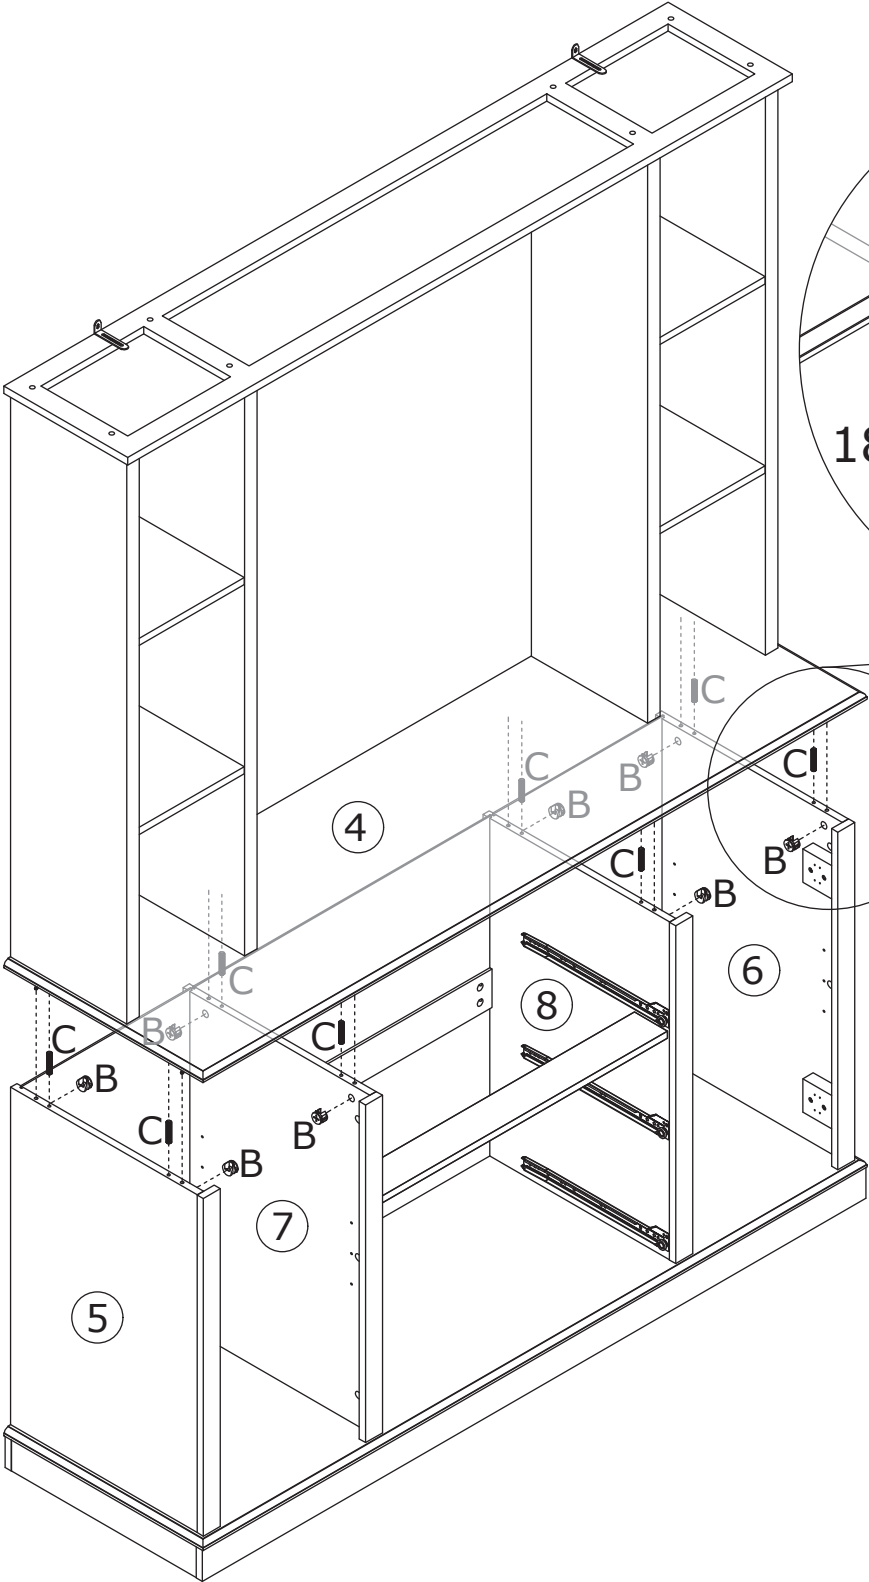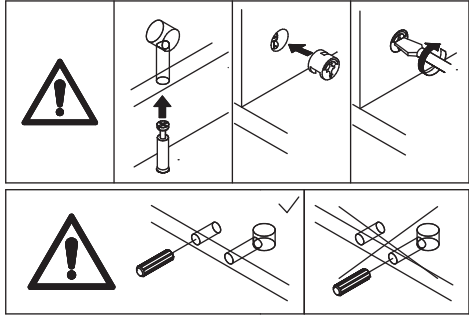


16

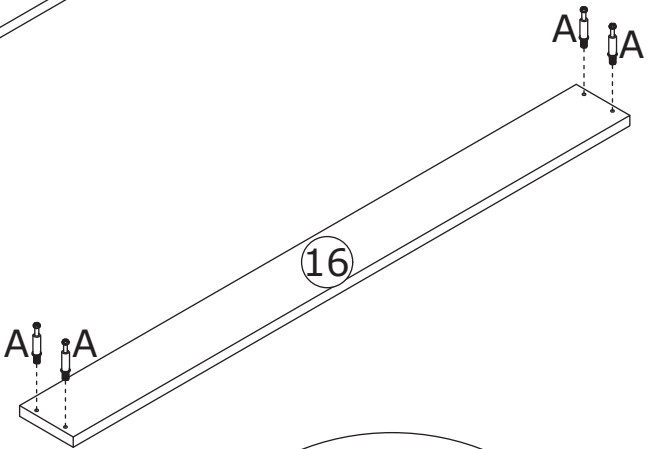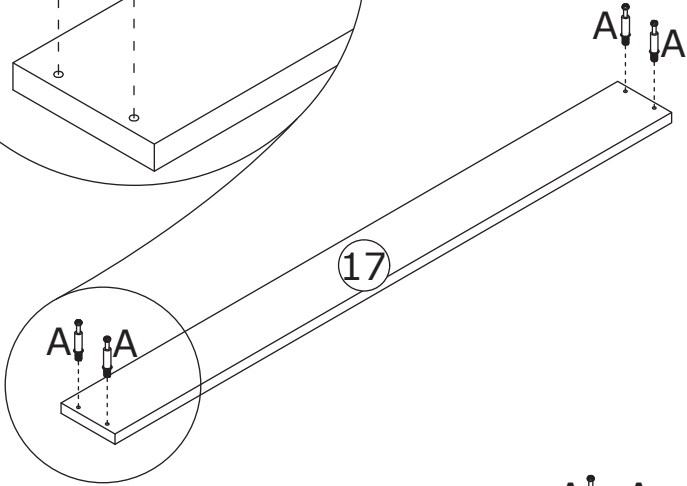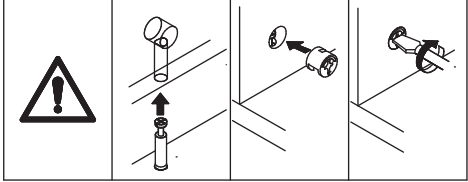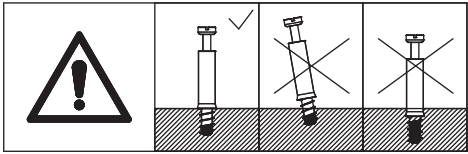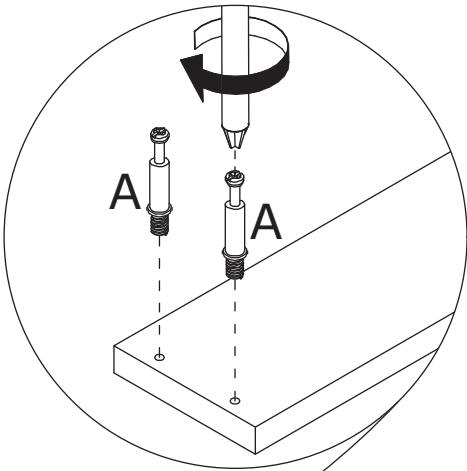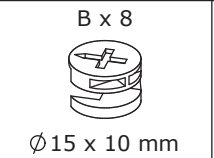       

  
Screw eccentric rod A onto boards 16 and 17 respectively.
Connect board 16 to board 17 and tighten with cam lock B.

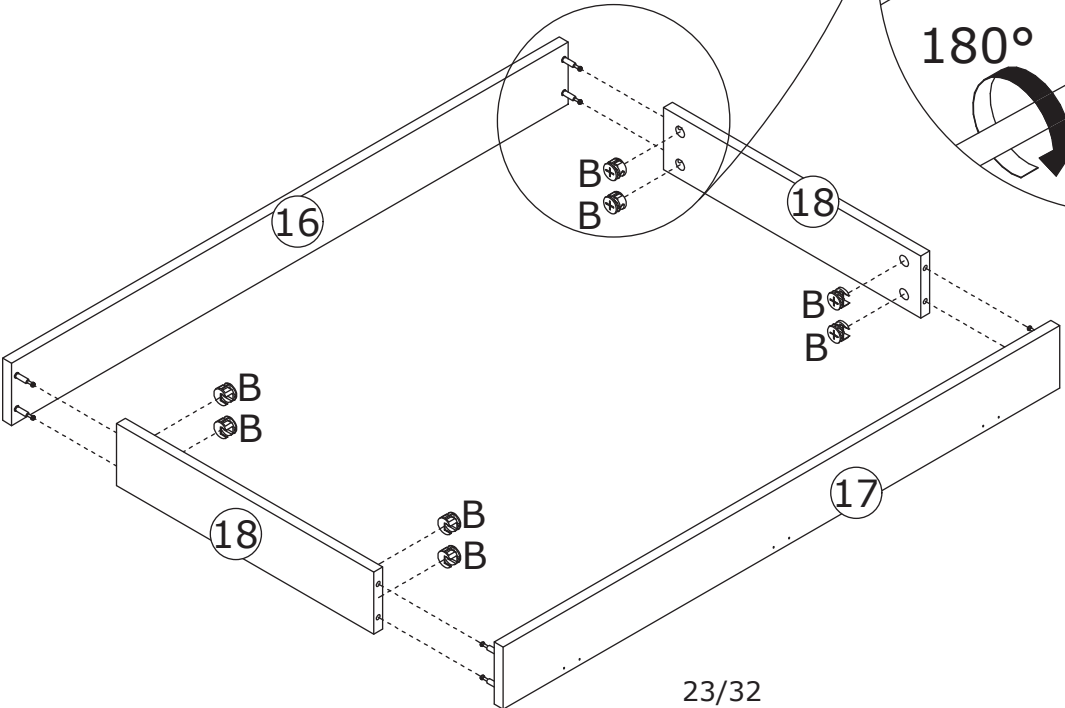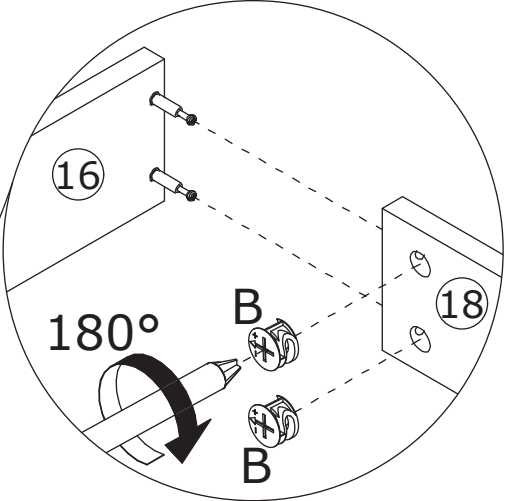

17

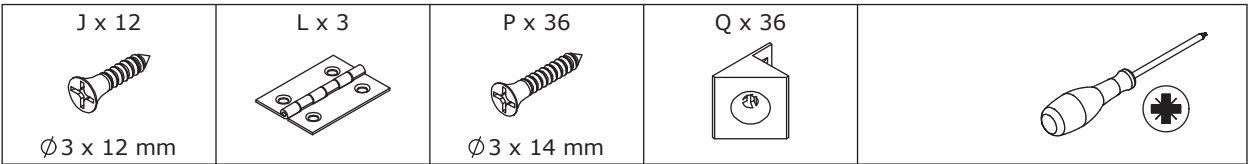 


 Insert buckle Q into the back slots and tighten with screw P as shown.
Secure part L to boards 17 and 4 with screw J as shown.

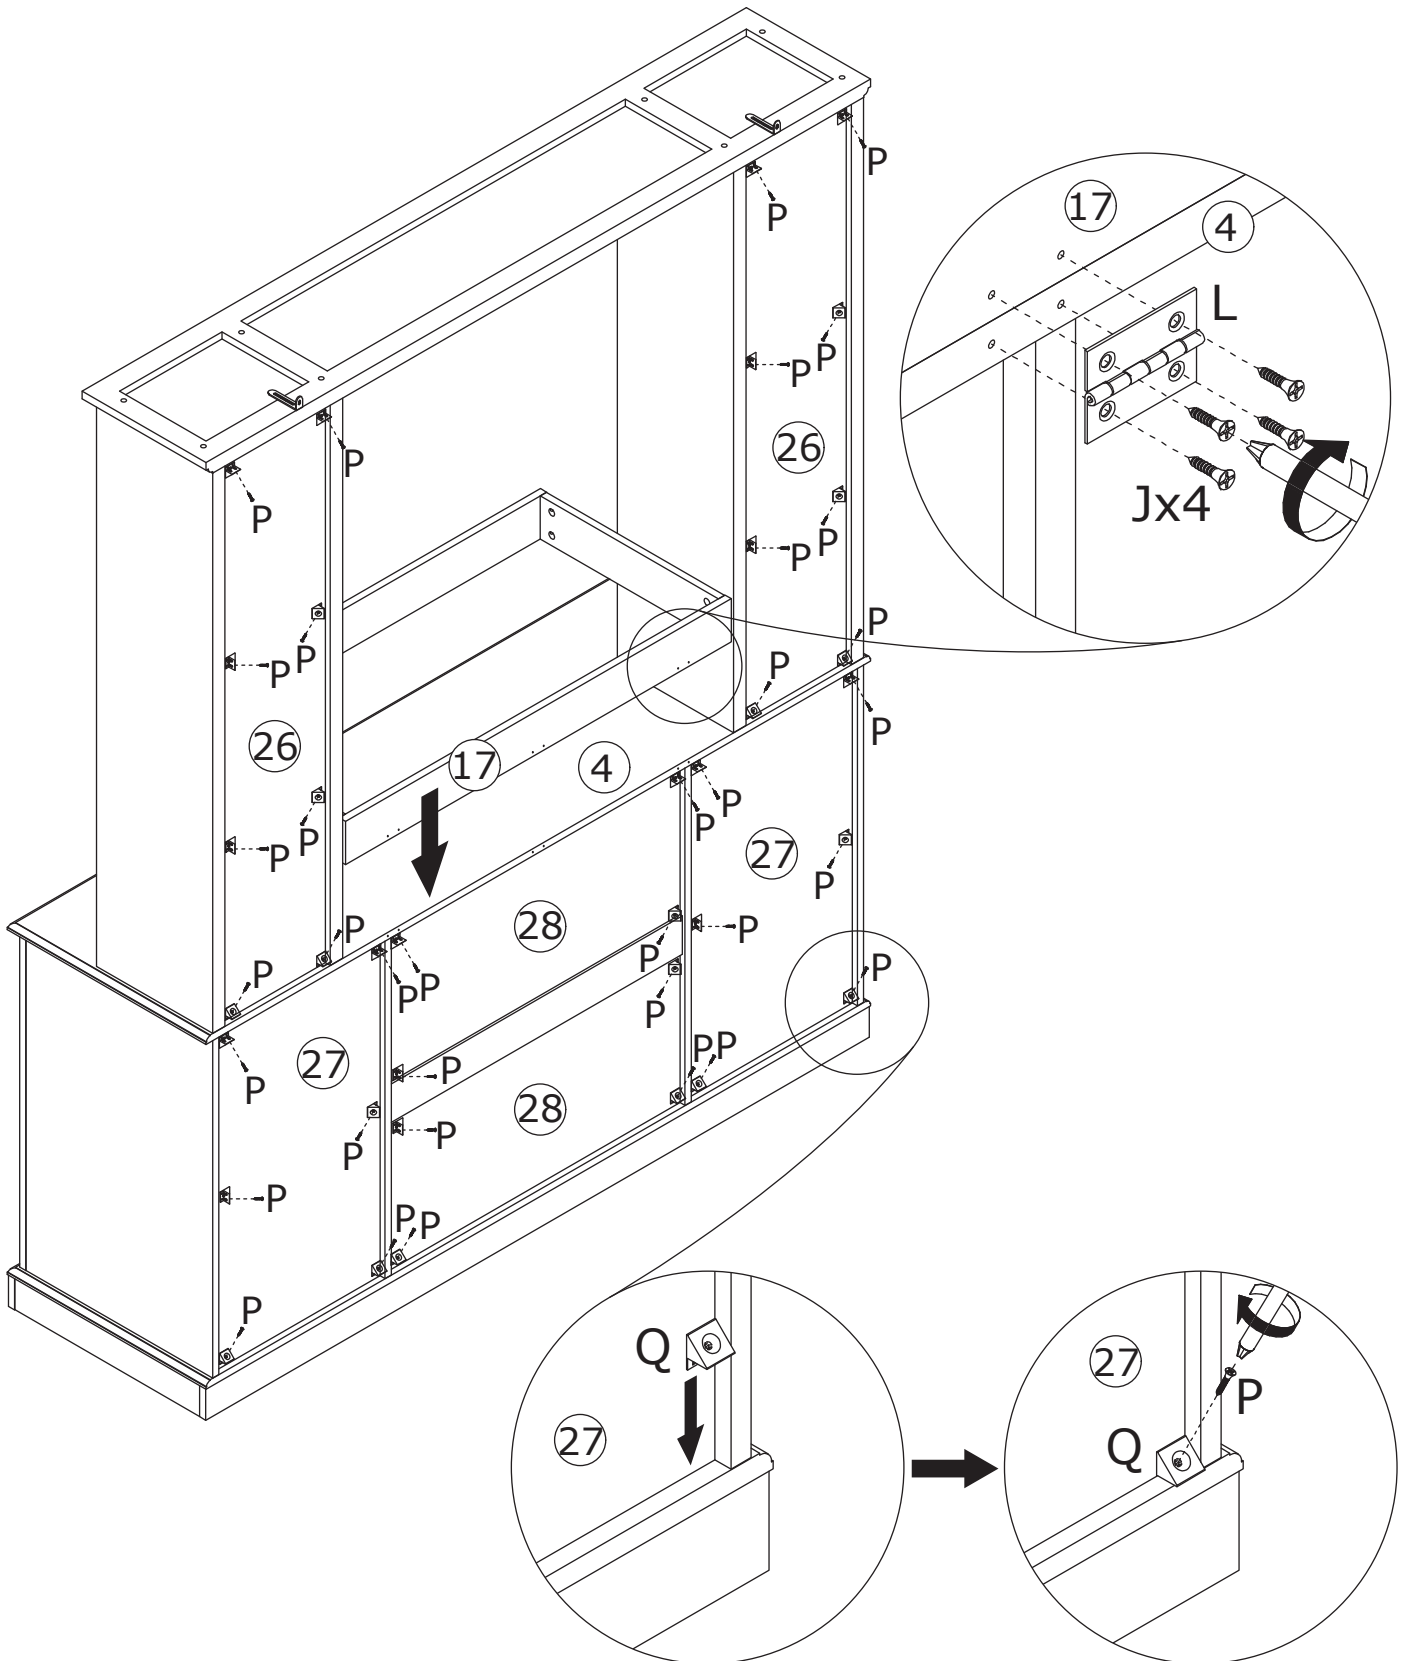


18

 
R x 8




 
Insert layer pin R into the holes and place board 29 as shown in the figure.

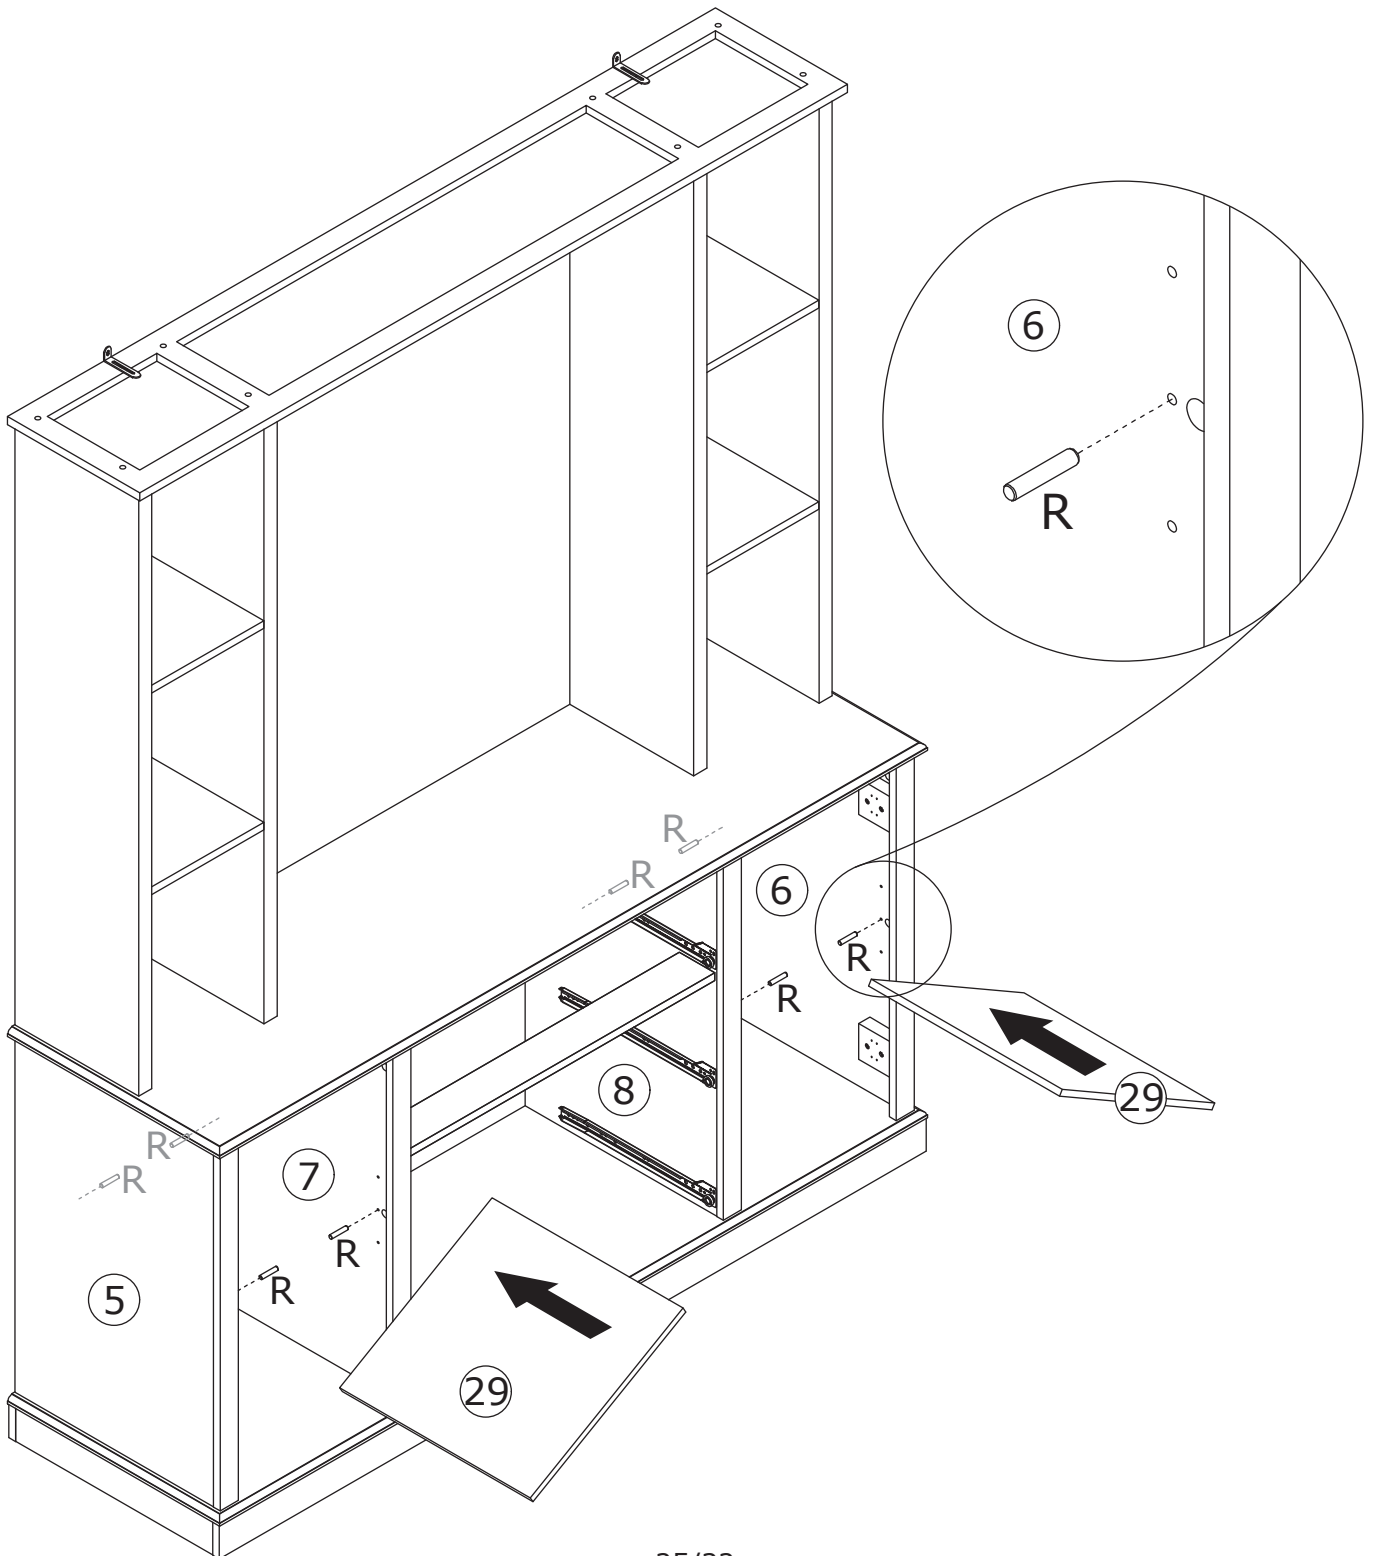


19

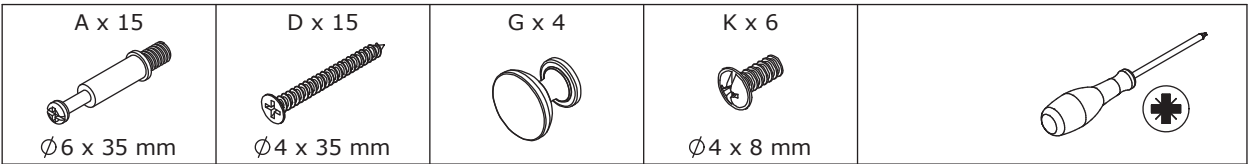 




 
 
Screw eccentric rod A onto board 20, then secure knob G with screw K.
Connect boards 21, 22, and 24 to board 23 and tighten with screw D.

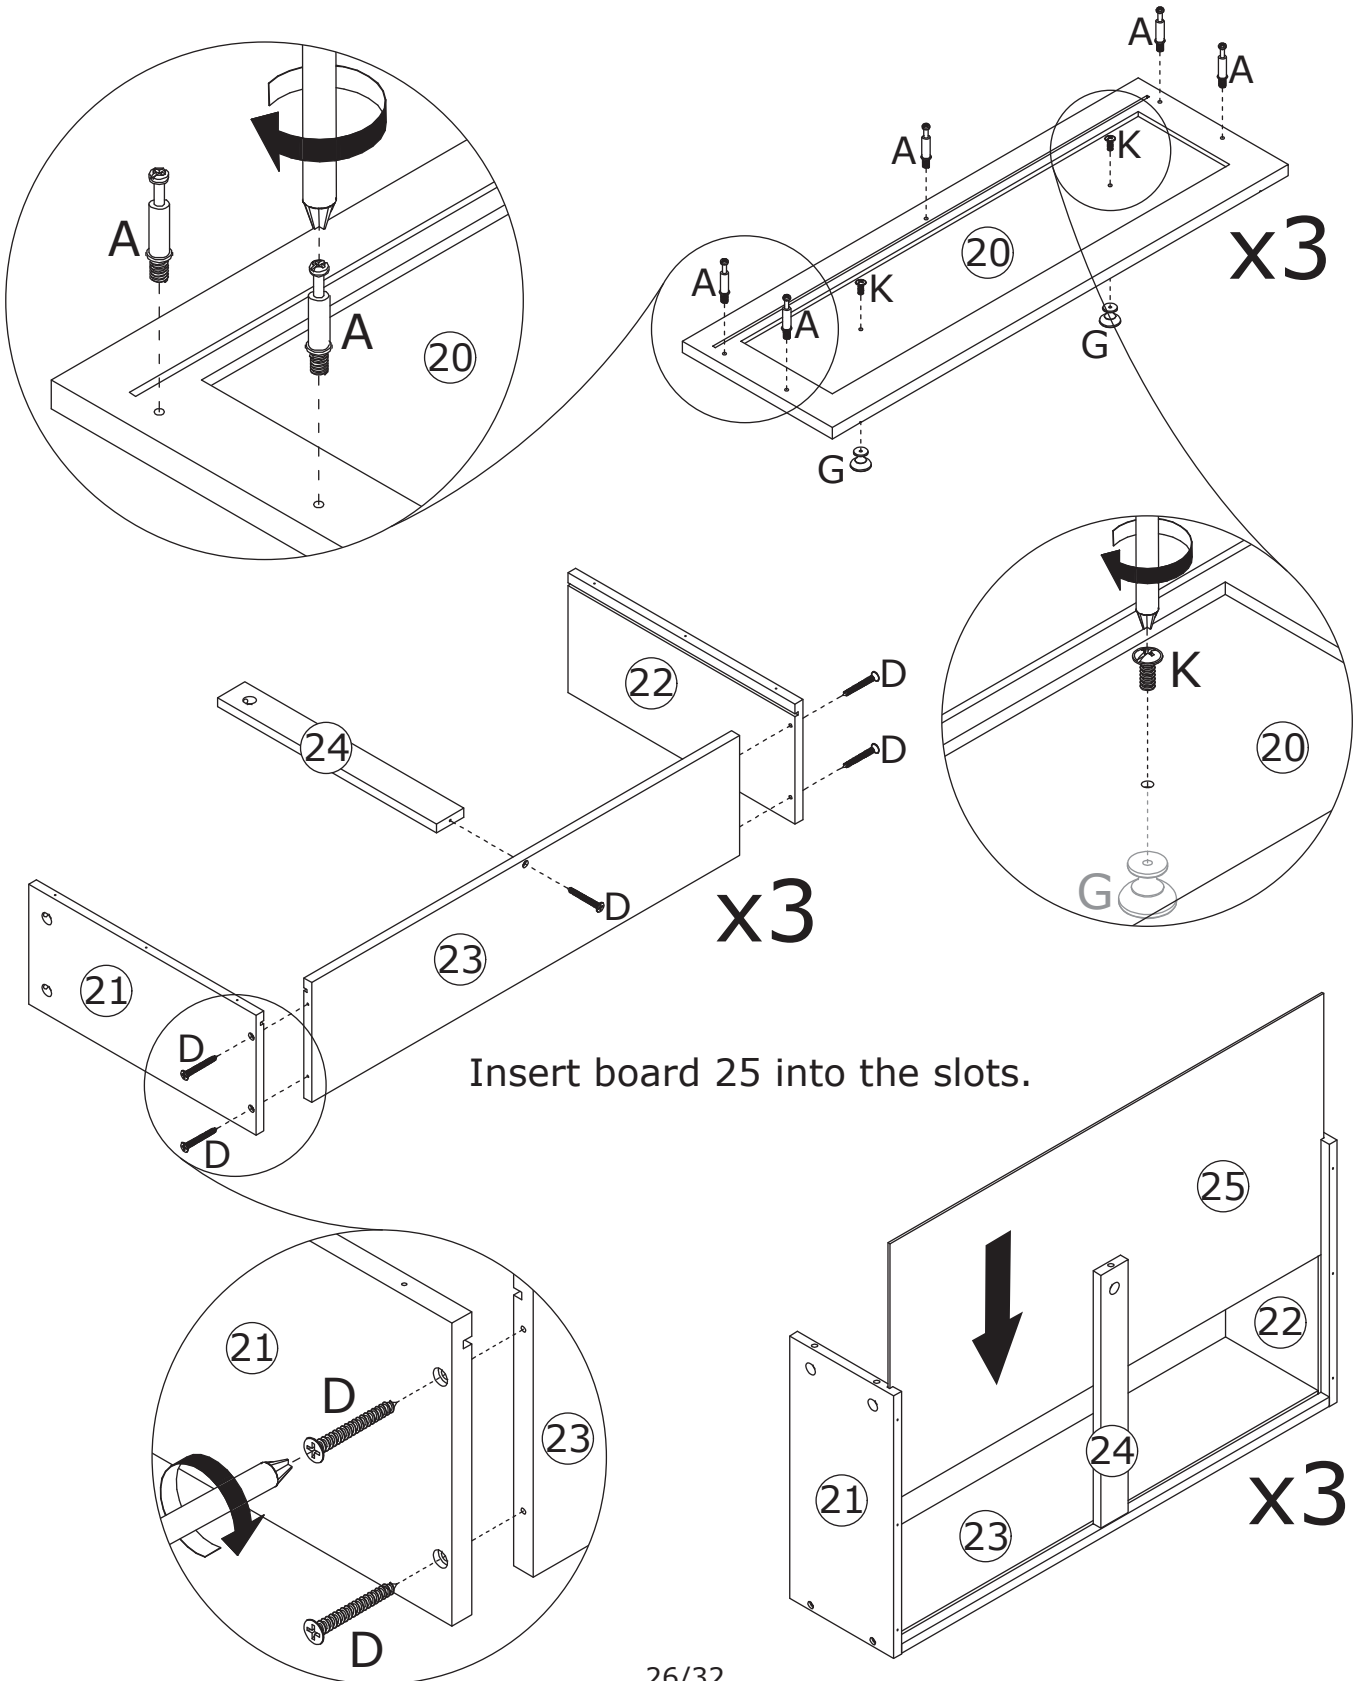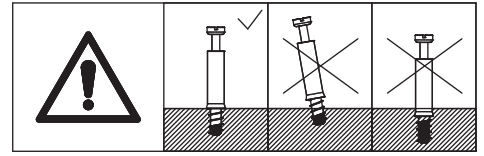


20

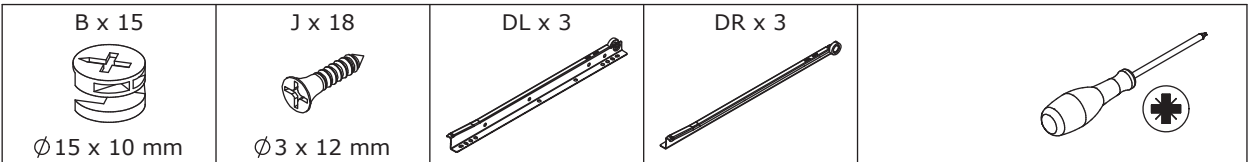 

 
 
 
 
 
Attach board 20 to boards 21, 24 and 22, tighten with cam lock B. Secure slide DL and DR onto boards 21 and 22 respectively with screw J.

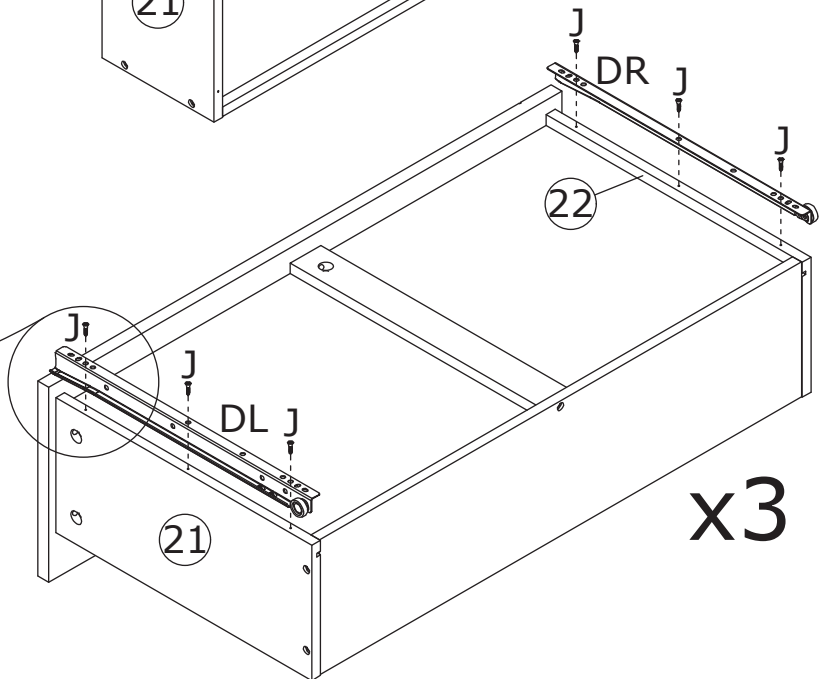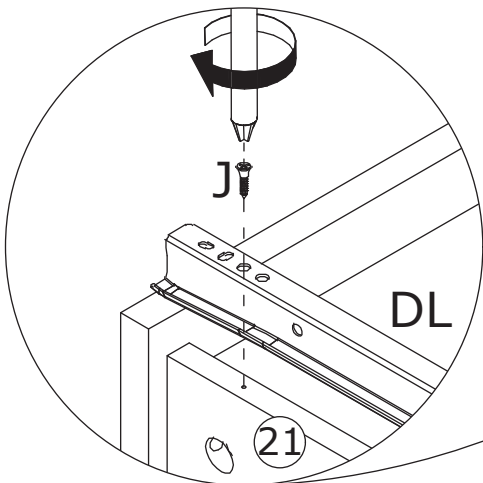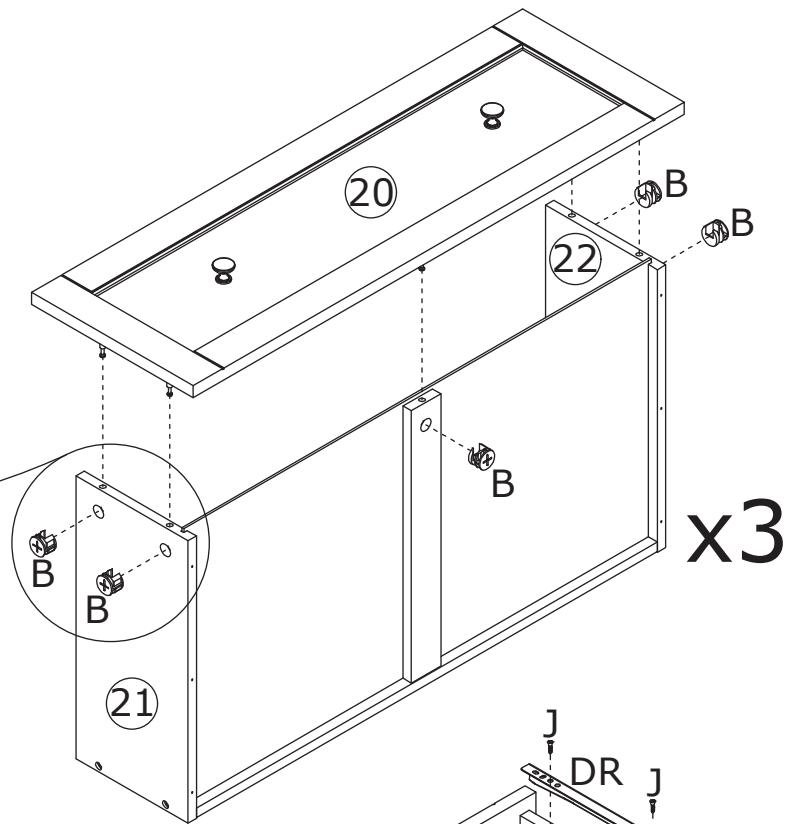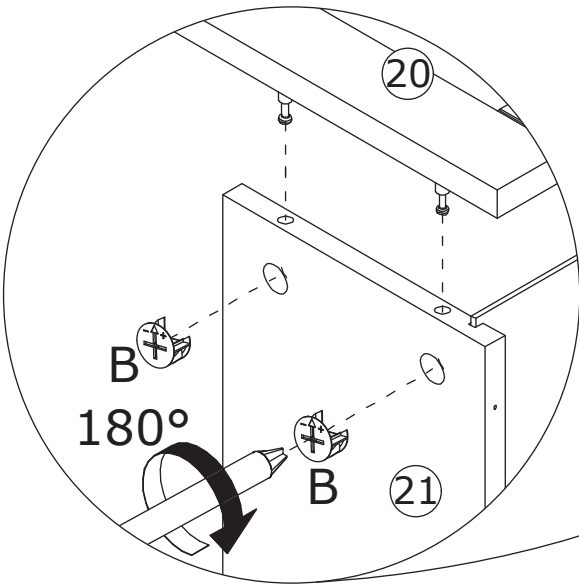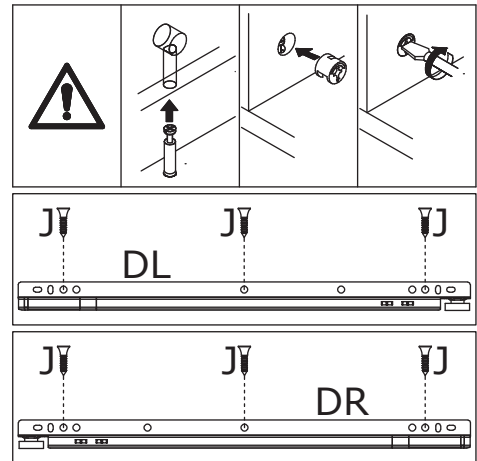






21

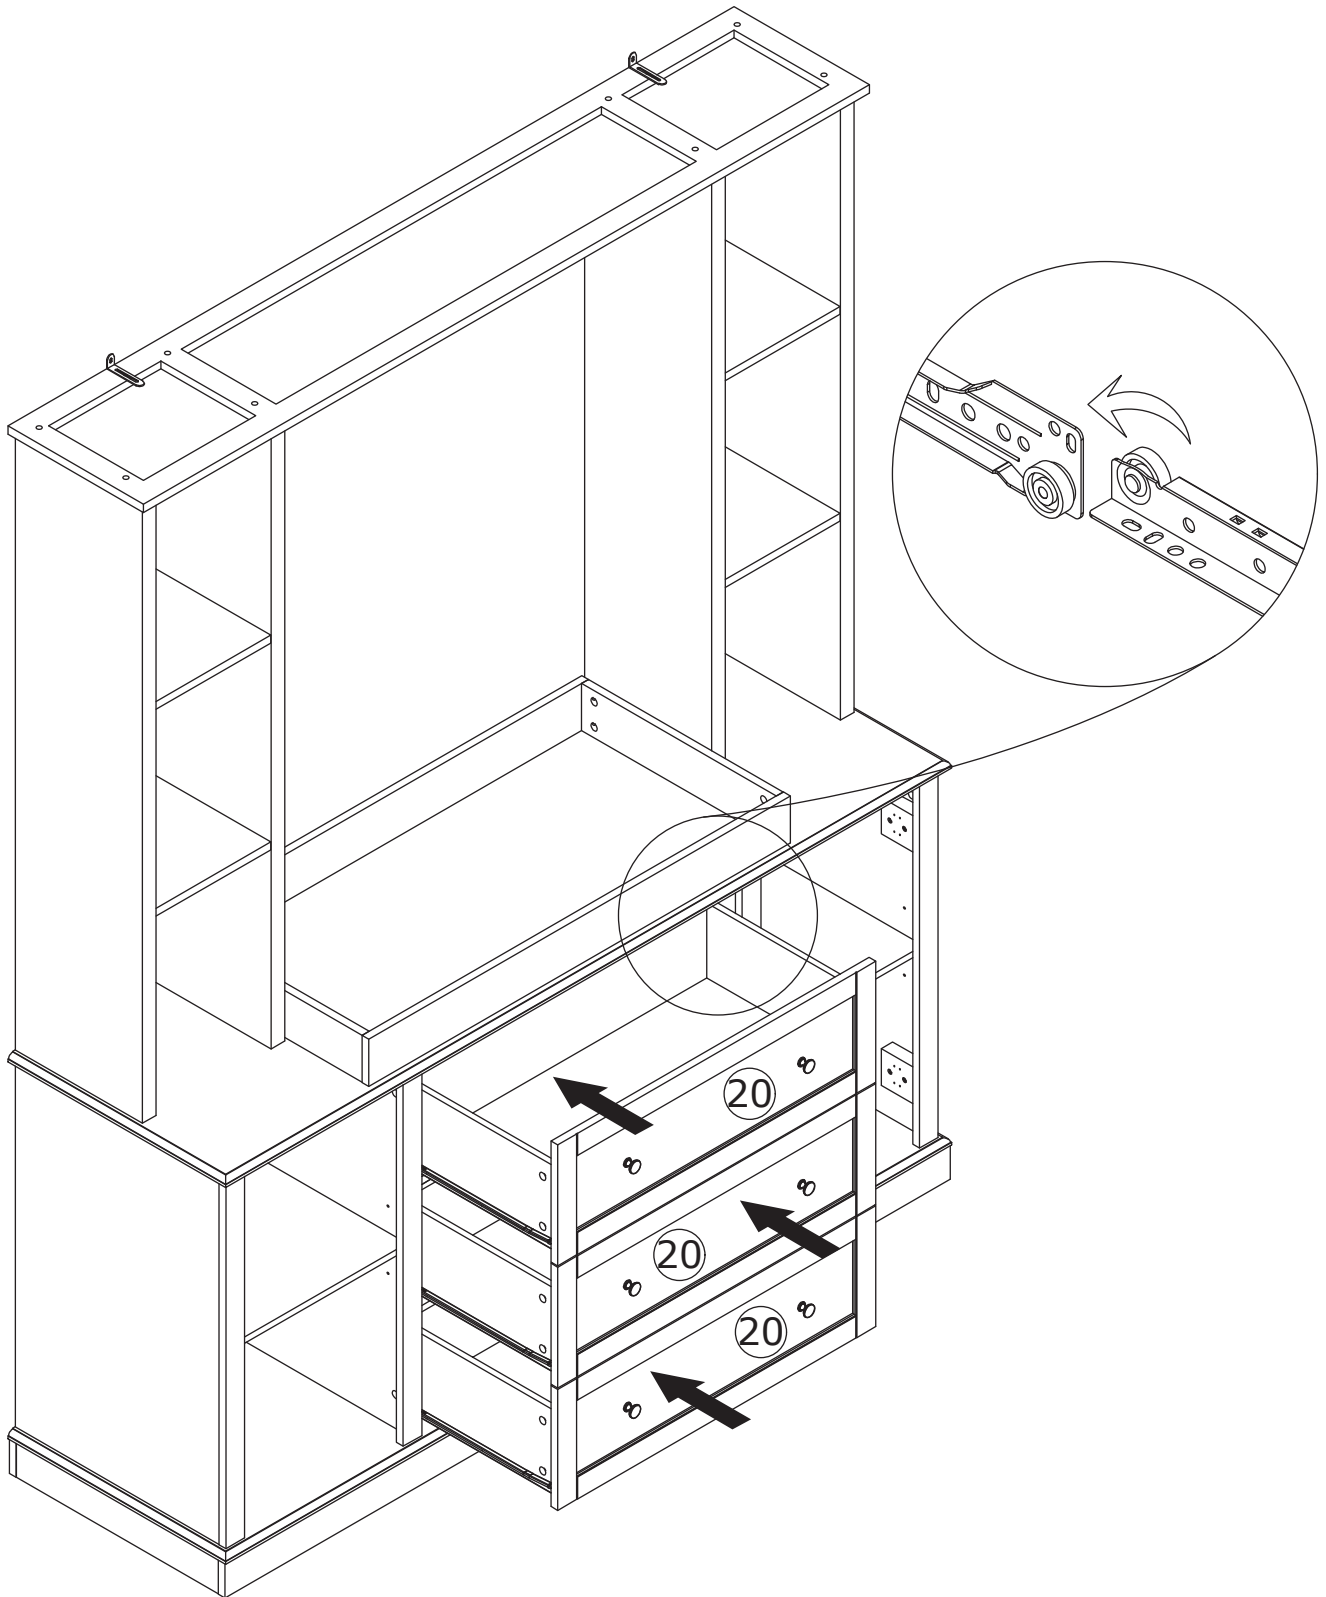 

22

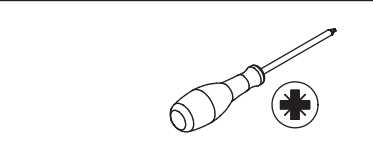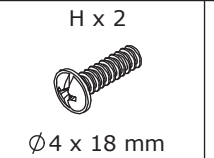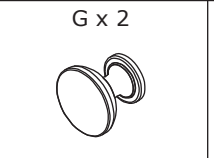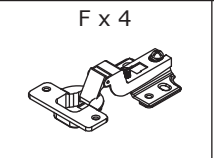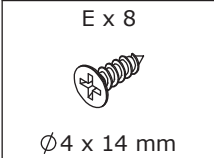     

     Secure hinge F to board 19 with screw E.
Secure knob G with screw H as shown.

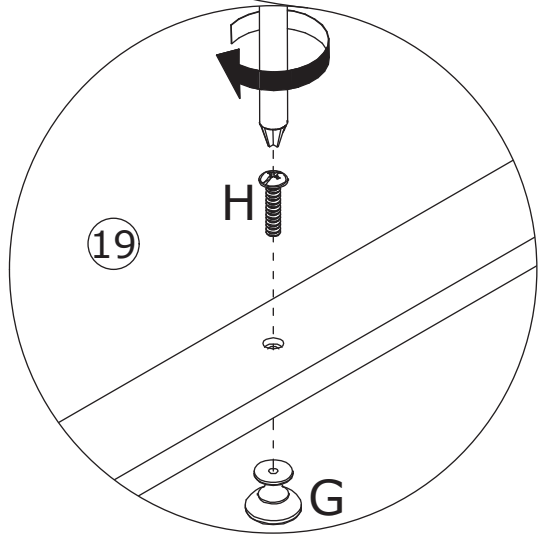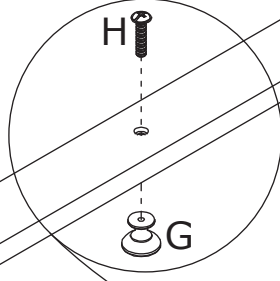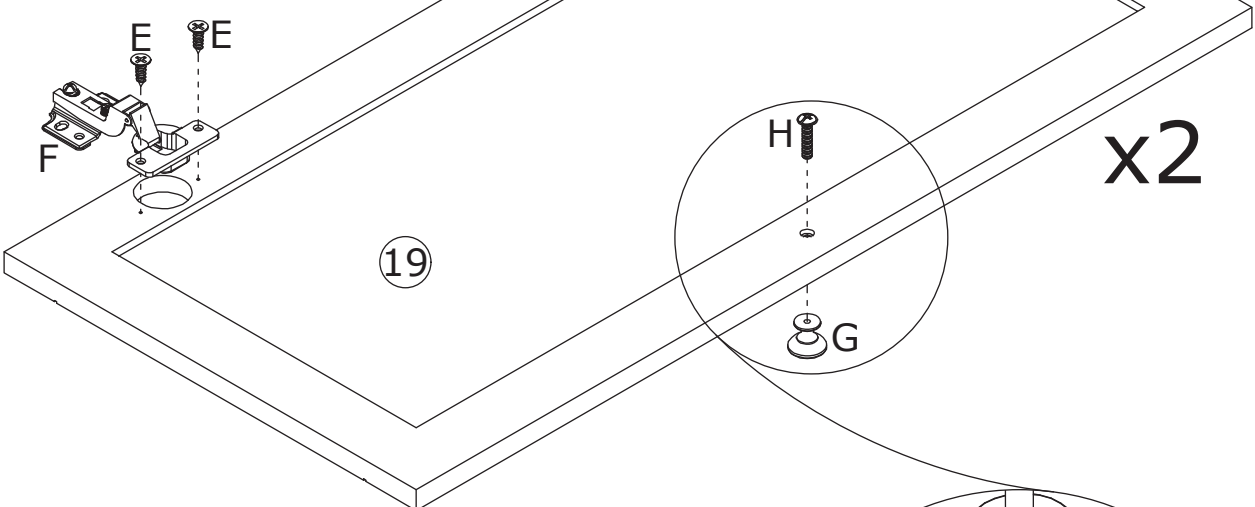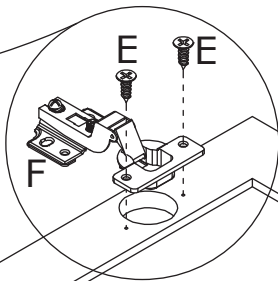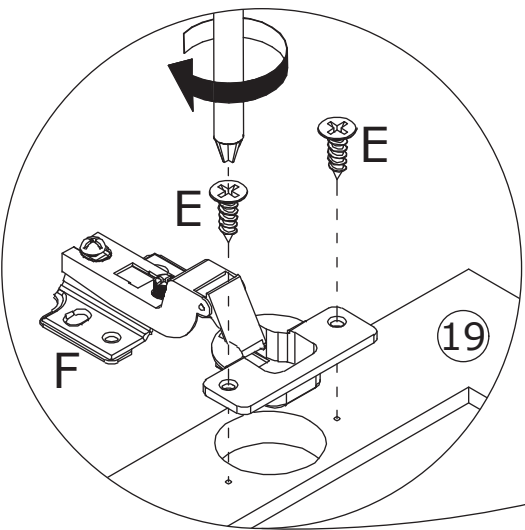


23


E x 16






 Ø 4 x 14 mm




    Secure board 19 to boards 5 and 6 with screw E as shown in the figure.

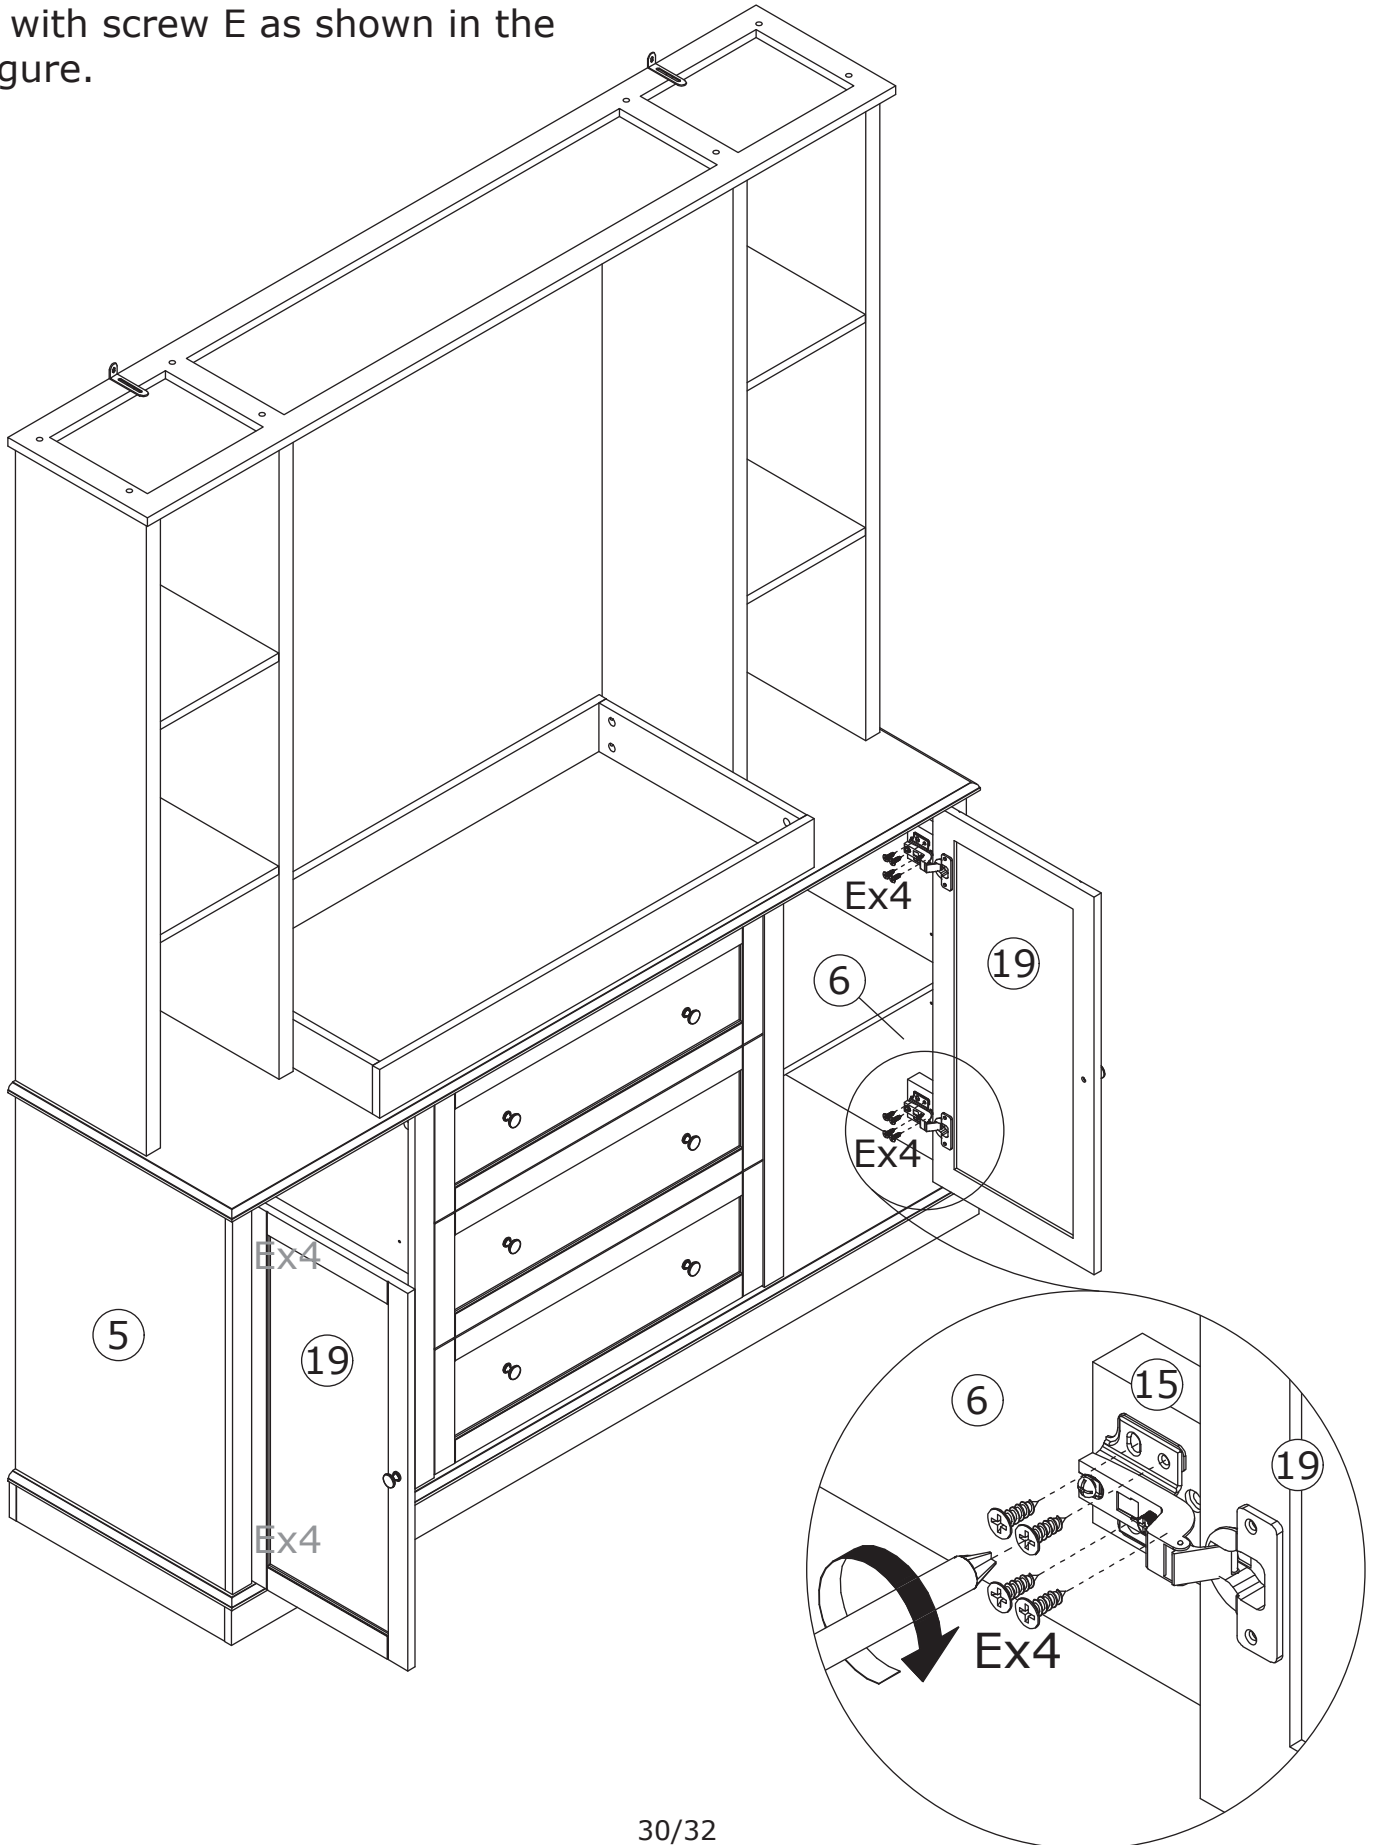


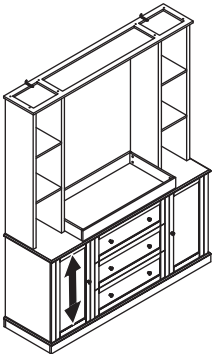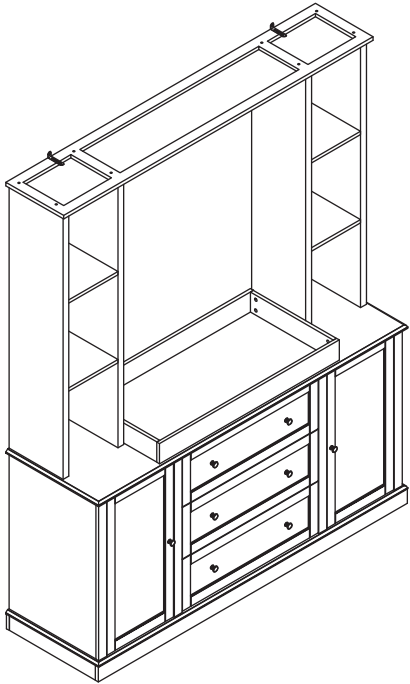



I

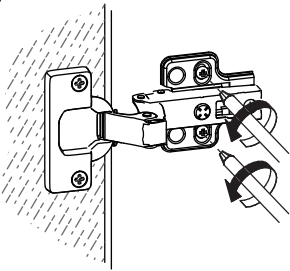 


II

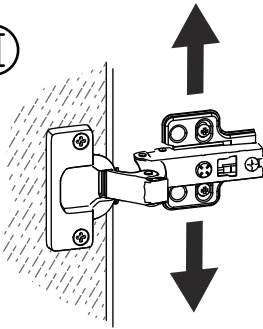 


III

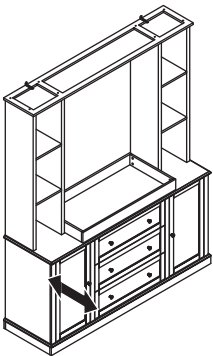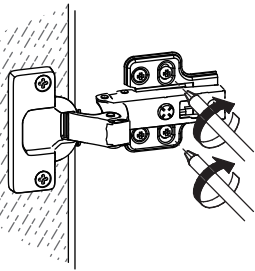  



I

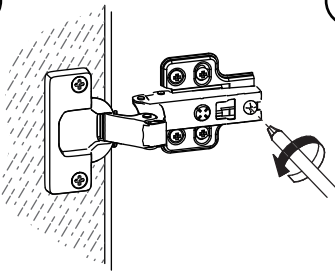 


II

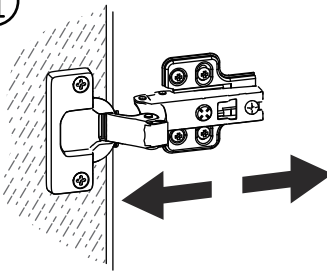 


III

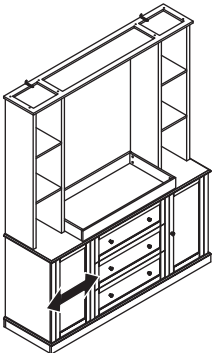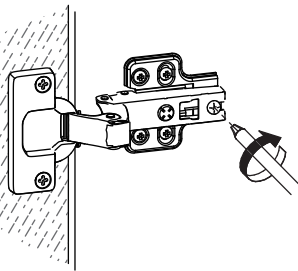  






I

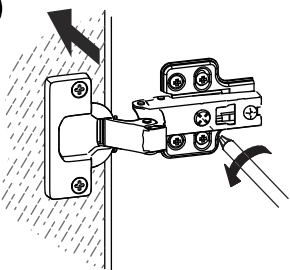 

II

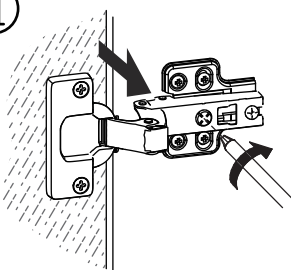 

25

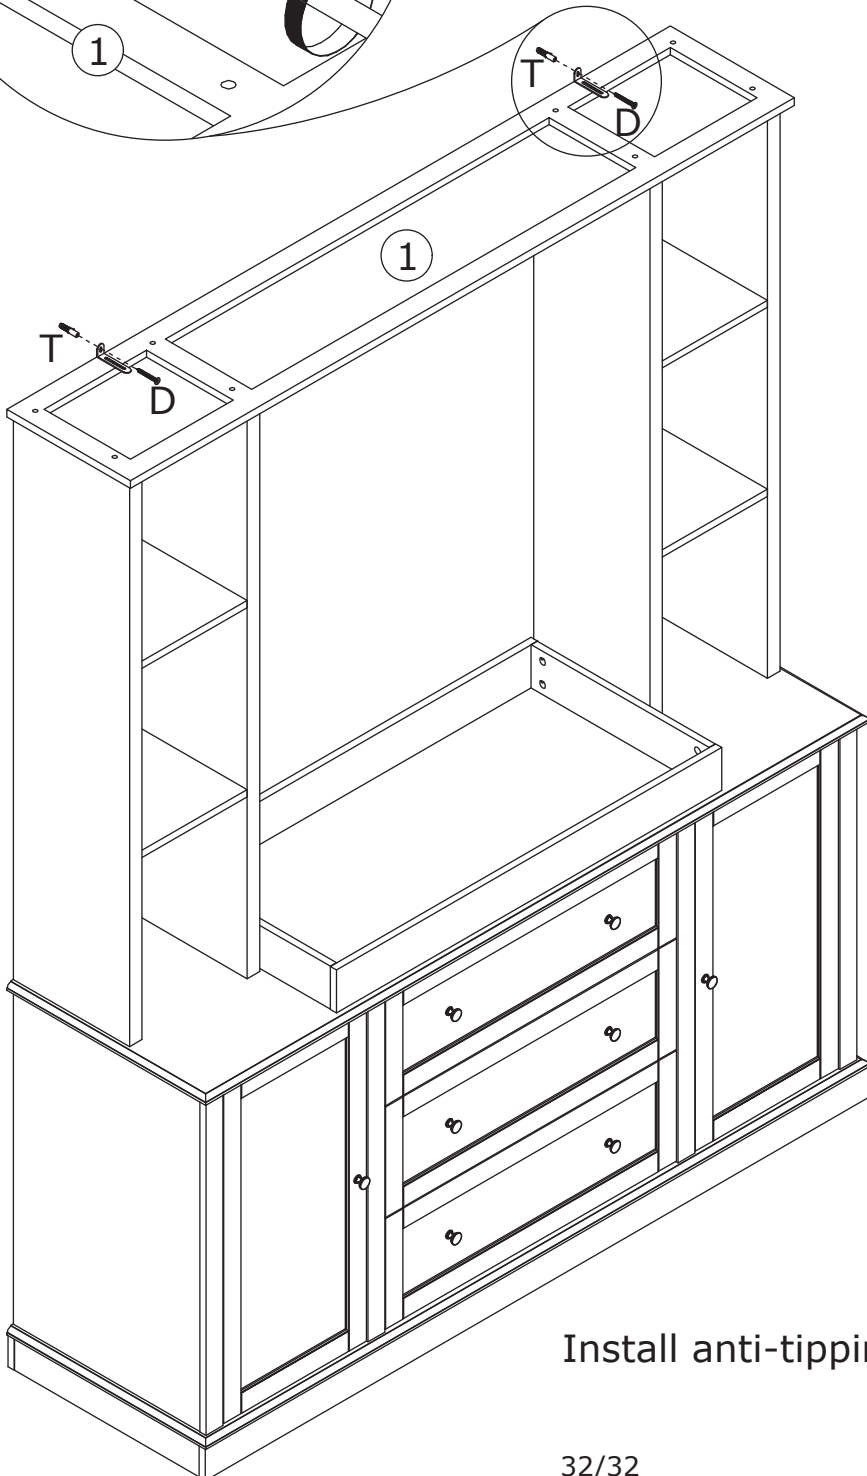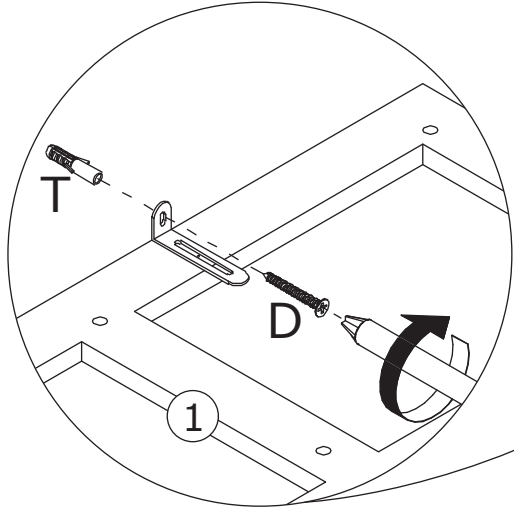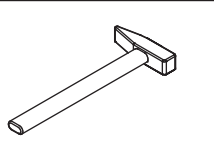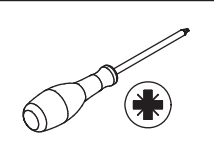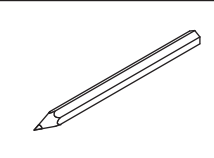     

- 1.
- 2.
- 3.
- 4.

Install anti-tipping device as shown.

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.