


Desk

Assembly Instructions

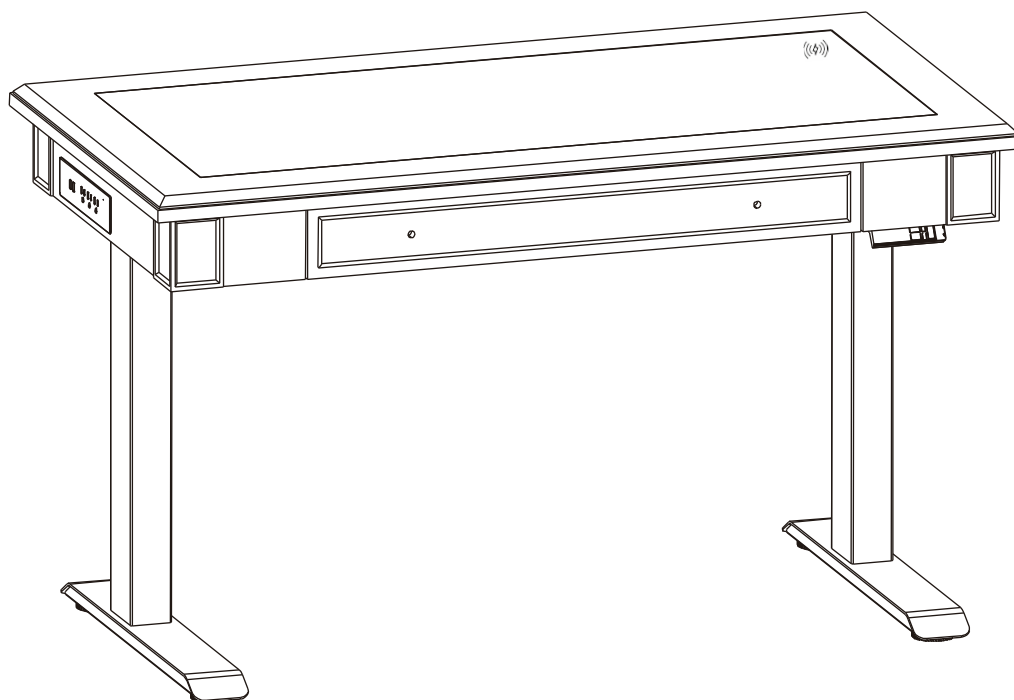

Important Safety Instructions

When using an electrical furnishing, basic precautions should always be followed, including the following:

Read all instructions before using (this furnishing).

DANGER – To reduce the risk of electric shock:

- Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:

- Unplug from outlet before putting on or taking off parts.
- Close supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons.
- Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
- Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the furnishing to a service center for examination and repair.
- Keep the cord away from heated surfaces.
- Never operate the furnishing with the air openings blocked. Keep the air openings free of lint, hair, and the like.
- Never drop or insert any object into any opening.
- Do not use outdoors.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- For chairs and similar furnishings with movable parts such as foot supports the following statement: "WARNING: Risk of Injury – Keep children away from extended foot support (or other similar parts)."
- For grounded products the following statement: "WARNING: Risk of Electric Shock – Connect this furnishing to a properly grounded outlet only. See Grounding Instructions."
- For loading always put heavier items at the bottom and not near the top in order to help prevent the possibility of the furnishing tipping over.
- If a surface is not intended to support video monitors such as televisions or computer monitors, one of the following statements: "Warning: Risk of Injury to Persons – do not place video equipment such as televisions or computer monitors on _____" where the blank is filled in to identify the particular surface.
"Warning: Risk of Injury to Persons – do not use this furnishing to support video equipment such as televisions or computer monitors."
- Each surface intended to support a load shall have a corresponding statement in the use instructions specifying the maximum intended load for that surface in pounds (kilograms).
- Mount furnishings at the correct height.

Save These Instructions

For Household use only.

Servicing of Double-Insulated Products

In a double-insulated product, two systems of insulation are provided instead of grounding. No grounding means is provided on a double-insulated product, nor is a means for grounding to be added to the product. Servicing a double-insulated product requires extreme care and knowledge of the system, and is to be done only by qualified service personnel. Replacement parts for a double-insulated product must be identical to the parts they replace. A double-insulated product is marked with the words "DOUBLE INSULATION" or "DOUBLE INSULATED." The symbol (square within a square) is also able to be marked on the product.

Safety and Care Advice

1. The maximum weight that can be placed on this product is 265lbs.
2. This product must not be used as a seat.
3. Always use the original AC power adapter and power cable supplied, otherwise it may cause slow wireless charging. In extreme cases, an incompatible AC power adapter may overheat.



Specifications

Input: 100-240V~, 50/60Hz, 4.0A


Main Components

Please check you have all the parts listed below


NO	Component Name	Qty
1	Desk Top	1
2	Foot	2
3	Leg	2

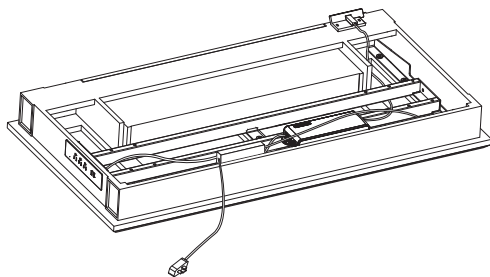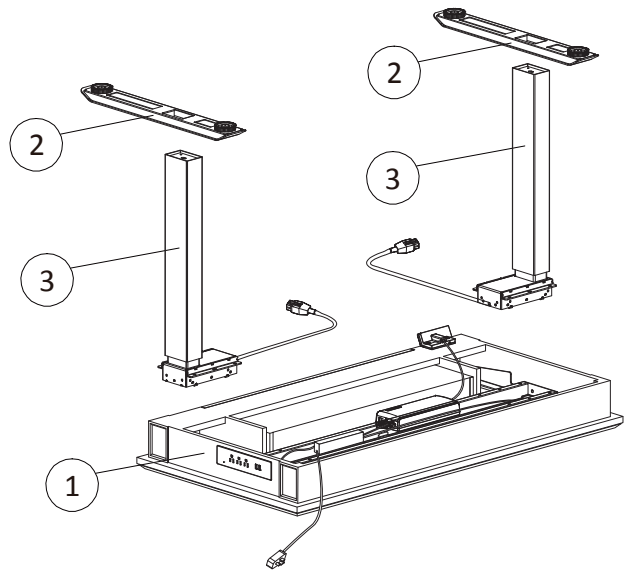

1 Desk top Qty 1
(49.21" x 25.51" x 5.43")

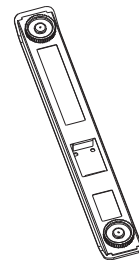

2 Foot Qty 2
(23.62" x 3.15" x 1.42")



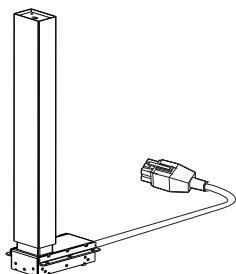




3 Leg Qty 2
(7.68" x 5.40" x 25.95")

Fixings, Fittings and Tools

  Please check you have all the parts listed below

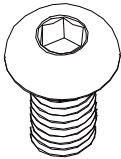Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


<div>A</div> <div></div> <div>M6*0.63'' Screw Qty 8</div>	<div>B</div> <div></div> <div>M8*0.39'' Screw Qty 12</div>	<div>C</div> <div></div> <div>M5 Allen Key Qty 1</div>
<div>D</div> <div></div> <div>M4 Allen Key Qty 1</div>	<div>E</div> <div></div> <div>78.74'' Electric Cable Qty 1</div>	

For missing or damaged parts, call our Customer Service

Assembly Steps

Step 1

Assemble Legs **3** to Top **1** using Fxings **B**.


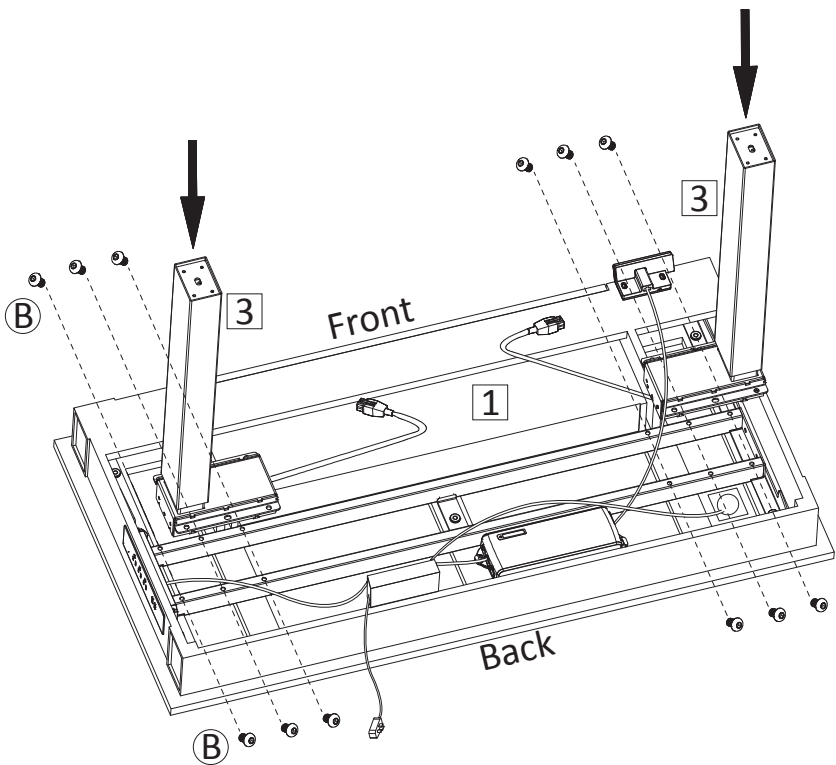


Shown Upside Down

Step 2

Assemble Feet **2** to Legs **3** using Fxings **A**.

Note: Ensure the longer section of the feet are located at the front as shown.

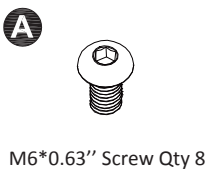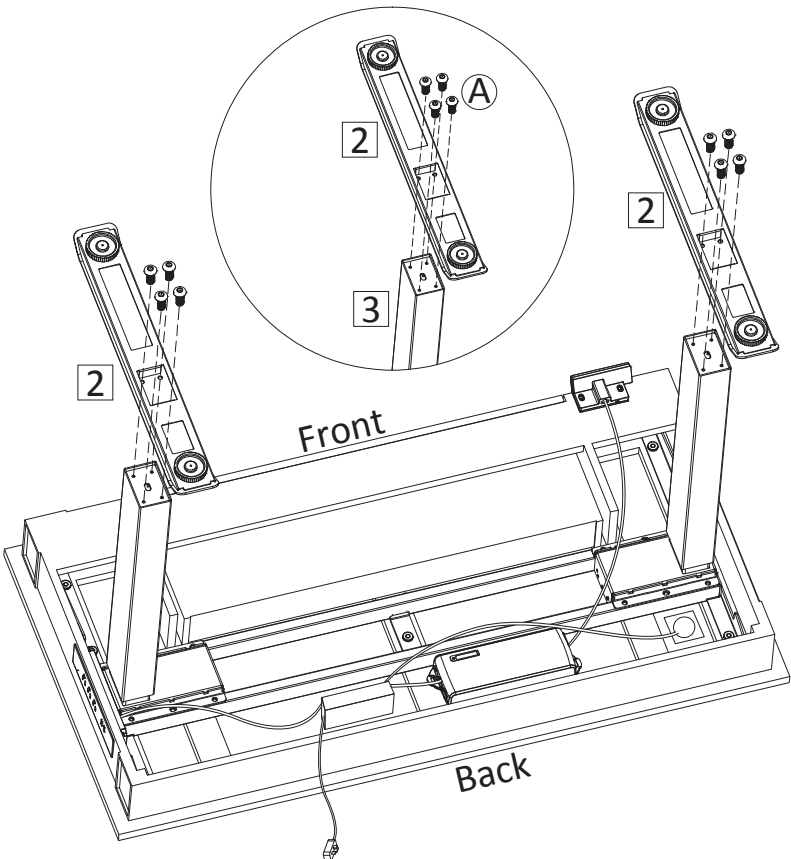


Step 3

Complete all cable connections as shown.

Connections

- ① Cable to Motor
- ② Cable to Motor
- ③ Cable to Power

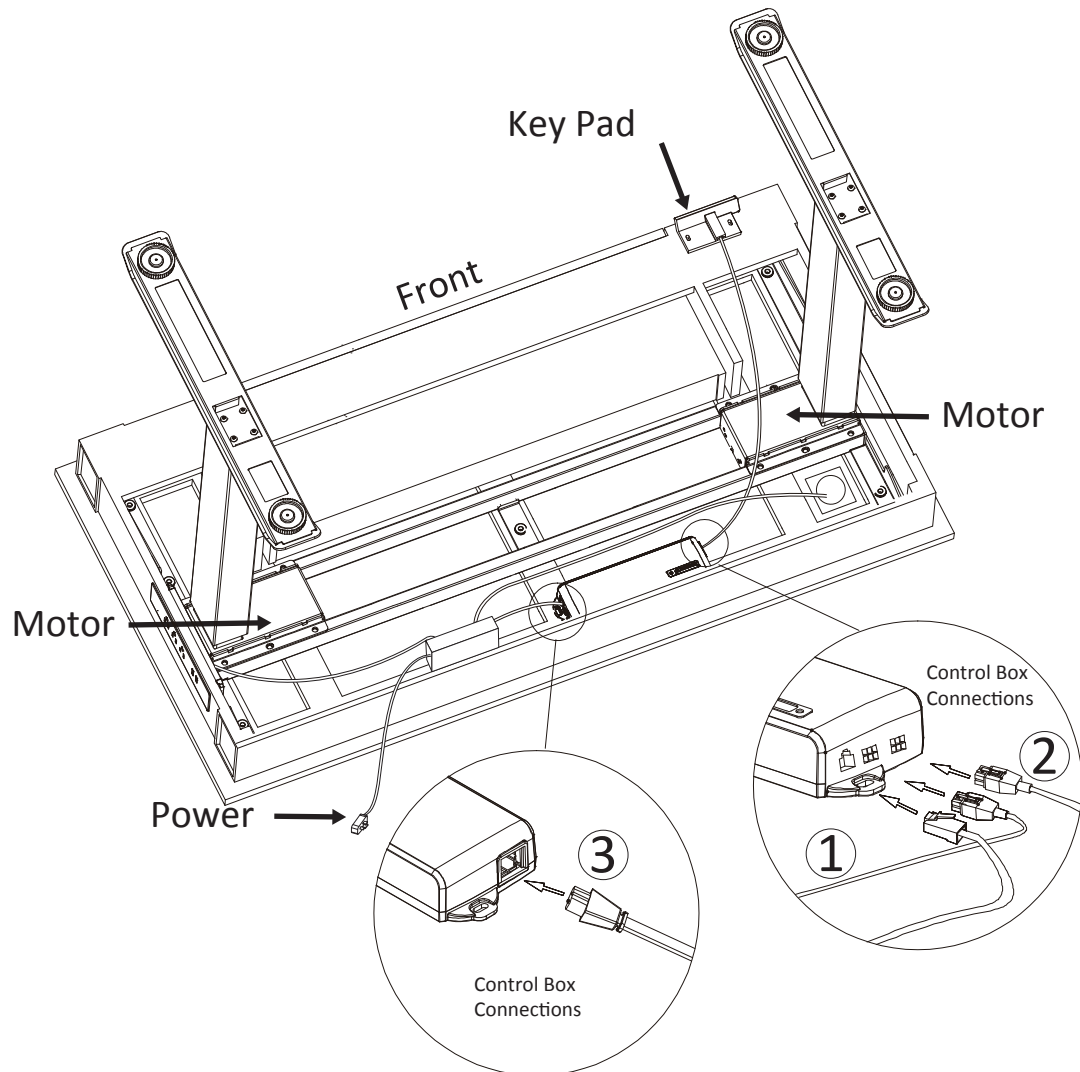


⚠ Warning!!!

Do Not Connect to a power source at this stage.

Step 4

With help, carefully turn the desk over into its final location and connect to a power source.


Two People Required.

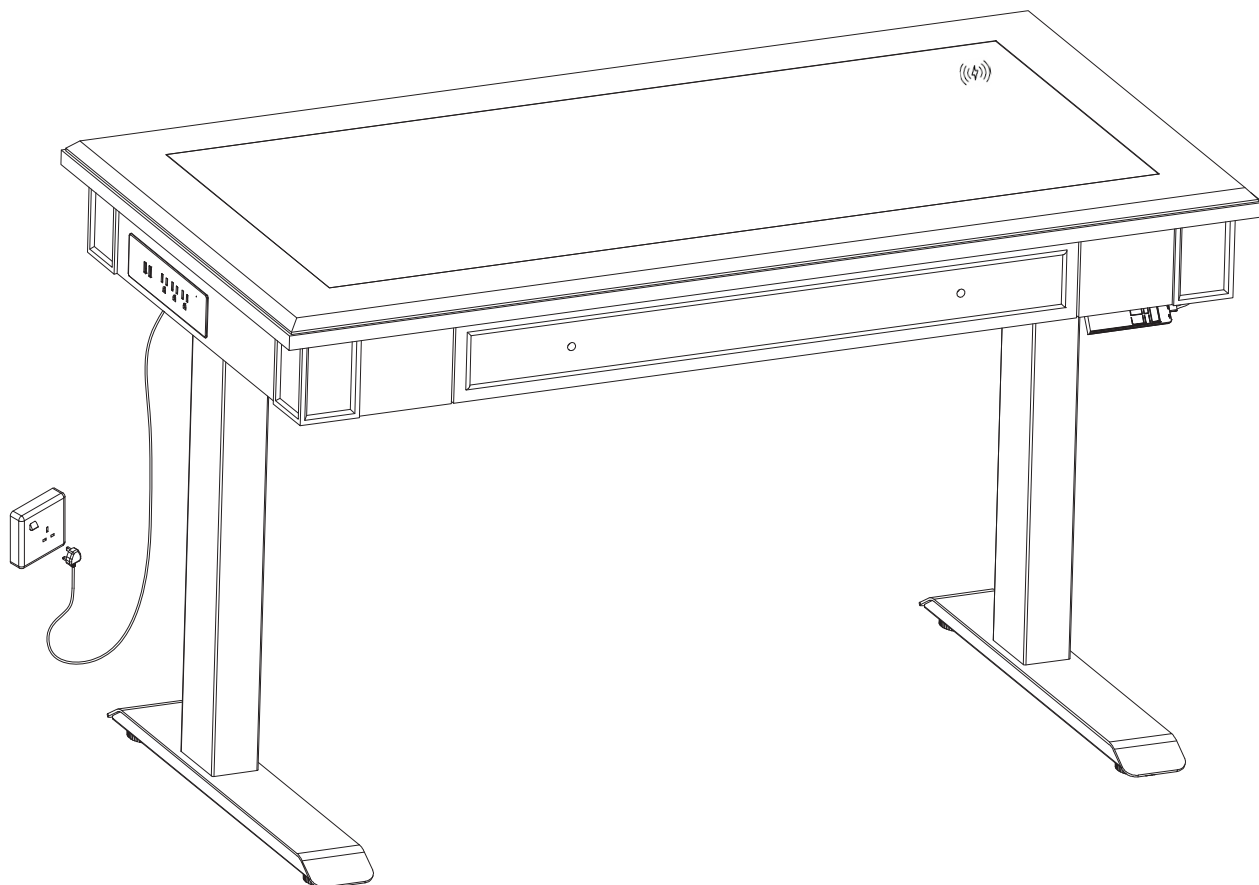

⚠ Warning!!!

The desk is heavy!
To avoid injury, lift with care.

Desk Height Adjustment

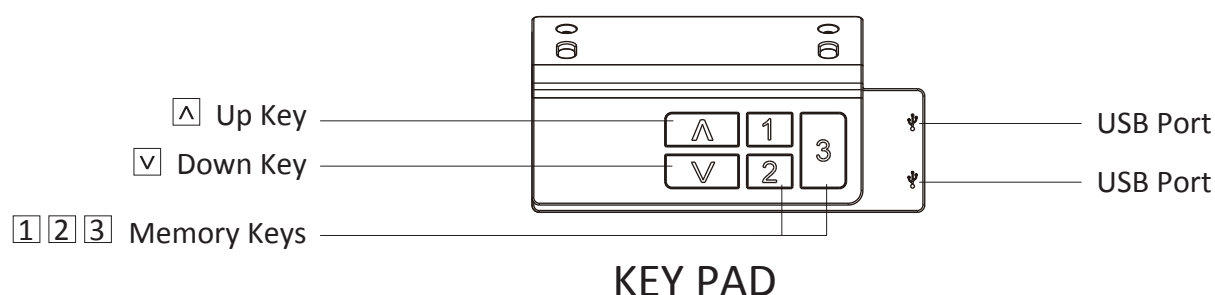

Activation

You will need to activate the memory keypad once the desk is fully assembled, and connected to a power source. If the frame doesn't seem to be working properly, rest assured that most issues can be resolved using the activation process.

- 1.If the handset is locked, first step is to unlock.
- 2.Begin by pressing and holding the "Up" and "Down" keys at the same time.
- 3.Continue to hold as the frame lowers itself all the way down. You will hear a slight beep sound followed by a brief flash on the display.
- 4.Release the "Up" and "Down" Keys.
- 5.Press the "Up" Key once to engage the motors, your desk should be activated and ready to go.

Memory Function

To preset a specific height, use the "Up" and "Down" Keys to reach the required height. Press the "Up" and "1" keys at the same time for about 2 seconds.

"P1" should appear on the display.

Repeat the procedure to set a second preset height, using key "2".

"P2" should appear on the display.

Repeat the procedure to set a second preset height, using key "3".

"P3" should appear on the display.

Centimeters and Inches Setting

The display can be changed to show centimeters (C) to Inches (I).

Press the "1" "2" and "3" Keys together for about 5 seconds.

"C-I" should appear on the display.

Either press button "1" display show the desk is in metric mode or press button "2" display the desk is in Imperial (inches) mode.

Wireless charging function

If you have a wireless charging compatible device, please put the phone on the wireless charging indicator and check if the phone is successfully connected to the charging function. If not, move the mobile phone near the logo until the connection is successfully.

Some phone cases may inhibit the wireless charging function or it's efficiency. It may be necessary to remove the phone case if difficulties are experienced.


Wireless charging will only work with wireless charging compatible mobile devices.



wireless charging function

Electrical system

WARNINGS!! Please read carefully

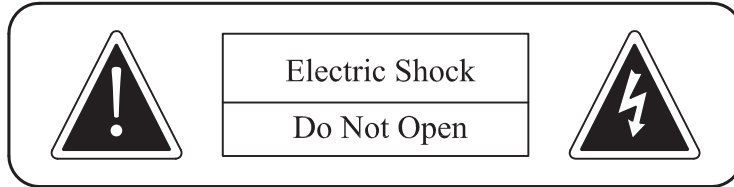

This symbol is intended to alert the user to the presence of un-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to cause an electric shock.



This symbol is intended to alert the user to the presence of important operating and maintenance instructions in this user manual.

- a. In order to avoid accidents, do not open any electrical covers. Refer to a professional if the circuit is faulty.
- b. Do not expose the unit to damp or moisture.
- c. Keep the unit away from containers holding liquid. If any liquid enters into the unit, it may be damaged.
- d. Do not expose the unit to dust or smoke.
- e. If the unit will not be used for a long time, please unplug the power.
- f. When using the unit, if smoke appears, or if there is a peculiar smell, please turn off the power, pull out the socket and seek professional help.
- g. Pull out the plug before cleaning the surface of the machine. It can be cleaned with a damp cloth and soap.

Disposal



■ If disposal of this product becomes necessary, please do this in an environmentally responsible way. Contact your local government office or authority for suitable disposal or recycling options in your local area. Do not dispose of this product, or it's components, with your general domestic waste.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



RoHS

BIFMA