


ASSEMBLY INSTRUCTIONS

TEAK LOUNGER

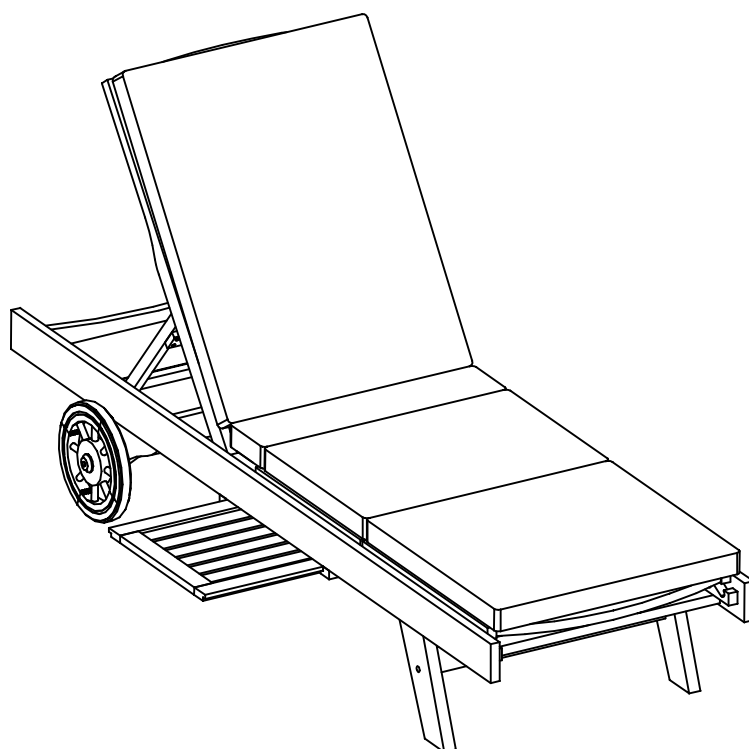 


GENERAL INFORMATION & TIPS

1. Please read the assembly instructions prior to assembling the chaise lounge.
2. To avoid damage, assemble the chaise lounge on a non-abrasive surface such as carpet.
3. Make sure all bolts tightly fastened before the chaise lounge is used.
4. This chaise lounge is not for commercial use.

Please make sure you have all parts before beginning assembly. Please wait until all steps are completed before tightening bolts.


1. A Phillips screwdriver is necessary for assembly.
It's not included in hardware list.






2. A Rubber mallet is necessary for assembly.
It's not included in hardware list.



 3. A wrench is necessary for assembly.
It's included in hardware list.




PARTS AND HARDWARE LIST

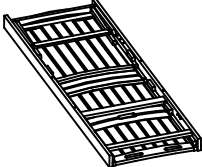  A. Lounge	B1. Right front leg	B2. Left front leg	C1. Right back leg	C2. Left back leg
				
QTY : 1 pc	QTY : 1 pc	QTY : 1 pc	QTY : 1 pc	QTY : 1 pc
D. Cross bar	E. Wheel	F. Wooden slide	G. Serving tray	
				
QTY : 2 pcs	QTY : 2 pcs	QTY : 2 pcs	QTY : 1 pc	
H. Wheel bolt	I. Short bolt	J. Long bolt	K. 1" Screw	
				
QTY : 2 pcs	QTY : 4 pcs + 1	QTY : 4 pcs + 1	QTY : 12 pcs + 1	
L. Washer (2 mm)	M. Washer (5 mm)	N. Nut	O. Wooden cap	
				
QTY : 2 pcs	QTY : 4 pcs	QTY : 2 pcs	QTY : 4 pcs + 1	


ASSEMBLY INSTRUCTIONS

1

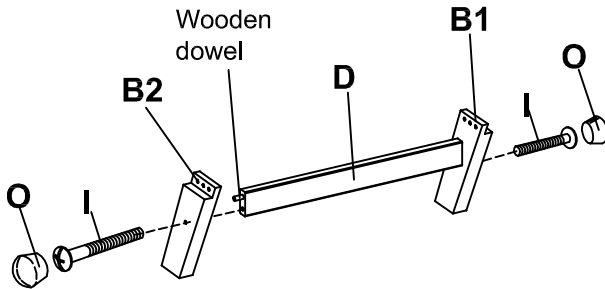


Attach the cross bar (D) into right and left front legs (B1 & B2) and secure with short bolts (I). Tighten the bolts using screwdriver. Tapping in the wooden cap (O) to cover bolts head using rubber mallet.

2

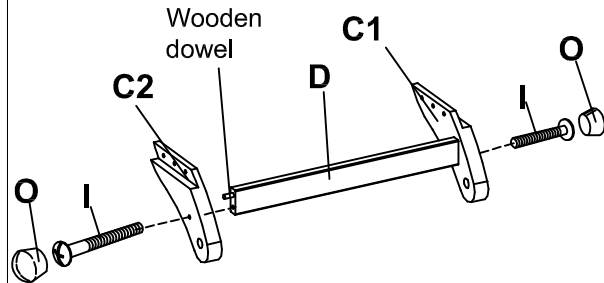


Repeat step 1 procedure to secure cross bar (D) into right and left back legs (C1 & C2).

3

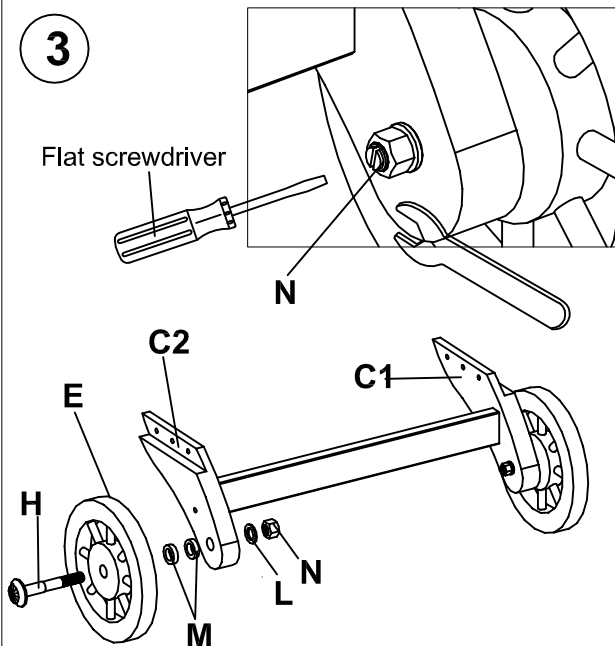

Assemble wheel bolts (H), wheels (E), two pieces washers (5 mm) (M) into pre- assembled back leg (C1 & C2) and secure using washers (2 mm) (L) and nuts (N). Tighten the nuts using wrench. It may necessary, using a flat screwdriver to hold the wheel bolts when tighten the nuts as shown.


4

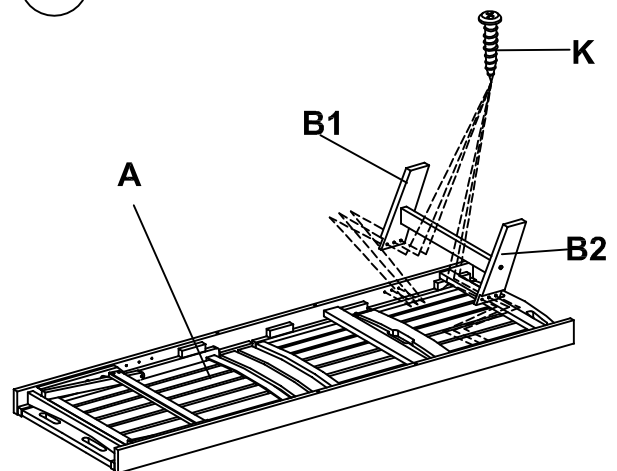

Put the lounge (A) face down on a clean flat surface. Attach the pre- assembled of front legs (B1 & B2) into front of lounge and secure using 1" screws (K).



ASSEMBLY INSTRUCTIONS

5

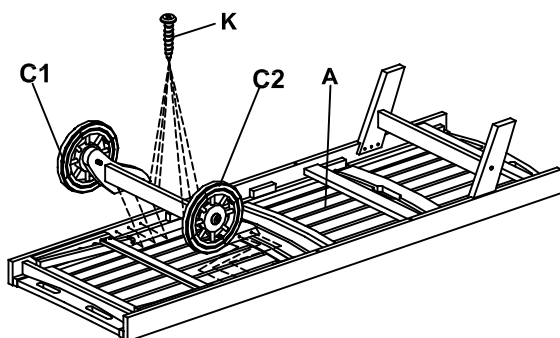

Repeat the step 4 procedure to secure the pre-assembled of back legs with wheel (C1 & C2) into the lounge (A).


6

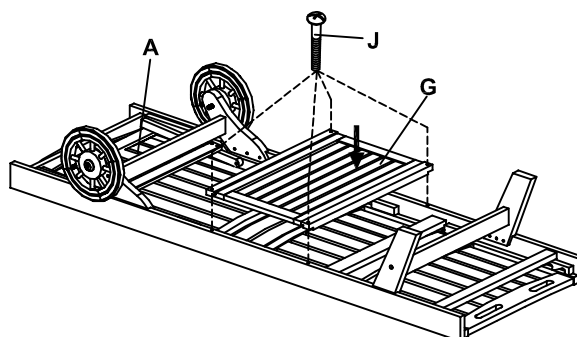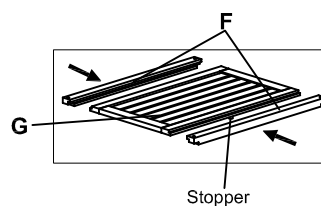

Insert both wooden slides (F) into side of serving tray (G) as diagram shown.


Next, attach the pre-assembled of tray onto lounge (A) (tray with stopper must be attached in bottom position). Secure using four long bolts (J) as shown.

7

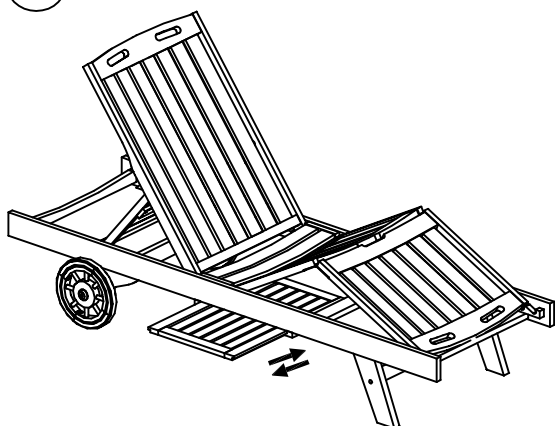

- Make sure all parts are correctly connected and tighten all bolts and screws using screwdriver.
- Upright the lounge.
- There are four possible position to adjust the backrest.

8

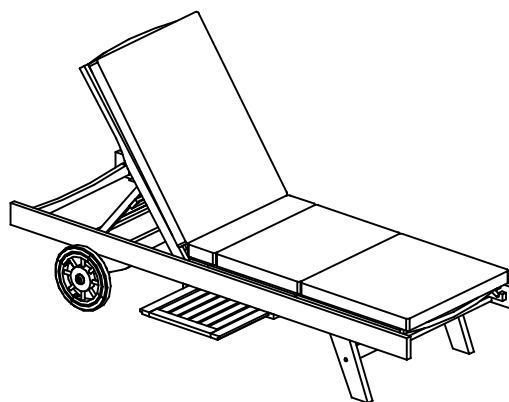

Install the cushion onto the chaise lounge.

THE CHAISE LOUNGE IS NOW READY FOR USE.

MAINTENANCE

Due to teak wood's natural characteristics, wood color and grain variations may be present. This is a symbol of the originality of each unit and gives each finished piece a distinctive look and inherent charm.

Care Instruction :

Teak wood, when left bare and unsanded, will naturally fade to a silver-gray color. This silver-gray color transformation does not in any way affect the durability of the furniture.

To maintain the smooth finish and golden brown color of your teak furniture, you will need to sand the furniture regularly. To prolong the period of time needed between sanding, teak oil may also be applied.

If you choose to apply teak oil, apply every 6 months, or follow the teak oil container directions. Again, if you choose to maintain the smooth brown finish of your teak furniture, this method requires some regular maintenance, such as sanding and reapplication of teak oil. Teak oil, along with sanding, will help maintain the golden brown color.

Staining :

Please note, once you stain your teak, it will not return to the natural golden brown or weathered silver-gray color without sanding off the stain. Staining is intended to be permanent. If you choose to stain your furniture after it has turned silver-gray, you must first sand it before applying the stain.

Cushions :

Outdoor fabrics are designed to be breathable; they are water repellent but are not waterproof. It is recommended that you store the cushions during rainy weather.

The best way to keep your fabrics looking good is to simply clean them as needed. Rinse off dust and dirt, wipe spills as soon as they occur, or spot clean soon after stains occur. Removable cushion covers may be machine-washed in cold water with mild laundry soap and air dried.

Do not leave your teak wood furniture in puddles of water or on wet ground.

Cover your teak wood furniture during winter months or move into covered storage, if in wet climates.

1 year Limited Warranty

The furniture is warranted to be free from defects in material and workmanship of the original product when purchased from one of our authorized dealers. If a product fails and is under the terms of our limited warranty, the item will be replaced, usually for a small fee. In the case of discontinued models, an item of similar quality and style will be offered to the customer.

- 1 year limited frame warranty
Frames are warranted to be free from defects in material and workmanship. Fading or discoloring caused by putting the product under sunlight or rain is not covered by this limited warranty. Damage to the frame due to improper assembly or exposure to water and sub-freezing temperatures is not covered. (Do NOT allow water to accumulate inside frame)
- Finish
The finish is warranted against peeling, cracking, or blistering for a period of 1 year, provided the unit has not been scratched or abraded. Scratches and chips resulting from normal wear and use are not covered. Peeling resulting from exposure to elements is not covered.

Warranty Exclusions : Furniture used for commercial, contractor or any non-residential purposes, clearance items, display models or items purchased “as is”, freight damage, furniture damaged by acts of nature, vandalism, fire, abuse, lack of proper care and maintenance, or improper assembly, straps and fabric against fading or discoloration from exposure to elements, oil spills, fluids or chemicals; glass against breakage; hardware against corrosion or rusting; buckling or splitting of tubing resulting from exposure to water and freezing temperatures. Also excluded: loss of use or time, inconvenience, money, travel, packaging or any other consequential or incidental damages. In no event shall the manufacturer's responsibility exceed the value of the replacement product.