


# ASSEMBLY INSTRUCTIONS


## DINING CHAIR

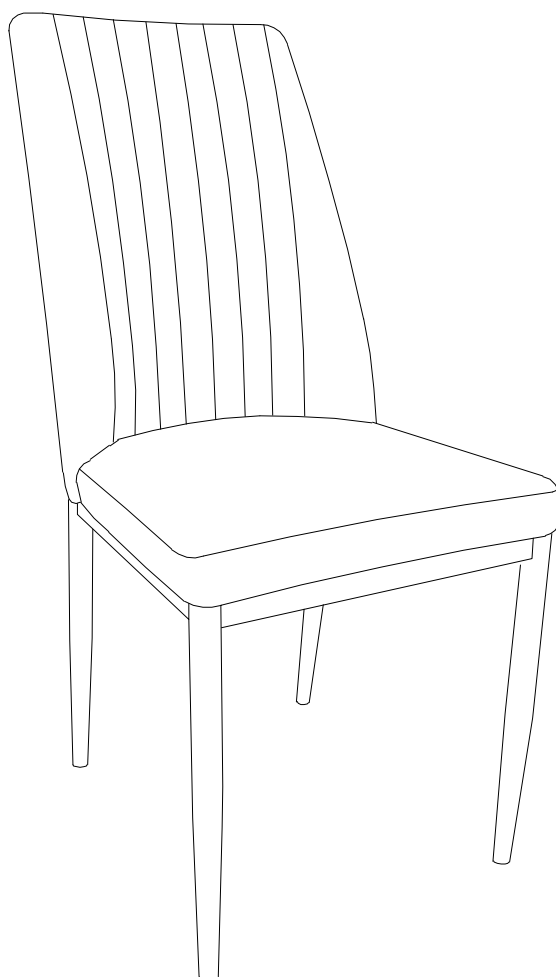




 
WF312271

**IMPORTANT NOTE:**

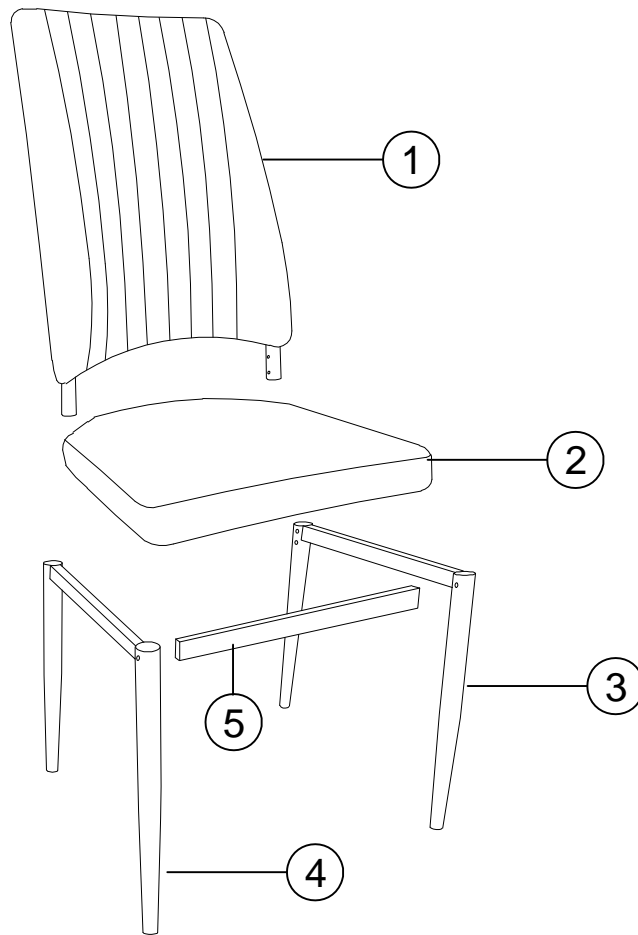

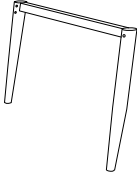
 

- 1.Place all parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- 2.Before you begin, kindly follow the assembly instructions step by step.
- 3.Do not tighten all screws and bolts until the chair is fully set-up.
- 4.Please do not return to store, contact the seller if you have any troubles with this product.




## Hardware List




<b>A</b>  M6 x 40 MM	<b>D</b> 
BOLT ( 6pcs )	ALLEN KEY ( 1pc )
<b>B</b>  M6 x 13 MM	
BOLT ( 4pcs )	
<b>C</b>  ø14mm	
LOCK WASHER ( 10pcs )	
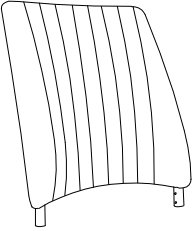
# Part List


				
back x 1	seat x 1	leg A x 1	leg B x 1	connection x 1

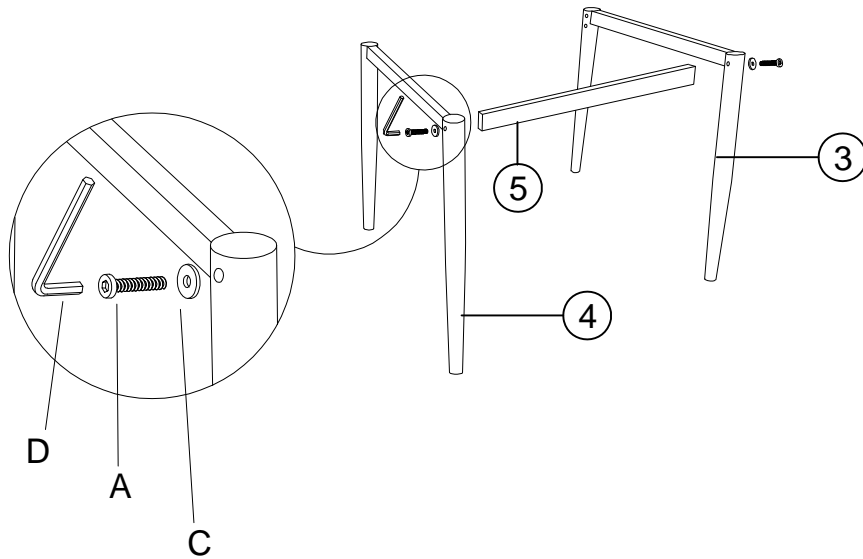


## Step 1




A	 M6 x 40 MM	2pcs	D		1pc
C	 ø14mm	2pcs			

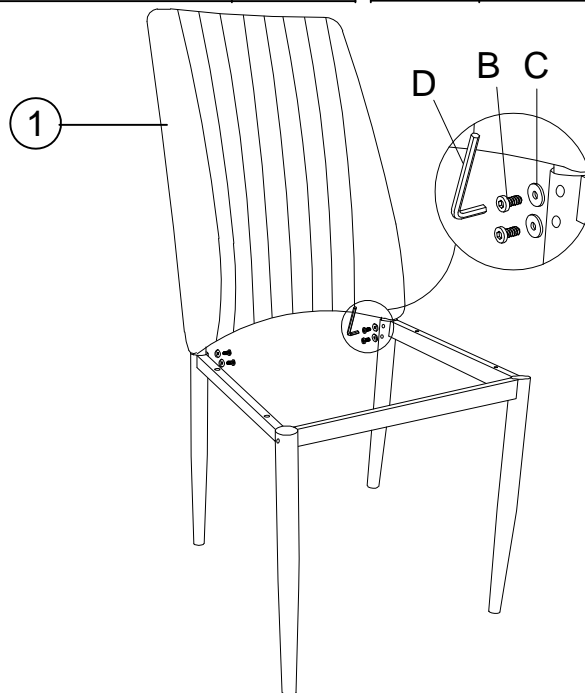


## Step 2



B	 M6 x 13 MM	4pcs	D		1pc
C	 ø14mm	4pcs			

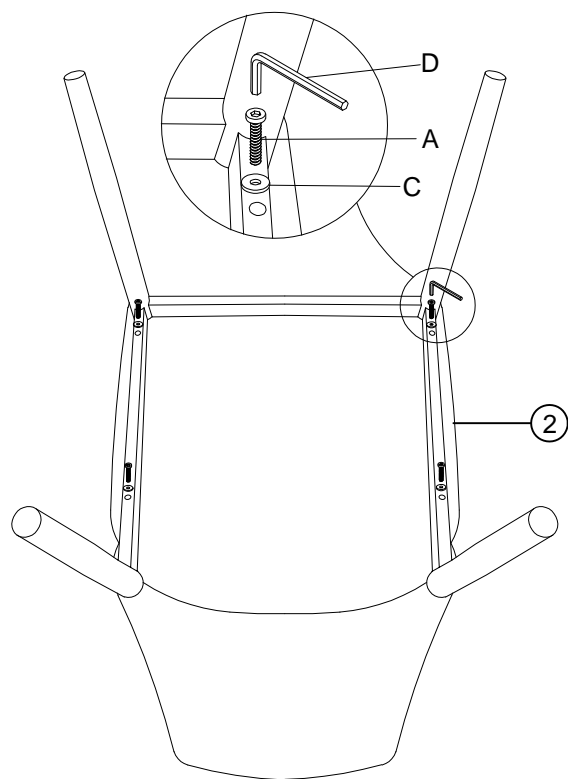Step 3



A	 M6 x 40 MM	4pcs	D		1pc
C	 ø14mm	4pcs			

