



TOWEL WARMER BUCKETS

E1672

User Manual

Returning Policy

If the item needs to be returned, please contact our Customer Service Team.
We will provide a prepaid returning label.

NOTE: We are not responsible for any costs incurred if the buyer returns the item themselves.

	Warning-To reduce the risk of injury, user must read instructions manual carefully. READ ALL INSTRUCTIONS BEFORE USE All the safety and operating instructions should be read, adhered to and followed before the unit is operated.
	This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
	This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheeled bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices

SAFETY & WARNINGS



WARNING: To reduce risk of electric shock, or serious injury to persons when using the appliance, follow basic precautions including the Read all instructions before using the appliance.

Please read the following instructions carefully before putting your device into use. Please retain these instructions for further reference!

- Always unplug the product from the electrical outlet immediately after use.
- Do not use the device for anything other than its intended use.
- Do not place or store the device where it can fall or be pulled into a tub

or sink.

- Do not place or drop into water or other liquid. **DO NOT IMMERSE IN WATER.**
- Do not reach for the product after it has fallen into water. Unplug it immediately.
- Care should be taken so that objects do not fall into and/or liquids are not spilled onto the device.
- The device should never be left unattended when plugged in.
- Close supervision is necessary when this device is used near children or disabled persons.
- Only use the device for its intended use as described in this manual.
- Never operate the device if it has a damaged cord or plug, if it is not working properly or if it has been dropped, damaged, or immersed in water.
- Keep the cord away from heated surfaces. Do not wrap the cord around the exterior of the device or let the cord hang over a table or counter edge.
- Do not use outdoors.
- Do not alter the safety plug or use an extension cord with this device.
- Do not operate with a voltage converter.
- Do not touch hot surfaces and vent.
- Do not use accessory attachments not recommended by the manufacturer, as this may cause injuries.

CAUTION:

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE OPERATING.

- This product is intended for household use only.
- To reduce the risk of injury, please note that this is not a toy. **DO NOT** allow children to operate or play near the towel warmer.
- **NEVER** cover the unit while it is operating.
- Always keep the cord away from high temperatures and fire. Perform regular recommended maintenance.
- **DO NOT** attempt to adjust or repair the unit. Servicing must be

performed by professional or qualified personnel.

- Stop using this unit if there is an unusual noise or smell.
- Unplug this unit when not in use for a long period of time,
- To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.
- Keep this unit out of reach of children.
- **DO NOT** allow children to use this unit without supervision.
- **DO NOT** use outdoors. For indoor use only.
- Condensation on the lid and interior of the unit is normal.

PRODUCT PARAMETER

Model	E1672		
District	North America	Europe	Australia
Voltage	AC 120V 60Hz	AC 230V 50/60HZ	
Wattage	900W (+5%~-10%)	1000W (+5%~-10%)	
Capacity	35L		
Net Weight	5.8kg		
Product Size	368*368*663mm		

PACKING LIST

NO.	ACCESSORY NAME	QUANTITY
1	Towel Warmer Buckets	1 pc
2	Desiccant Bag	1 pc
3	Wastewater box	1 pc
4	Air duct	1 pc
5	User Manual	1 pc

INSTRUCTION

Thank you for purchasing Towel Warmer Buckets.

With normal care and proper treatment, it will provide years of reliable service.


Before You Start

- Please read all instructions carefully.
- Retain instructions for future reference.
- Separate and count all parts and hardware.
- Read through each step carefully and follow the proper order.
- We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- Always place the product on a flat, steady, and stable surface.
- Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.


Unique features and specification

Large capacity accommodates 4 large bath towels (40" X 70"), a bathrobe, or personal blanket.

Set the lid vertically onto the flat sidewall on the backside of the towel warmer Hang your towel from the top towel hanging hook to air dry for its next use. PTC air heater Double-walled insulated lid keeps heat in while staying cool to the touch.

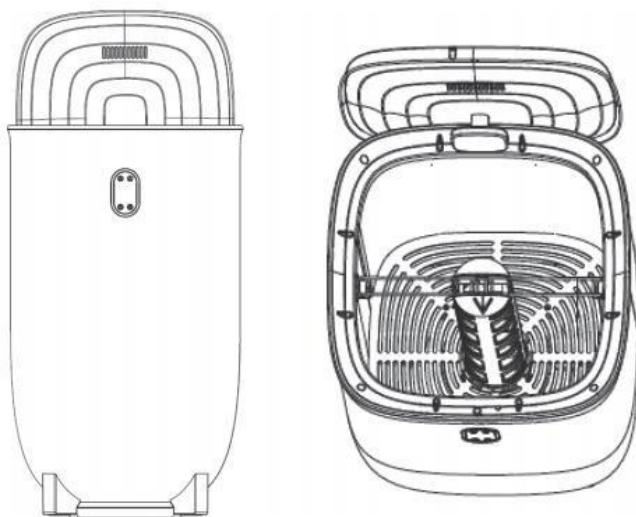

CONTENTS

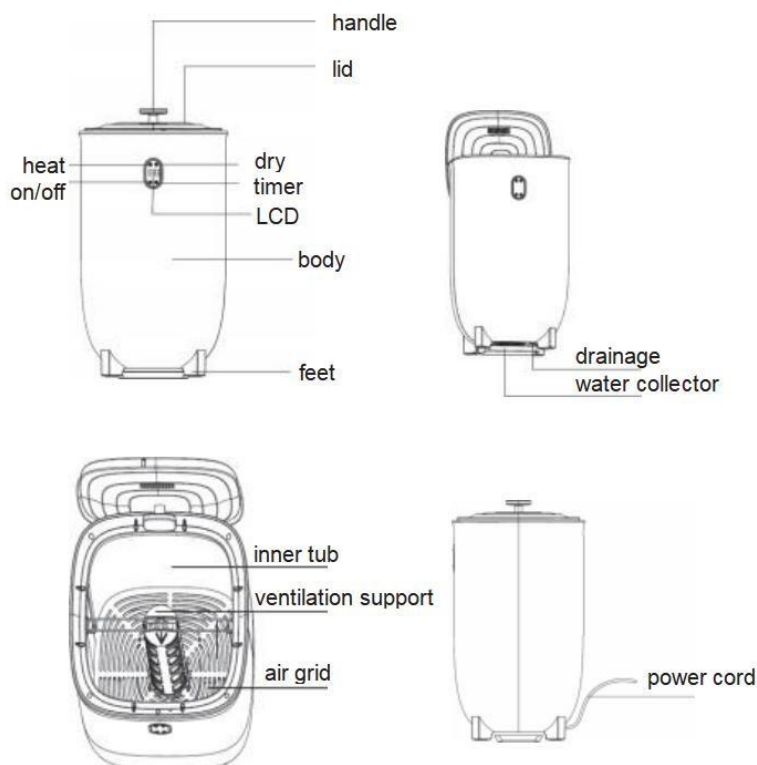

SETUP AND OPERATION

1. Open the lid and remove any packaging contents.
2. Place the Towel Warmer Buckets on a hard, dry, and level surface.
3. Insert the power cord into an electrical outlet.

Digital display with 4 buttons for intelligent switching between heating and drying modes.

4 timer settings:

Heating mode: 20min-30min-60min- 90 minutes (default 60 minutes);

Drying mode: 2hrs- 3hrs- 4hrs-5 hrs. (default 3 hours)

1. The product power cord is connected to the power socket.
2. Open the lid, put towels, bathrobes, and blankets in the bucket and spread them flat on the rack inside the bucket.
3. Short press the power button, the product will work in the default heating mode, and the system will default to a heating working time of 60 minutes.
4. In heating mode, short press the time setting button, 20min-30min-60min-90min, to set 4 heating working times in sequence.
5. Short press the drying mode button to enter the drying mode. The system defaults to a drying working time of 3 hours.
6. In drying mode, short press the time setting button, 2h-3h-4h-5h, to set 4 drying working times in sequence.
7. Indicator light: Operation button, the white backlight of the corresponding button is retained.
8. LCD screen: time setting and countdown display.
9. Shut down, automatically shut down during scheduled work countdown, or short press the switch key to shut down.

Notice:


1. In heating mode, please put dry towels, bathrobes, or blankets into the bucket to heat.
2. In drying mode, please dehydrate the wet towel and then put it into the bucket to dry for better effect. It is not recommended to put the soaked and dripping towel directly into the bucket.

INSTRUCTIONS FOR FRAGRANCE DISC

This fragrance disc additionally design is for some users who like to use aromatherapy tablets or essential oils when warming towels.

Note: Aromatherapy tablets, fragrance disc or essential oils are not included with this product.

1. Remove the fragrance disc from its sealed plastic bag.
2. Slide it into the fragrance disc holder located on the underside of the lid.

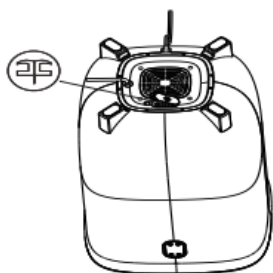

The fragrance disc is an innovative air fresher for your home, which also effectively eliminates odors.

TIPS FOR BEST RESULTS

1. Use cotton or cotton blend towels or fabrics only.
2. For fast and even heating, loosely pile one towel into the Towel & Blanket Warmer. Tightly rolled or folded towels will take longer to heat thoroughly. Two towels will take longer to heat than one.
3. Use only with DRY fabrics.

NOTE: Do NOT use with damp or wet articles.

4. Avoid using delicate fabrics that cannot withstand high heat. Any fabric indicating that a cool iron must be used may not be able to withstand the

heat of the Towel & Blanket Warmer, resulting in damage to the fabric and the product.

5. Once the heating cycle has begun, keep the lid closed. This will prevent heat from escaping, Opening the lid mid-cycle may result in slower heating times.

NOTE: Condensation on the lid and interior of the product is normal.

6. When used with the Towel & Blanket Warmer, the Fragrance Disc may warp over time.

7. The Fragrance Disc can last for up to two years at room temperature. The longevity of the scent will decrease when exposed to heat from the Towel & Blanket Warmer. Replace the disc when you can't longer smell the scent.

DANGER

TO REDUCE THE RISK OF ELECTRIC SHOCK:

- ALWAYS place the towel warmer on a firm flat surface.
- ALWAYS unplug the unit from the electrical outlet immediately after using and before cleaning.
- Do NOT expose this unit to rain or moisture.

CAUTION: DO NOT attempt to defeat this safety feature. To do so could result in an electric shock hazard.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Power	Unit is not plugged in	Plug unit in
	Unit is not turned on	Press the power button
	No power at unit	Check circuits and fuses or try a different outlet
Peculiar odor	Unit is new	Open the lid and let the product air out in a cool, dry place for 12 hours.
	If unit has been used regularly, the odor may be coming from inside the unit	Remove the power cord from the electrical outlet, wipe inside unit with a dry cloth.

Tips for best results

1. Use cotton or cotton blend towels, bathrobes, or fabrics.
2. For fast and even heating, loosely pile 1 towel into the towel warmer. Tightly rolled or folded towels will take longer to heat thoroughly. Two towels will take longer to heat than one.
3. Avoid using delicate fabrics that cannot withstand high heat. Any fabric indicating that a cool iron must be used may not be able to withstand the heat of the towel warmer, resulting in damage to the fabric and the towel warmer.
4. Once the heating cycle has begun, keep the lid closed. This will prevent heat from escaping.

Opening the lid midcycle may result in slower heating times.

NOTE: Condensation on the lid and interior of the unit is normal

CARE AND MAINTENANCE

-Before cleaning, make sure the power supply is turned off and the plug has been pulled out from the socket.

-Use a soft dry cloth to wipe the product when the device is damp to touch.

-**Do not** pull the power plug by wet hands.

-**Do not** use water washing the product, do not spray the water or any liquid to the interior of the device.

Maintenance

-Make sure the power supply is turned off and the plug has been pulled out from the socket.

-Sweep off the dust. Keep the device clean and away from damp places.

-Store the device in a cool, dry place out of reach of children.

-Avoid contact with sharp edges or pointed objects which might cut or puncture the cover of the device.

CLEAN AND CARE

CAUTION: Before cleaning the unit, turn the power off and unplug the unit from the outlet.

- Remove the power cord from the electrical outlet before cleaning.

Wipe with a soft, dry cloth only when the unit is cool to the touch.

FCC INFORMATION

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This product may cause harmful interference.
- 2) This product must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This unit generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.