



Please give us a chance to make it right and do better !

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP !

US office: Fontana

UK office: Ipswich

AU office: Truganina



Contact Us !

Do NOT return this item.


Contact our friendly customer service department for help first.



US: cs.us@costway.com

UK: cs.uk@costway.com

AU: cs.au@costway.com

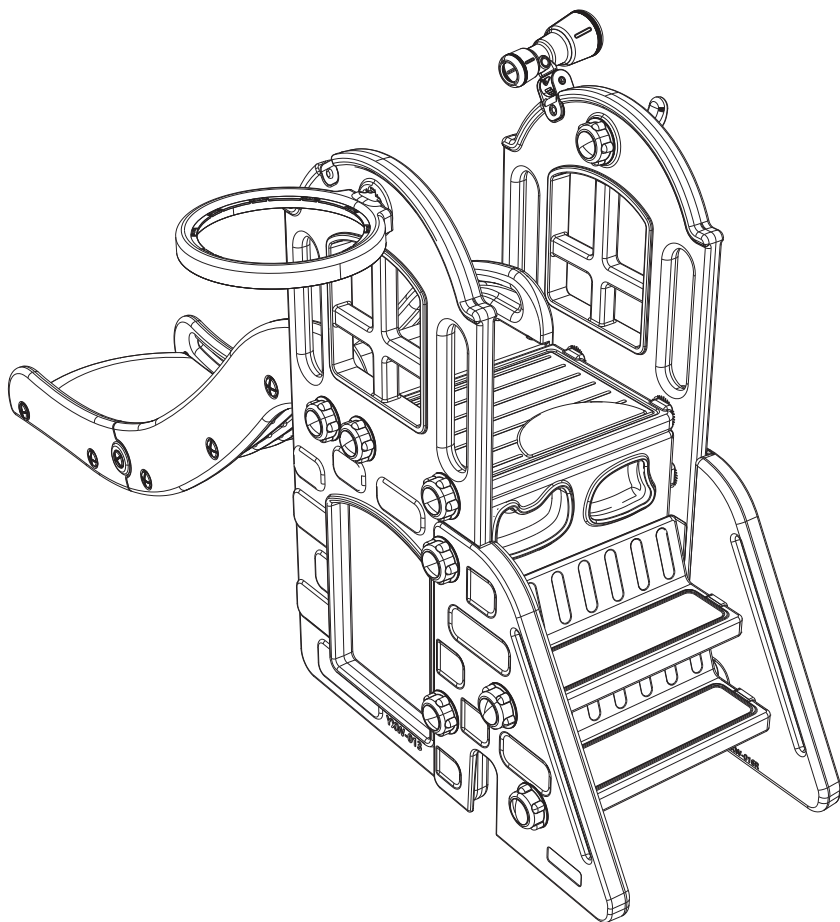

USER'S MANUAL

Toddler Climber Slide TS10024



Before You Start

Please read all instructions carefully and keep it for future reference.

Warnings:

Attention: For home use only.

Attention: The product is not suitable for the children under 3 years

 
Danger: Keep all small parts and packaging materials for this product away from babies and children, otherwise they may pose a choking hazard.

Danger: Lack of attachment may cause a risk of tipping or falling hazard.


General Warnings:

- ⚠ The product must be installed and used under the supervision of an adult.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ Remove all packaging, separate and count all parts and hardware.
- ⚠ Please ensure that all parts are correctly installed, incorrect installation can lead to a danger.
- ⚠ We recommend that, where possible, all items are assembled near the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Ensure a secure surface during installation, and place the product always on a flat, steady and stable surface.
- ⚠ Please check and maintain it regularly, and the most important part needs to be suspended, fixed, or anchored to the ground.

(A) x2



 (B) x1



(C) x2




(D) x1




(E) x1



(F) x1

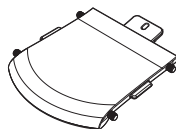

 (G) x2



(H) x2



(I) x16



(J) x12



 
(K) x2



(L) x1



(M) x2



(O) x1



(R) x1



(P) x1



 
(S) x3



(N) x1




(Q) x1



Installation instructions

1

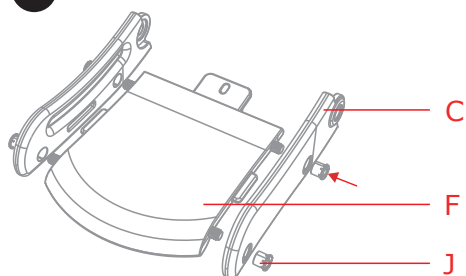


(J) x4



Connect the lower handrail (C*2) with the lower sliding end (f*1) through the knob (J*4) and complete the installation of Part 1.

2

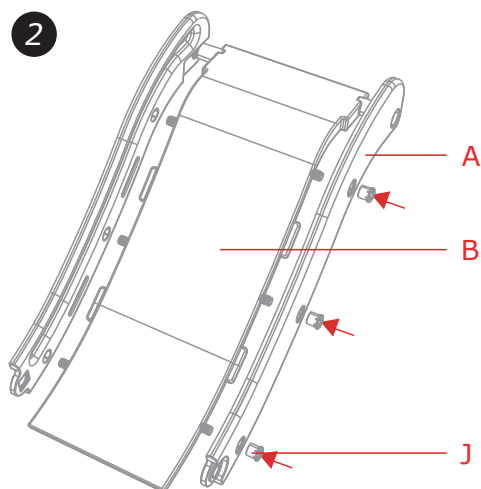

(J) x6



Connect the upper handrail (A*2) with the upper slide section (B*1) by the knob (J*6) and complete the installation of Part 2.

3


J x2



K x2



Assemble the sliding part 1 and part 2 with the knob (J * 2) and square bracket (K * 2), and complete the installation of Part 3.

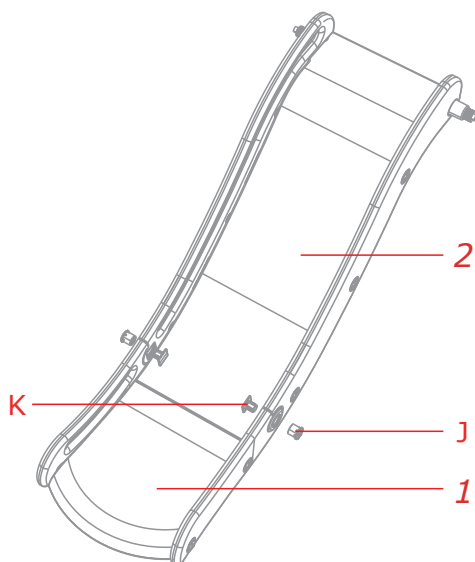


4


I x6



Assemble the part 3 and two side panels (M*2), seat panel (D*1), climbing panel (E*1) using the big nuts (I*6), and complete the installation of Part 4.

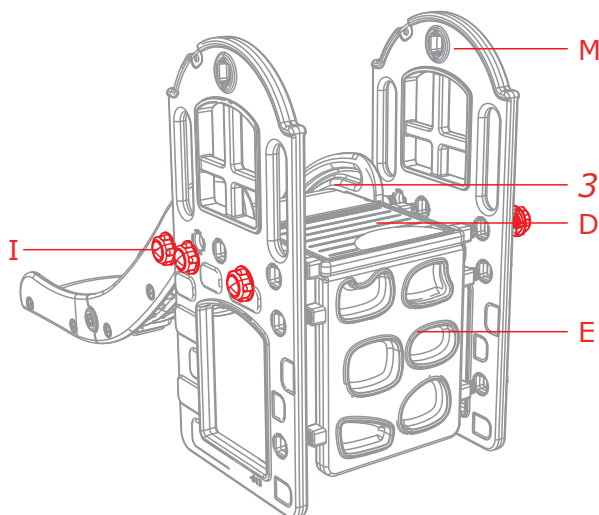

5 Assembly form 1

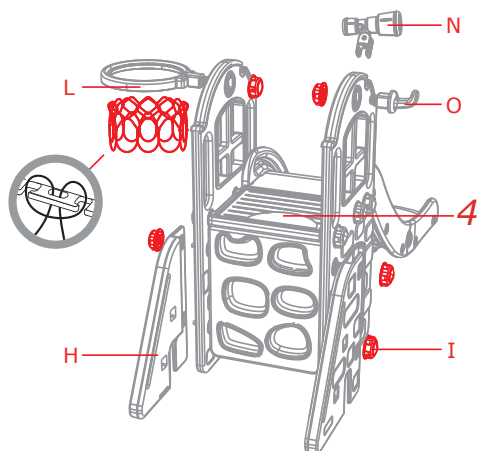


I x6



Install the basket frame (L*1), hook (O*1) and triangular plate (H*2) on the side panel (M*2) with the big nuts (I*6). Finally clip the telescope (N*1) into the side panel, and install the basketball net (R*1) on the basket frame (L*1) to complete the assembly of climbing mode.

5 Assembly form 2

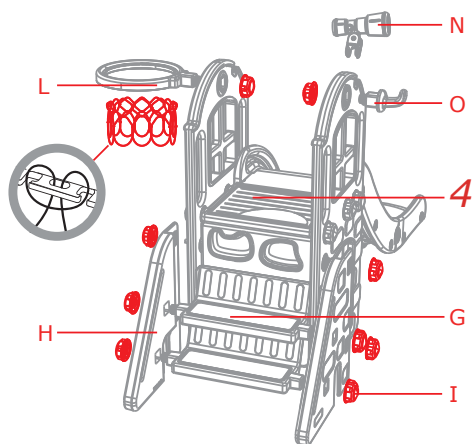



I x10




Install the basket frame (L*1), hook (O*1), triangle plate (H*2) and pedal (G*2) onto the side panel (M*2) with the big nuts (I*10). Finally, clip the telescope (N*1) into the side panel, and install the basketball net (R*1) onto the basket frame (L*1) to complete the assembly of pedal mode.

Slide usage mode:

① Climbing mode

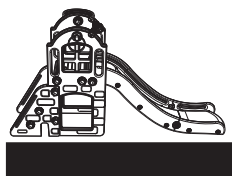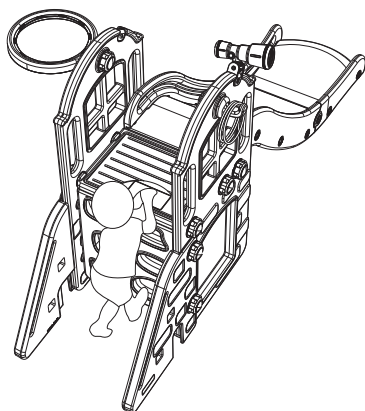



Place on a flat, spacious floor.

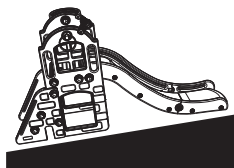


Can not be placed on a slope.



② Pedal mode

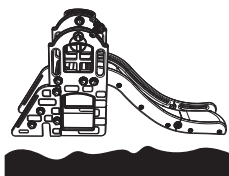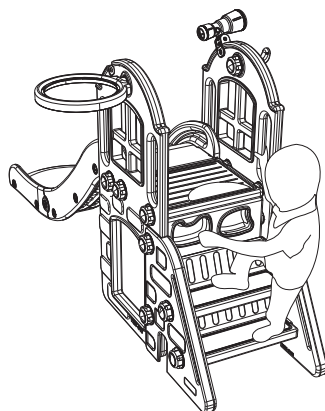

Can not be placed in the sand surface, uneven ground.

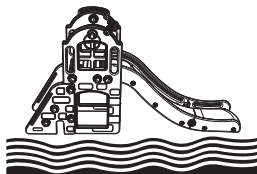

Can not be placed in water or seepage place.

