ASSEMBLY INSTRUCTION

Description: WOODEN DINING CHAIR




IMPORTANT NOTE:


- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.

Each chair

PARTS LIST			
NO.	COMPONENT	QTY.	
1	SIDE MEMBER (LEFT)	1 PC	
2	SIDE MEMBER (RIGHT)	1 PC	
3	FRONT PANEL		
4	BACK PANEL	1 PC	
5	LOWER PANEL (BACK)	1 PC	
6	LOWER PANEL (FRONT)		
7	CHAIR HEAD	1 PC	
8	WOODEN SEAT	1 PC	

HARDWARE LIST				
NO.	DESC	RIPTION	QTY.	
A	ALLEN KEY M4 X 110MM		1 PC	
В	JCBC BOLT M6 X 45MM		6 PCS	
С	JCBC BOLT M6 X 35MM		4 PCS	
D	JCBC BOLT M6 X 20MM		4 PCS	
Е	SPRING WASHER 1/4"		10 PCS	
F	FLAT WASHER M6 X 13MM	0	14 PCS	
G	WOOD BUTTON Ø 14.5 X 9MM		4 PCS	

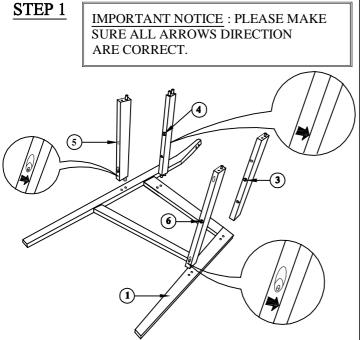

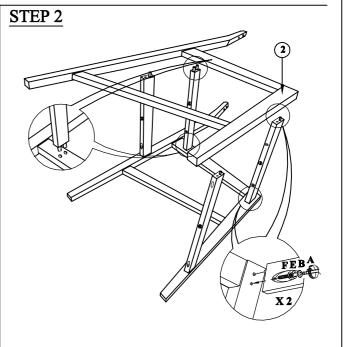

MADE IN MALAYSIA

