

## Installation Instructions



**Step 1:** Locate the base (Part 1) and the main pole (Part 2). Insert the bottom of the main pole into the designated slot on the base. Use the provided



**Step 2:** Locate the thin pole (Part 3). Insert the thin pole into the top end of the main pole (Part 2) until it fits securely.




**Step 3:** Locate the windmill (Part 4). Carefully remove any protective film from the windmill.



**Step 4:** Locate the hollow pole (Part 5). Prepare to assemble the windmill by inserting the center of the windmill (Part 4) into the opening at the top of the hollow pole (Part 5).



**Step 5:** Attach the windmill (Part 4) to the hollow pole connected to the main pole. Secure the windmill to the hollow pole using the provided screws (Part 6) or clamps.

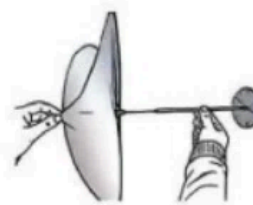

**Step 6:** Attach each blade of the windmill (Part 4) to the hollow pole. Secure the windmill to the hollow pole using the provided screws (Part 7) Ensure that all blades (Part 8) are evenly spaced for balanced rotation.



**Step 7:** Locate the support cap (Part 8). Place the fixed reflective windmill hollow tube onto the thin pole. Then, screw the support cap (Part 8) onto the extended thin pole to complete the installation.