
ASSEMBLY INSTRUCTIONS

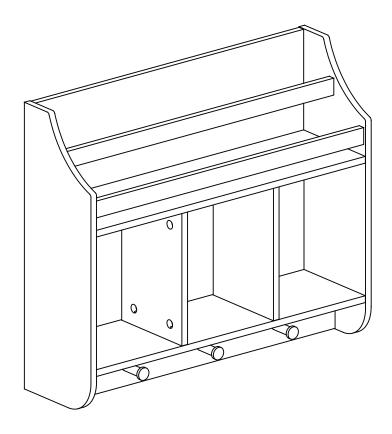

Book Nook Kids Wall Shelf with Cubbies and Bookrack

White

ADULT ASSEMBLY REQUIRED

This product requires assembly by an adult because of small parts. Care should be taken in unpacking and assembling this item to keep small parts away from children. During assembly children should be kept away from the product due to possible risk of injury.

WARNING A SEE FULL WARNING ON PAGE 2

Young children can be seriously injured or killed if furniture tips over. Don't use this item for a TV stand or place heavy objects on top of item. Always use angle-braces or anchors to secure furniture to the wall.

This product is suitable for children 3 years and older.


THIS SHELF UNIT WILL HOLD UP TO 5 POUNDS PER CUBBY AND 5 POUNDS IN THE BOOKRACK OR A TOTAL OF 20 POUNDS. DO NOT LOAD EACH SHELF OR THE BOOKRACK WITH MORE THAN 5 POUNDS. IF OVERLOADED WITH MORE THAN 5 POUNDS PER CUBBY OR 5 POUNDS IN THE BOOKRACK, THIS MAY CAUSE DAMAGE TO THE SHELF AND MAY CAUSE SERIOUS INJURY OR DEATH.



SERIOUS OR FATAL INJURIES CAN OCCUR FROM FURNITURE TIP-OVER. TO HELP PREVENT TIP-OVER:

- Always use tip over restraints and/or wall anchors to secure furniture to the wall
- Place heaviest items in the lowest drawers/bins or shelves
- Do not set TV's or other heavy objects on the top of this product
- Never allow children to climb or hang on to the drawers/bins, doors or shelves of furniture
- Never open more than one drawer at a time or defeat or remove any drawer interlock system

PARTS LIST

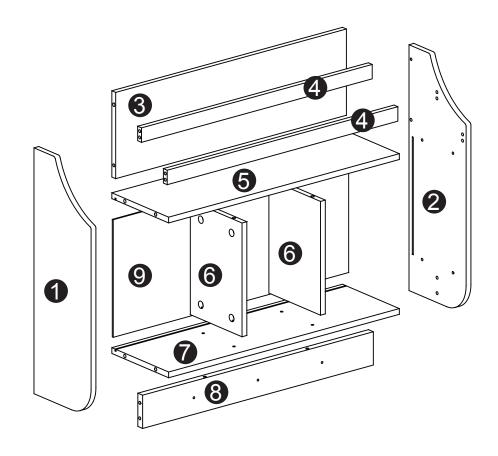



NO	QTY	DESCRIPTION
1	1PC	Left Side Panel
2	1PC	Right Side Panel
3	1PC	Upper Back Board
4	2PCS	Cross Bar
5	1PC	Top Shelf
6	2PCS	Divider Board
7	1PC	Bottom Shelf
8	1PC	Lower Back Board
9	1PC	Middle Back Board

PARTS LIST

NO	PARTS	QTY	DESCRIPTION
Α		18PCS	Cam Bolt
В		18PCS	Cam Lock
С		18PCS	Wood Dowel
D		3PCS	Wood Peg
Е		3PCS	Screw (4x30mm)
F		2PCS	Keyhole Hanging Plate
G		6PCS	Screw (3x12mm)
Н	AUG (*)	2PCS	Plastic Anchor
		2PCS	Screw (4x35mm)
	0 0	1PC	Wall Mounting Paper Template


TOOLS NEEDED FOR ASSEMBLY: FLAT & PHILLIPS SCREWDRIVER (NOT INCLUDED) THE USE OF A POWER SCREWDRIVER IS NOT RECOMMENDED FOR ASSEMBLY DO NOT USE ITEM IF ANY PARTS ARE MISSING OR DAMAGED

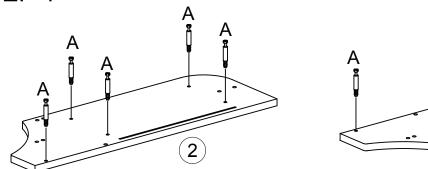


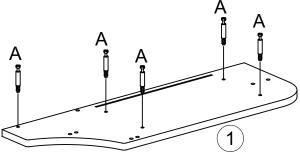

- 1. Screw 5 cam bolts (A) into cam bolt holes on right side panel (2).
- 2. Screw 5 cam bolts (A) into cam bolt holes on left side panel (1).


STEP 2

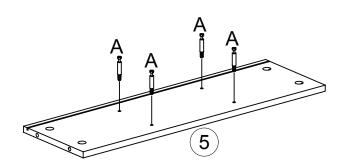

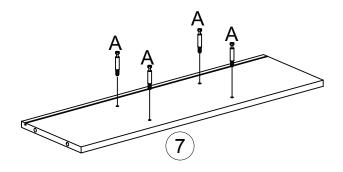


- 1. Screw 4 cam bolts (A) into cam bolt holes on top shelf (5).
- 2. Screw 4 cam bolts (A) into cam bolt holes on bottom shelf (7).

STEP 3

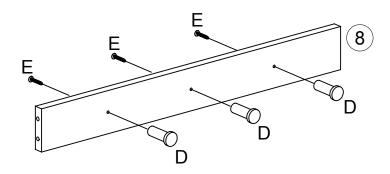


1. Attach 3 wood pegs (D) to lower back board (8) by inserting 3 screws (E) through holes on lower back board (8), then tighten to wood pegs (D).

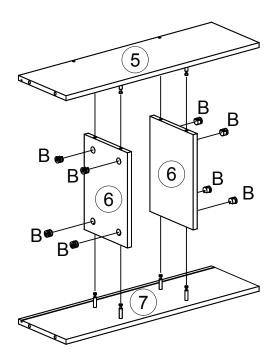


- 1. Attach 2 divider boards (6) to bottom shelf (7) by inserting cam bolts (A) into cam lock holes on divider boards (6).
- 2. Insert 4 cam locks (B) into cam lock holes on divider boards (6), then rotate clockwise to secure cam bolts (A) in place.
- 3. Attach top shelf (5) to divider boards (6) by inserting cam bolts (A) into cam lock holes on divider boards (6).
- 4. Insert 4 cam locks (B) into cam lock holes on divider boards (6), then rotate clockwise to secure cam bolts (A) in place.

STEP 5

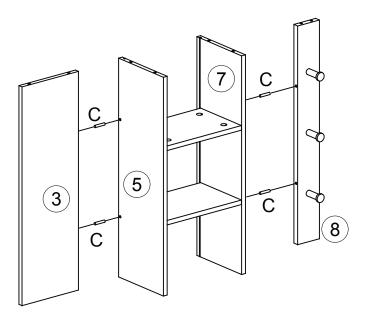


- 1. Insert 2 wood dowels (C) into wood dowel holes on upper back board (3).
- 2. Attach upper back board (3) to top shelf (5) by inserting wood dowels (C) into wood dowel holes on top shelf (5).
- 3. Insert 2 wood dowels (C) into wood dowel holes on lower back board (8).
- 4. Attach lower back board (8) to bottom shelf (7) by inserting wood dowels (C) into wood dowel holes on bottom shelf (7).

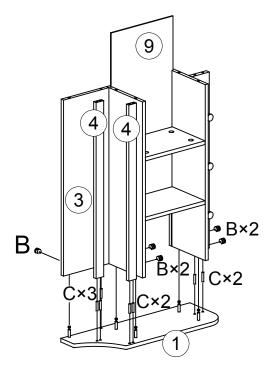


- 1. Insert 7 wood dowels (C) into wood dowel holes on left side panel (1).
- 2. Attach upper back board (3), cross bars (4), top shelf (5), bottom shelf (7) and lower back board (8) to left side panel by inserting wood dowels (C) into wood dowel holes and inserting cam bolts (A) into cam lock holes on upper back board (3), cross bars (4), top shelf (5), bottom shelf (7) and lower back board (8).
- 3. Insert 5 cam locks (B) into cam lock holes on upper back board (3), top shelf (5) and bottom shelf (7), then rotate clockwise to secure cam bolts (A) in place.
- 4. Slide middle back board (9) into grooves on top shelf (5) and bottom shelf (7).

STEP 7

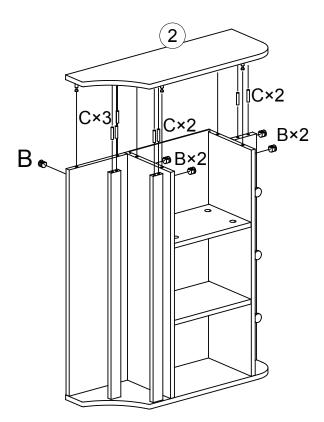


- 1. Insert 7 wood dowels (C) into wood dowel holes on right side panel (2).
- 2. Attach right side panel (2) to upper back board (3), cross bars (4), top shelf (5), bottom shelf (7) and lower back board (8) by inserting wood dowels (C) into wood dowel holes and inserting cam bolts (A) into cam lock holes on upper back board (3), cross bars (4), top shelf (5), bottom shelf (7) and lower back board (8).
- 3. Insert 5 cam locks (B) into cam lock holes on upper back board (3), top shelf (5) and bottom shelf (7), then rotate clockwise to secure cam bolts (A) in place.

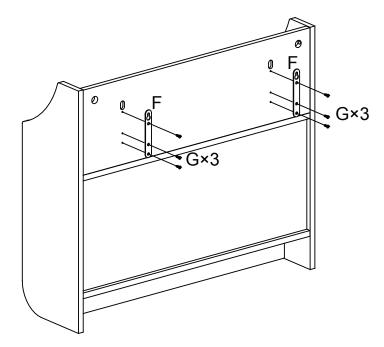

1. Attach 2 keyhole hanging plates (F) to back of cabinet by inserting 6 screws (G) through holes on plates, then tighten to back of cabinet.

STEP 9

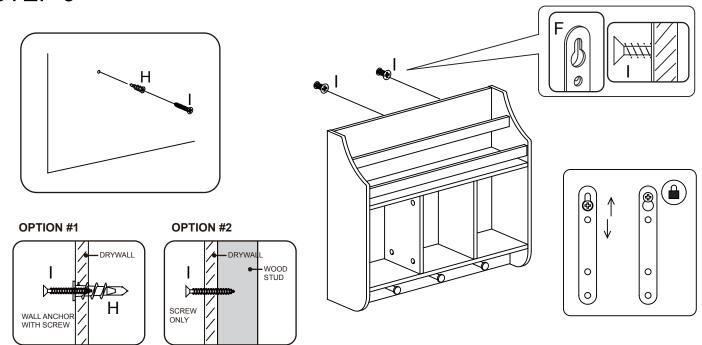

Option #1: Securing to Drywall

- 1. Using paper wall mounting template to determine position, insert 2 plastic anchors (H) into drywall.
- 2. Insert 2 screws (I) into holes on plastic anchors (H) and tighten.
- 3. Hang wall shelf on wall by inserting 2 screw heads (I) into holes on keyhole hanging plates (F), then press and slide wall shelf down to make sure shelf is firmly fixed to wall.

Option #2: Securing to Drywall and Wood Stud

- 1. Using paper wall mounting template to determine position, insert 2 screws (I) through drywall, into wood stud and tighten.
- 2. Hang wall shelf on wall by inserting 2 screw heads (I) into holes on keyhole hanging plates (F), then press and slide wall shelf down to make sure shelf is firmly fixed to wall.

ATTENTION ADULTS: Cabinet should be checked periodically for damage or loose screws/parts. Take appropriate action necessary to correct hazards such as tightening of screws and taking any damaged parts away from children.


WARNING A Please make sure your item is secured to the wall, per assembly instructions.

CARE INSTRUCTIONS:

Wipe clean with a water dampened cloth. Wipe dry with clean cloth.

IMPORTANT: Keep assembly instructions for future reference.

Enjoy Your New Wall Shelf!

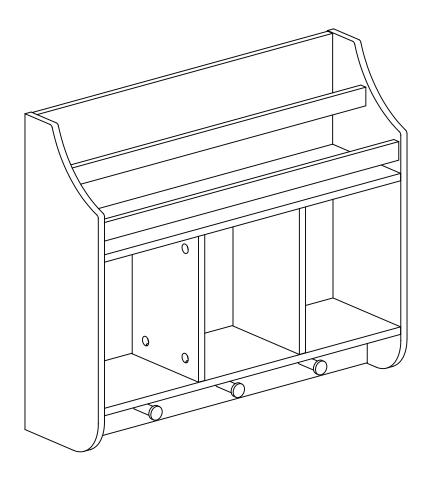

Thank you for purchasing our product.
We hope you enjoy it and consider purchasing other items.