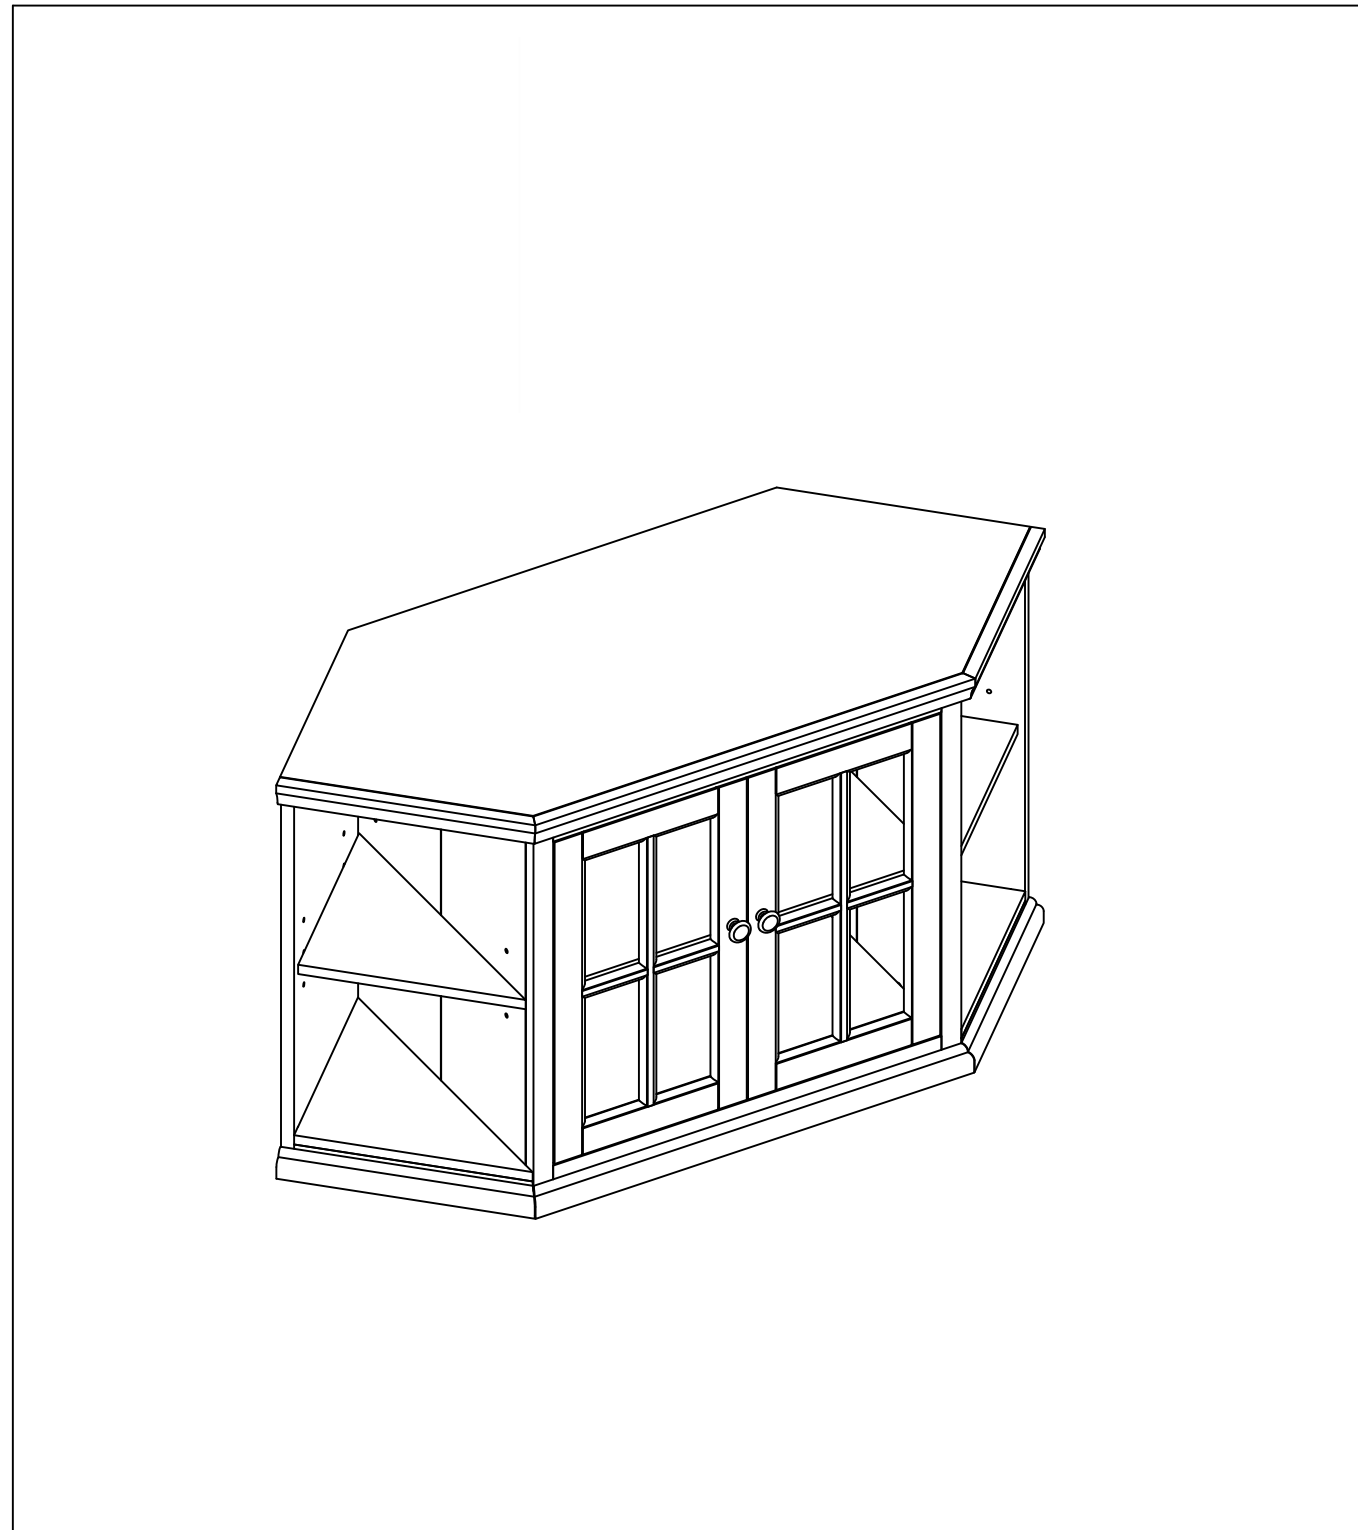 


 
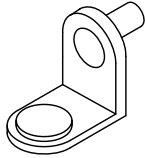 
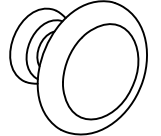 

 


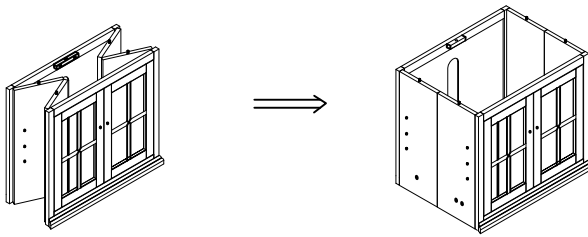 
 
 
 
 
 
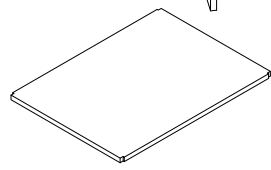 
 
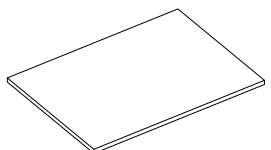 
Corner TV Cart With Corner Open Display



Hardware List

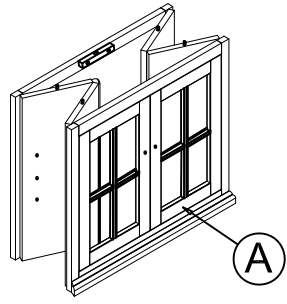 
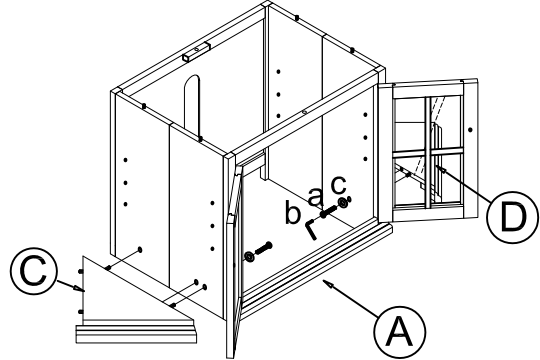 
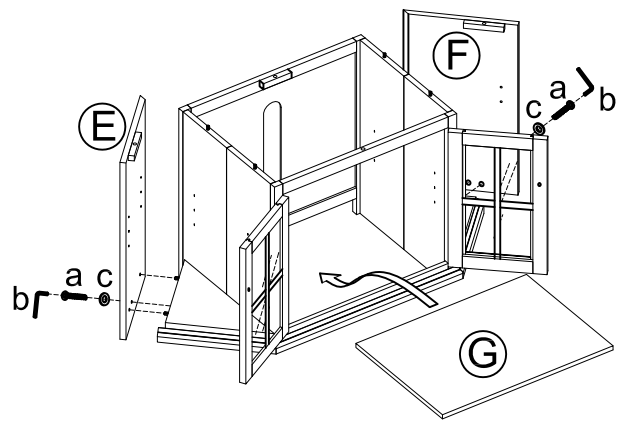 
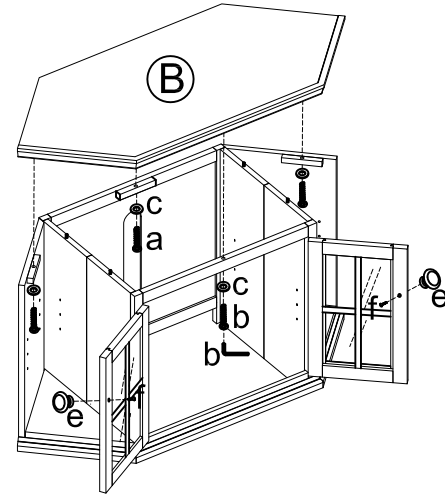 
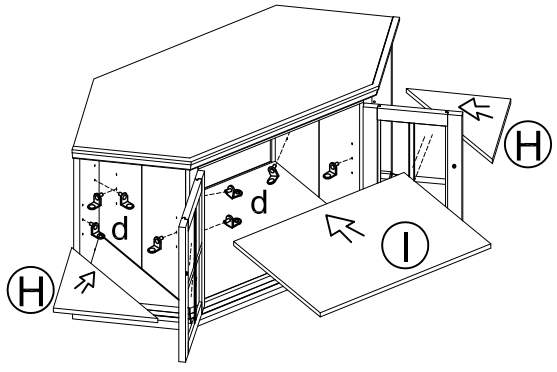 
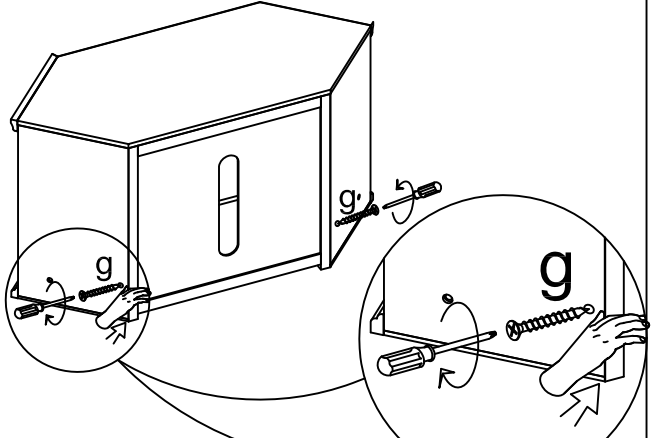 
| | Item | Description | Qty |
|---|---|--|-------|
| a |  | Bolt 1/4"*1-1/8" | 8PCS |
| b |  | Allen wrench | 1PC |
| c |  | Washer 1/4"*12mm | 8PCS |
| d |  | Shelf metal clip | 12PCS |
| e |  | Door Pull | 2PCS |
| f |  | Machine screw for door pull 5/32"*7/8" | 2PCS |
| g |  | Wood screw 8#*1" | 2PCS |

Parts List

| Item | Description | Qty |
|----------|---|------|
| A |  Cabinet | 1PC |
| B |  Top Panel | 1PC |
| C |  Left Side Bottom Panel | 1PC |
| D |  Right Side Bottom Panel | 1PC |
| E |  Left Side Back Panel | 1PC |
| F |  Right Side Back Panel | 1PC |
| G |  Middle Bottom Panel | 1PC |
| H |  Side Adjustable Shelf | 2PCS |
| I |  Middle Adjustable Shelf | 1PC |

Assembly Instructions

Two person assembly recommended.

| | |
|--|--|
| <p>step 1 Unfold Cabinet.</p>  | <p>step 2 Insert the side bottom panels and fasten with bolts.</p>  |
| <p>step 3 Insert the side back panels and fasten with bolts. Insert the middle bottom panel.</p>  | <p>step 4 Bolt on top with 4 bolts. DO NOT OVER TIGHTEN. Install the door pulls.</p>  |
| <p>step 5 Install shelf clips and insert shelves.</p>  | <p>step 6 Fasten two side back panels with two screws into the cabinet.</p>  |