 


ASSEMBLY INSTRUCTIONS

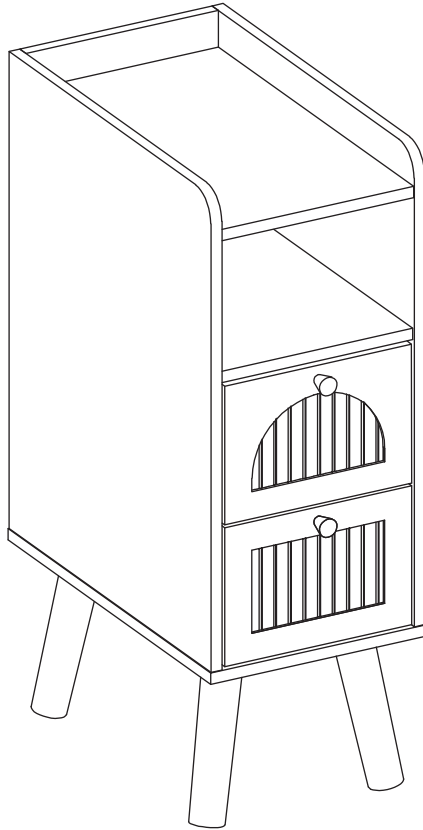

ATTENTION

Prior to assembly, please check and count all parts and hardware regarding to the list on page 3-4 of the instruction. If there is any part missing or damaged, please send us messages with the part name and number or send us pictures, we will send you the replacement asap.

If you have any questions about the product or assembly, please kindly contact us at anytime, we will solve your problem asap.

Be sure to provide your order ID so we can assist you better.



IMPORTANT INFORMATION

READ CAREFULLY.

 
KEEP THIS INFORMATION FOR FURTHER REFERENCE.

GENERAL GUIDELINES

If you have any questions about the product or assembly, please kindly contact us at any time, we will solve your problem asap.

NOTES BEFORE YOU START

1. If an odor is present when first opening the package, please leave the unwrapped product in a shaded and ventilated area for a few days to air out.
2. Open and assemble the item in the area you plan to keep it to avoid excessive heavy lifting.
3. Assemble the product in a spacious space, and on a soft, clean surface to avoid damage and scratches.
4. **TWO PEOPLE** are recommended for ease in the assembly of this product.
5. Ensure all parts and hardware are available before assembly, If you find any parts damaged or missing, please email us, we will send you the replacement asap.
6. Follow each step in the manual to ensure the proper assembly.
7. You will use the following tools: a Phillips head screwdriver and rubber hammer.
The wood dowels may need to be gently tapped in lightly with a rubber hammer.



(not included)



 
(not included)

8. We don't recommend using the electric screwdriver. If you use the power screwdriver to tighten the screws, please be slow down, and stop if the screw is already tightened, excessive screwing may damage the screw and product surface.














WARNINGS

1. Please be careful and slowly when opening and assembling the product, especially keep the parts and packaging away from children to avoid accidental injury.
2. Please avoid using aggressive chemicals/cleaners to avoid damaging the product surface.
3. Don't push or pull the product to avoid damaging your floor.
4. Don't throw away any packing materials and accessories until assembly is complete.

Exploded Drawing




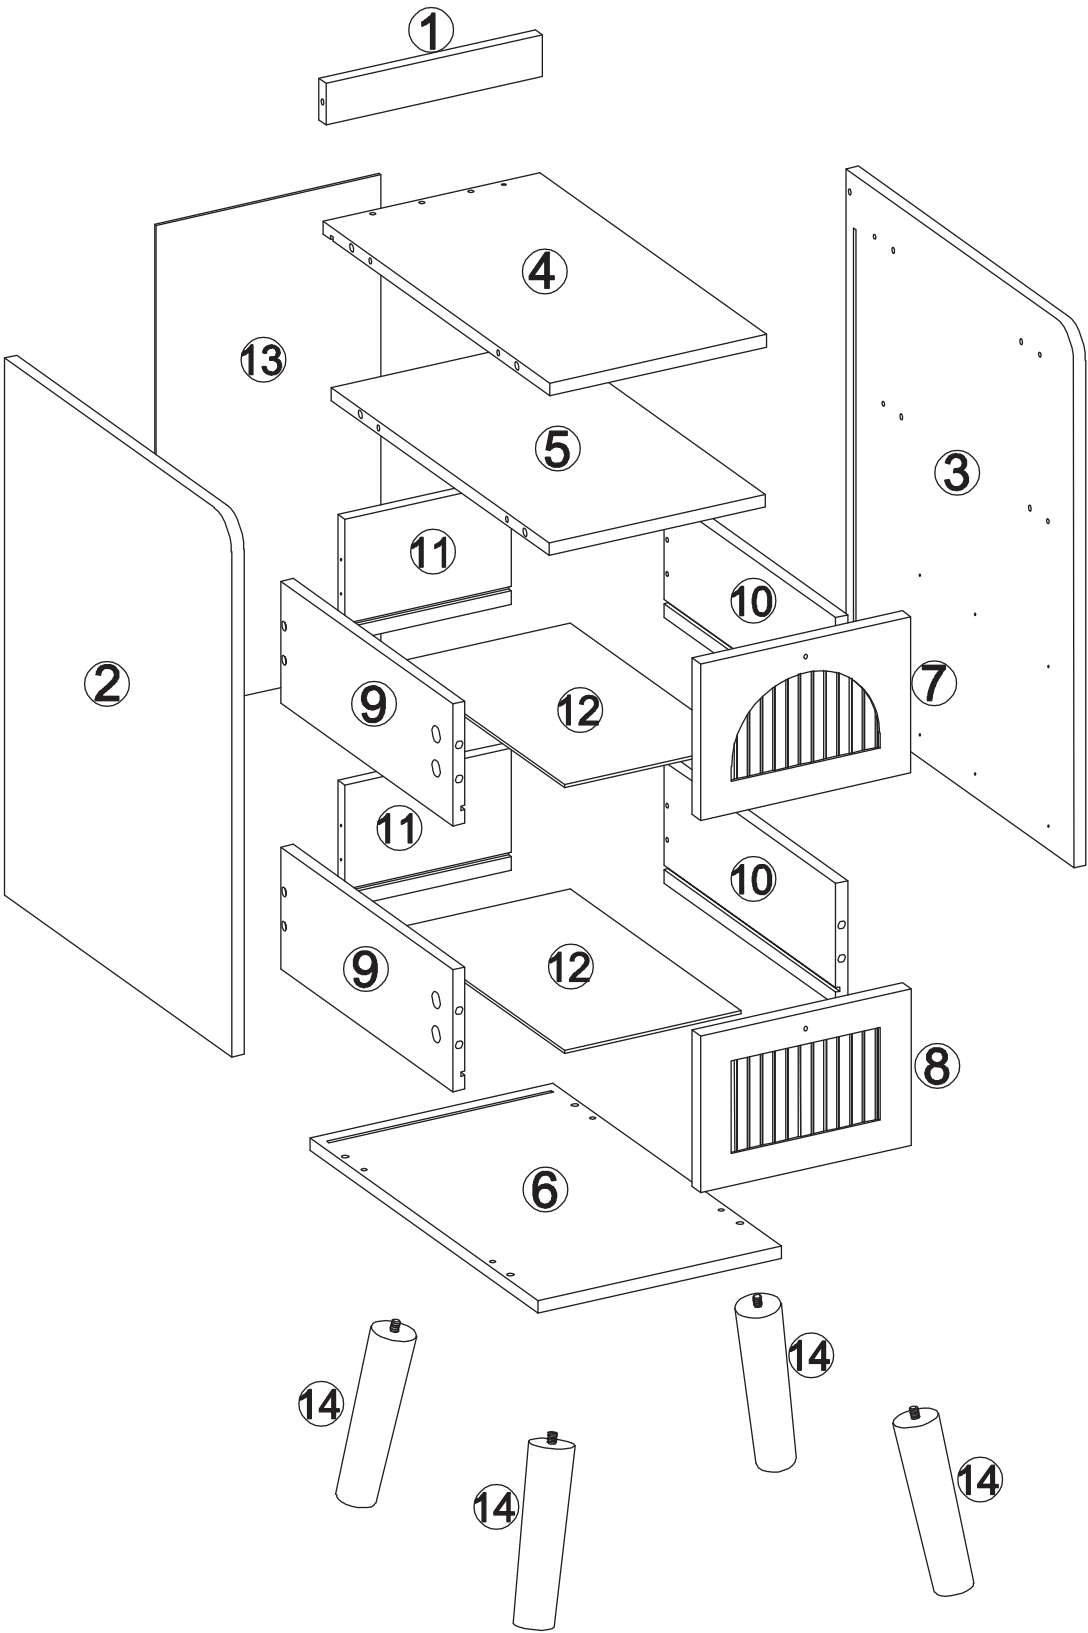


HARDWARE LIST

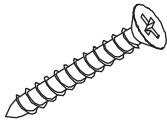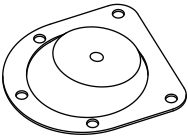             (A) CAM BOLT  Ø6X35mm 16PCS spare:3	(B) CAM LOCK  Ø15X9.5mm 16PCS spare:3	(C) WOOD DOWEL  Ø6X30mm 16PCS spare:2	(D) SCREW  Ø4X35mm 11PCS spare:2
(E) SCREW  Ø3X12mm 24PCS spare:3	(F) SCREW  Ø7X40mm 4PCS spare:1	(G) SCREW  Ø4X12mm 21PCS spare:3	(H) EXPANSION  1PC
(I) SCREW  Ø4X18mm 2PCS	(J) HANDLE  2PCS	(K) WRENCH  4mm 1PC	(L) BACKPLATE BUCKLE  Ø3X16mm 4PCS spare:1
(M) IRON SHEET  4PCS	(N) GASKET  2PCS	(O) ANTI-REWIND  1PC	(CL) SLIDING TRACK  300mm 2PCS
(CR) SLIDING TRACK  300mm 2PCS	(DL) SLIDING TRACK  300mm 2PCS	(DR) SLIDING TRACK  300mm 2PCS	


CAM LOCK/BOLT FASTENING INTRODUCTION

    (You will use it during assembly)

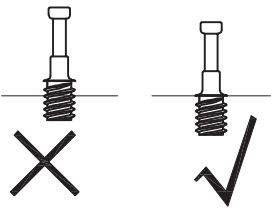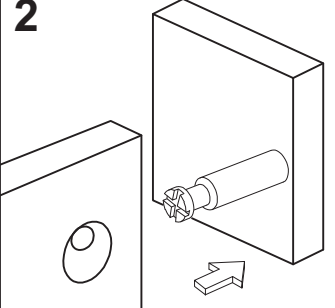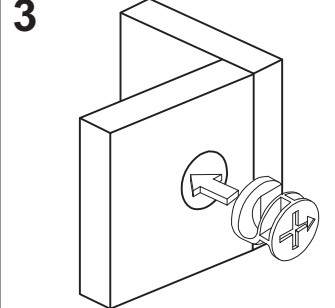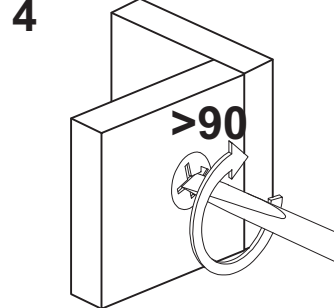1 	2 	3 	4 
1.Screw cam bolt into the threaded anchor gently. (Attention:don't screw cam bolt too deep or too shallow.)	2.Please connect the two boards you want connect by inserting cam bolt.	3.Insert the cam lock into the round hole of the board. (Attention:point the arrow on the top of the cam lock to the outer edge.)	4.Turn the cam lock clockwise until it is firmly tightened.




SLIDE INTRODUCTION

 (You will use it during assembly)

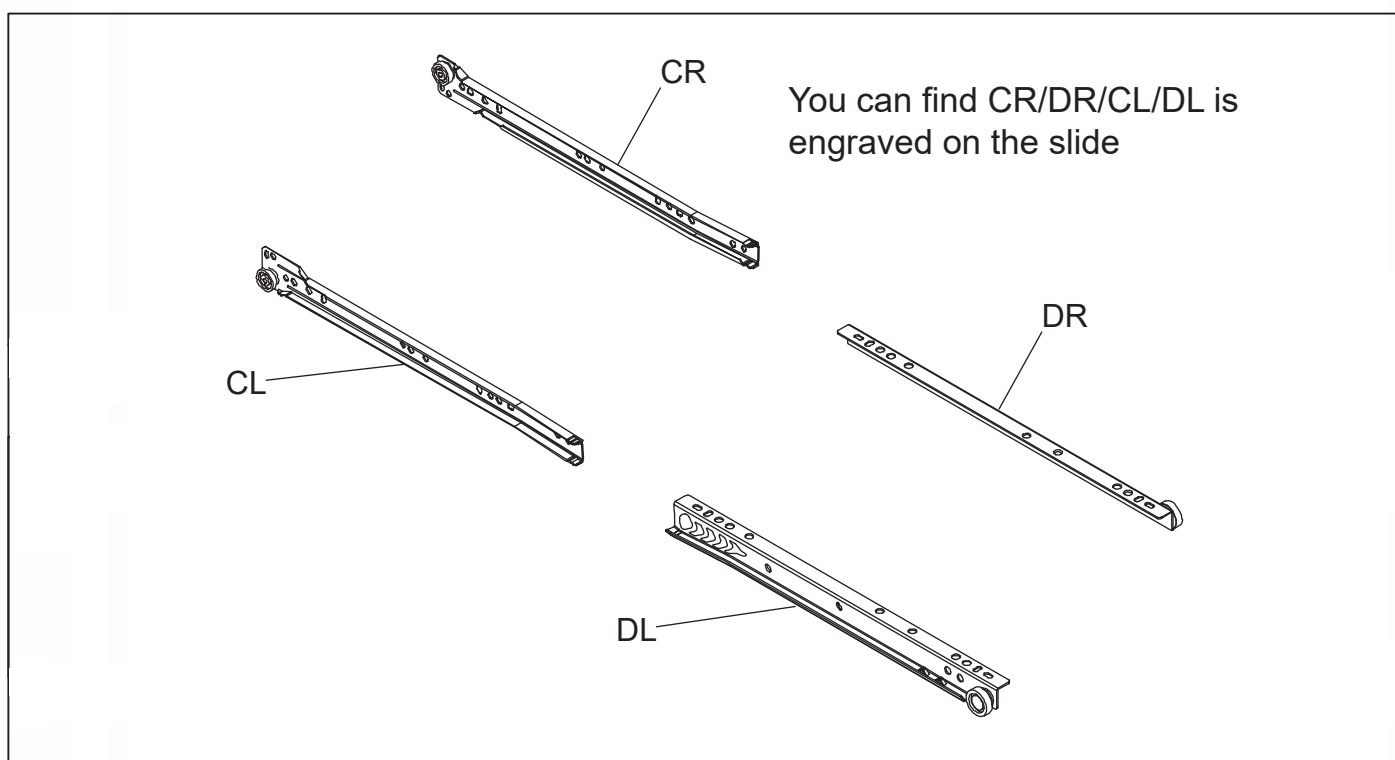


STEP 1

   Please note the position of the guide rail holes for the locking screws in the figure

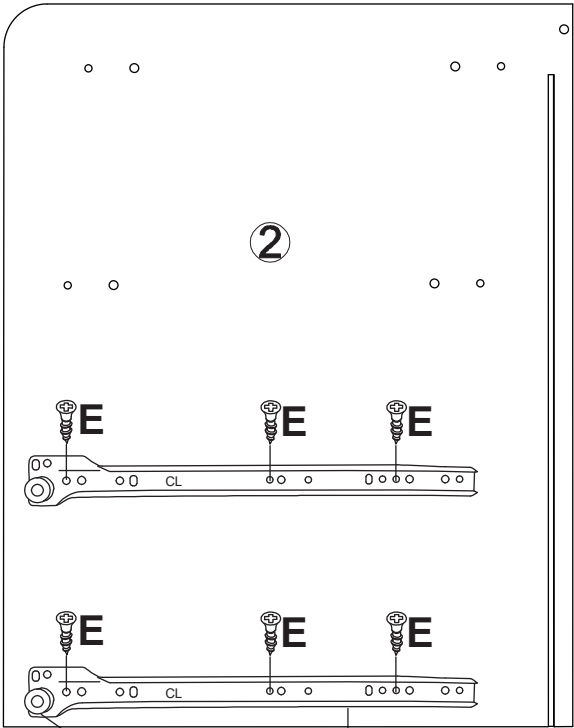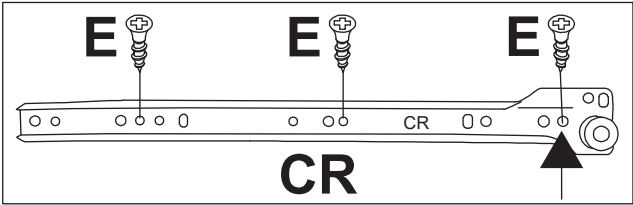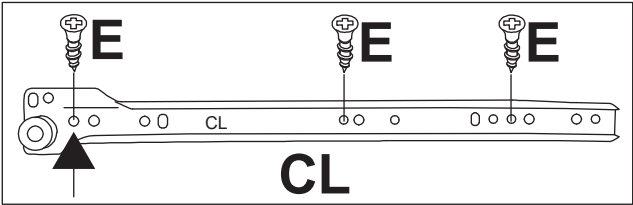

NOTE: rollers
face downward **CL**

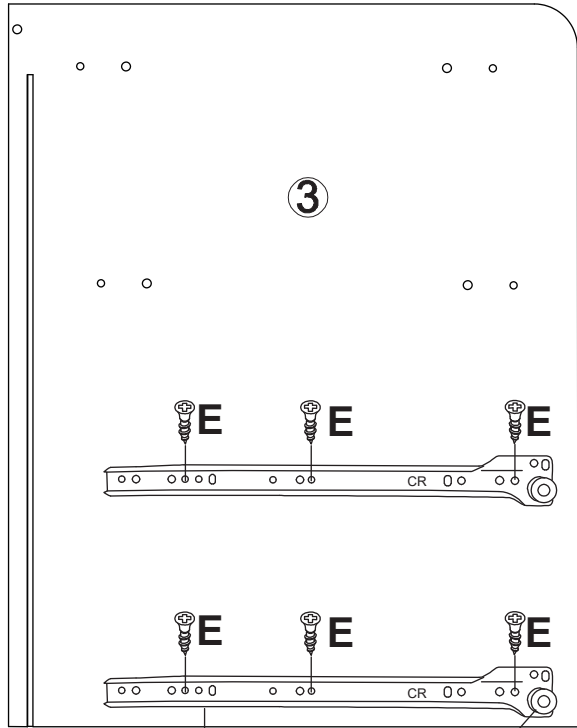 

CR NOTE: rollers
face downward

	E x12PCS
	CL x2PCS
	CR x2PCS

 
 
STEP 2



Ø6X35mm


A

X8

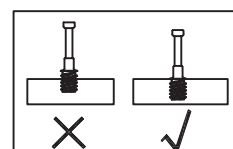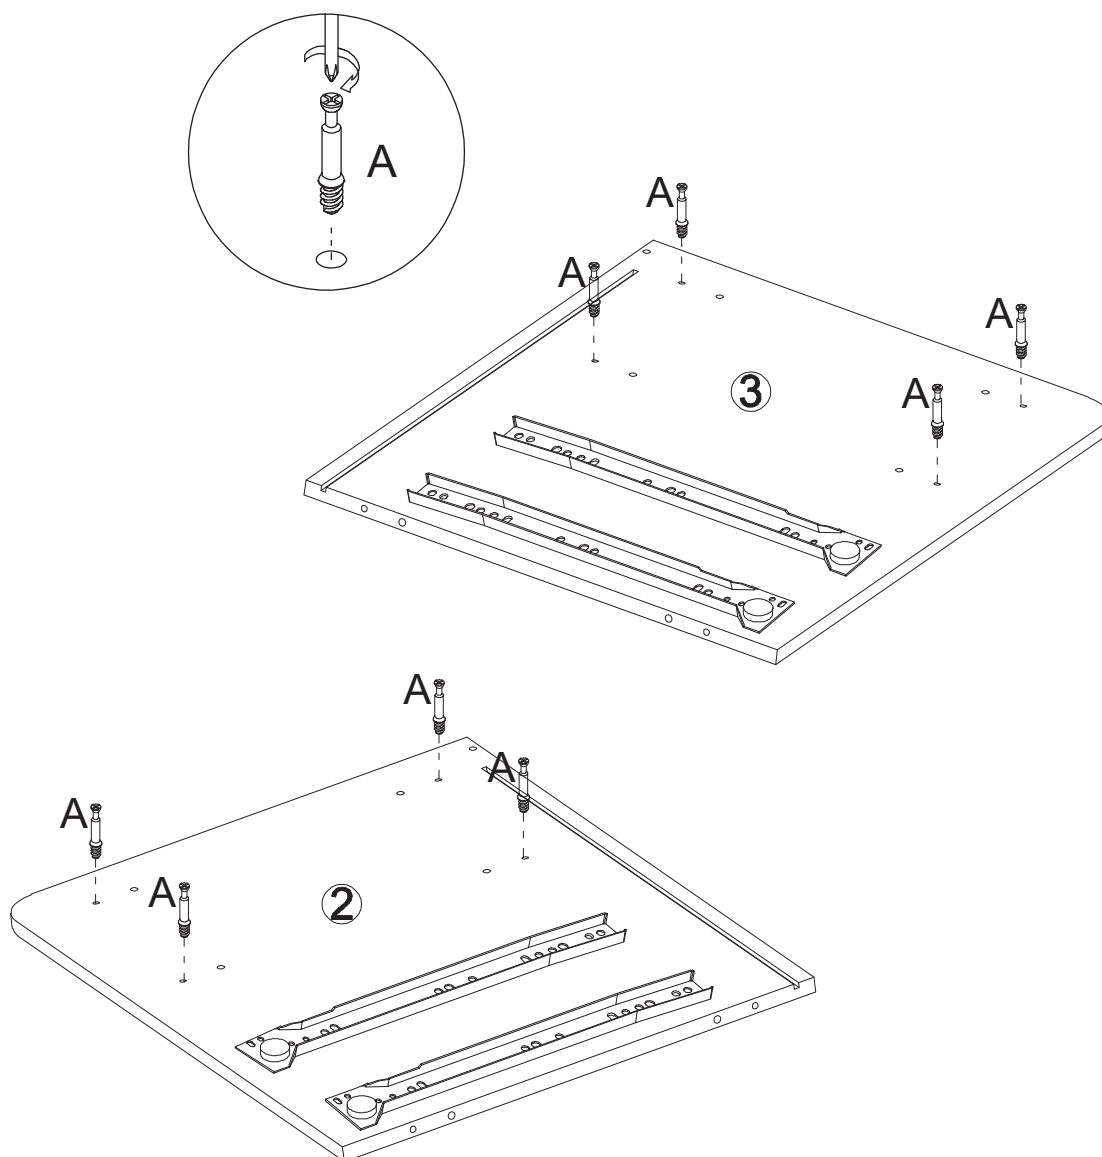



STEP 3

 Ø4X35mm		 Ø6X30mm	
D	X2	C	X2

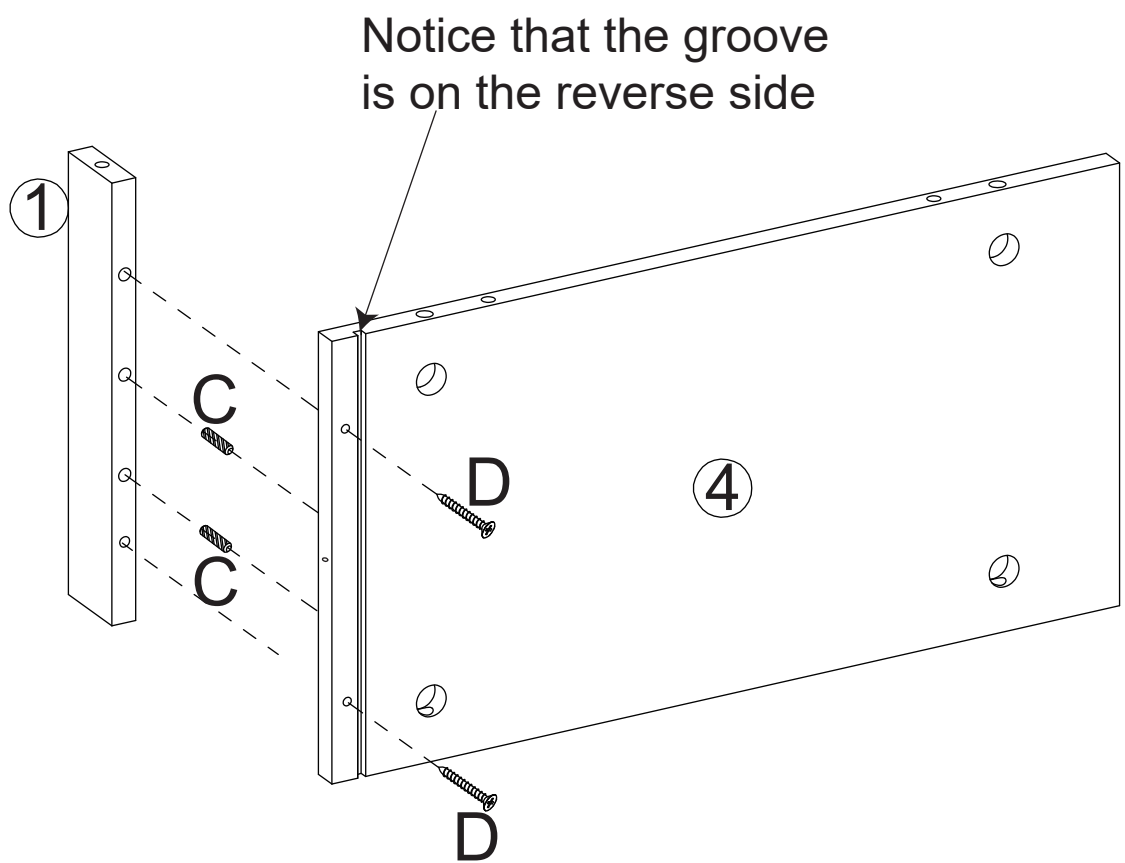 



STEP 4

 $\varnothing 15 \times 9.5 \text{mm}$		 $\varnothing 6 \times 30 \text{mm}$	
B	X4	C	X5

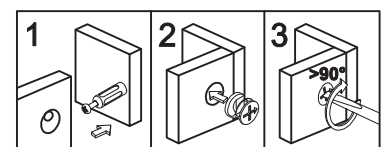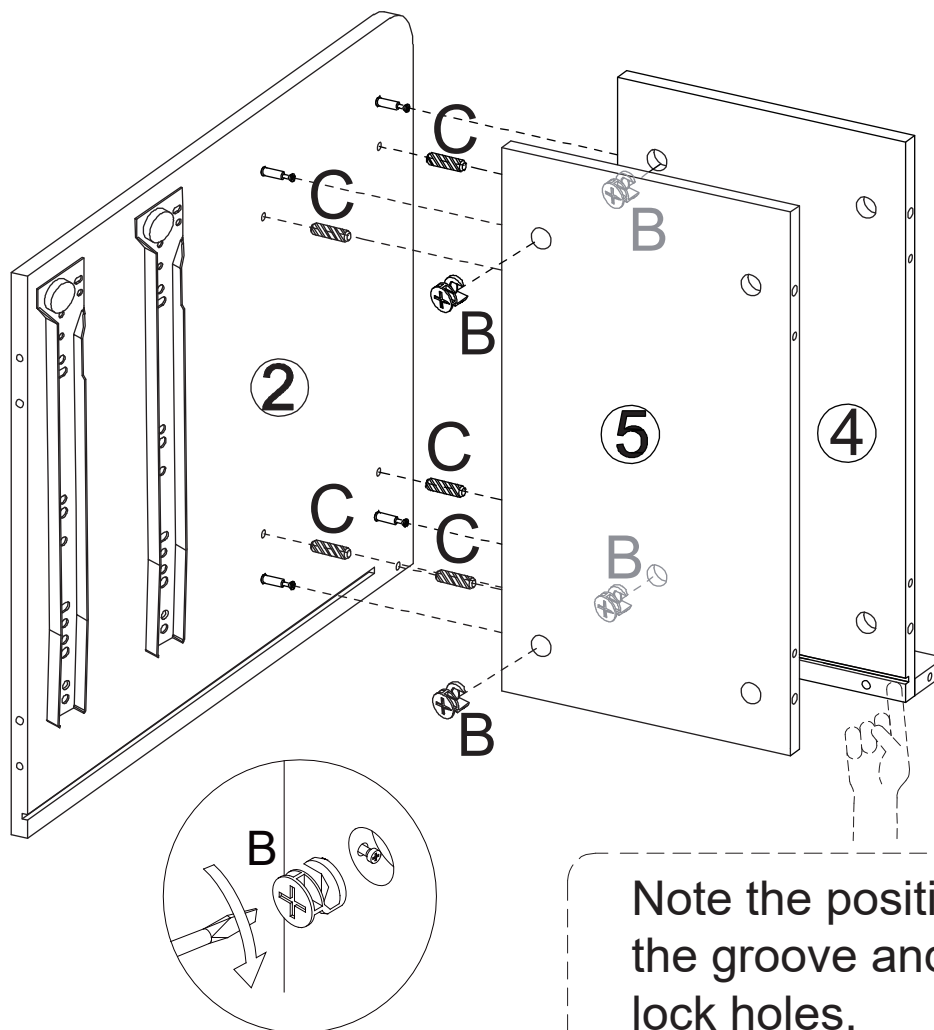  


STEP 5

 Ø15X9.5mm		 Ø6X30mm	
B	X4	C	X5

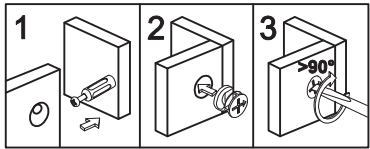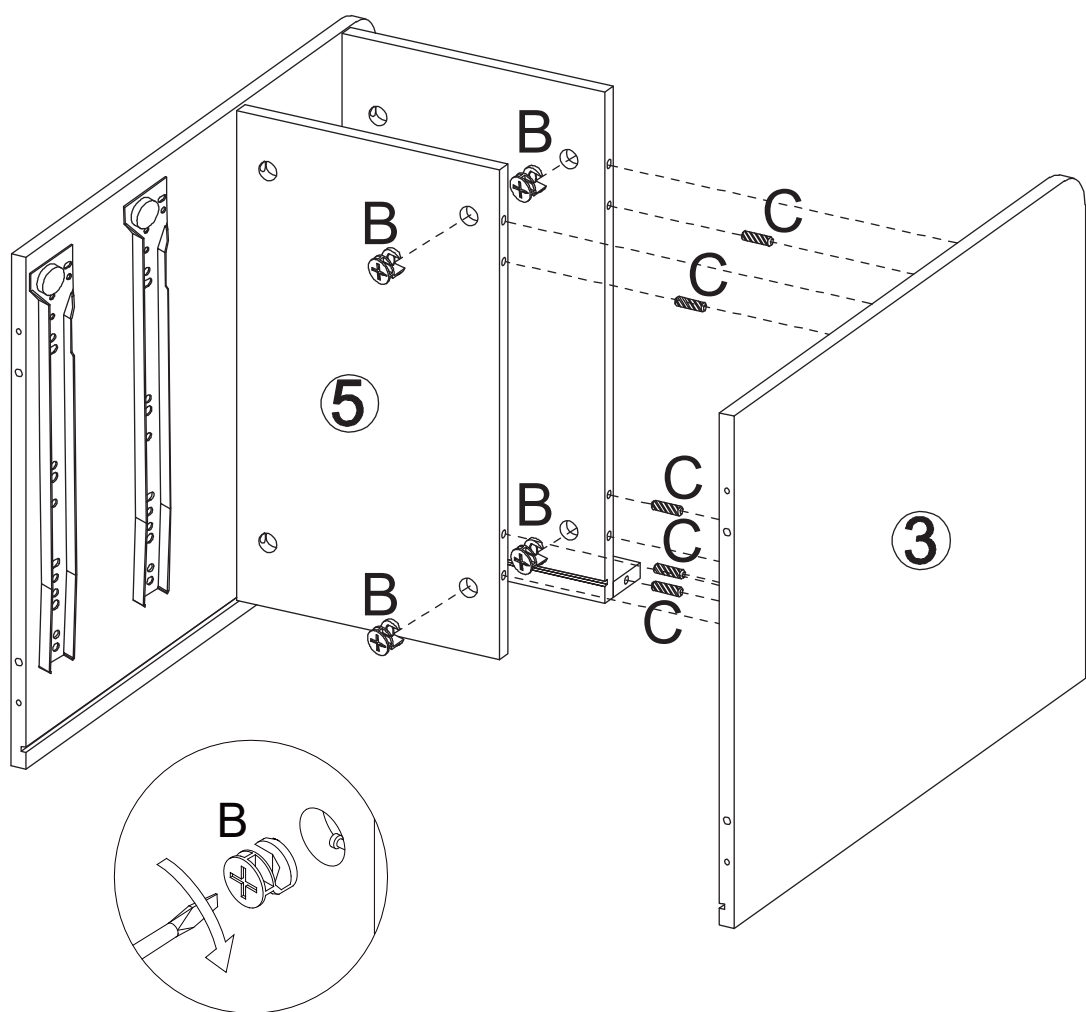  


STEP 6

 The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

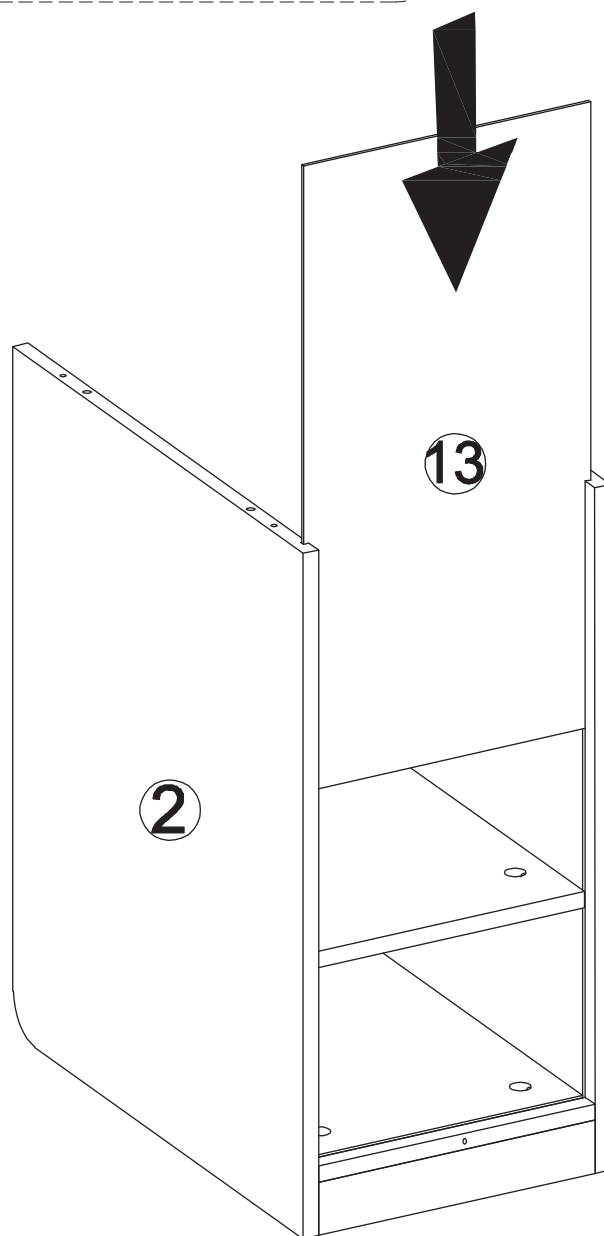



STEP 7

		 Ø7X40mm		 Ø6X30mm	
K	X1	F	X4	C	X4

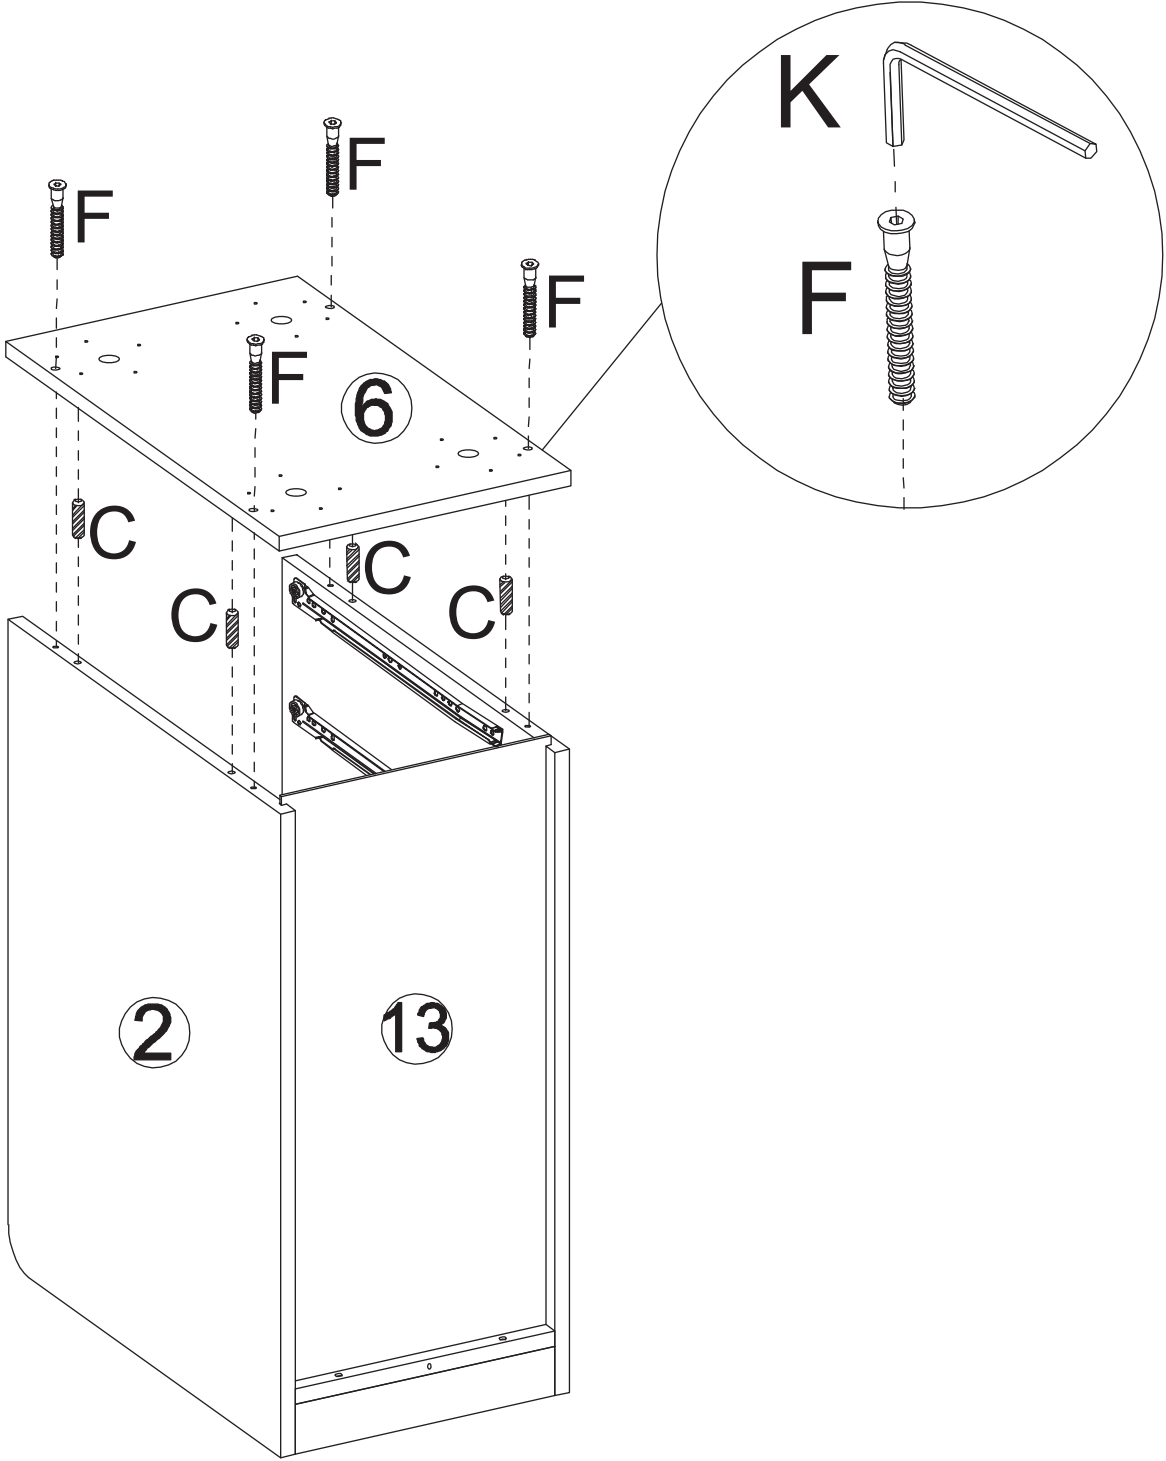 


 STEP 8

			
M		Ø4X12mm	
X4		G	X20

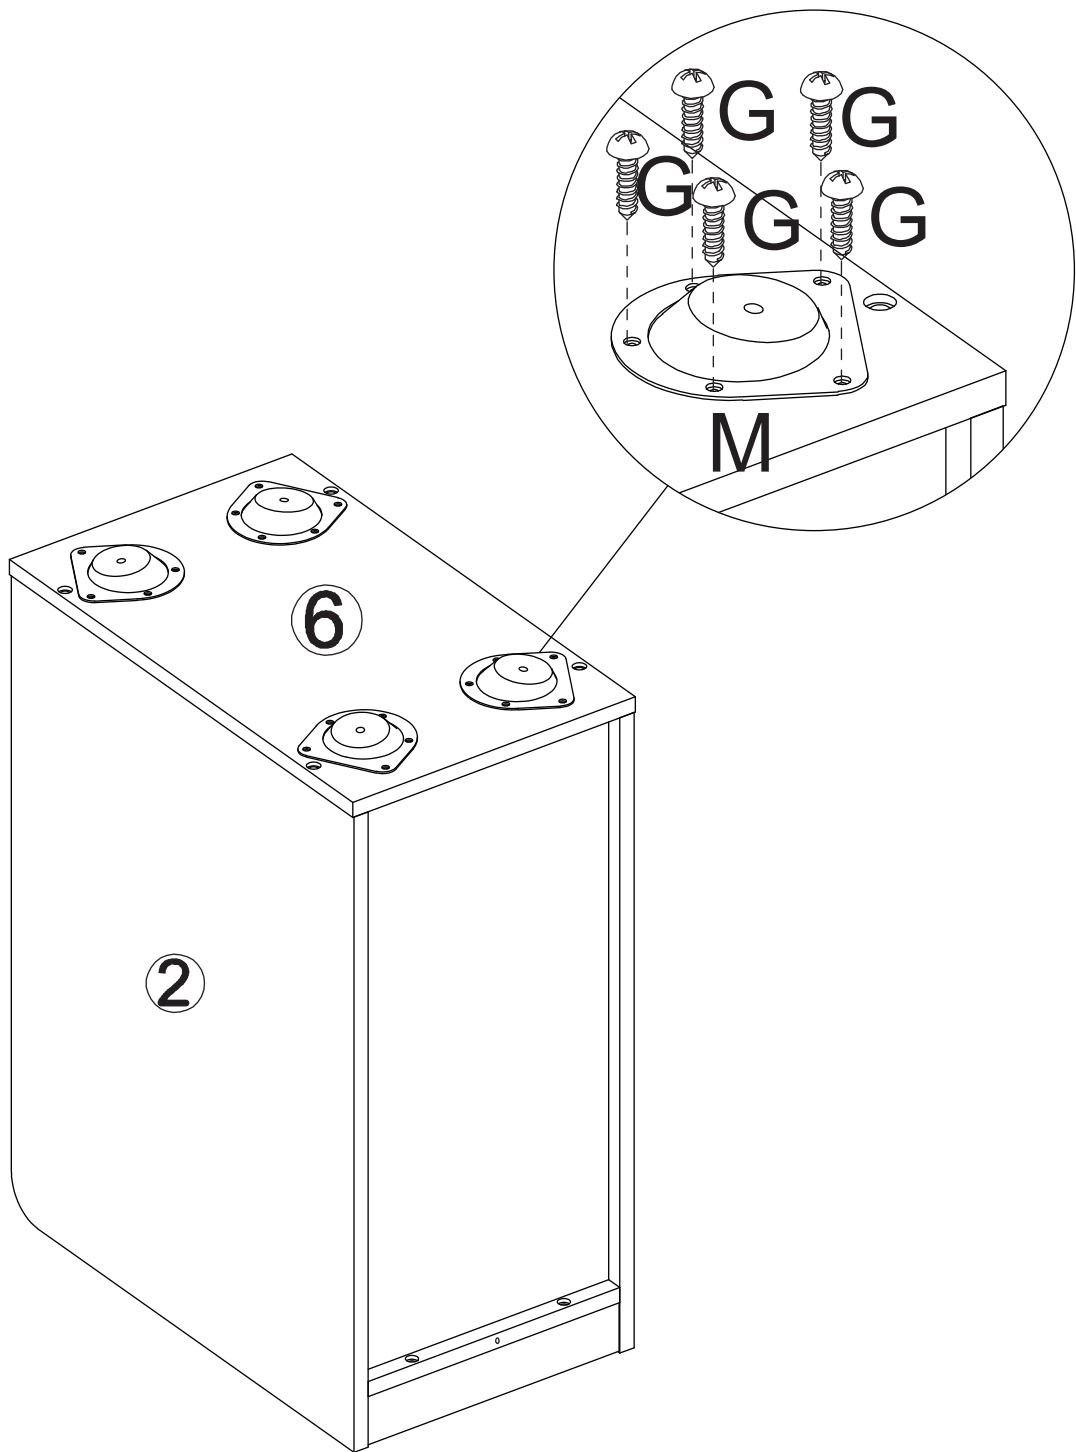 


 STEP 9

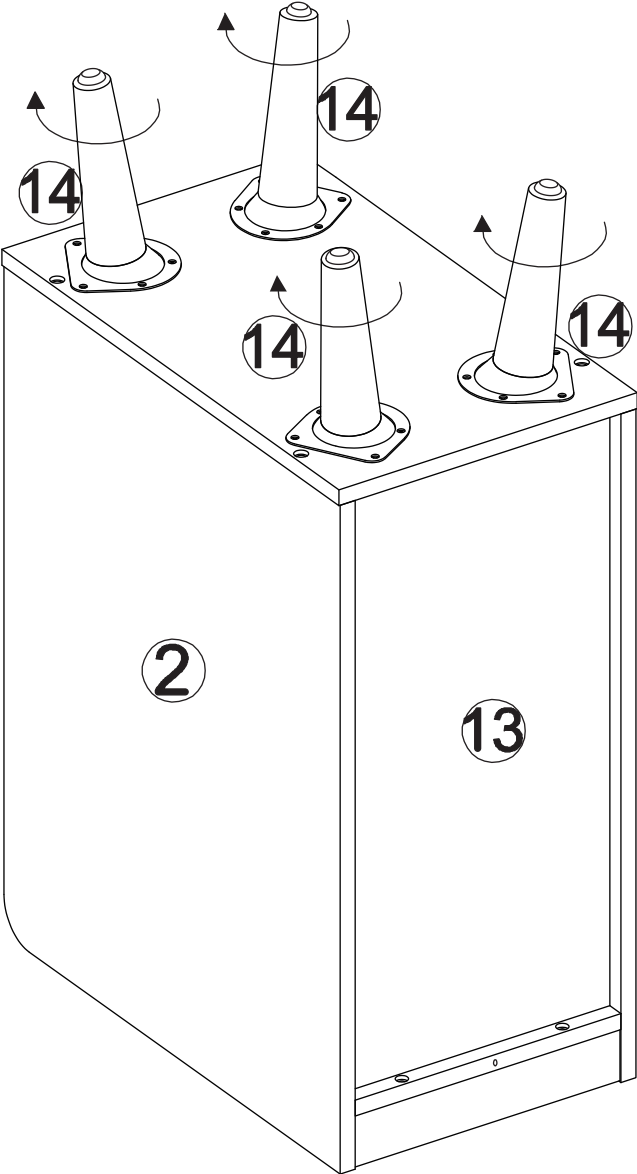





STEP 10

 Ø3X16mm	
L	X4

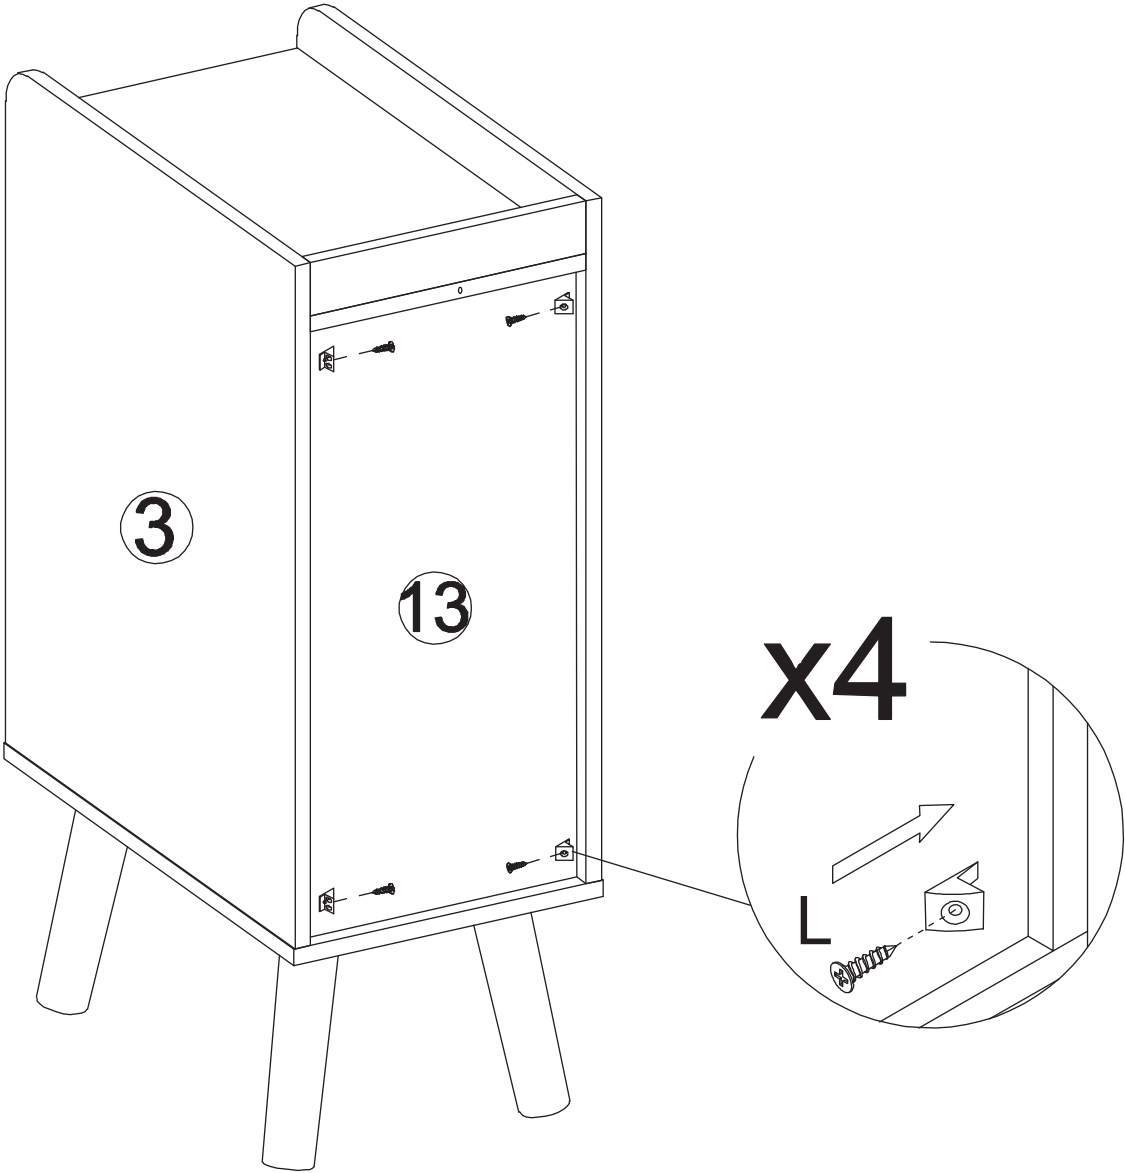 


 STEP 11


			
A	X8	D	X8

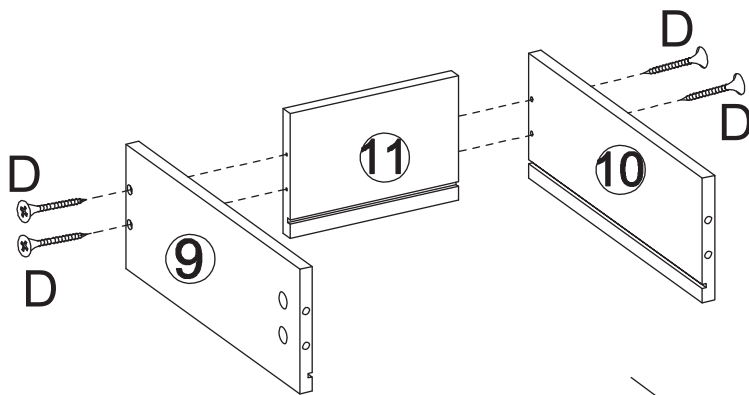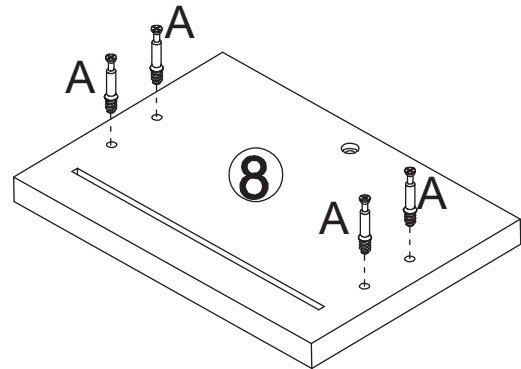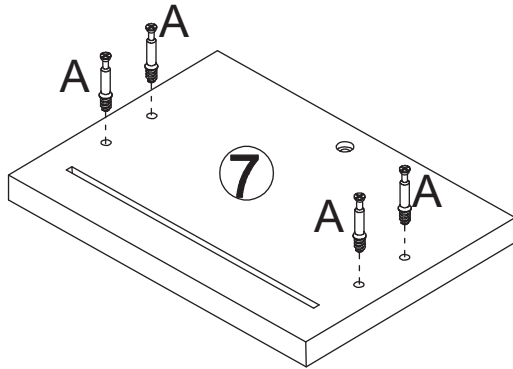   

×2



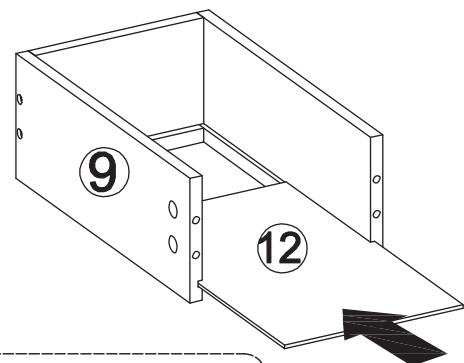 


 The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

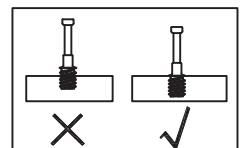


STEP 12

 Ø15X9.5mm		 Ø4X18mm			
B	X8	I	X2	J	X2

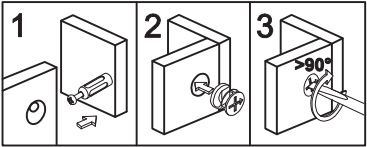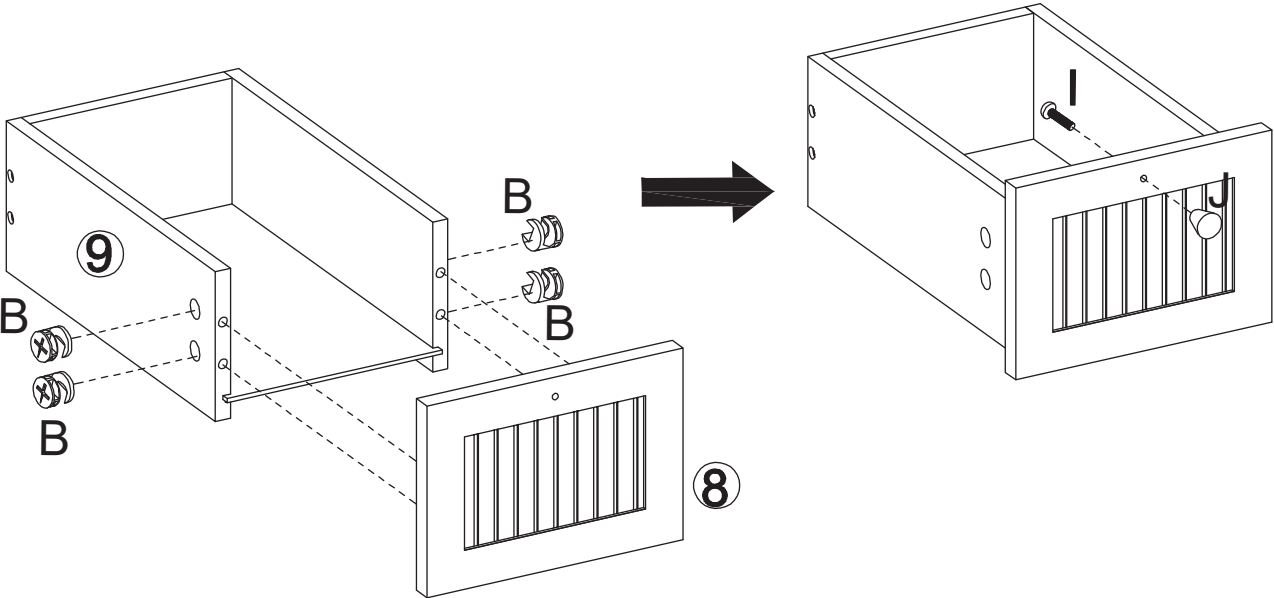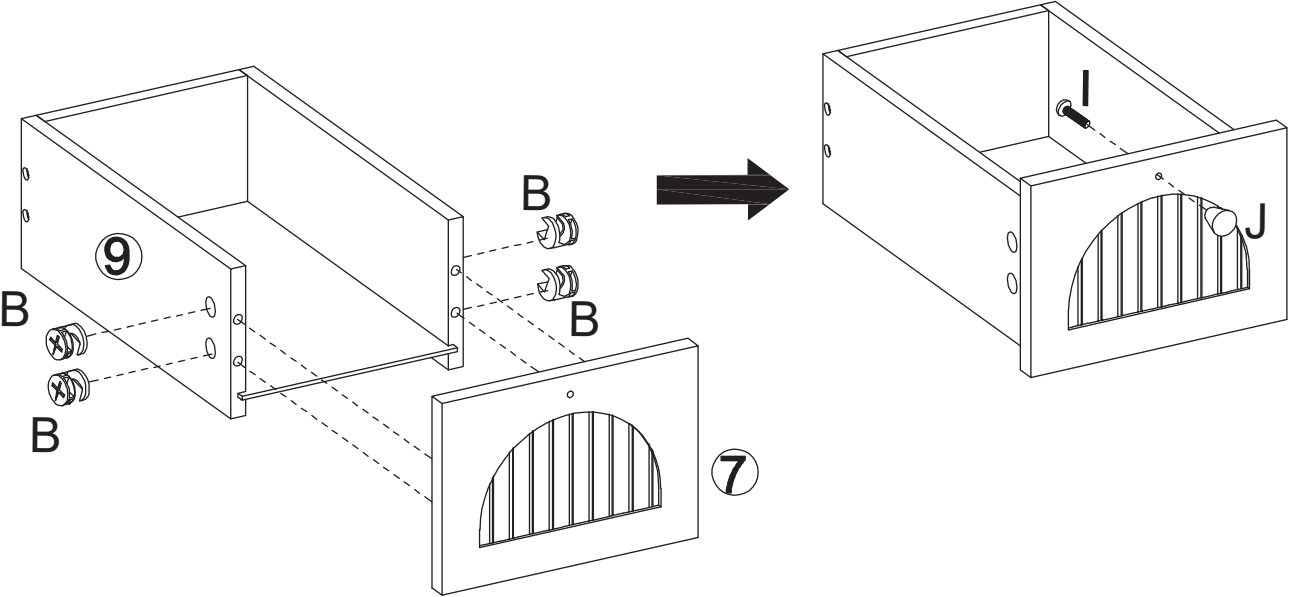   


STEP 13

 Ø3X12mm					
E	X12	DL	X2	DR	X2

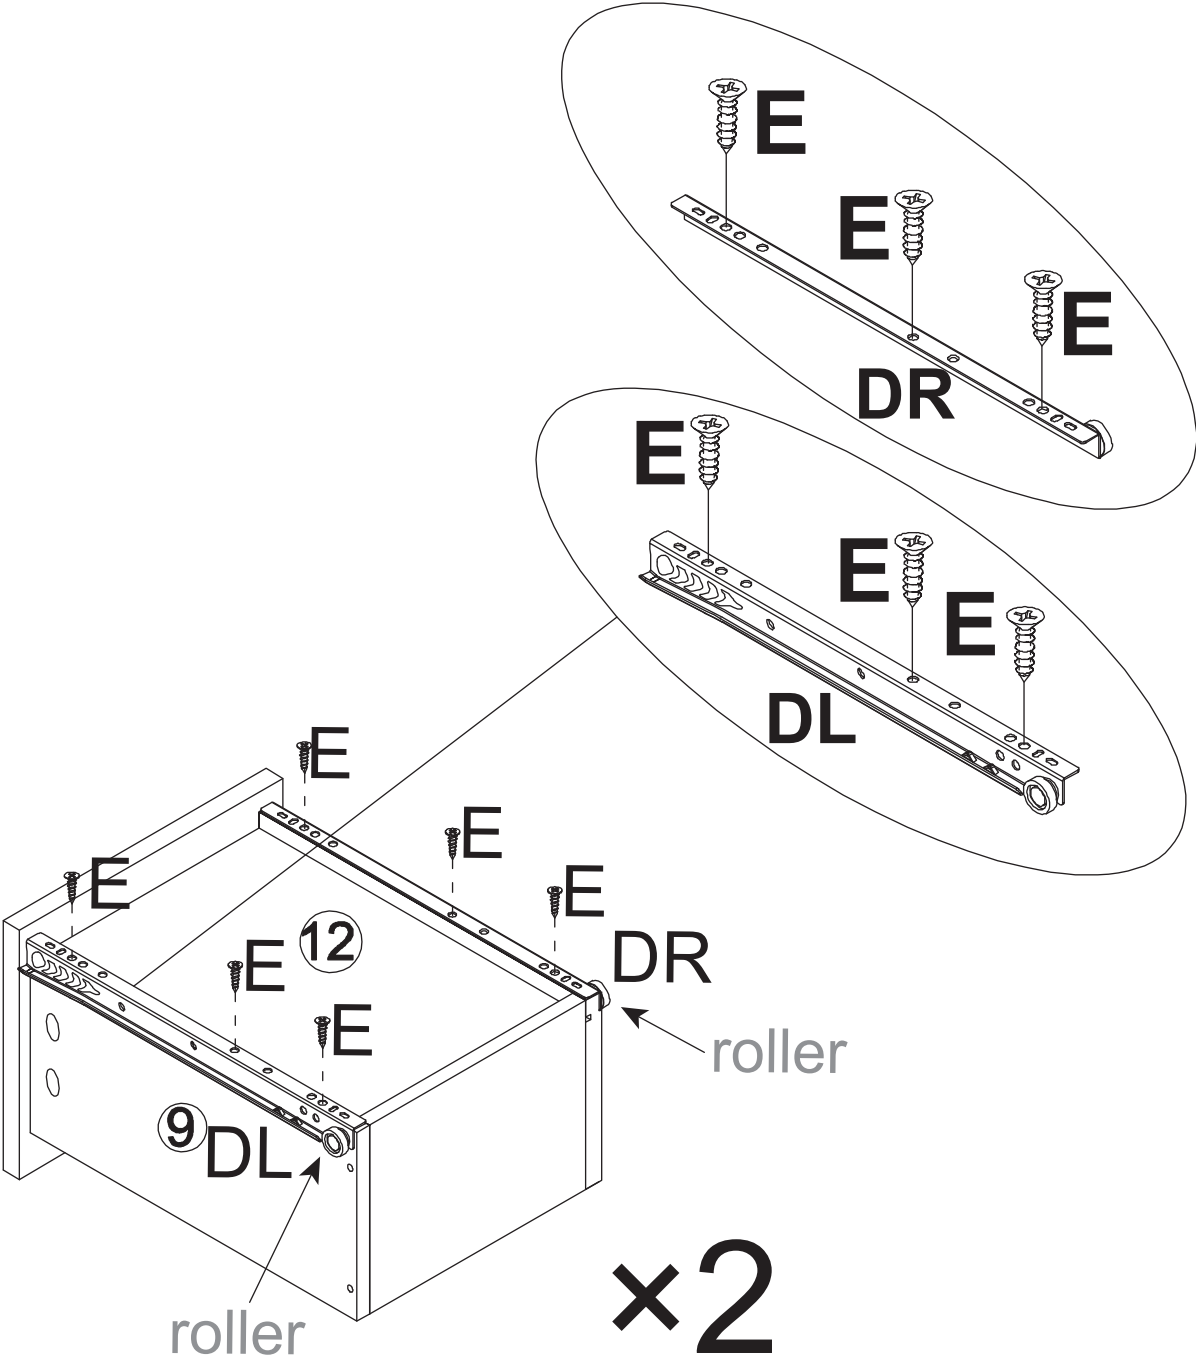 


 STEP 14

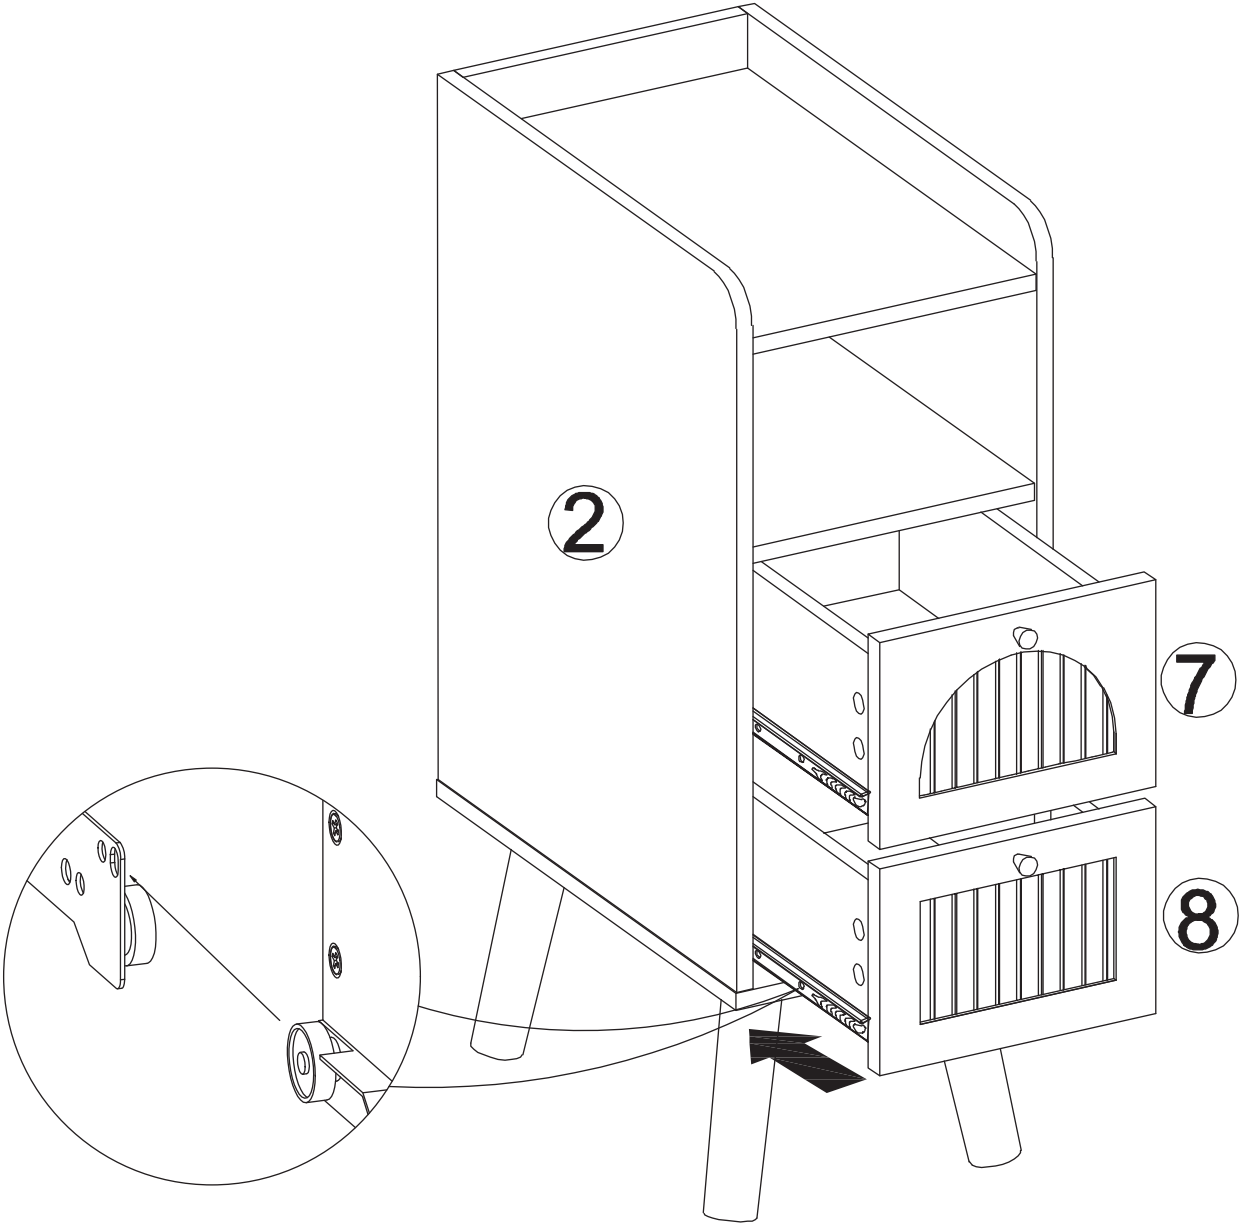

STEP 15



				 Ø4X12mm	
N	X1	O	X1	G	X1

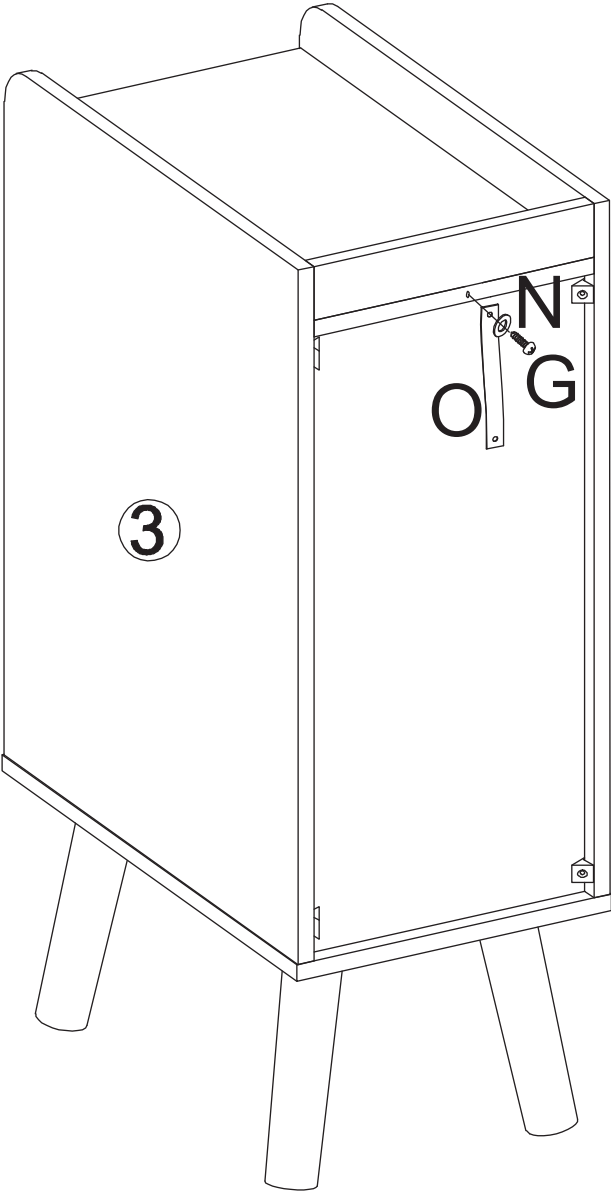 

STEP 16

				 Ø4X35mm	
N	X1	H	X1	D	X1

  Pre-drilled hole at wall

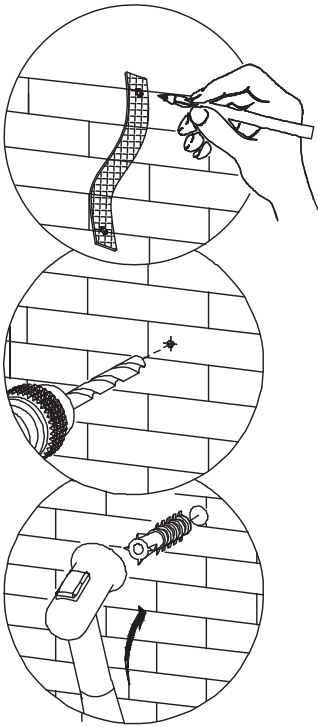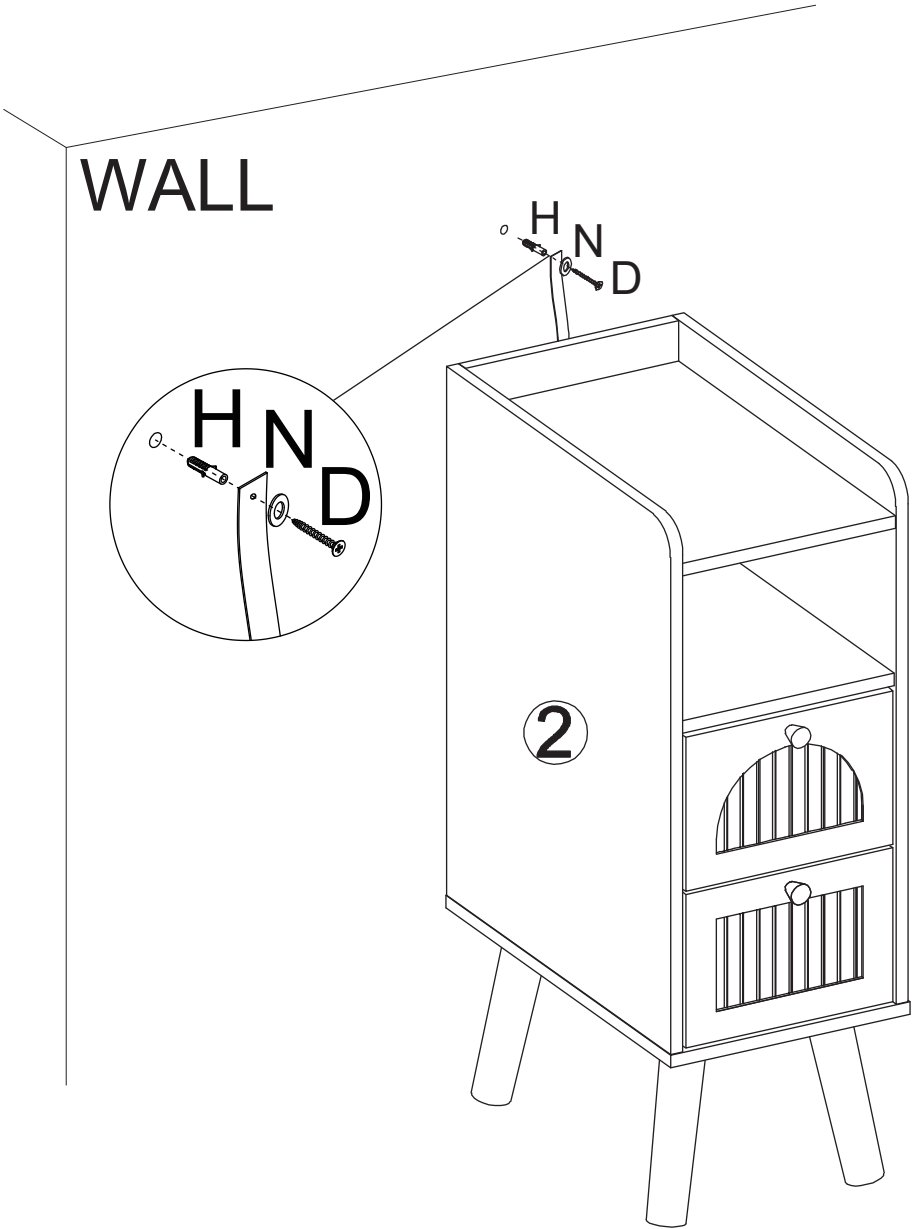

WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.
- Do not defeat or remove the drawer interlock system.

This is a permanent label.

Do not remove!

ATTENTION



Des enfants sont morts du basculement des meubles. Pour réduire le risque de basculement des meubles:

- TOUJOURS installer la retenue de basculement fournie.
- NE JAMAIS mettre de téléviseur sur ce produit.
- NE JAMAIS permettre aux enfants de se tenir debout, de grimper ou de s'accrocher à des tiroirs, des portes ou des étagères.
- N'ouvrez JAMAIS plus d'un tiroir à la fois.
- Placez les objets les plus lourds dans les tiroirs les plus bas.
- Ne désactivez pas et ne retirez pas le système de verrouillage du tiroir.

Ceci est une étiquette permanente.

Ne pas enlever!

WARNUNG



Kinder sind an einem Möbelkipp gestorben. So verringern Sie das Risiko eines Umkippens von Möbeln:

- Installieren Sie IMMER die mitgelieferte Kipprückhaltevorrichtung.
- Stellen Sie NIEMALS einen Fernseher an dieses Produkt.
- Lassen Sie Kinder NIEMALS an Schubladen, Türen oder Regalen stehen klettern oder hängen.
- Öffnen Sie NIEMALS mehr als eine Schublade gleichzeitig.
- Legen Sie schwerste Gegenstände in die untersten Schubladen.
- Besiegen oder entfernen Sie das Schubladenverriegelungssystem nicht.

Dies ist ein dauerhaftes Etikett.

Nicht entfernen!