 


TV STAND

USER MANUAL

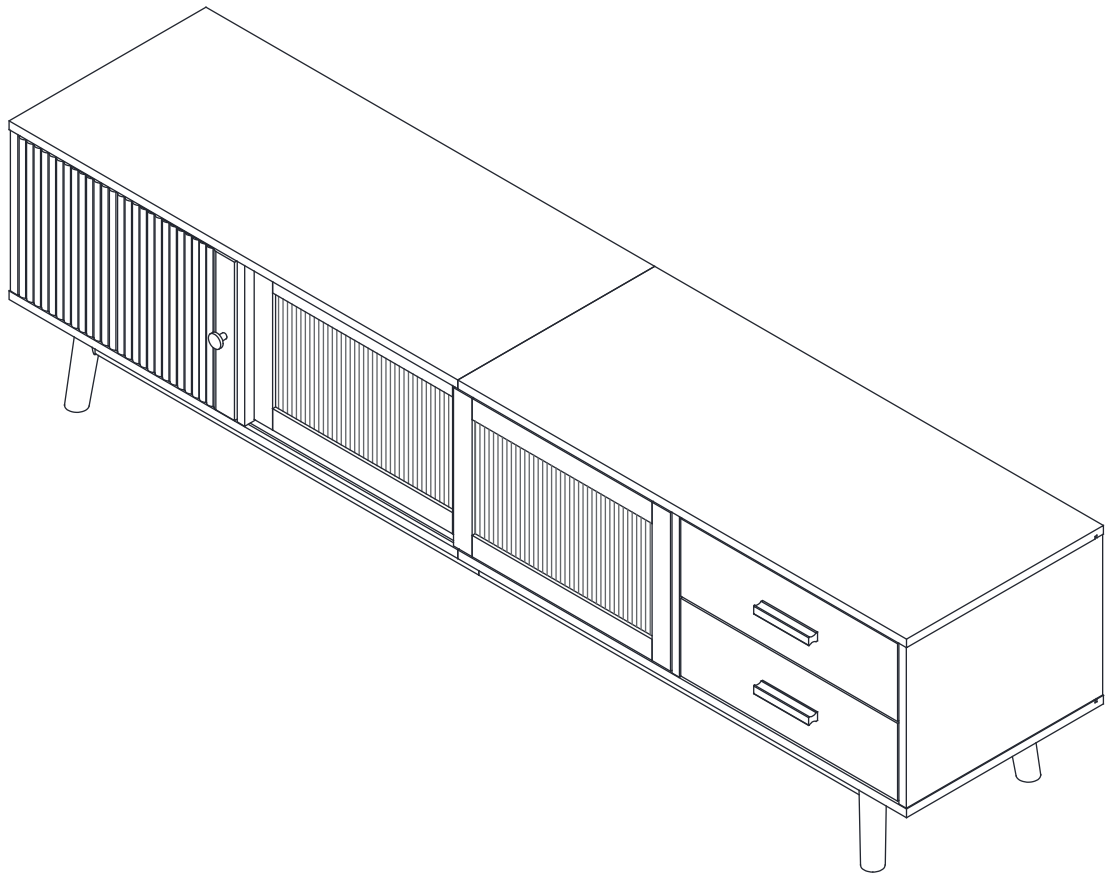

SAVE THESE INSTRUCTIONS FOR FUTURE USE

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

 
 
 
 
 
 
Before Installation

 
Important – Please read these instructions fully before starting assembly

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


 
Cam Lock Assembly Instructions

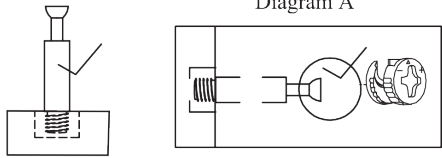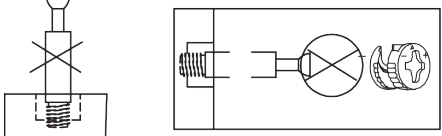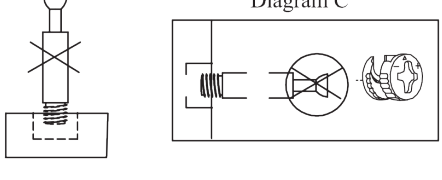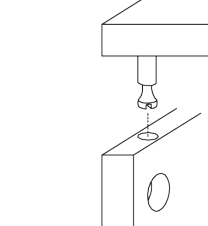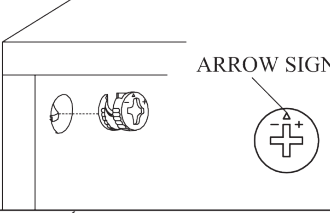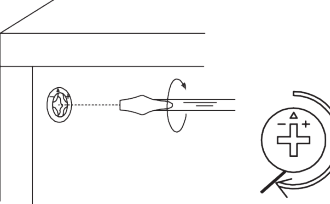	Diagram A Insert Cam Bolt into hole as shown in diagram A.
	Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
 Connect the panels together.	
 Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.	
 To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>	


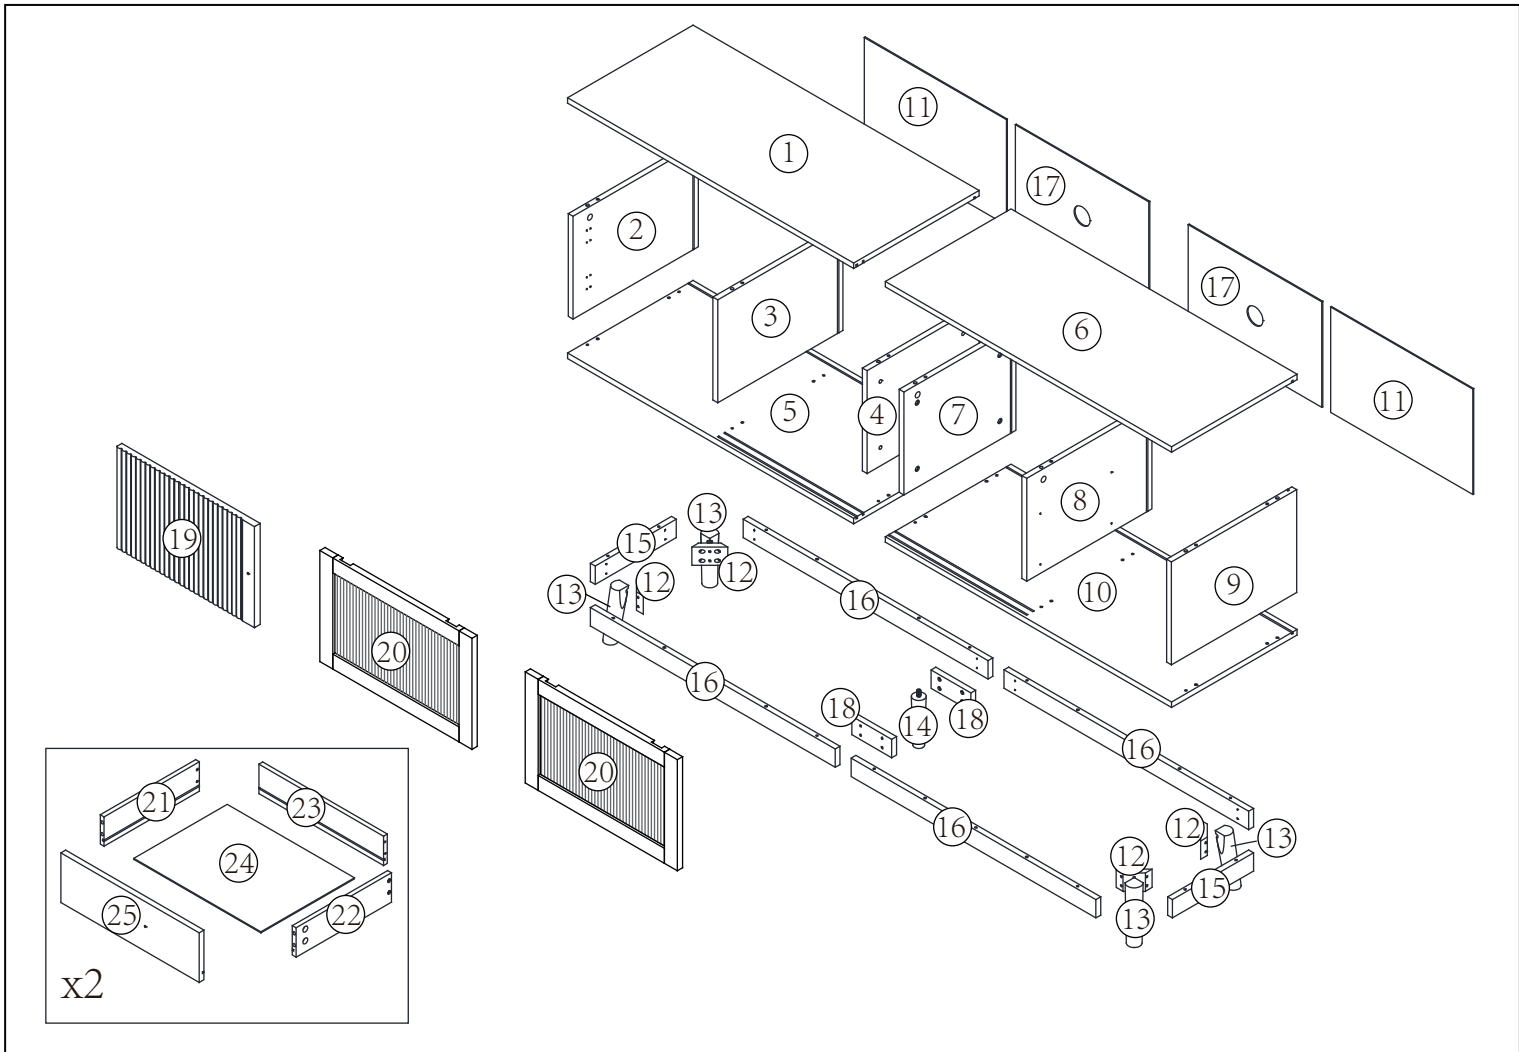 


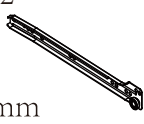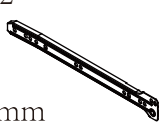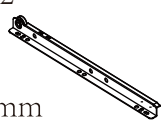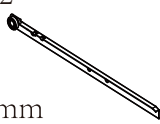Ax20 	Bx20 	Cx32  M6x30	Dx12  M4x40	Ex8  M4x30	Fx32  M3x12
Gx6  M4x12	Hx16  M3x14	Ix4  M4x18	Jx2 	Kx2  M4x35	Lx16  M4x40
Mx4 	Nx8  M6x60	Ox2 	Px1 	Qx2 	Rx4 
Sx1 	Tx24  M4x25	Ux2 	Vx2 	Wx1  M3x12	Xx1 
Zx4 	Yx12  M4x14	Y1x1  M3x14	Y2x8 	Y3x4  M6x18	X1x1  M4x25
CRx2  300mm	CLx2  300mm	DRx2  300mm	DLx2  300mm		


STEP 1

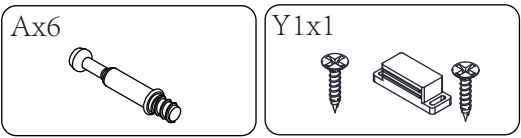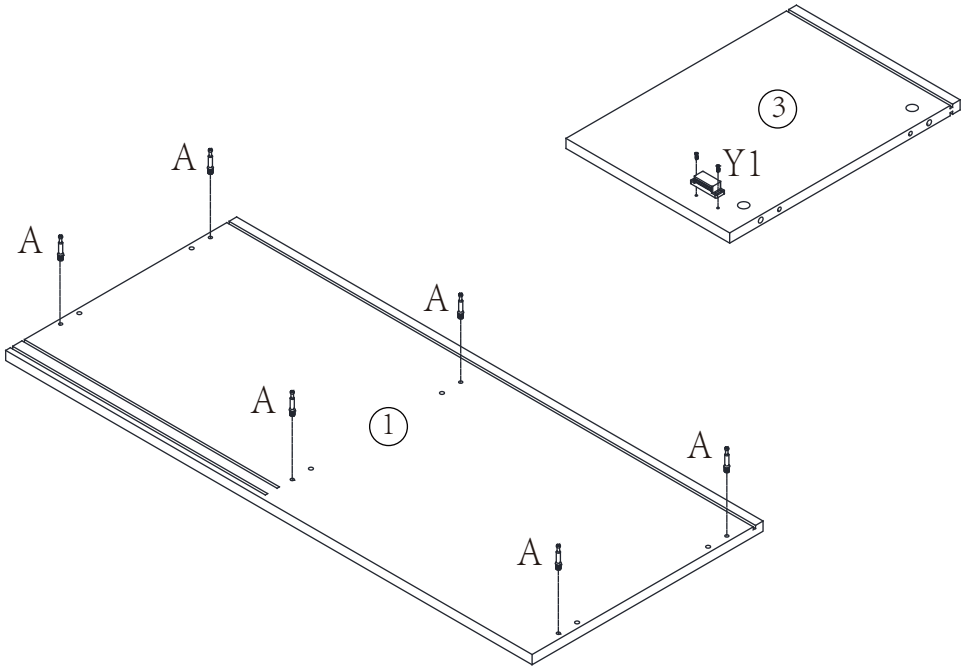

  
STEP 2

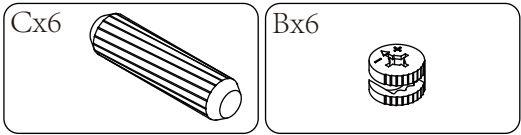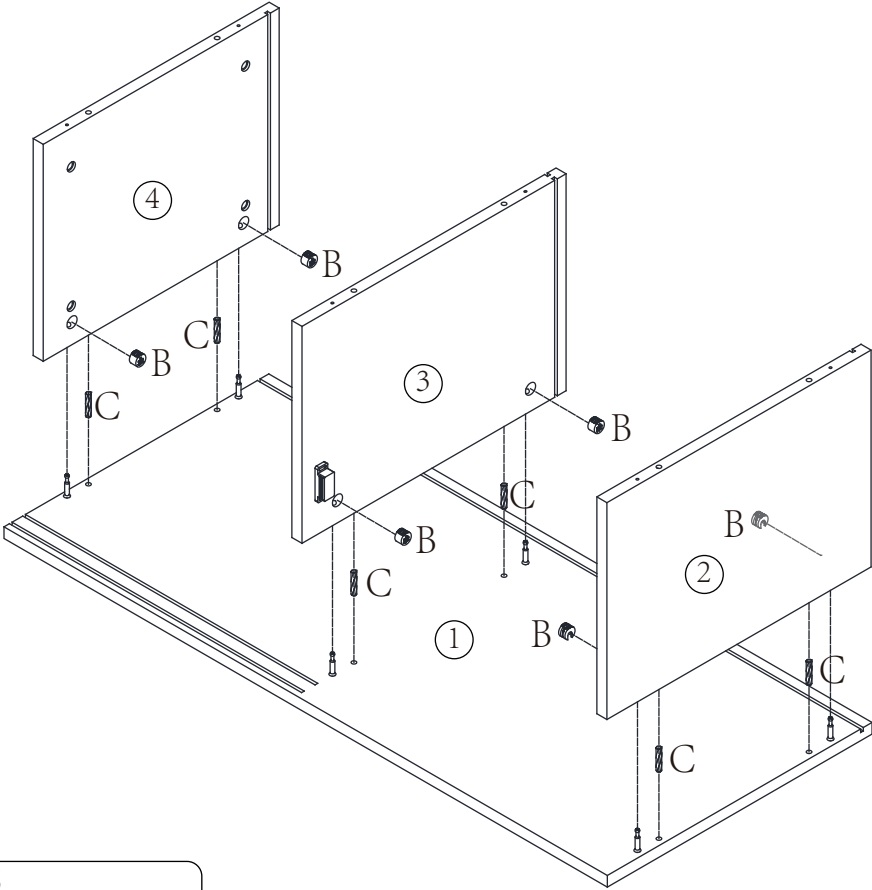

 STEP 3

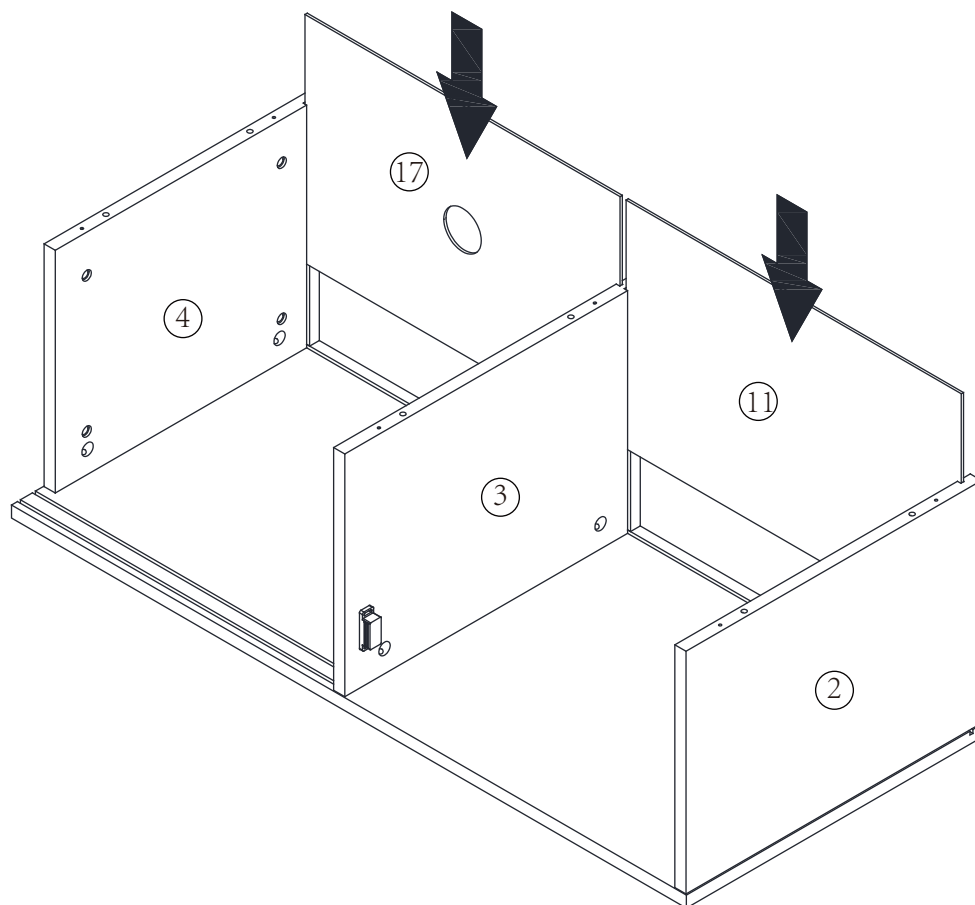

 
STEP 4

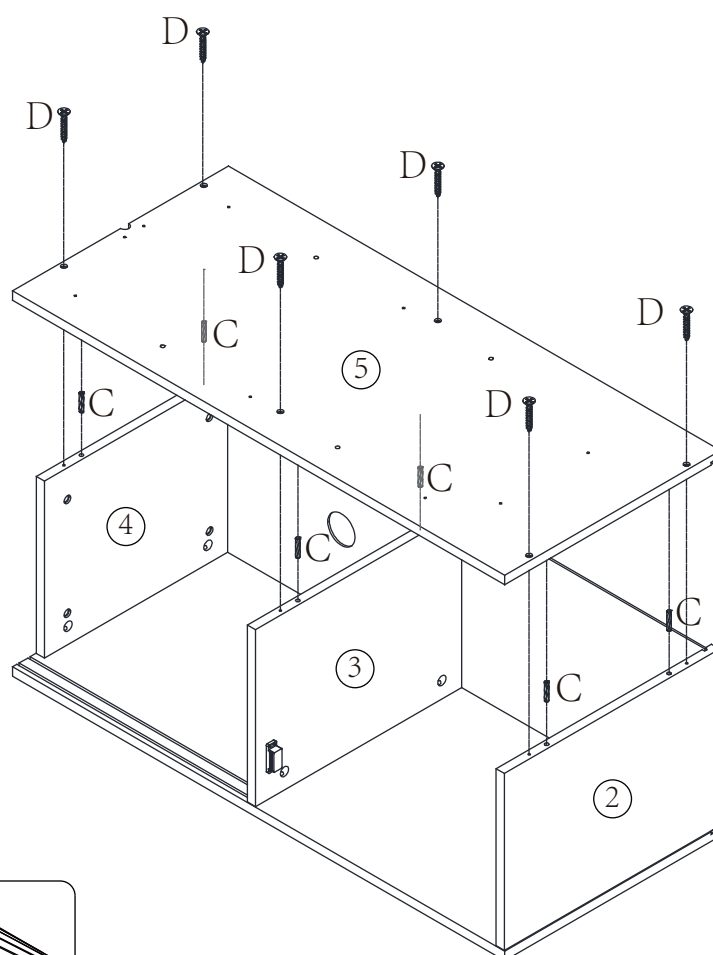


Dx6



 
Cx6





 
STEP 5

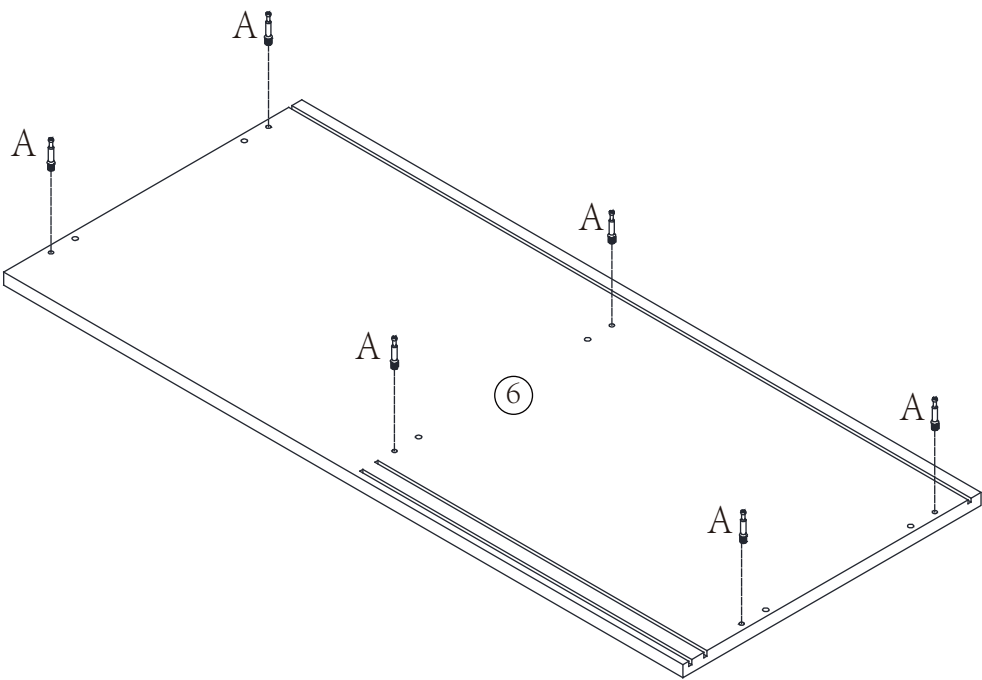

Ax6

 

   
STEP 6

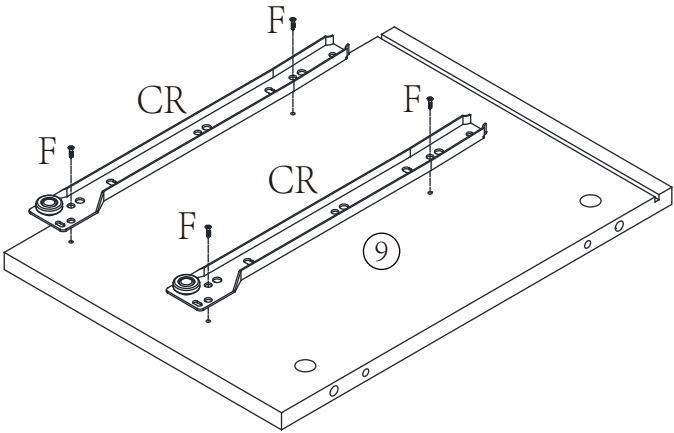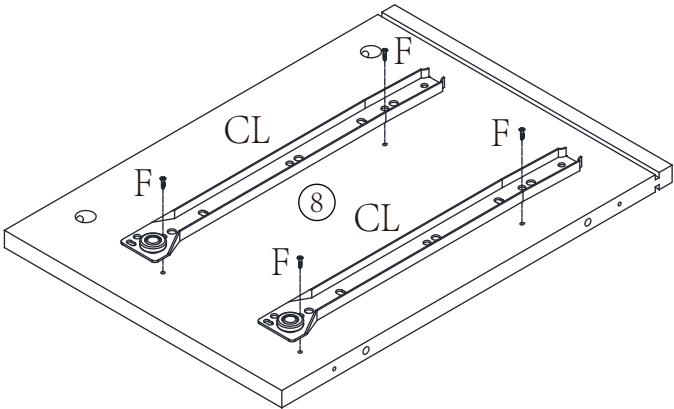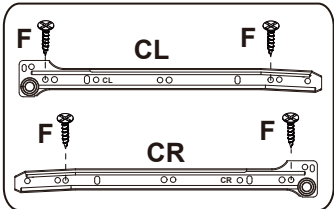

Fx8





 
CRx2




CLx2



 
 
 
STEP 7

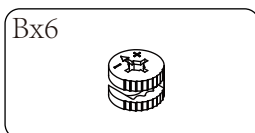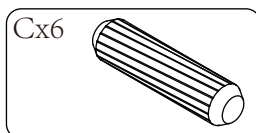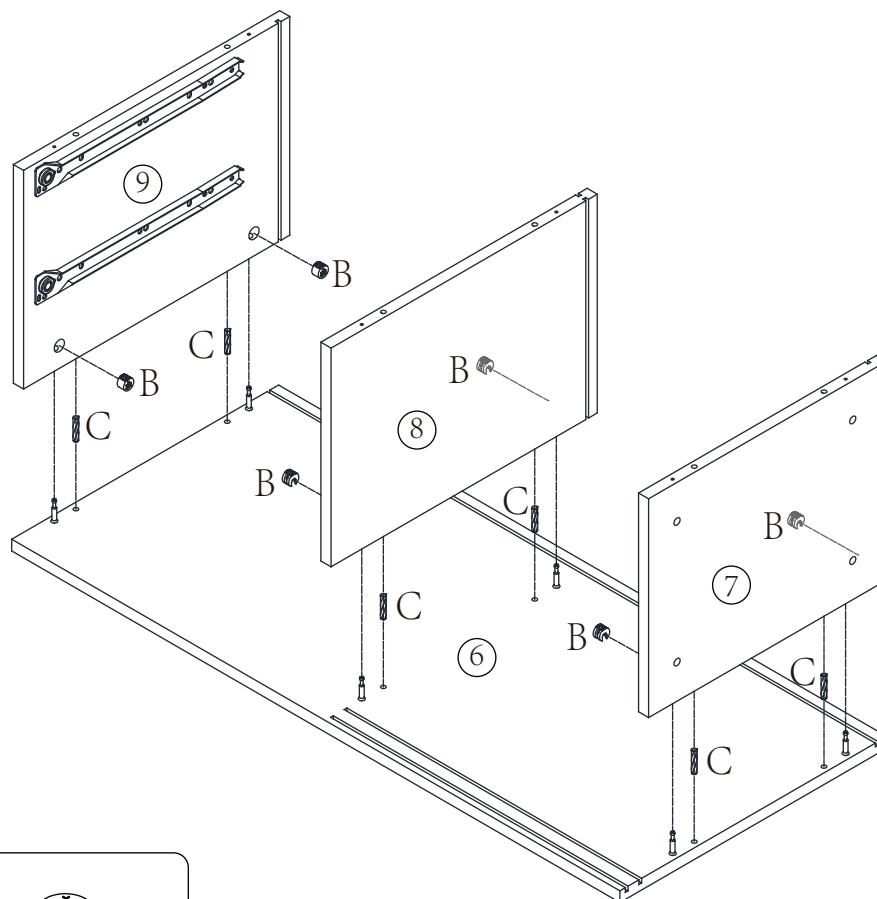






 
STEP 8

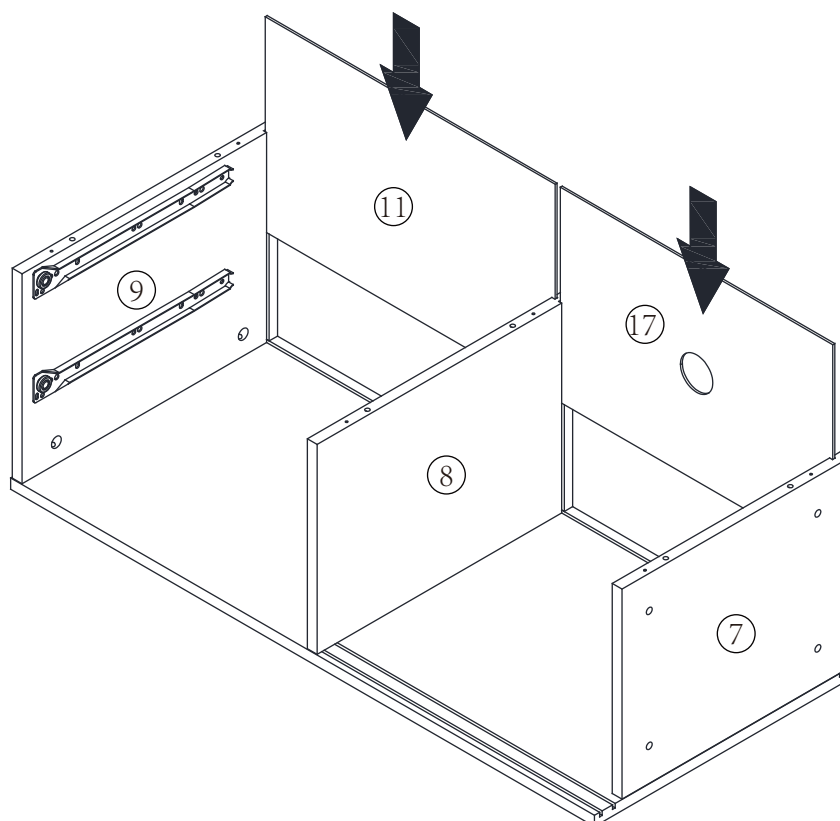

  
 
STEP 9

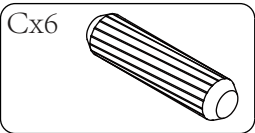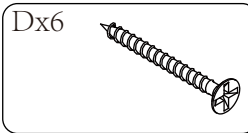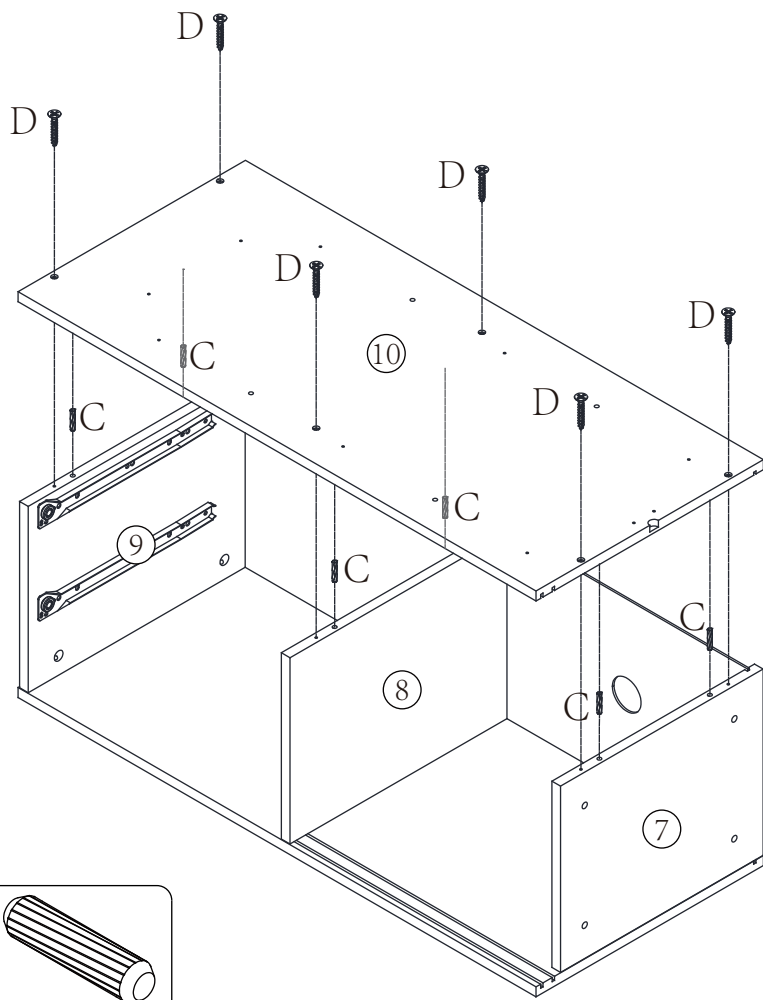

     
 
STEP 10

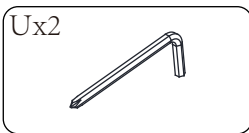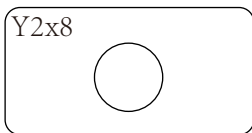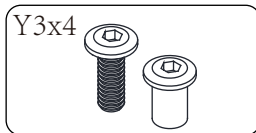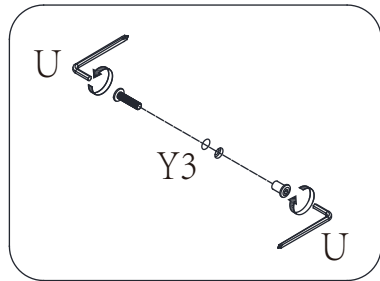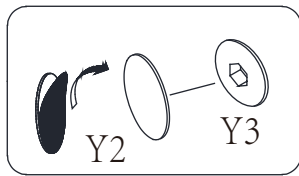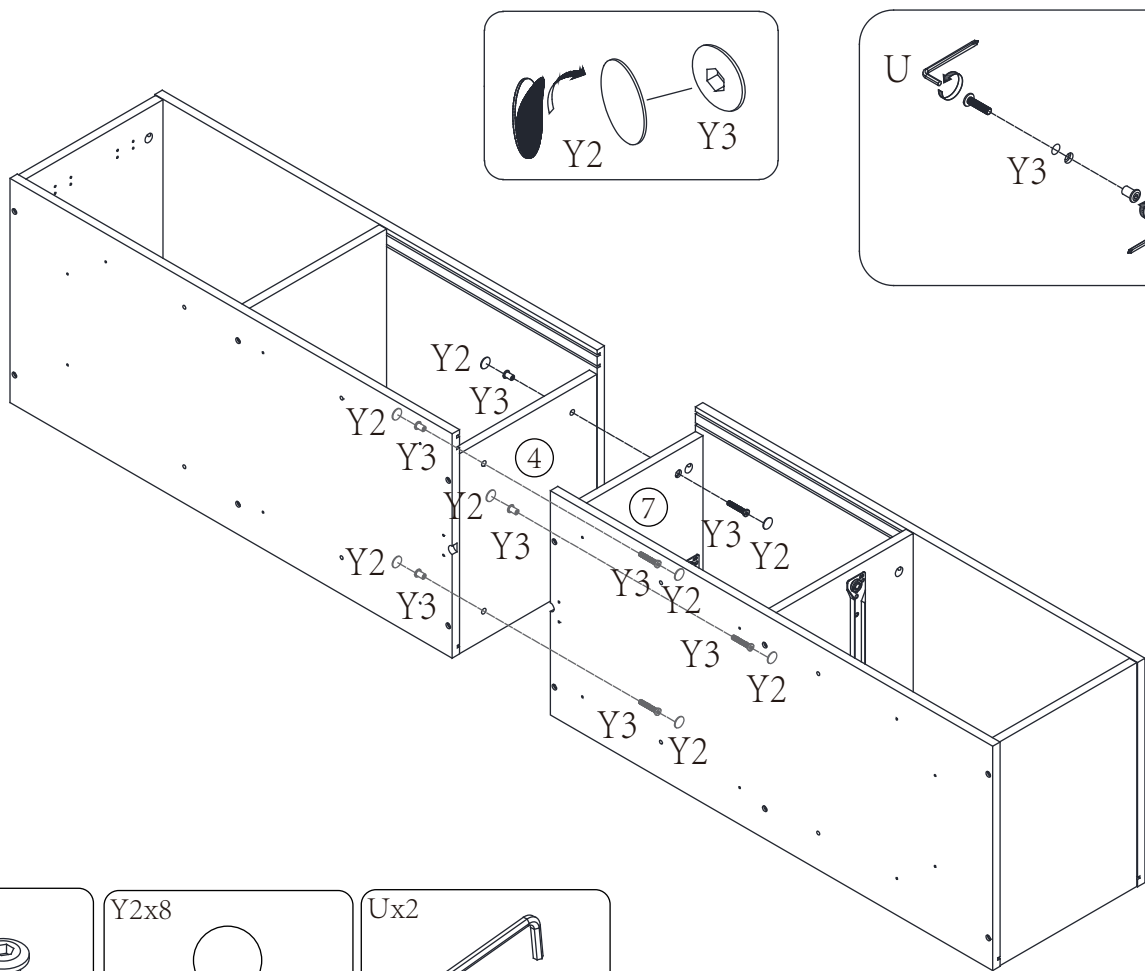

  
STEP 11

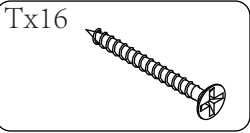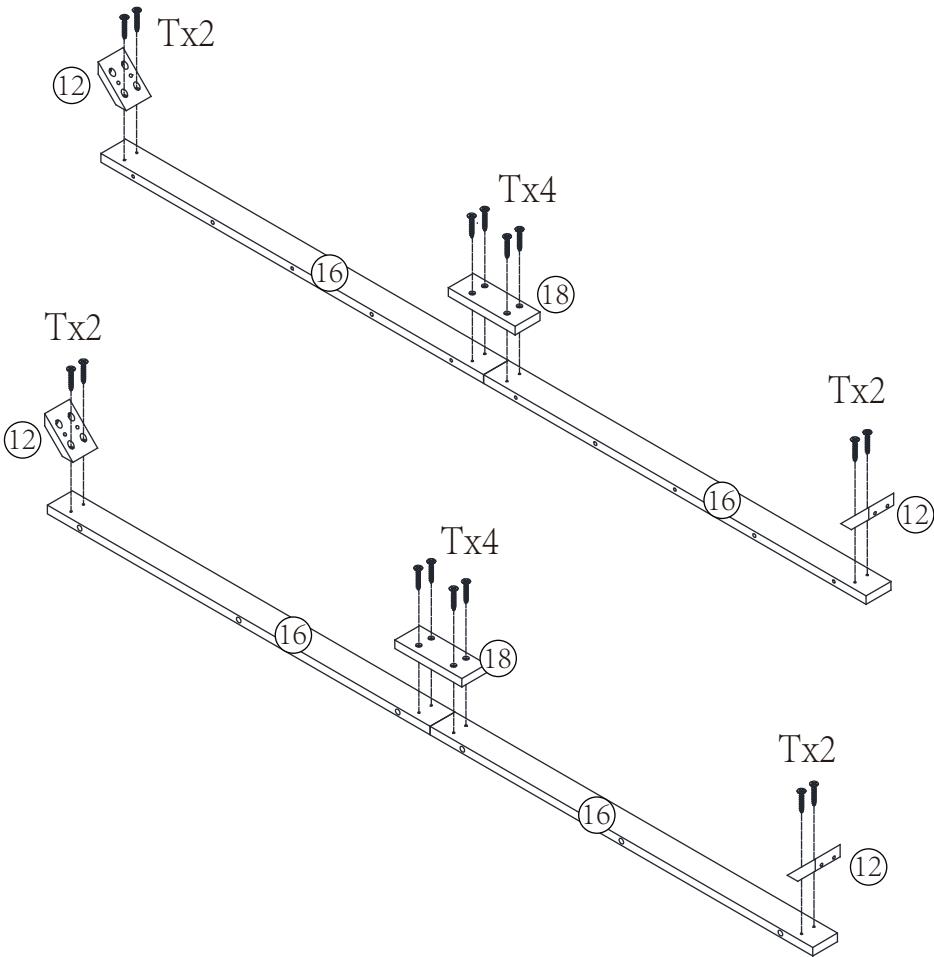

  
STEP 12

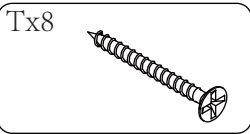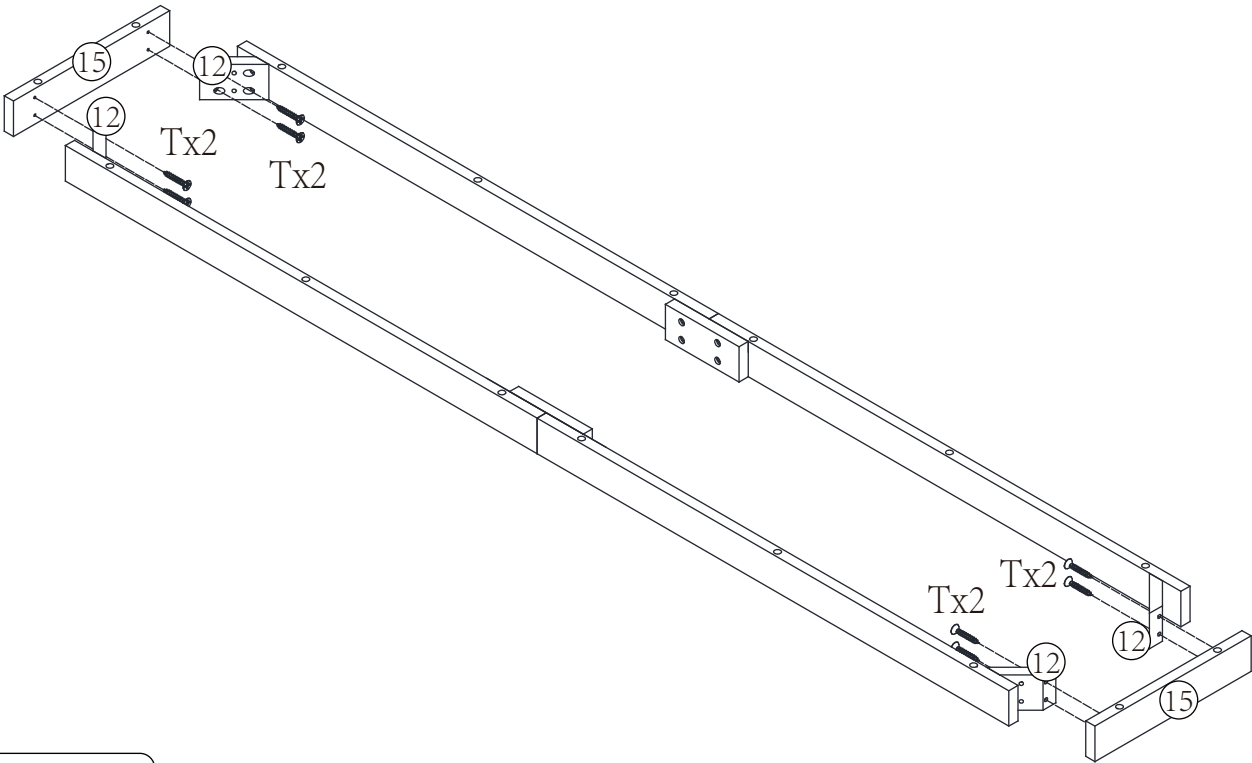


 
STEP 13

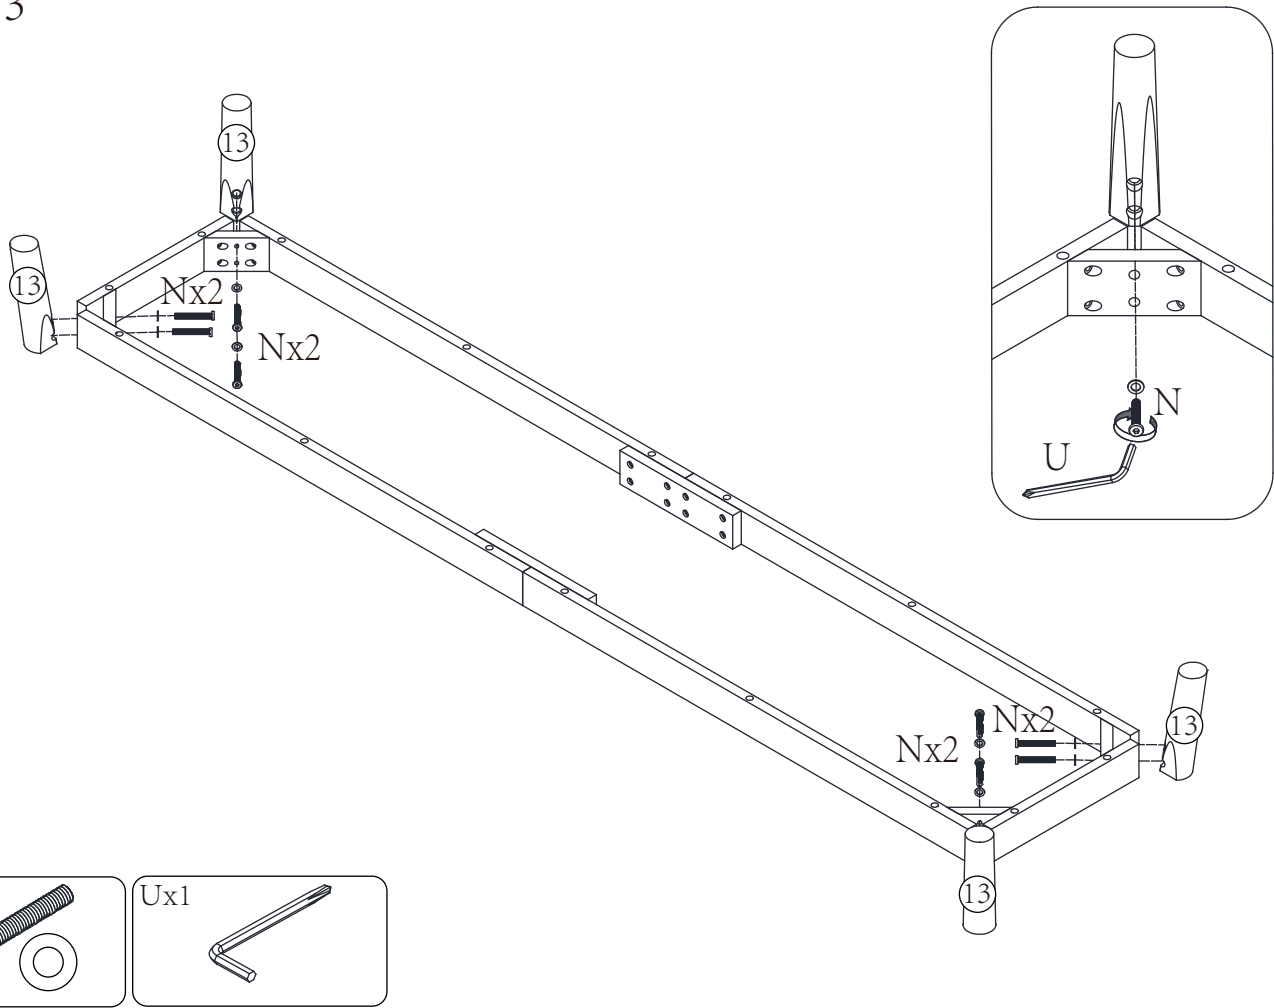

 
STEP 14

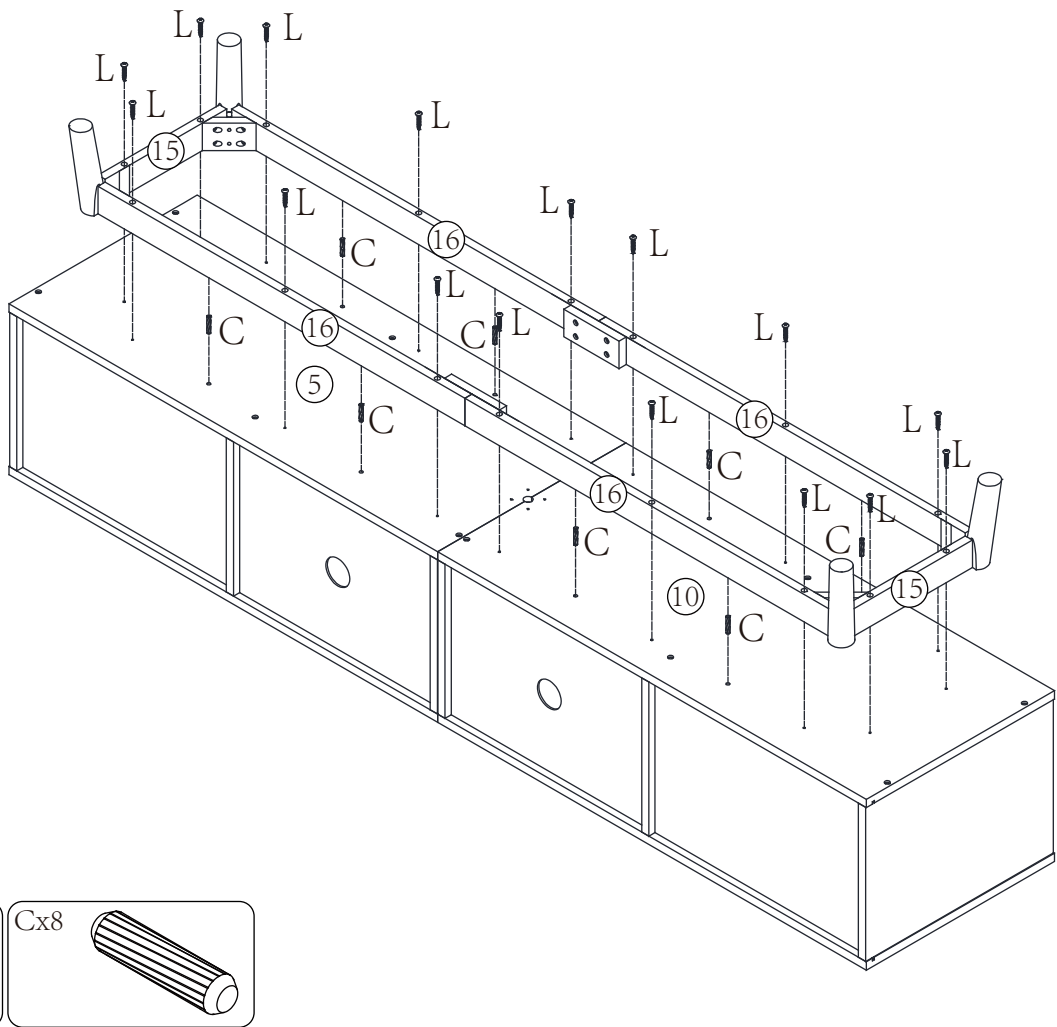

  
STEP 15

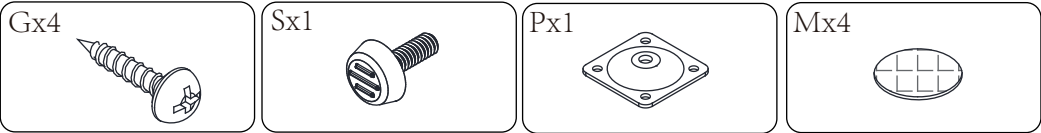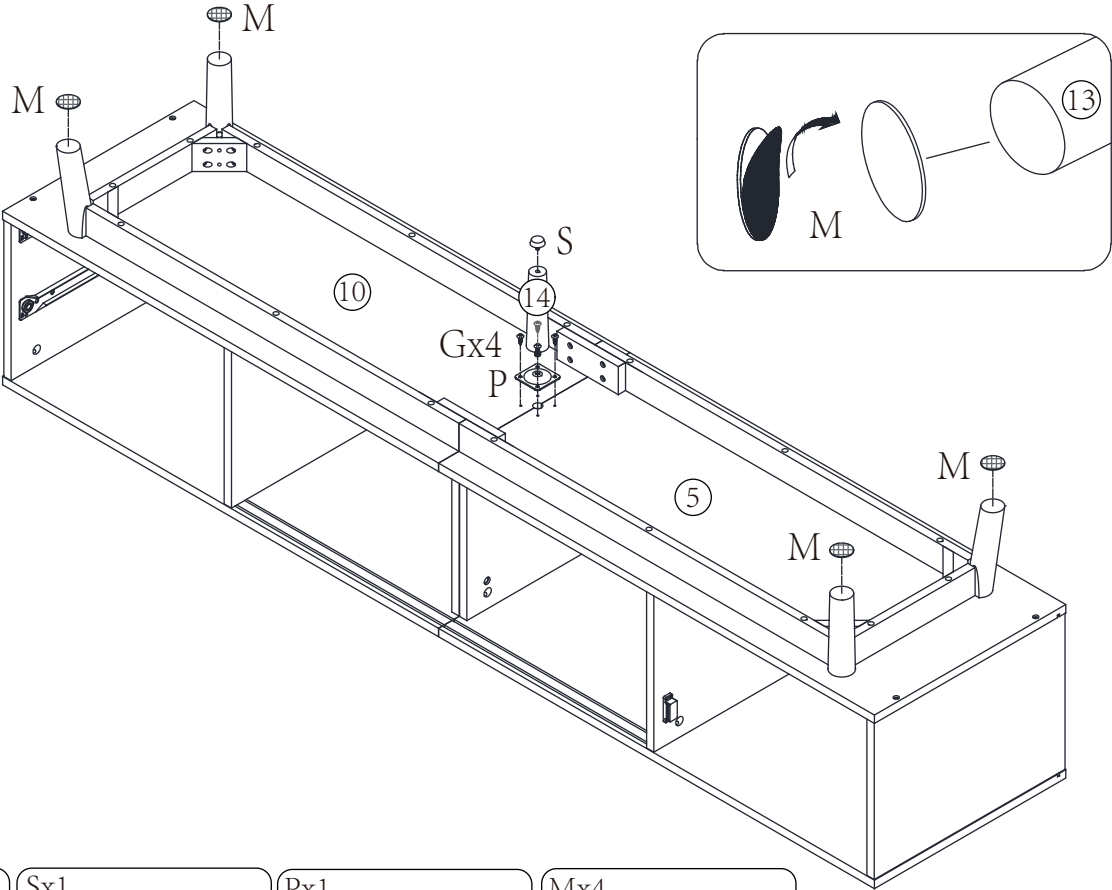

 
STEP 16

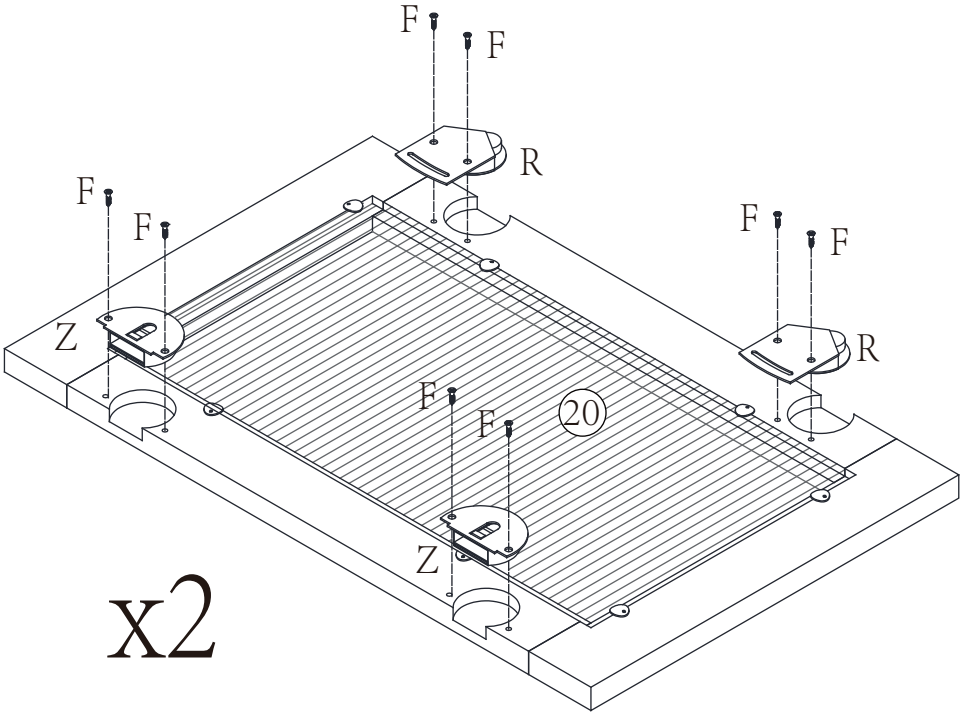







x2

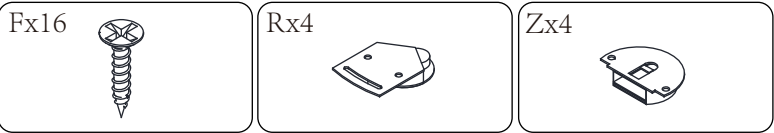 


 
STEP 17

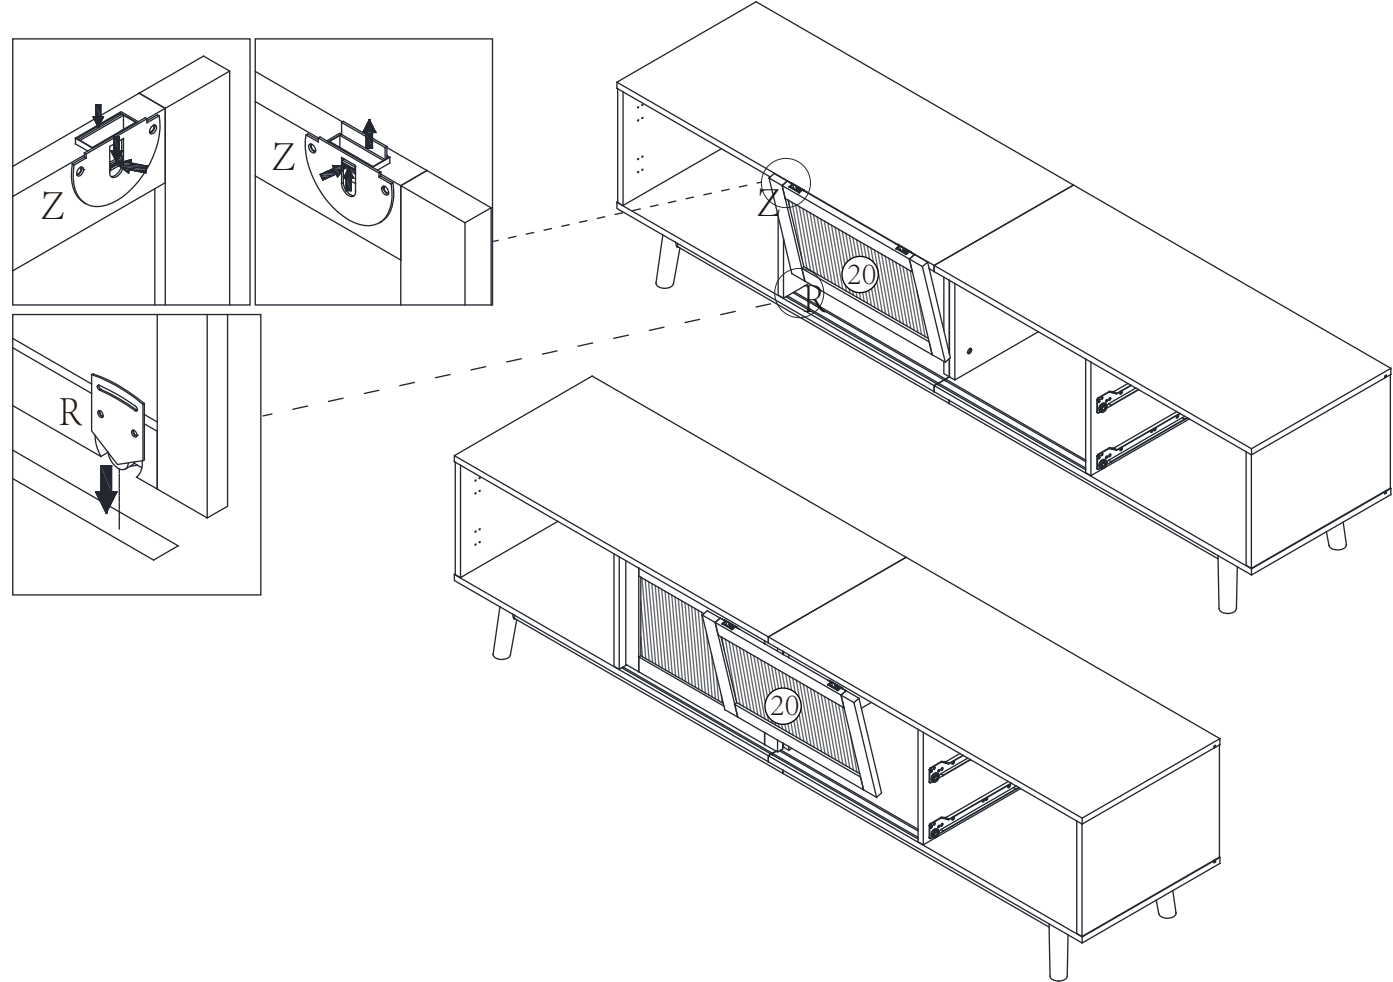

   
 
 
 
STEP 18

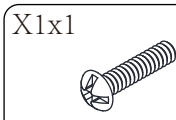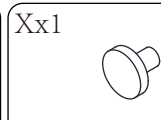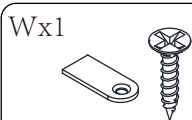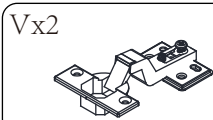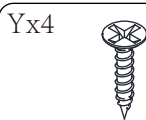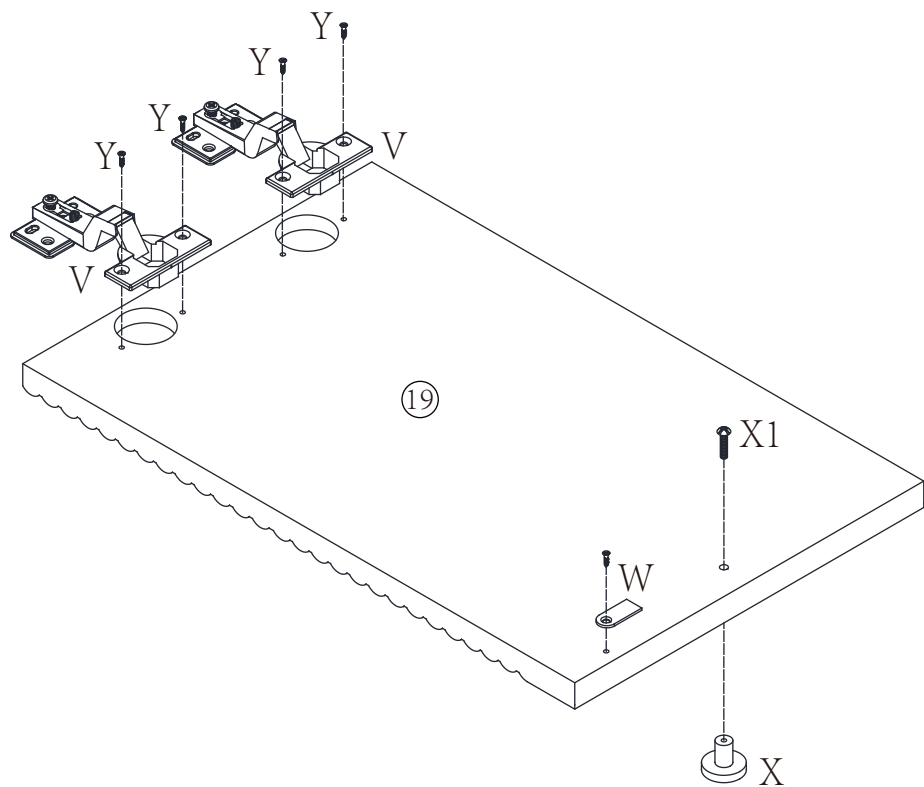

 
 
STEP 19

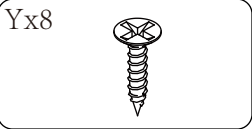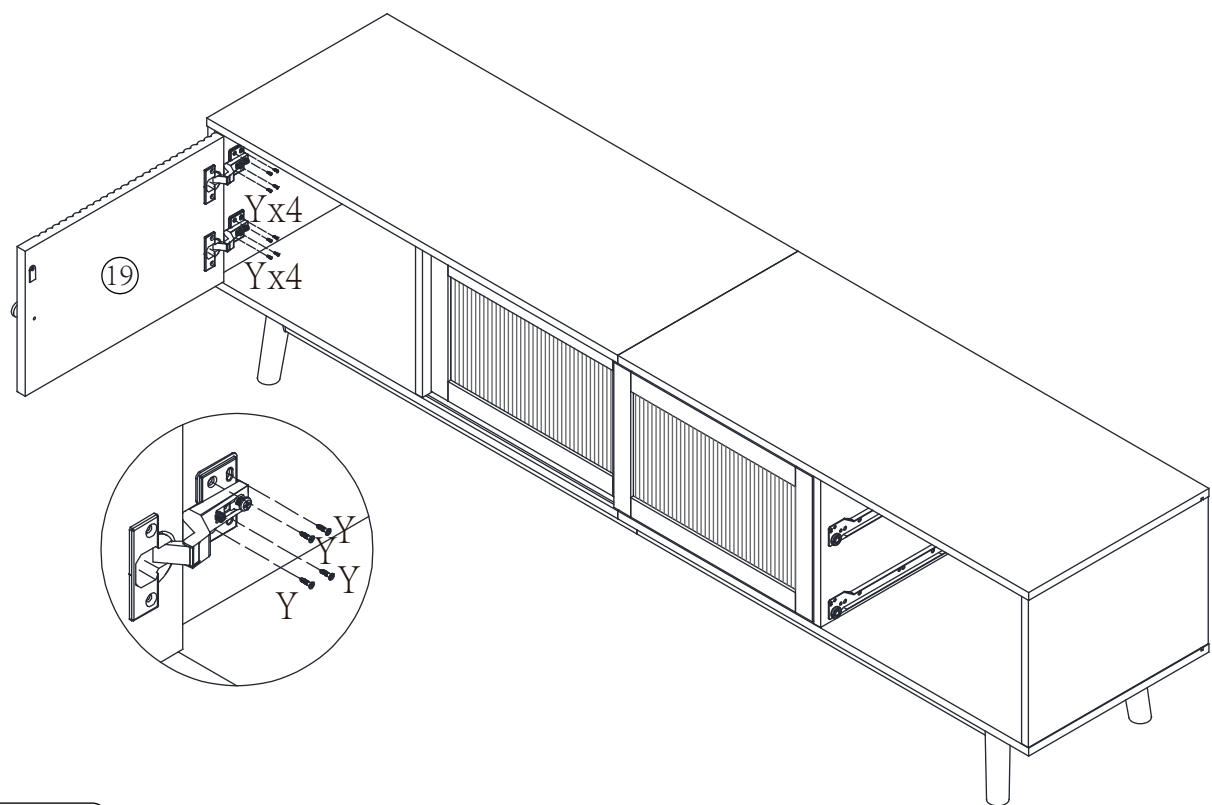

    STEP 20

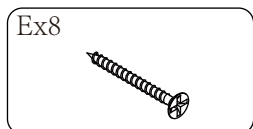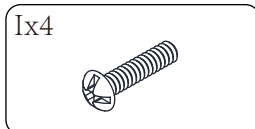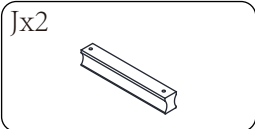
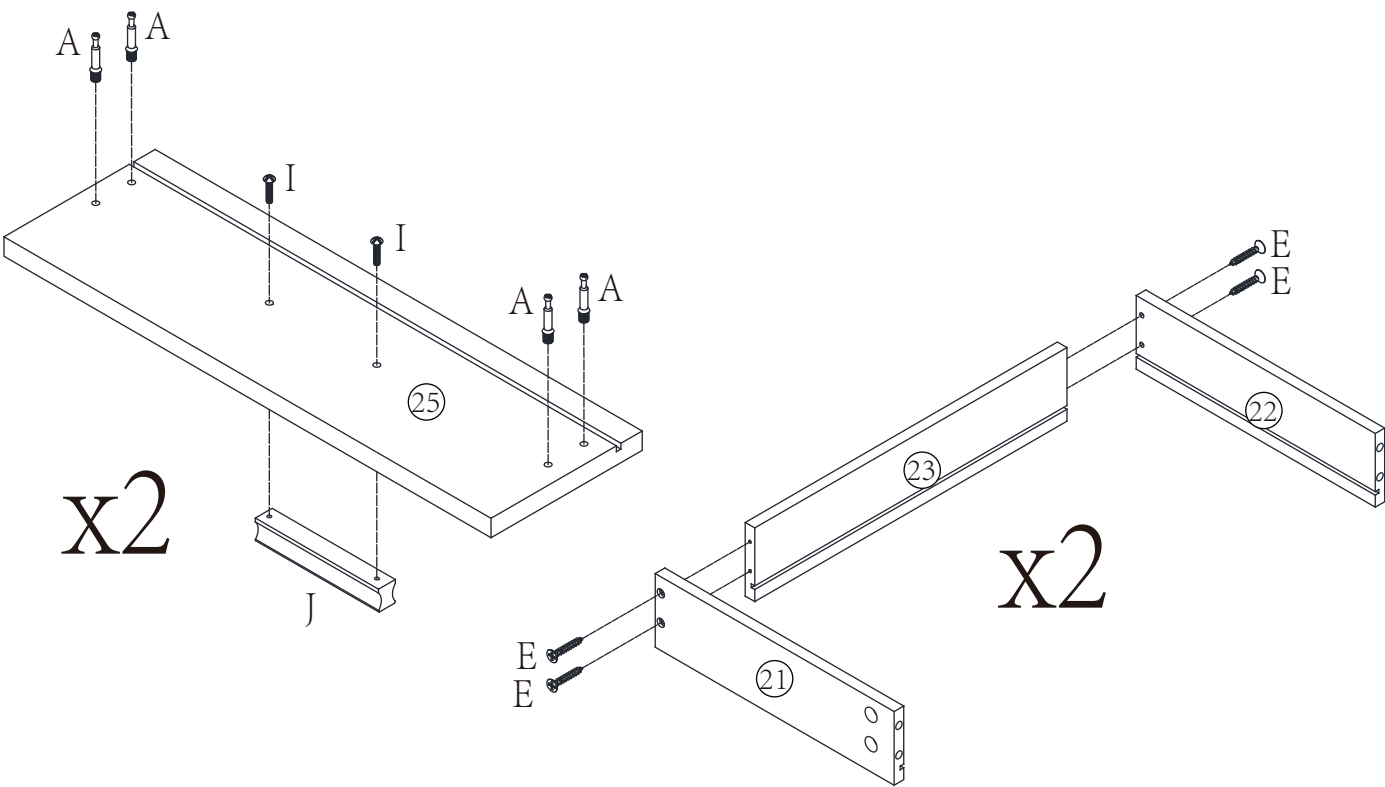


  STEP 21

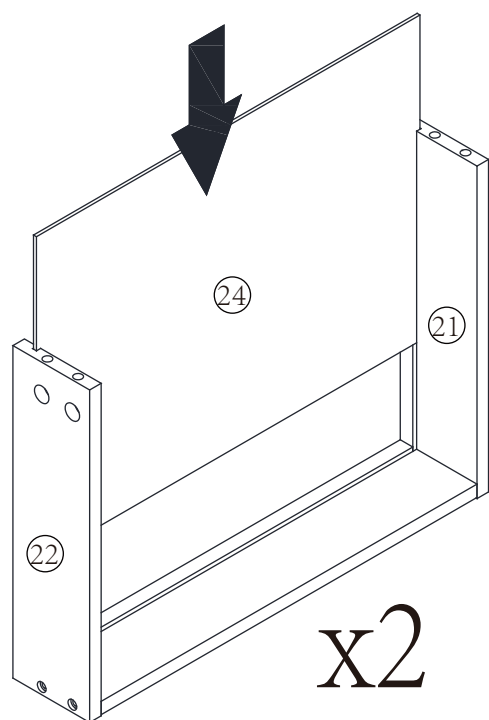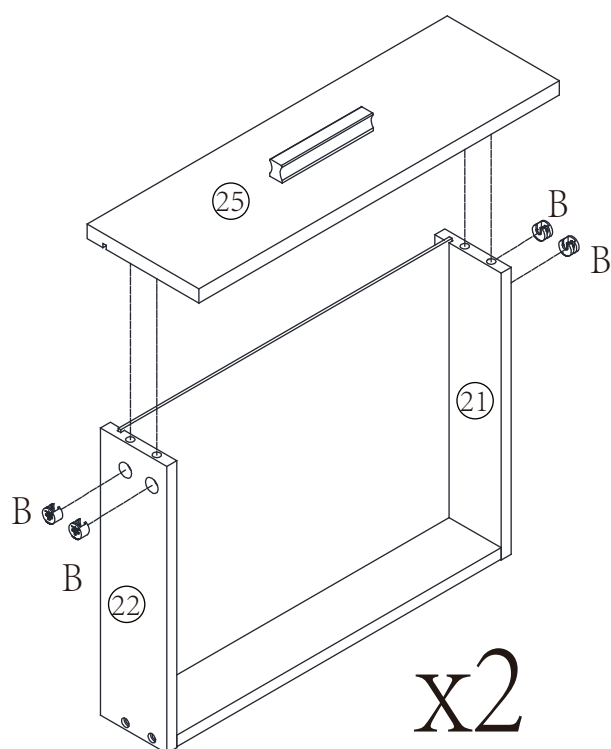
 x^2  x_2

  Bx8

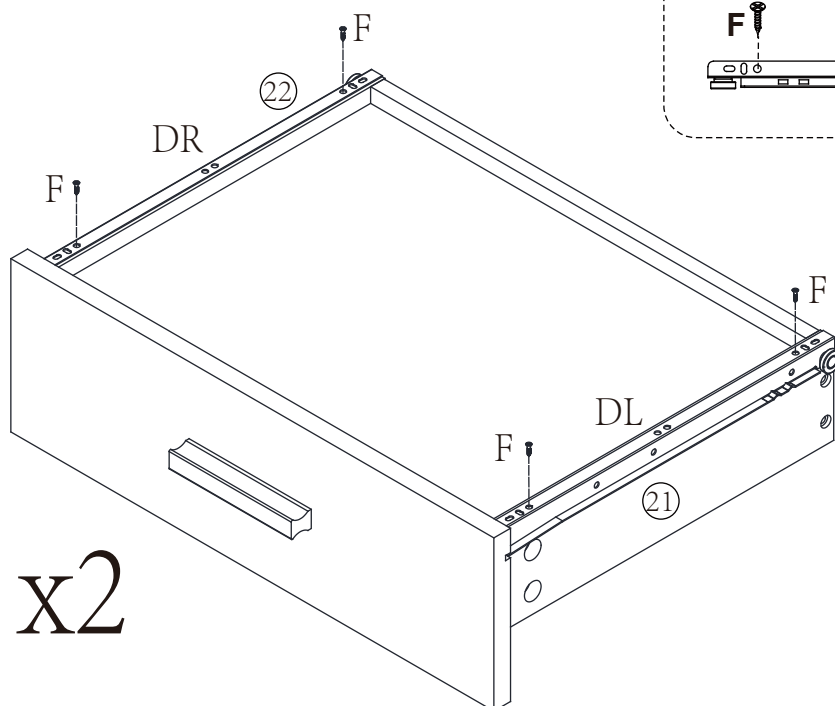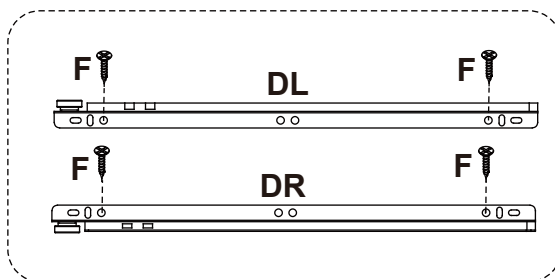


STEP 22 x_2 

 DLx2




DRx2

 





Fx8



 
STEP 23

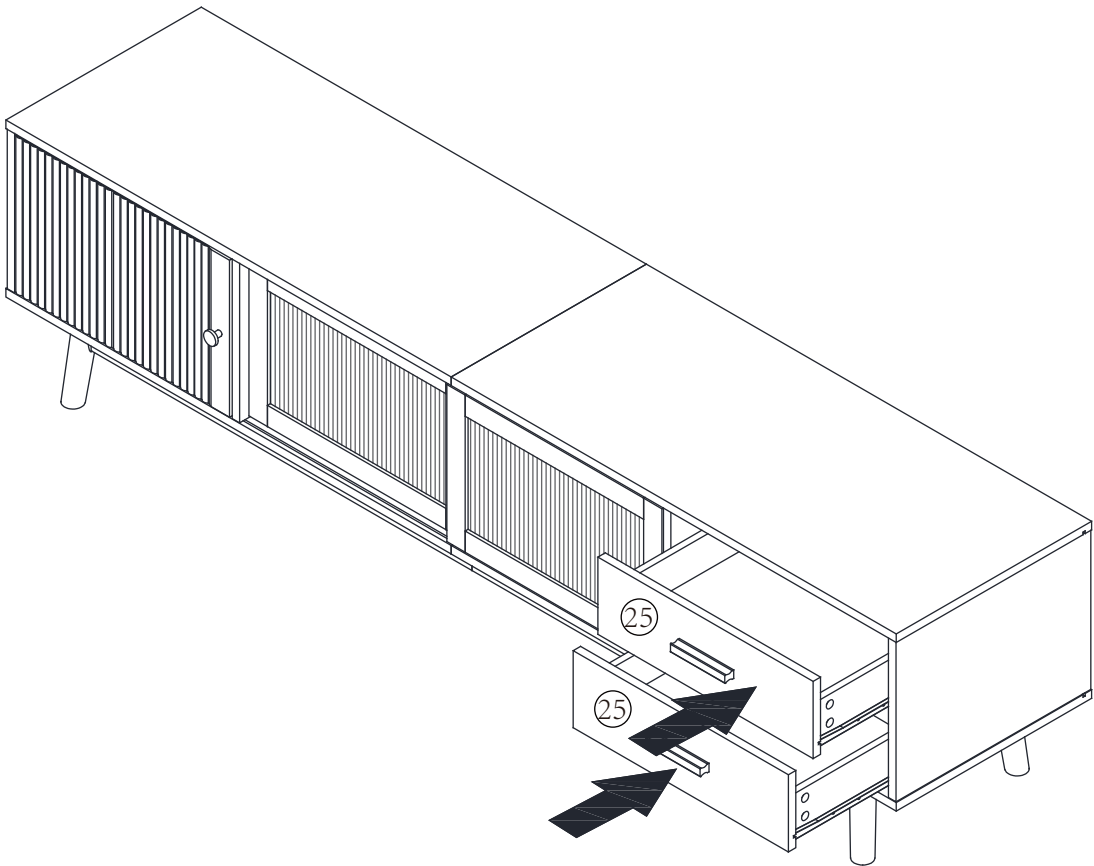

    
STEP 24

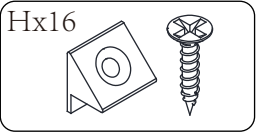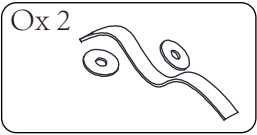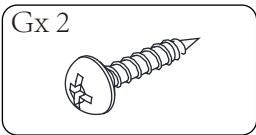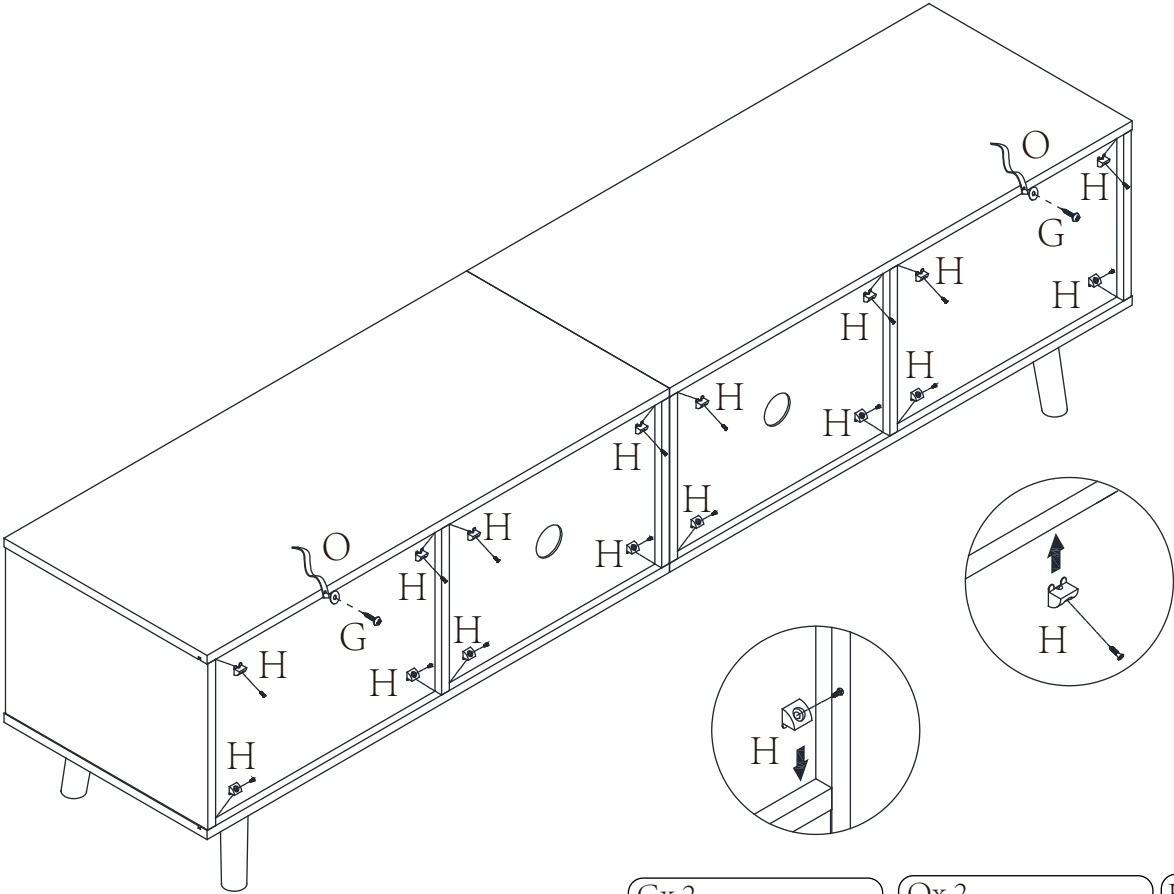

 
STEP 25

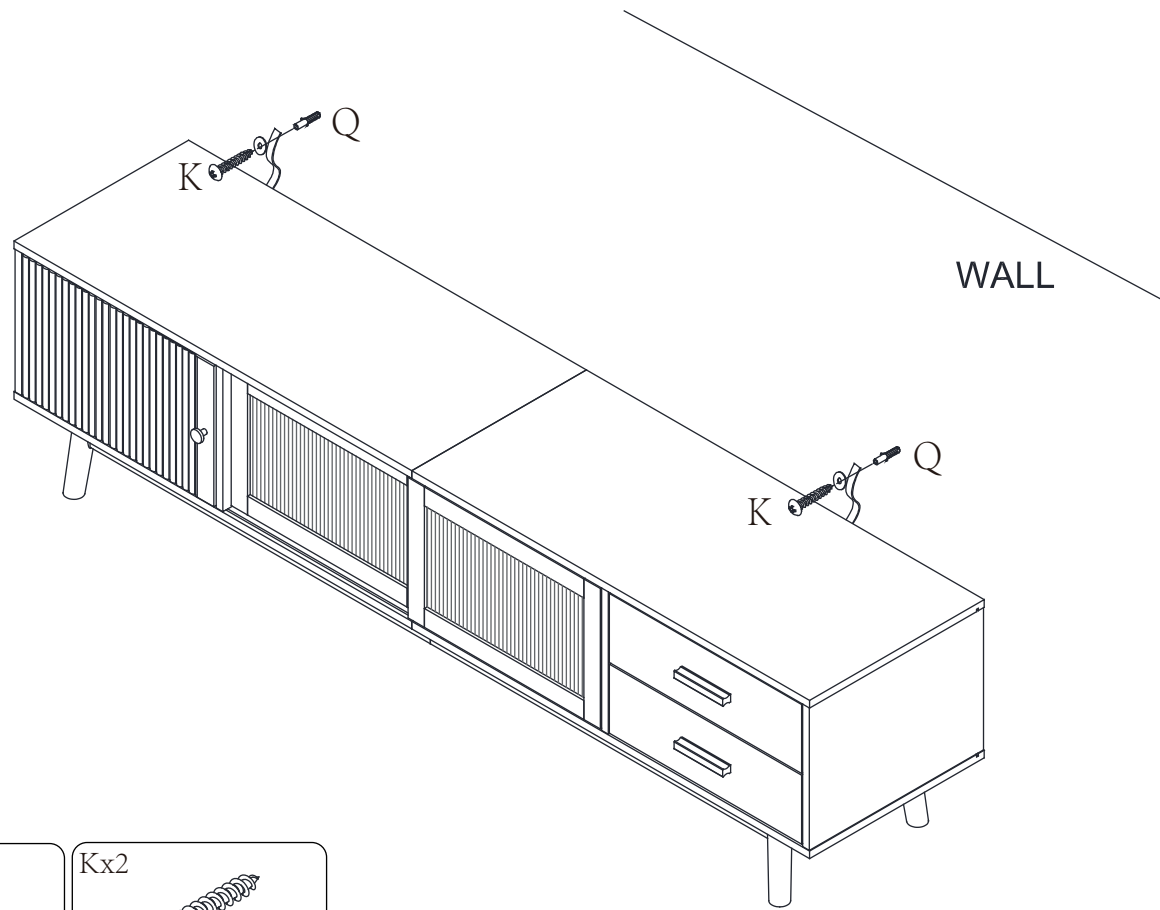

 STEP 26

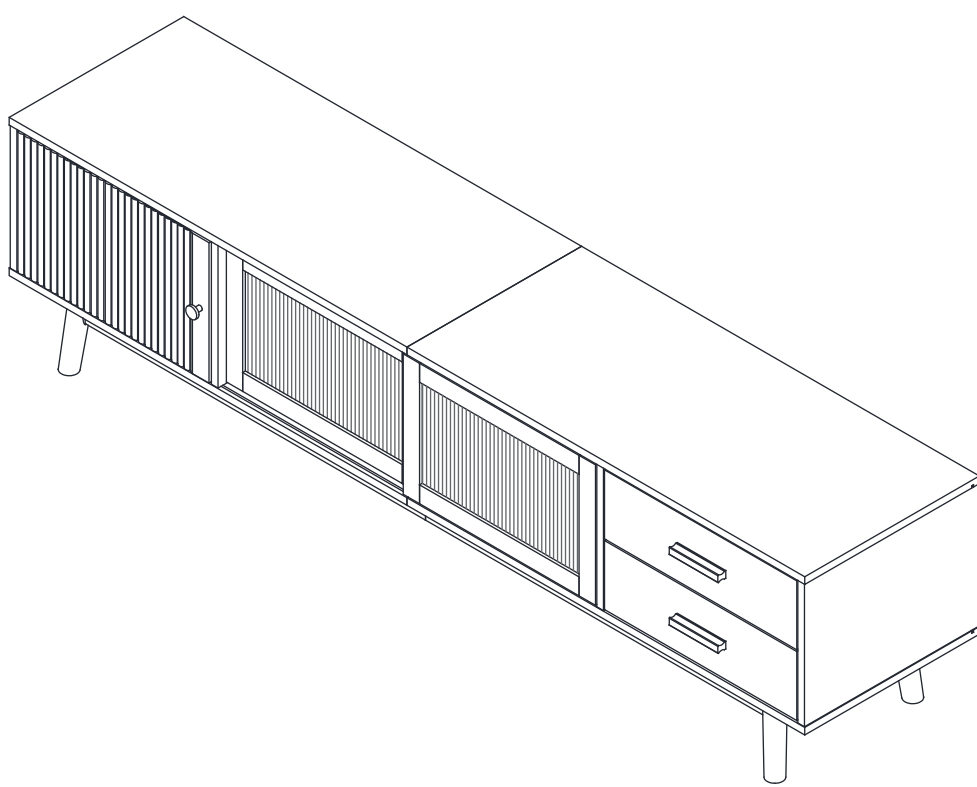


HINGE ADJUSTMENTS

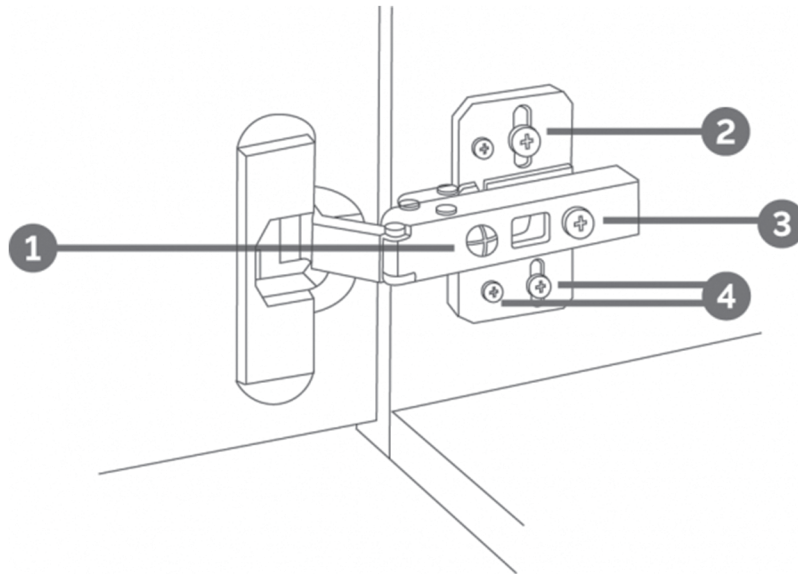 


① Sideways / Tilt adjustment

 Turn the screw
clockwise to move the door further away from
the side of the cabinet
anticlockwise to move the door closer to the
side of the cabinet

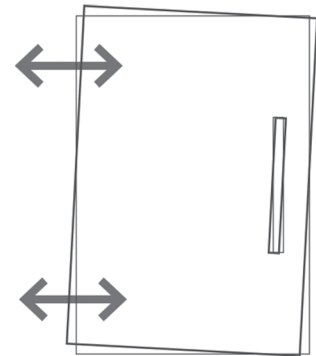

② ④ Height adjustment

 While supporting the weight of the door, turn the
screws
clockwise to move the door up
anticlockwise to move the door down

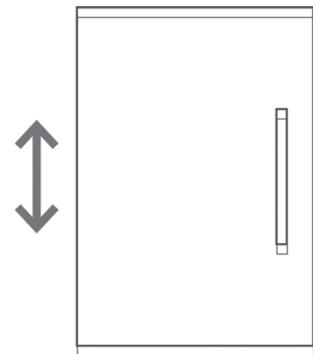

③ Forward and back adjustment

If the gap between the back of the door and the
cabinet is too small, and the door may not close
fully. Turn the screw
clockwise to decrease the gap between the
door and the cabinet
anticlockwise to increase the gap between the
door and the cabinet

