



OWNER'S MANUAL

3-PERSON SWING CHAIR

CONTENTS

I	SAFETY GUIDELINES	- 01
II	MAINTENANCE	- 02
III	ASSEMBLY INSTRUCTIONS • Preparation • Part List • Assembly Steps	- 02
IV	WARRANTY	- 14
VI	RETURN / REPLACEMENT POLICY	- 16

I. SAFETY GUIDELINES



WARNING

For your own safety, please strictly follow the instructions in this manual, otherwise personal injury may result!

Before you proceed, please read the following safety precautions:

- Separate and count all parts and hardware.
- Install not less than 6 feet from any obstruction such as fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- Tighten all nuts and bolts securely.
Never use power tools or excessive force during assembly and tightening of bolts.
- Always place the product on a flat, steady and stable surface.
- It is recommended to protect in case of strong wind or rain and in your absence.
- Do not use candles, matches, or any open flames in or near the swing.

II. MAINTENANCE




 



- Wash frame parts and fabric with mild soap and water, rinse thoroughly.
- Dry frame completely and allow the fabric to drip dry.
- Do not use bleach, acid, or other solvents on the fabric or frame parts.
- Please inspect and tighten all bolts or fasteners on a regular basis to ensure proper performance and safety of your swing.


III. ASSEMBLY INSTRUCTIONS

1. Preparation

Please remove all protective foam. Before assembling, make sure that you lay out and identify all parts listed below in the parts list. install on level ground.

2. Part List

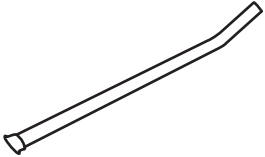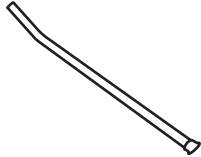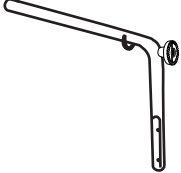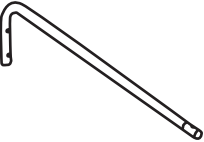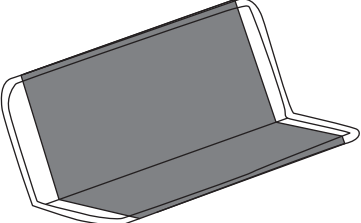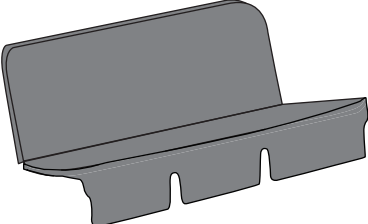
Frame Part			
A  Front Leg x2	B  Back Leg x2	C  Top Bar (Right) x1	C-1  Rotation Base x1 (preinstalled on part C)
D  Top Bar (Left) x1	D-1  Rotation Base x1 (preinstalled on part D)	E  Connecting Bar x2	E-1  Arm Bar x4
F  Back Support (Right) x1	G  Back Support (Left) x1	H  Spring Hook x2	I  Handle x2
J  Seat Frame x1	J-1  Cushion x1		
K  Upper Canopy Frame x2	K-1  Rotation Connector x2 (preinstalled on part K)		

 L  Lower Canopy Frame x2	M  Canopy x1
Y  Knob x2	
Screw Pack	
O  M6 x 30 Bolt Set x1	P  M6 x 35 Bolt Set x2
	Q  M6 x 45 Bolt Set x2
R  M6 x 50 Bolt Set x4	S  M6 x 63 Bolt Set x4
	T  M6 x 68 Bolt Set x4
U  M6 x 90 Bolt Set x4	Z-1  Allen Wrench x1
	Z-2  Double-ended Spanner x1


3. Assembly Steps

Step1 - Frame Assembly


(1). Attach Top Bar (Left) #D and the Top Bar (Right) #C by M6 x 45 Bolt Sets #Q.

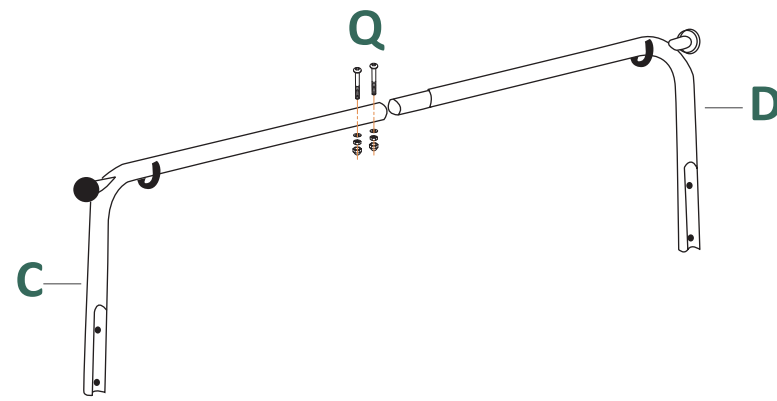


(2). Put assembled top bar in the middle of Front Leg #A and Back Leg #B and align their holes.
Connect them by M6 x 90 Bolt Set #U.

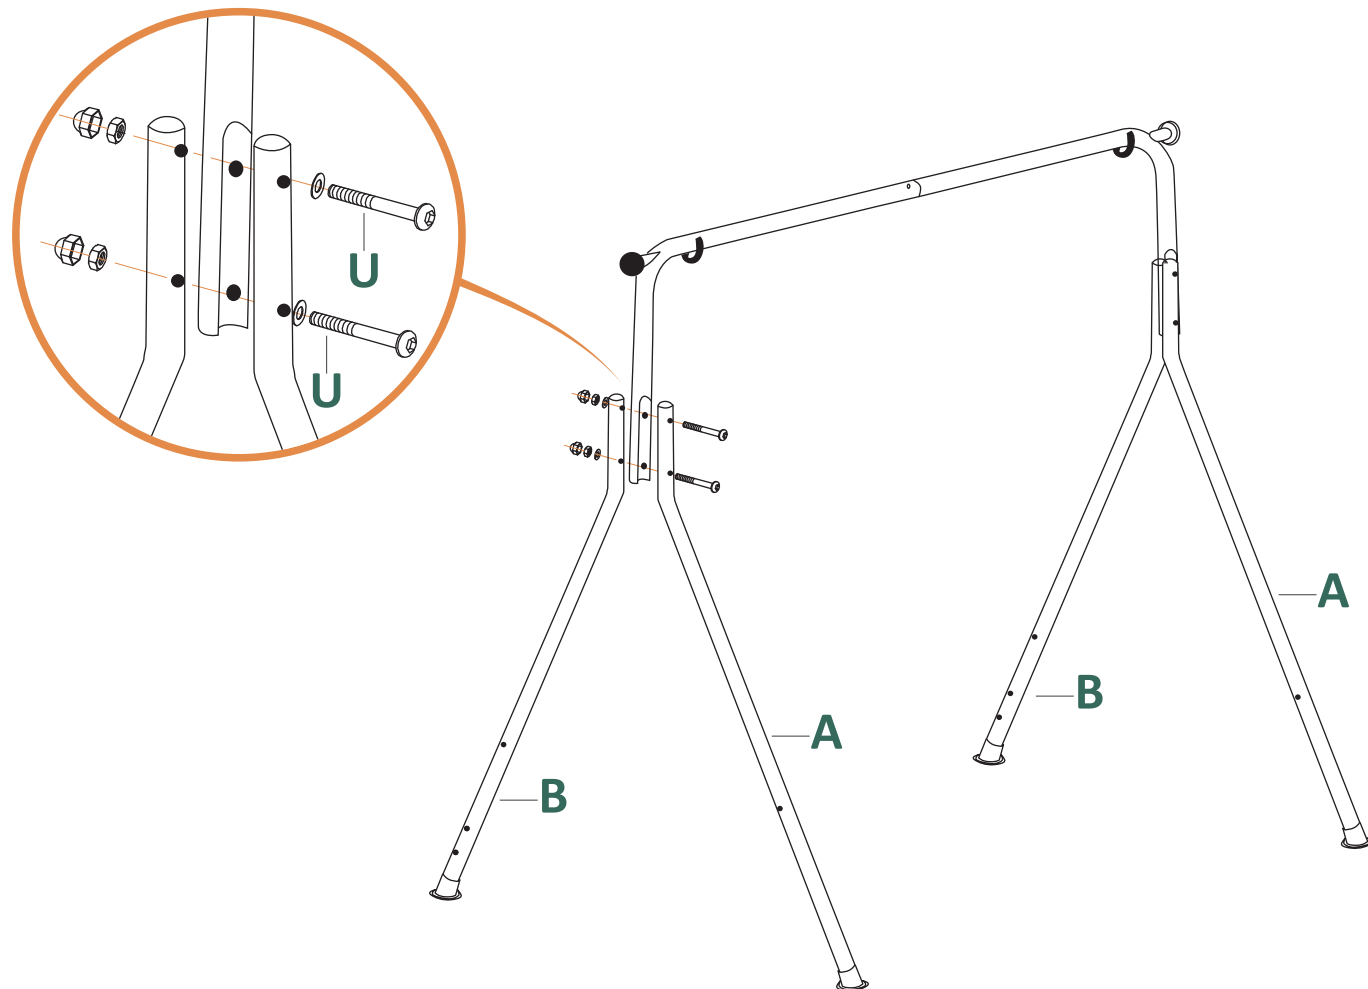


(3). Align the holes of Connecting Bar #E, Front Leg #A and Back Leg #B.
Then fixed them by M6 x 50 Bolt Set #R.

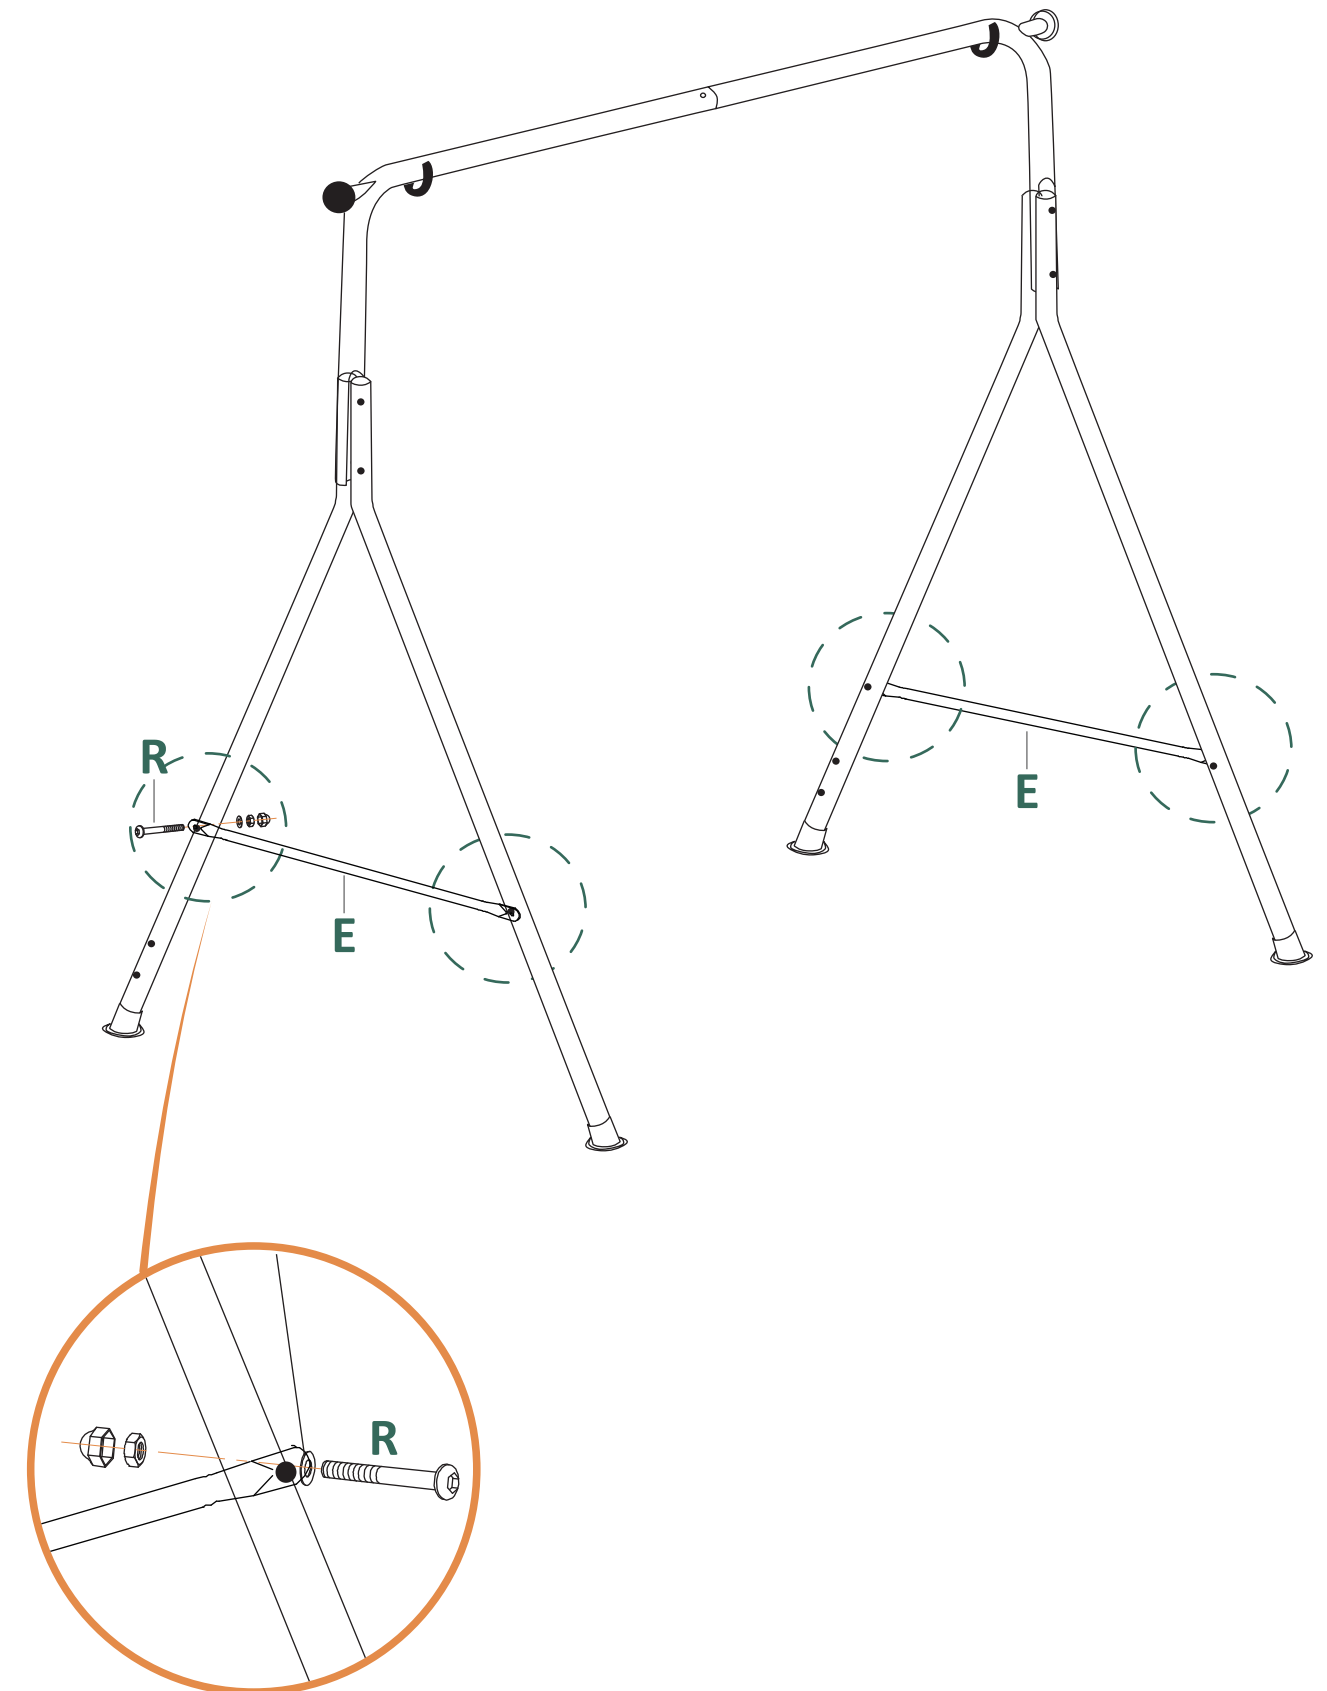

(4). Attach Bottom Support (Right) #F and Bottom Support (Left) #G by M6 x 30 Bolt Sets #O.

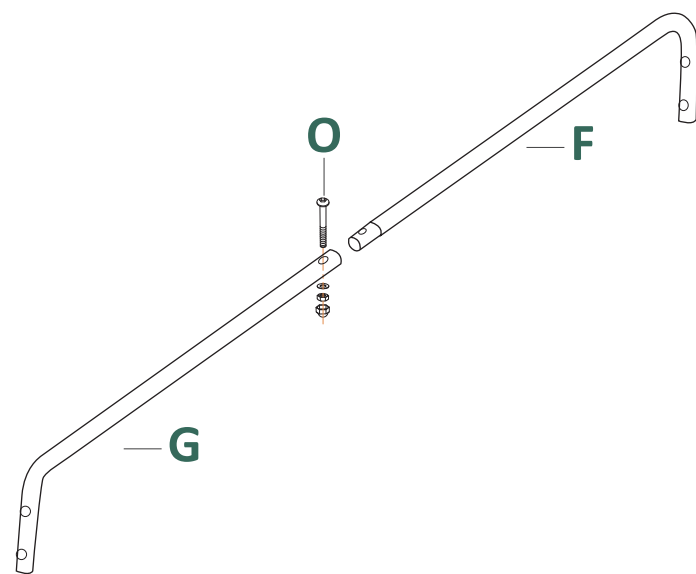


(5). Attach assembled Bottom Support to #B by M6 x 68 Bolt Sets #T.

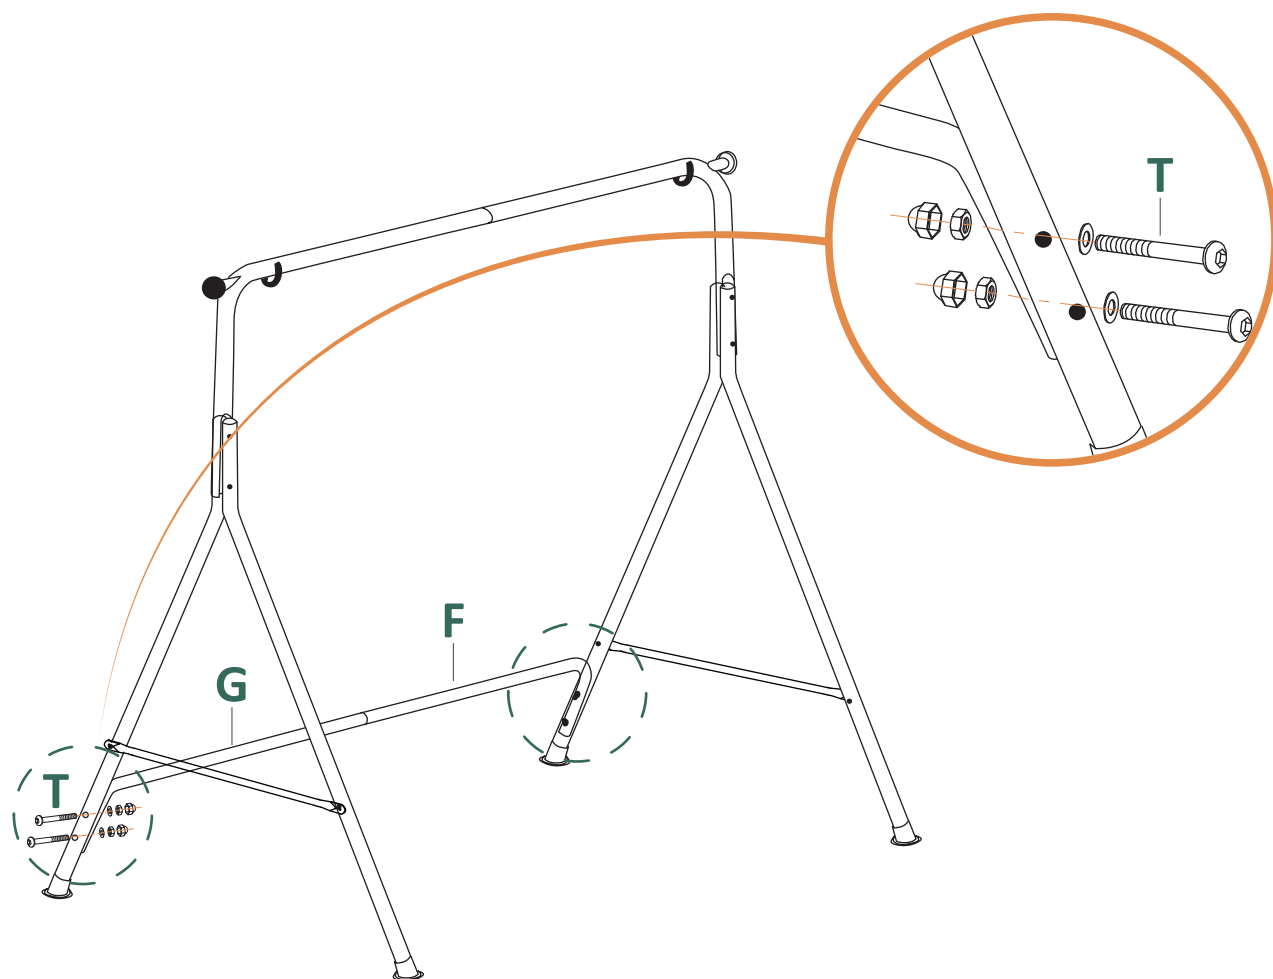


Step2 - Seat Assembly


(1). Attach Handles #I to the Seat Frame #J by M6 x 63 Bolt Sets #S.

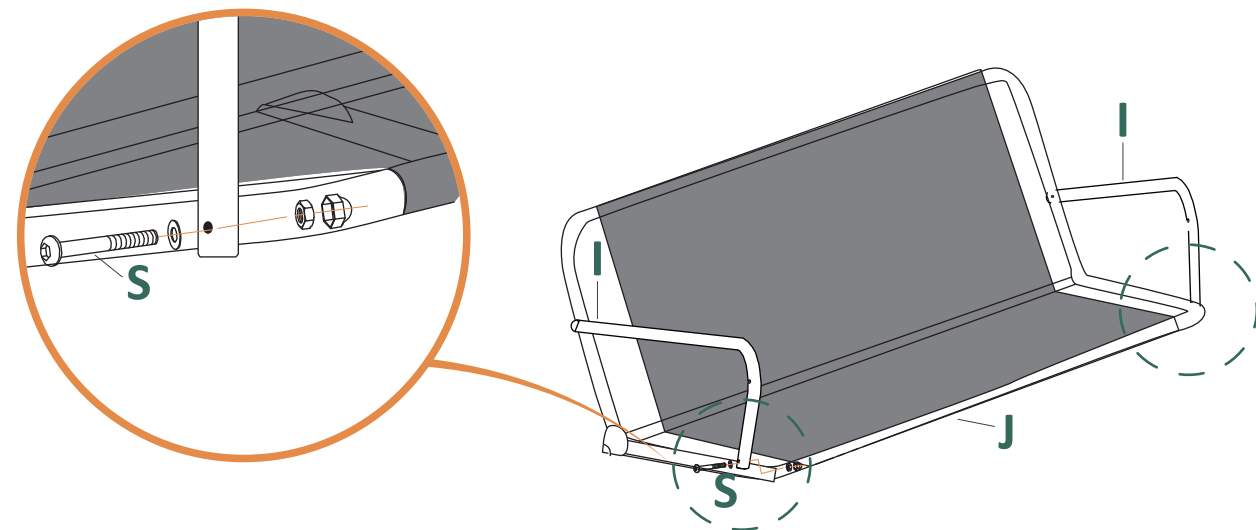

(2). Place Cushion #J-1 on the #J.

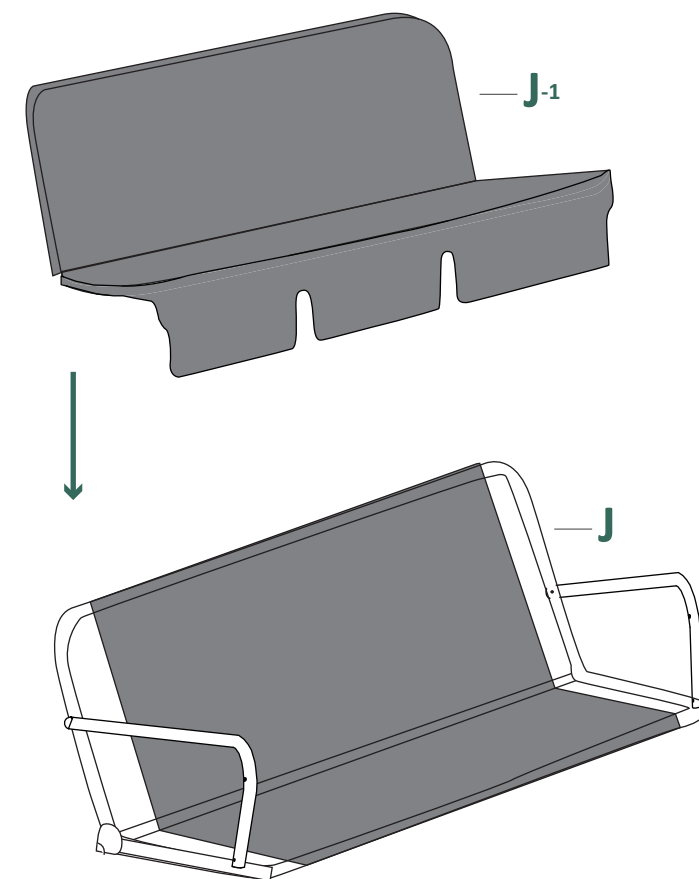

(3). Connect the Arm Bars **#E-1** with **#I** by using M6 x 35 Bolt Sets **#P** at the turning of **#I** and M6 x 63 Bolt Sets **#S** in the end.

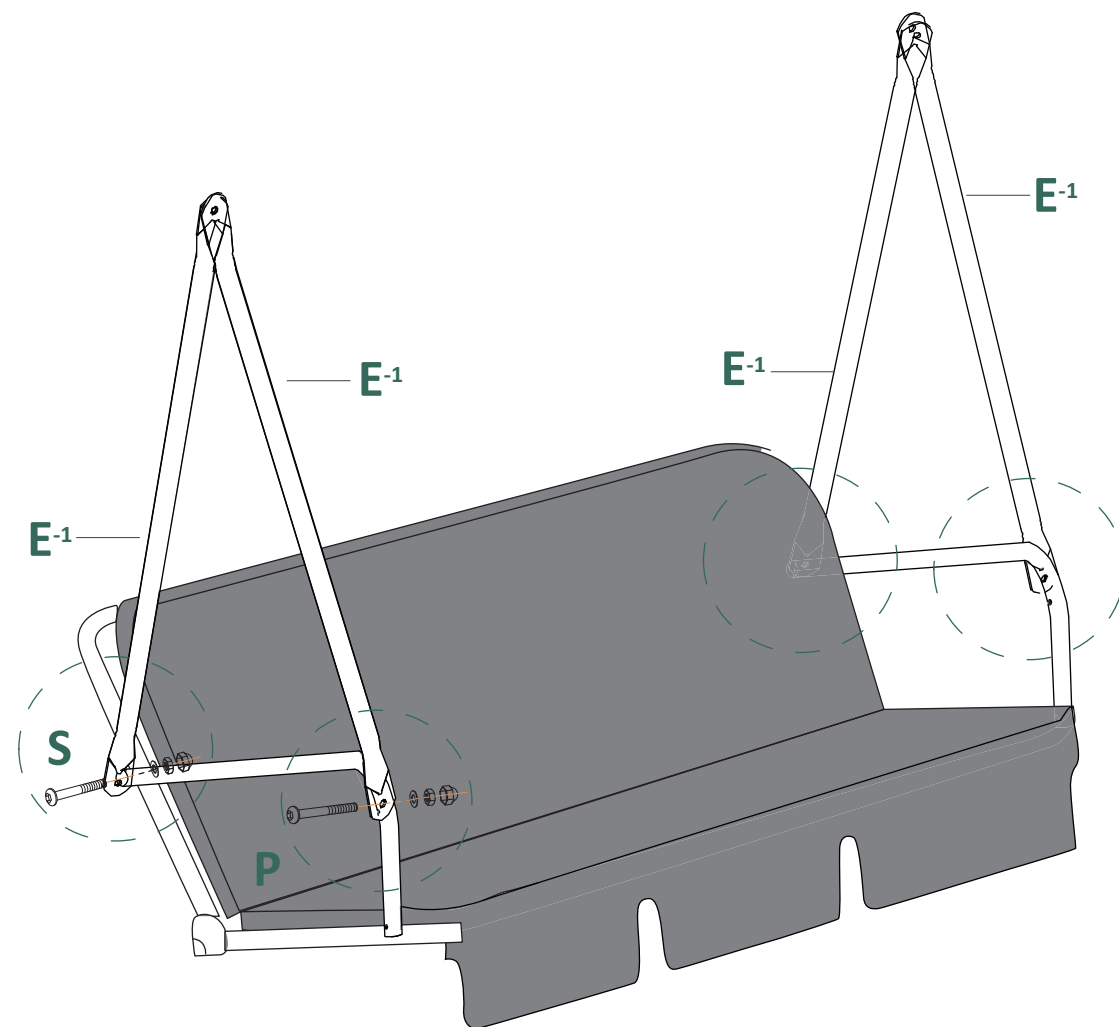


Step3 - Combine Assembly

(1). Thread a Spring Hook **#H** through the holes of **#E-1**. Then hang the assembled chair below the assembled swing frame by using **#H**.




(2). Align the gear of the Ceiling Rotation Base **#C-1** & **#D-1** of top bar and the gear of Rotation Connector **#K-1** of Upper Canopy Frame **#K**, then screw in the cross Knob **#Y** lightly.


NOTE: Do not tighten the **#Y** before completing the installation.

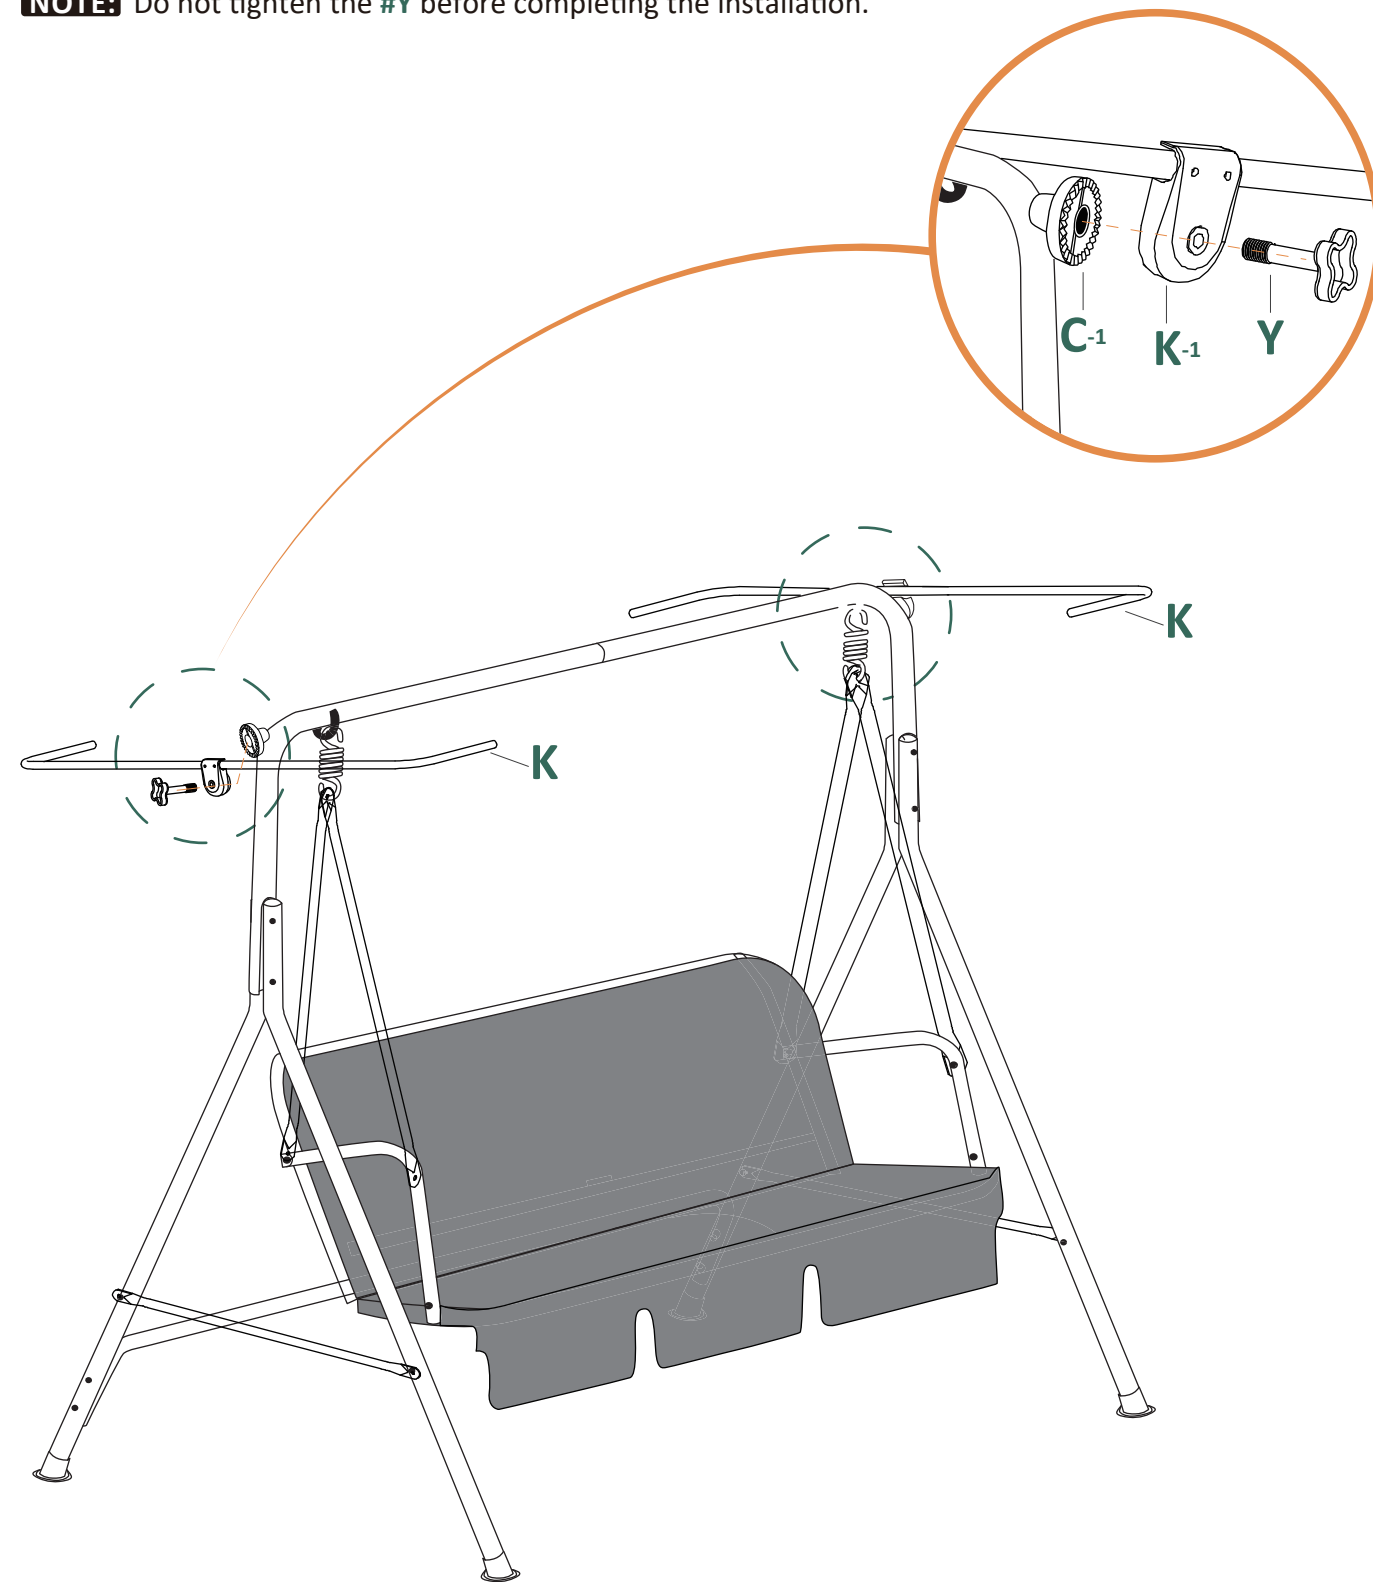

(3). Insert Lower Canopy Frame **#L** into the tube of the Canopy **#M**.

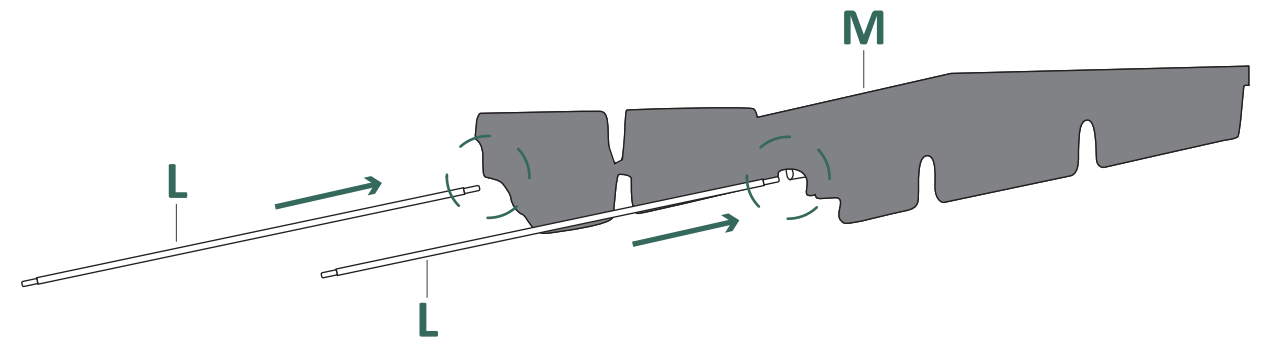

(4). Insert **#L** into the tube of **#K**.

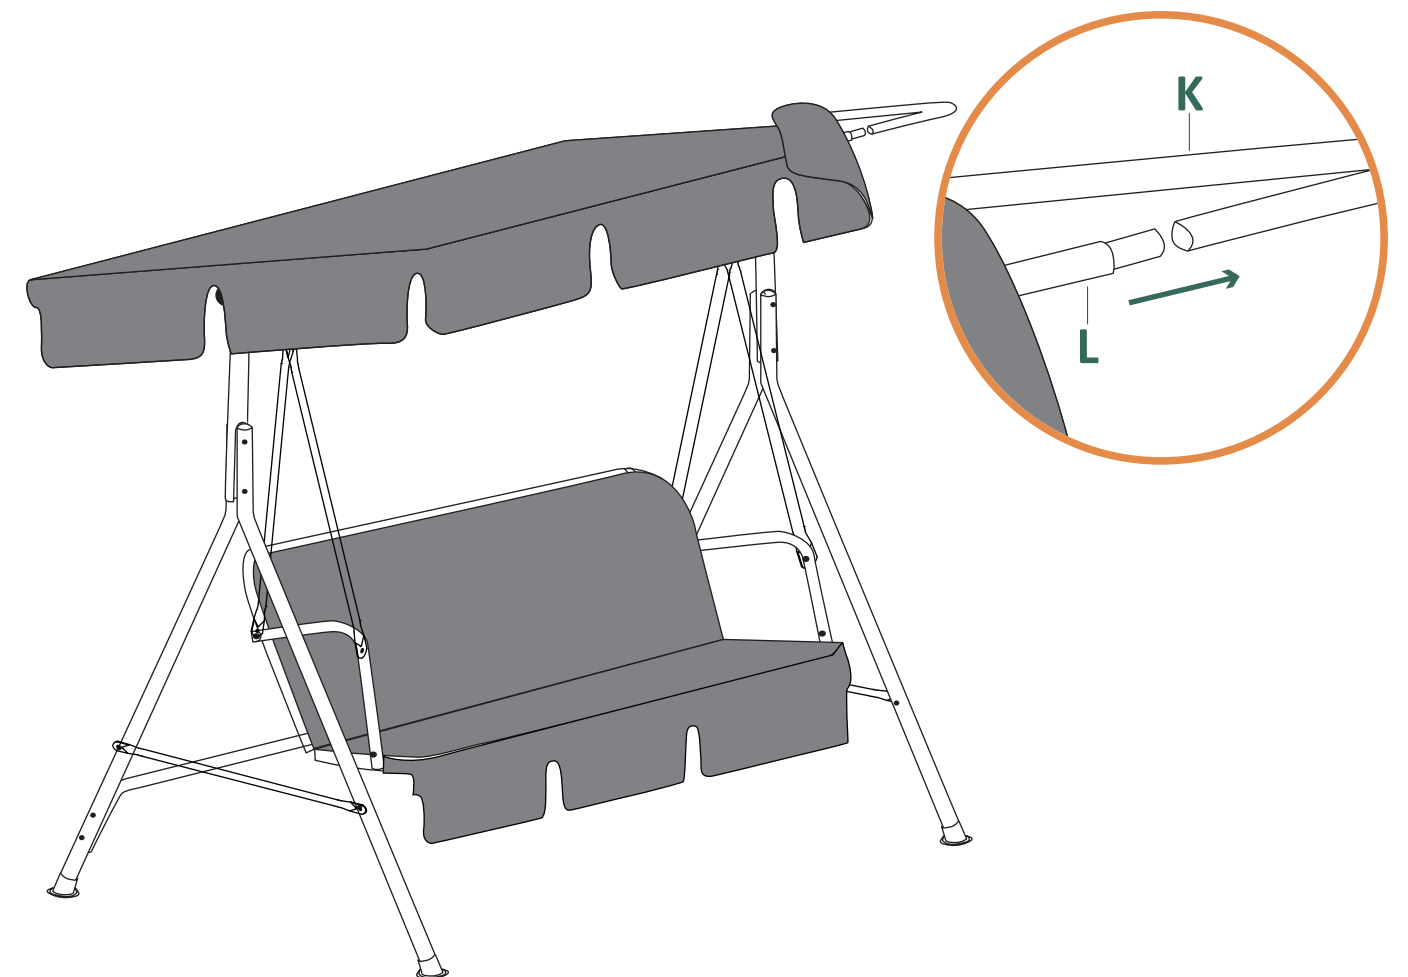

(5). Adjust the angel of canopy. In the end,check all screws are fixed tightly before using.



V. WARRANTY

- **Notice**
- For product beyond the limited manufacturer warranty period and scope, we can also provide replacement service, but a basic charge will be charged according to the circumstances.
 - The warranty only applies to products and does not include any accessories or enhancements.
 - Warranties are only valid in the 48 contiguous United States and are contingent upon the consumer operating the product according to the corresponding instruction manual.

Swing Frame	★ 1 Year
Swing Fabric	★ 6 Months

CONSUMER WARRANTY LIMITATIONS AND EXCLUSIONS

All warranties begin on the date of delivery.
All warranties are to the original purchaser .

- We will replace the defective parts or send replacement product provided that the warranty parts have not been subjected to misuse, abuse or improper service by the consumer, for example, damaged wire arising in consequence of negligence or improper operation.
- Exclusions also include components with damage caused by:
 - Contamination
 - Abuse, misuse, accident, or negligence
 - Commercial use, or use other than normal
 - Improper operation, maintenance, or storage

NOTE:

We will pay standard shipping rates on all warranted parts for the first year. We can also sell you replacement part for a discount price when your product is out of warranty policy.

VII. RETURN/ REPLACEMENT POLICY

■ Notice

Why don't we recommend returning the item by yourself?

- Huge cost- UPS/FedEx oversize fee.
- Need you to take the box to UPS/FedEx facility.

Return/ Replacement Policy

You have 30 days from the date of purchase to return any item purchased from our store.

Please securely pack the item in its original packaging, including any accessories or manuals that came with the product.

Return Conditions

We accept the return of items that are in new, unused condition, with original tags attached and all original packaging and other components included. Refunds will be issued in the original form of payment for the price of the item, including taxes.

- Please keep the original packaging in case the product needs to be returned. If the original packaging is not available, the newly found packaging needs to meet the following size standard:
UPS/FedEx packaging size standard: (width+ height) * 2+ length< 128 inch.
- Please disassemble the product before you return it, otherwise there will be a huge cost as oversized and it could even exceed your order amount.
- Please do not purchase return label for a damaged/defective product by yourself.
- If you have any problem to return the product, please contact us immediately, we will do our best to help you with a reasonable solution.