

IMPORTANT: Read and Follow please !

1. Always follow instructions to use the provided stakes, tie-down cords and sand bags to secure your canopy whenever set up.
Always keep the canopy at its lowest height unless necessary.
2. Do not use your canopy for permanent shelter. Always use common sense, never set up or continue to use this canopy in potentially inclement weather including wind, rain, snow and lightening storms or mixed. It may damage the canopy which could result in injuries to the users.
3. Use caution while opening and closing the frame, take care to avoid bending the frame or pinching fingers.
4. Keep your canopy away from open fire or heat sources at all times. Do not barbecue or build fires under your canopy.
5. Do not leave the canopy erected or unattended for extended periods of time. Avoid setting up your canopy on steep inclines.
6. Spot clean with a mild soap and water, never use harsh detergents, abrasives or bleach or use a washing machine on any portion of the fabric.
7. Make sure canopy fabric is completely dry before folding or storing to avoid mildew.

WARRANTY:

- (1) Life time free replacement for parts and accessories.
- (2) Six months free warranty for frame and fabric.
- (3) Photography required for service to be rendered.



ADULT ASSEMBLY REQUIRED. PLEASE KEEP SCREWS AND PARTS OUT OF REACH OF CHILDREN.