 


# User's Manual

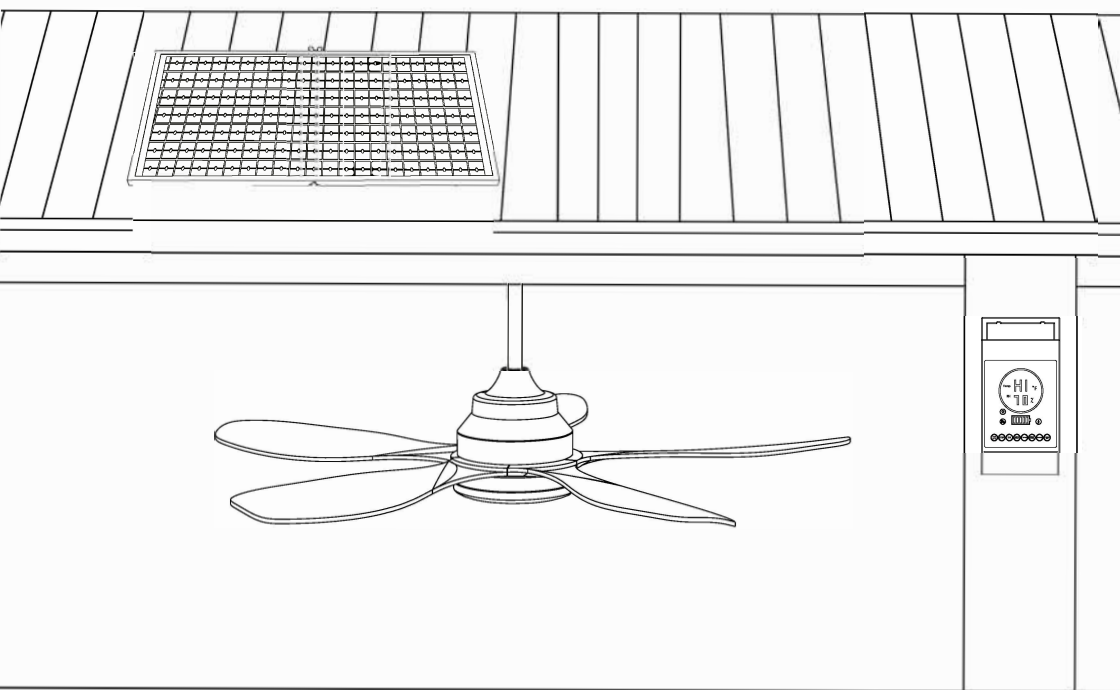

## WARNING!!!

 
**To avoid fire, shock and serious personal injury, follow these instructions.**

1. Read your user manual and safety information before installing your new fan. Review the accompanying assembly diagrams.
2. Before servicing or cleaning the unit, switch off the power at the service panel and lock it to prevent accidental power restoration. If the service disconnecting means cannot be locked, securely fasten a warning device, such as a tag, to the service panel.
3. Exercise caution around the fan and its blades when clearing, repairing, or working near it. Always turn off the power to the ceiling fan before performing any maintenance
4. Do not insert anything into the fan blades while the fan is in operation.
5. This appliance is not intended for use by young children or individuals with disabilities without supervision. Young children should be supervised to ensure they do not play with the appliance.
6. Before installing your ceiling fan, refer to the section on the proper method of wiring your fan. If you feel you lack sufficient wiring knowledge or experience, it is recommended to have your fan installed by a licensed electrician.
7. Please use the original charger to charge the battery box.


## Tools May Required




Ladder

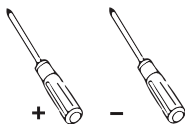

Screwdriver

 

Wire Strippers

 

Tape



Goggles

# Fan Components

 
NOTE: Place the parts from the loose parts bags in a small container to keep them from being lost. If any parts are missing contact us.



● — Mounting bracket (1)



● — Hanging wheel (1)

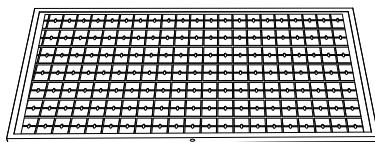


Solar panel (1)




● — Downrod (2)



 
● — Coupling cover (1)

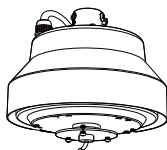

● — Fan motor host (1)

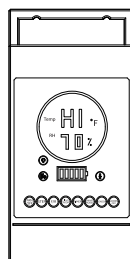 

Battery box, Adapter (1+1)

 

● — Fan blade (5)



 
● — Lamp body (1)



● — Magnetic light tray (1)



Remote control (1)




● — Lampshade (1)

(A) 4



Self-tapping screws

 (B) 5+7



Zip ties/ Hook

(C) 10+1 Spare



Blade screw

(D) 5



Wire nut

(E) 8



Plastic expansion tube

(F) 4



J-box screw

(G) 6



Washer

(H) 1



Solar panel bracket

(I) 2+2



Bracket accessories

(J) 1



Gloves

## Energy-Saving Usage

**Ceiling fan performance and energy savings rely heavily on the proper installation and use of the ceiling fan. Here are a few tips to ensure efficient product performance.**

### Choosing The Appropriate Mounting Location

Ceiling fans should be installed or mounted in the middle of the room and positioned at least 7 feet above the floor and 18 inches away from the walls.

If the ceiling height allows, it is recommended to install the fan 7~9 feet above the floor to achieve optimal airflow.

### Turn Off When Not In The Room

If the room is unoccupied, turn off the ceiling fan to conserve energy.

 
### Using The Ceiling Fan Year Round

Summer Season: Use the ceiling fan in the counterclockwise direction. The airflow created by the ceiling fan produces a wind-chill effect, making you feel cooler. Select a fan speed that provides a comfortable breeze; lower speeds consume less energy.


Winter Season: Reverse the motor and operate the ceiling fan at a low speed in the clockwise direction. This produces a gentle updraft, which pushes the warm air near the ceiling down into the occupied space. Remember to adjust your thermostat when using your ceiling fan. This simple step can lead to additional energy and cost savings.

# Installation

1

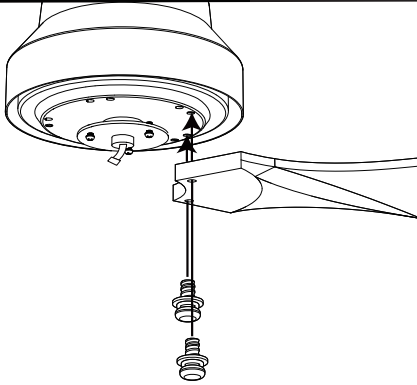


2

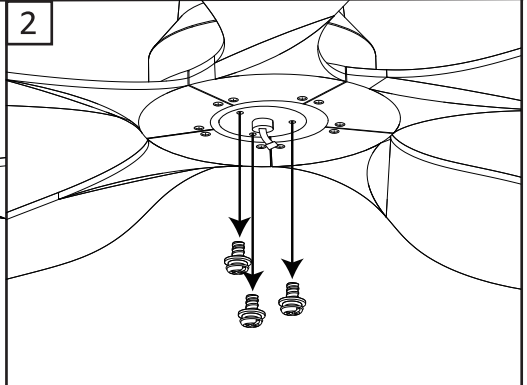 


- Fasten the fan blade to the motor using blade screws (Repeating for all remaining blades).
- Remove the three pre-installed light panel screws from the motor.

 3

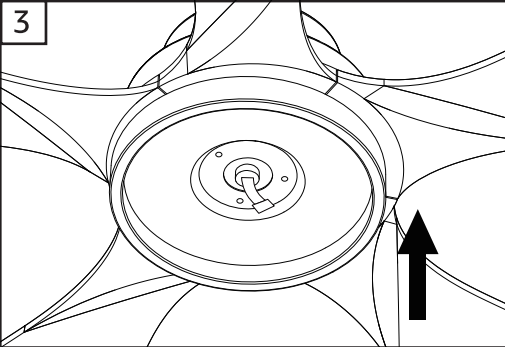


4

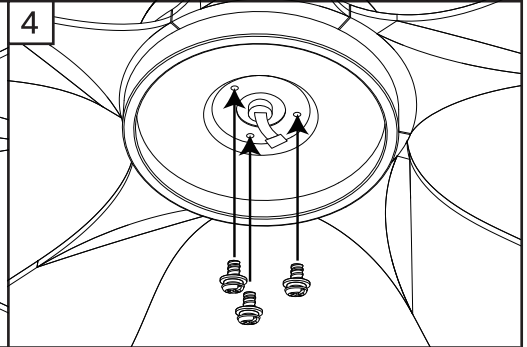 


- Push the light unit upward to align it with the three screw holes.
- Secure the light unit to the motor using the three screws removed in step 2.

 5

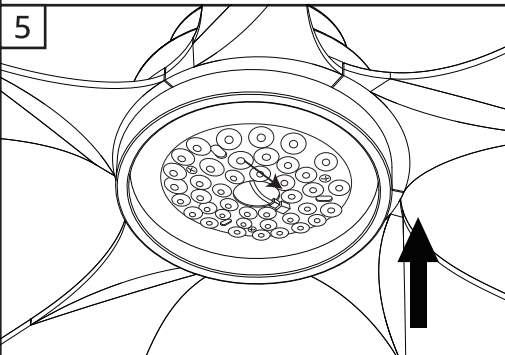


6

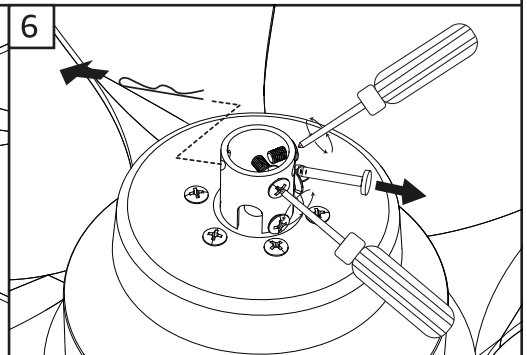 


- Push the magnetic light tray upward and connect the wire from the motor to it.
- Loosen the two screws without removing them completely. Then, disengage the pin lock and remove the pin.


# Installation

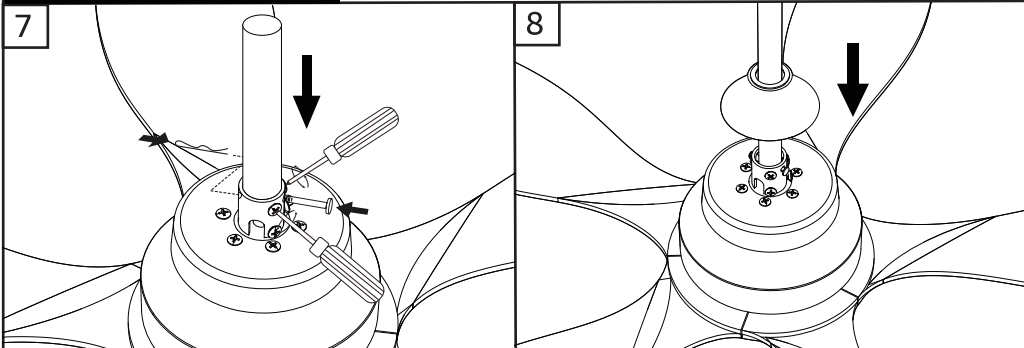 

 - Insert the downrod into the motor host and secure it with the pin, then tighten the two screws on the yoke. (Select the appropriate length of downrod relative to the desired height.)
- Move the coupling cover downward.

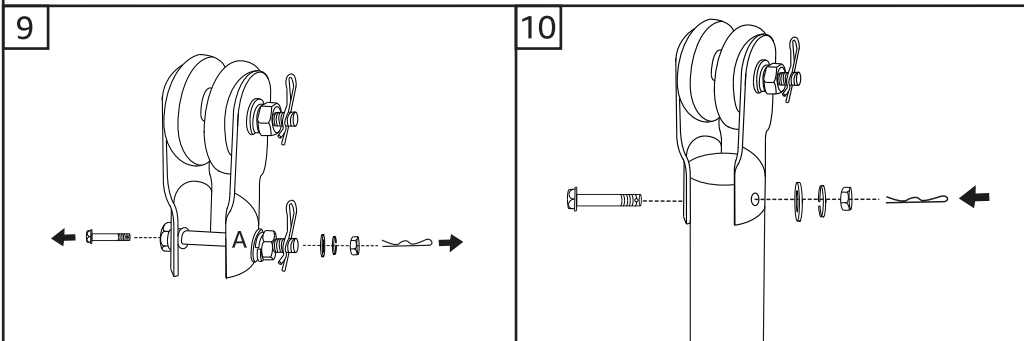

 
- Remove the pin, washer, and nut at point A.
- Install the hanging wheel onto the suspension downrod according to the diagram.

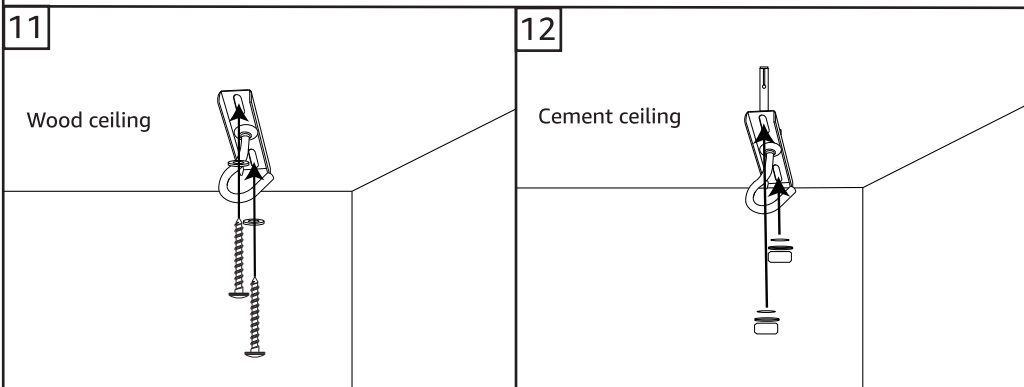


- Mount the bracket to the ceiling and use appropriate accessory screws to secure it based on the type of ceiling material.  
**Wood ceiling:** Use self-tapping screws to drive into the wooden ceiling.
- **Cement ceiling:** Drill holes on the cement ceiling, then use expansion screws for fixing.

# Installation

 13

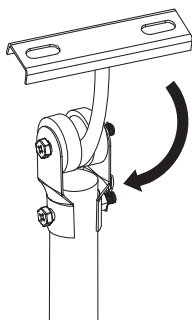


14

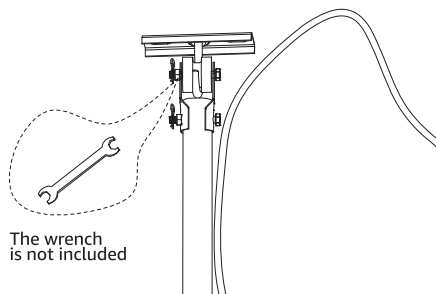 


- Hang the fan's pulley onto the hook.
- Tighten the two nuts on the hanging wheel using a hex wrench (The wrench is not included).

 15

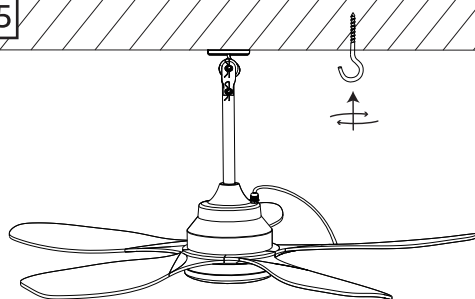


16

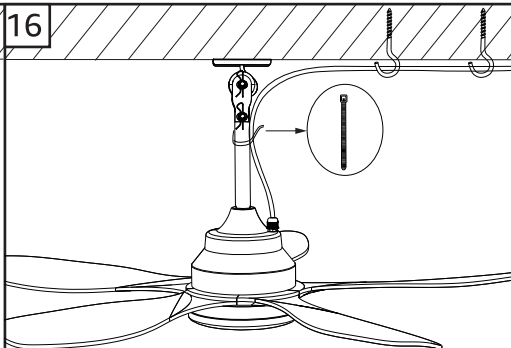 


- Install the hook onto the ceiling (Adjust the number of mounting hooks according to your actual installation requirements).
- Use zip ties to bundle the power cord and hang the excess power cord on the hook (Adjust the number of mounting zip ties according to your actual installation requirements).

 17

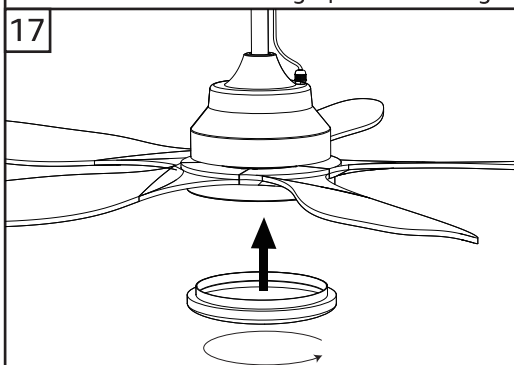


18

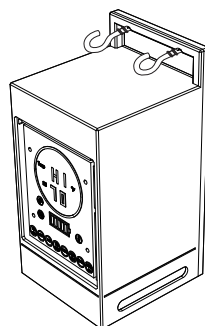 


- Locate the locking point and screw the lampshade upward into place.
- Hang the battery box onto the hook after securing them to the wall at the proper spacing.

# Installation

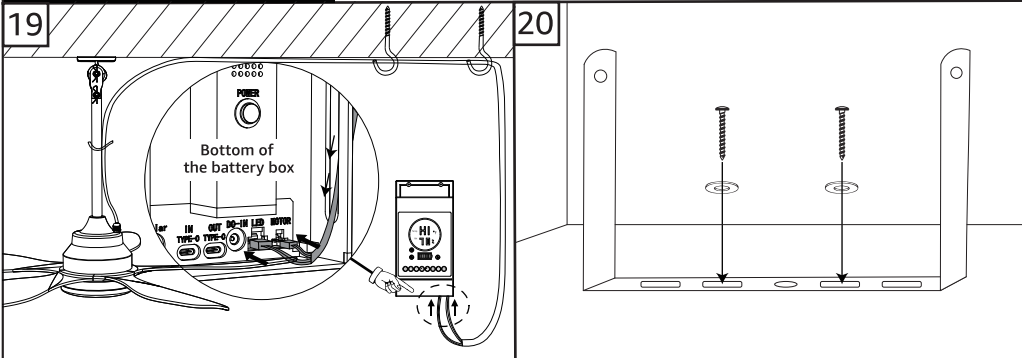 


 - Route the two wire terminals from the motor through the side of the battery box, then connect them to the terminals at the bottom of the battery box.
- If required, secure the solar panel bracket using screws and washers.


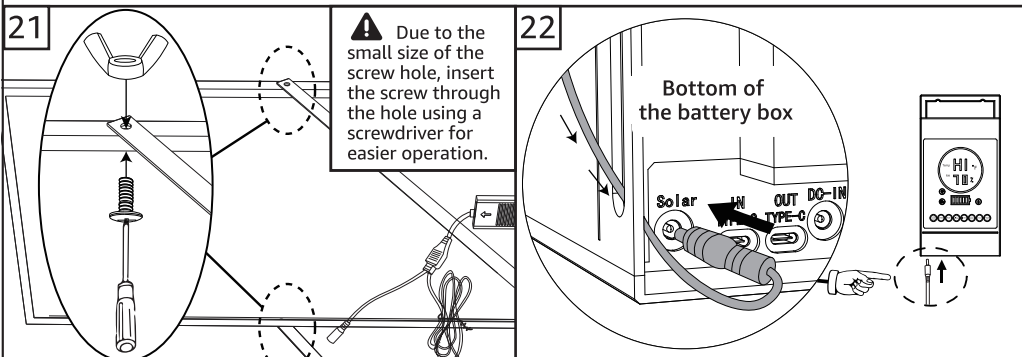


- Use the bracket accessories to mount the bracket onto the solar panel.
- Route one wire terminal from the solar panel through the side of the battery box, then connect it to the terminals at the bottom of the battery box.

 **!** This product includes one solar panel only. Additional panels must be purchased separately. Note: If a single solar panel cannot meet your usage requirements, you may connect a second panel (it is recommended not to exceed two solar panels). The connection method is as follows.

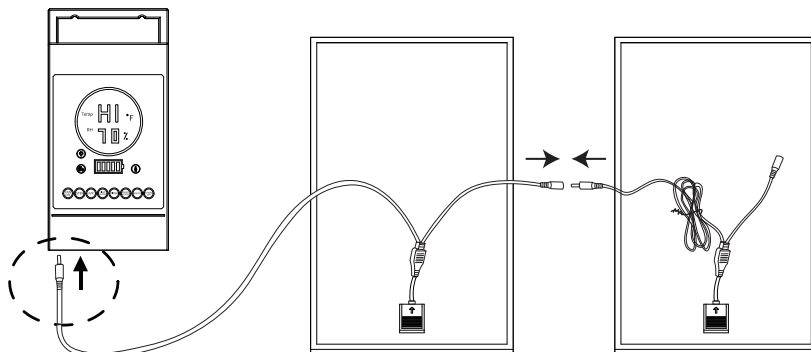

# Battery Box Overview

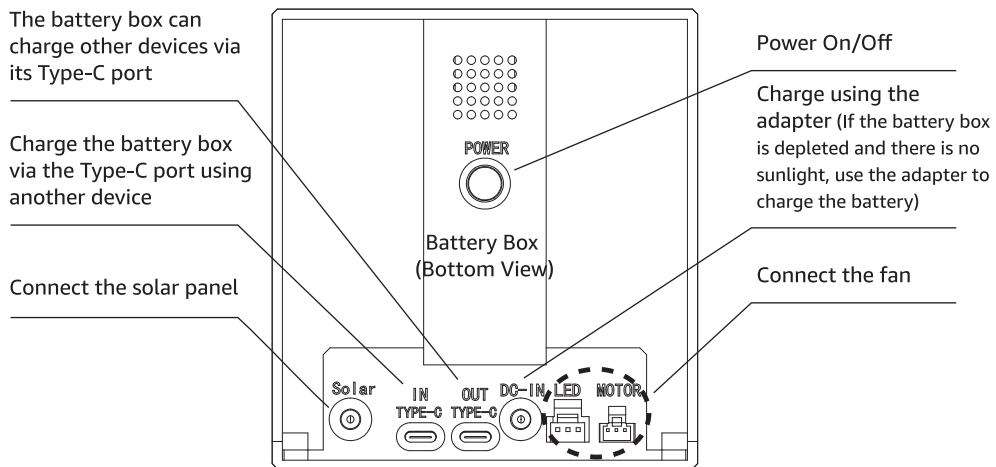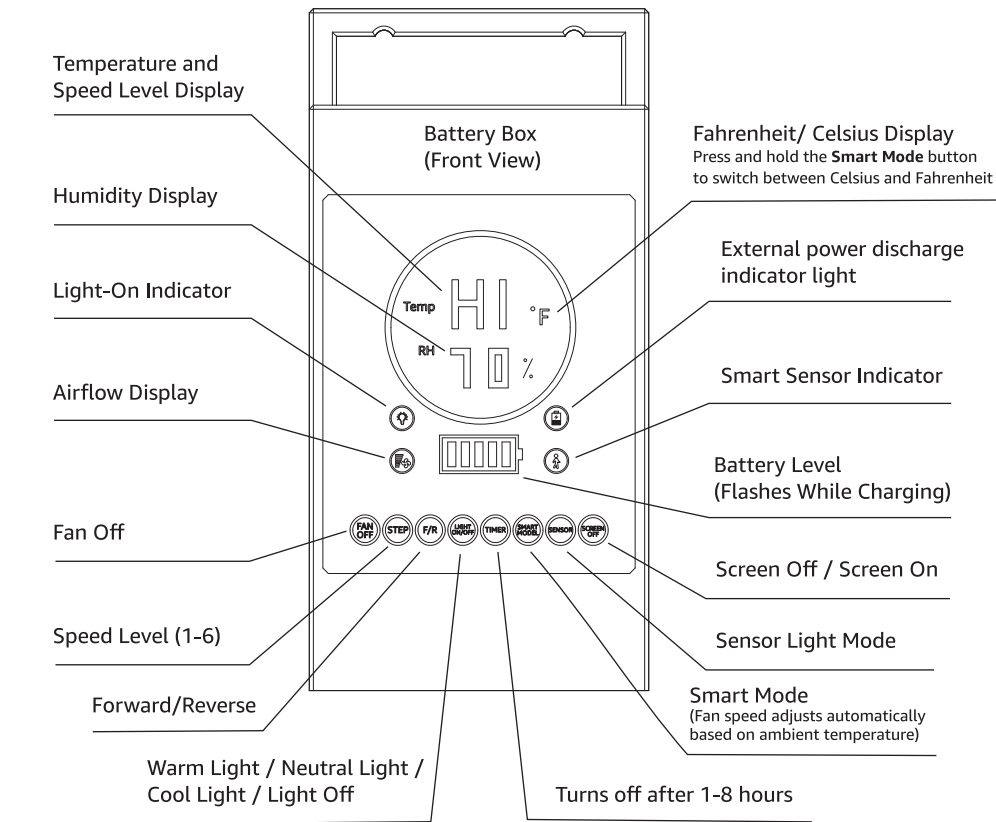  

# Battery Box Overview

## TIMER

| Before Timer |       | After Timer Ends |             |
|--------------|-------|------------------|-------------|
| Fan          | Light | Fan              | Light       |
| Off          | On    | Remains Off      | Turns Off   |
| On           | Off   | Turns Off        | Remains Off |
| On           | On    | Turns Off        | Turns Off   |
| Off          | Off   | Remains Off      | Remains Off |



If the temperature exceeds 100°F (≈38°C), the screen displays “**HI**” as a high-temperature warning. If the temperature drops below 0°F (≈-18°C), it displays “**LO**” to indicate a low-temperature condition.

 


If both the Sensor Light Mode and the light are on, you must first deactivate the Sensor Light Mode before turning off the light. The light cannot be turned off directly in this state.



To conserve energy, please turn off Smart Mode when leaving the area. If the device will not be used for an extended period, power off the battery box.

# Remote Control

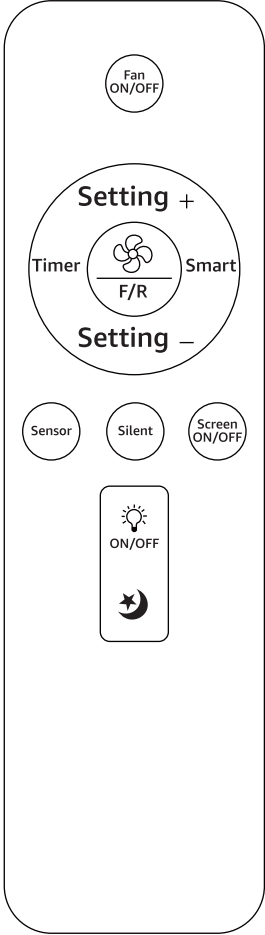

|           |                                                                                      |
|-----------|--------------------------------------------------------------------------------------|
|           | Fan On/ Off                                                                          |
|           | Forward/ Reverse                                                                     |
| Setting + | Fan Speed +                                                                          |
| Setting - | Fan Speed -                                                                          |
| Timer     | All off after 1-8 hours                                                              |
| Smart     | Smart Mode<br>(Automatically adjusts the fan speed based on the ambient temperature) |
|           | Sensor Mode                                                                          |
|           | Silent Mode                                                                          |
|           | Screen On/ Off                                                                       |
|           | Warm Light / Neutral Light /<br>Cool Light / Light Off                               |
|           | Night Light On/Off                                                                   |

To operate the fan, please install 2 AAA batteries (included) in the handheld remote control. If not used for extended periods of time, remove the batteries to prevent damage to the remote control. Store the remote away from excessive temperatures and humidity.

Pairing method: (single/multiple devices)

The remote control transmitter can be used to control multiple receivers.


1. Disconnect the input wire from the battery box.
2. Wait for 5 seconds, then reconnect it and immediately press and hold the **Fan ON/ OFF** button until you hear two beeps.
3. If the pairing process is unsuccessful, please repeat the above steps.

# Troubleshooting
 
| PROBLEM                | SUGGESTED REMEDY                                                                                                                                                                                                                                                                                                                         |
|------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| If Fan Does Not Start  | <ol style="list-style-type: none"> <li>1. Check if the remote controller is paired and battery is working.</li> <li>2. Check that the fan wires are correctly connected to the battery box.</li> <li>3. Verify that the battery box is plugged into a power source.</li> <li>4. Ensure the battery box has sufficient charge.</li> </ol> |
| If Fan Sounds Noisy    | <ol style="list-style-type: none"> <li>1. Make sure all screws in the yoke are snug.</li> <li>2. Allow a "break-in" period of 24 hours. Most noises associated with a new fan will disappear after this period.</li> <li>3. Check if the fan blades are in contact with the something.</li> </ol>                                        |
| If Fan Wobbles         | <ol style="list-style-type: none"> <li>1. Make sure that hook is scured.</li> <li>2. Make sure all screws in the yoke are snug.</li> </ol>                                                                                                                                                                                               |
| If Light Does Not Work | <ol style="list-style-type: none"> <li>1. Check for loose wiring of the LED board.</li> </ol>                                                                                                                                                                                                                                            |
| Remote Does Not Work   | <ol style="list-style-type: none"> <li>1. Battery out of power or not installed correctly; change new AAA battery and ensure well installed.</li> <li>2. Re-pair Remote Control.</li> </ol>                                                                                                                                              |

## Installing Wall Plate

Attach wall plate using the two screws provided.

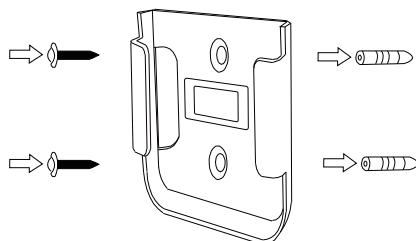

# Customer Service

## 30-Days Full Refund Guarantee

If you are not completely satisfied or the item isn't what you expected, just tell us within 30 days. We will give you a full refund unconditionally.

## Friendly Reminder

It's better to contact us than leaving a negative shopping experience. Nothing is more important than your satisfaction, and we will do our best to serve you.

## Quick Response Within 12 Hours

You can contact us without any hesitation at any time of the day, and we will reply to you within 12 hours. ( It would be appreciated if you could provide us with a video or pictures, if available)

## 2-Year Warranty

Your fan light comes with a two-year warranty. If a malfunction occurs due to product quality issues, we will assist in diagnosing the problem and provide replacement parts free of charge to ensure your fan light resumes normal operation.