


INSTALLATION



Product Manual

Version: 760019US-01-26A-AA

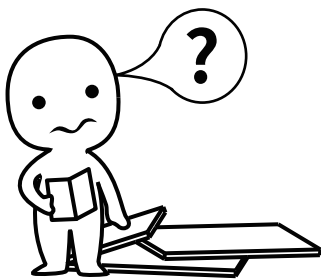


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

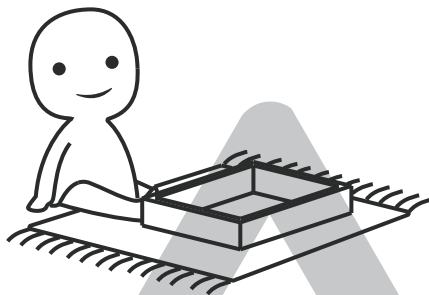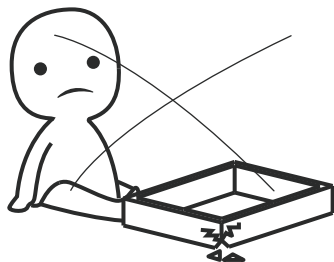





AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

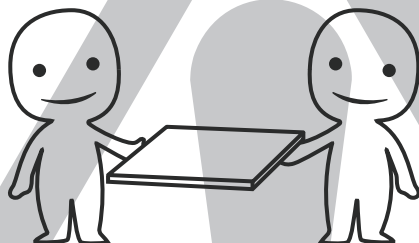

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

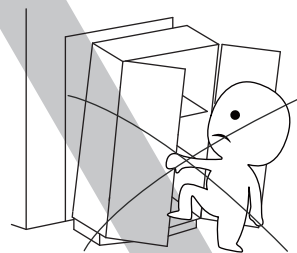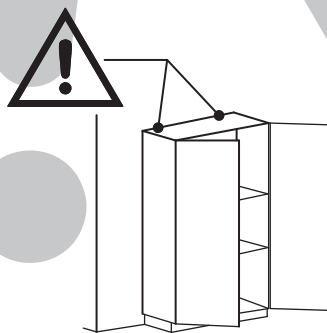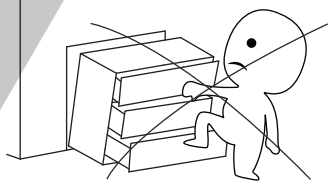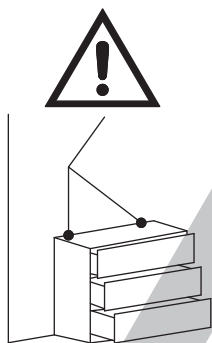

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

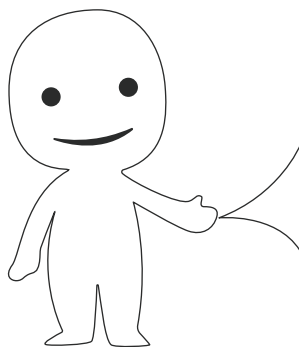

Please prepare the following tools

 


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 44




Ø 15 x 10 mm

B x 44

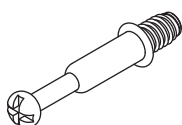

Ø 6 x 35 mm

 C x 32



Ø 6 x 30 mm

D x 44



 
Ø 10 x 10 mm

E x 20




Ø 3 x 14 mm

F x 14




Ø 5 x 40 mm

 G x 2




H x 8

 


Ø 5 x 3.5 mm

J x 4

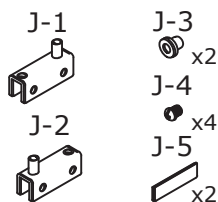

K x 4

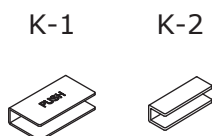


L x 8



Ø 3.5 x 25 mm

 M x 6




N x 8



Ø 6 x 25 mm

P x 1

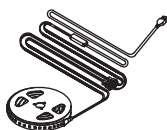


Q x 8



Ø 3 x 14 mm

R x 1



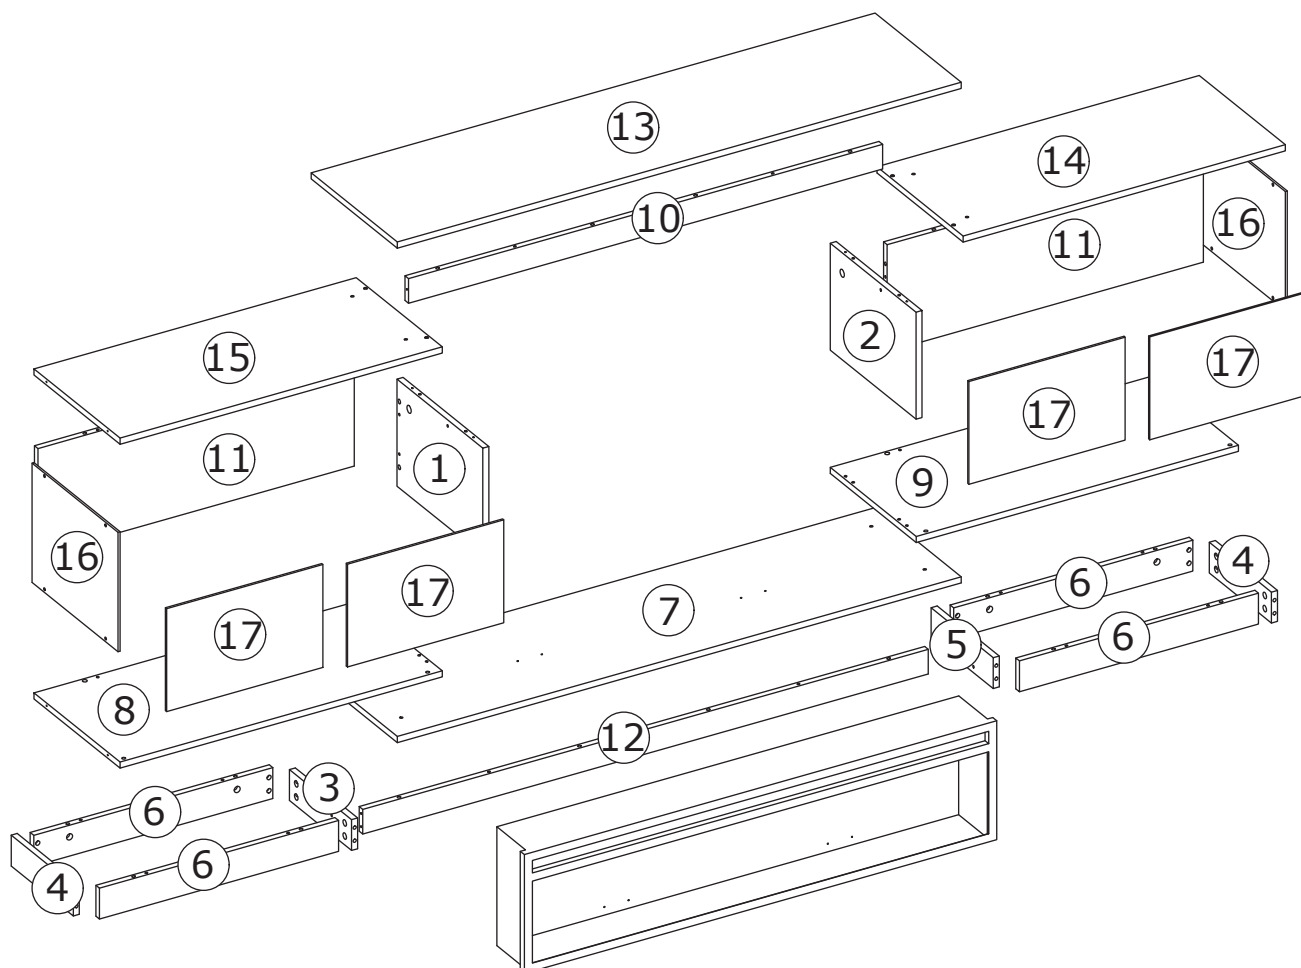


⚠ WARNING










Children have died from furniture tipover. To reduce the risk of furniture tipover:



- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.
Do not remove!*




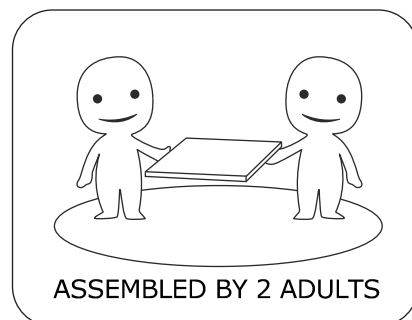


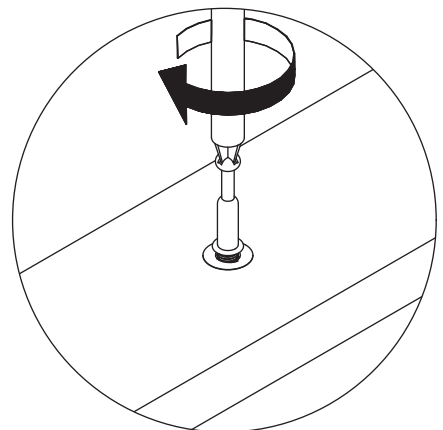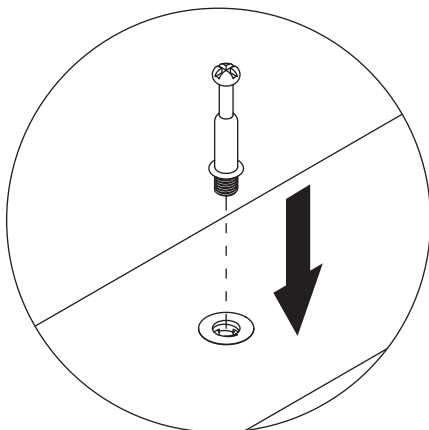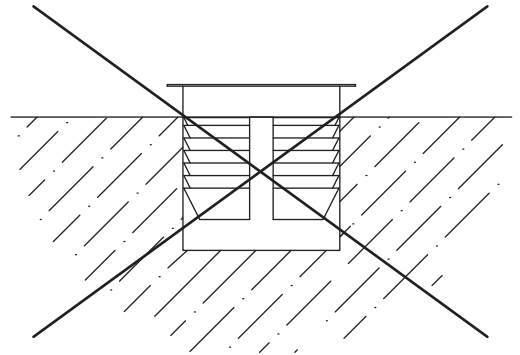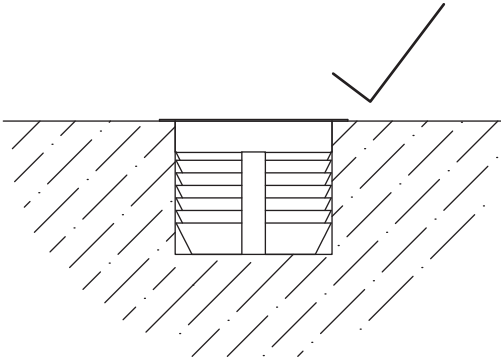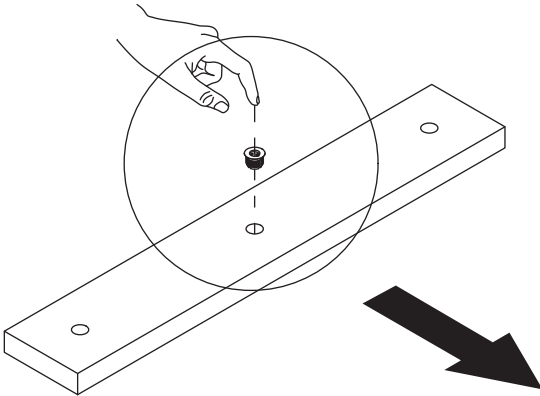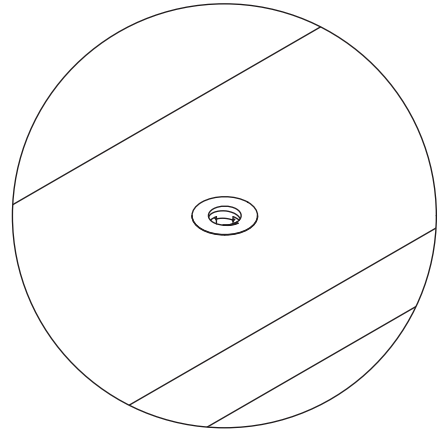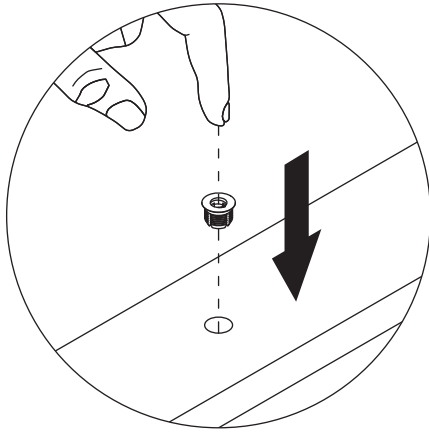

1

 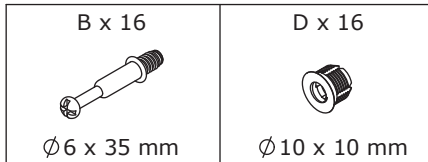


First install plug (D) onto panel 6, then screw self-tapping rod (B) into panel 6.

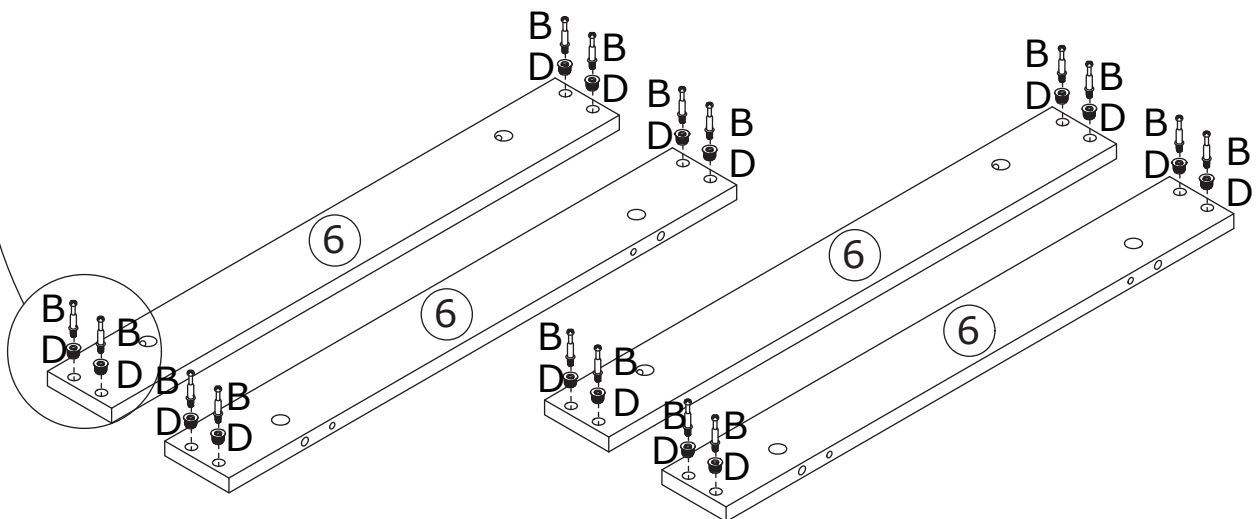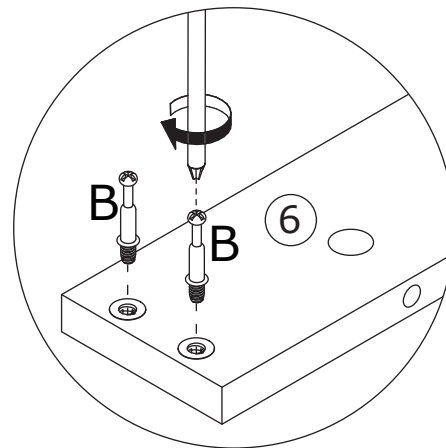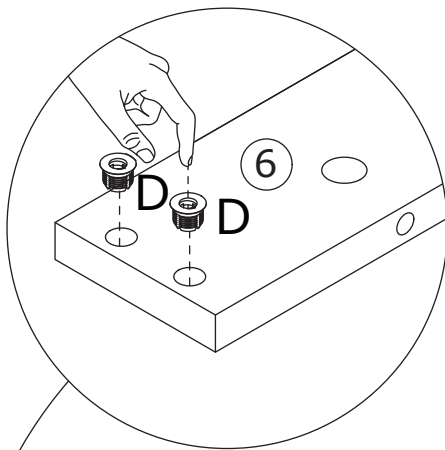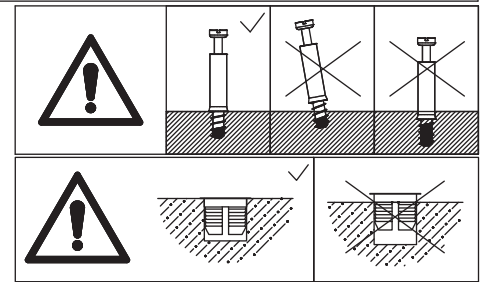



2

A x 16


 
 Ø 15 x 10 mm





Connect panel 3 and 4 to panel 6, panel 4 and 5 to panel 6, then tighten by turning eccentric wheel (A) clockwise.

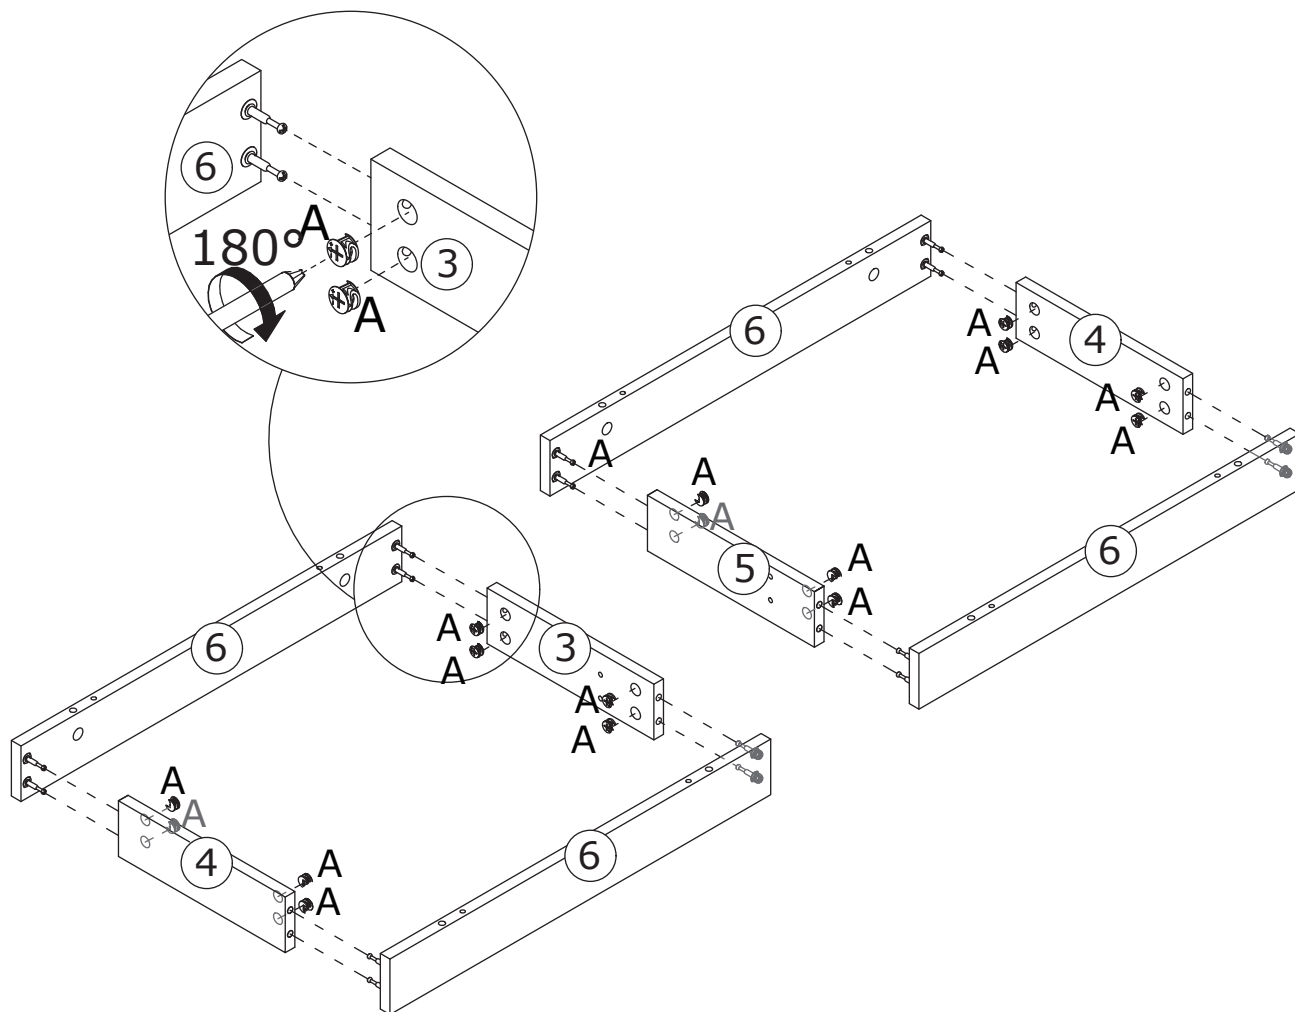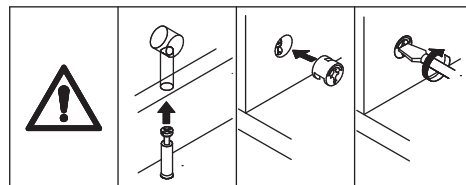

3

 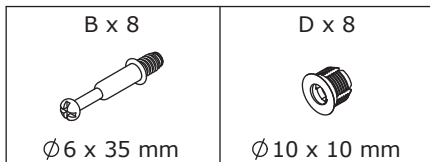

First install plug (D) onto panel 8 and 9, then screw self-tapping rod (B) into panel 8 and 9.

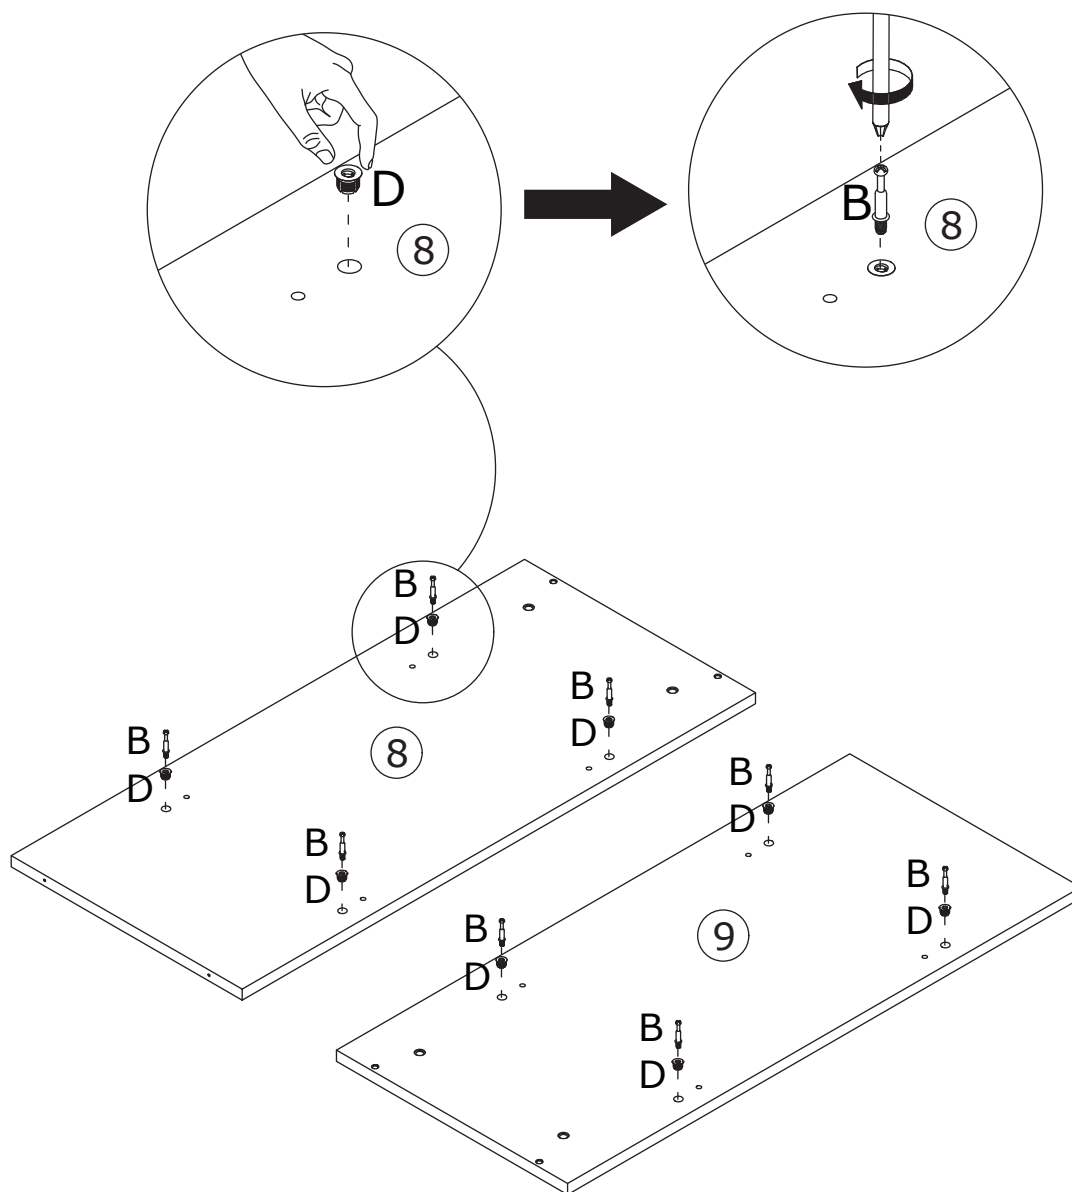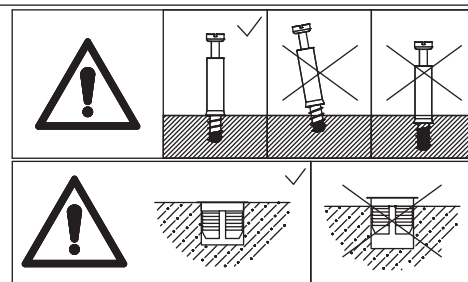

4

A x 8

 


Ø 15 x 10 mm





C x 8






Ø 6 x 30 mm





Connect panel 3, 4 and 6 to panel 8, panel 5, 4 and 6 to panel 9 using wooden dowel (C), then tighten by turning eccentric wheel (A) clockwise.

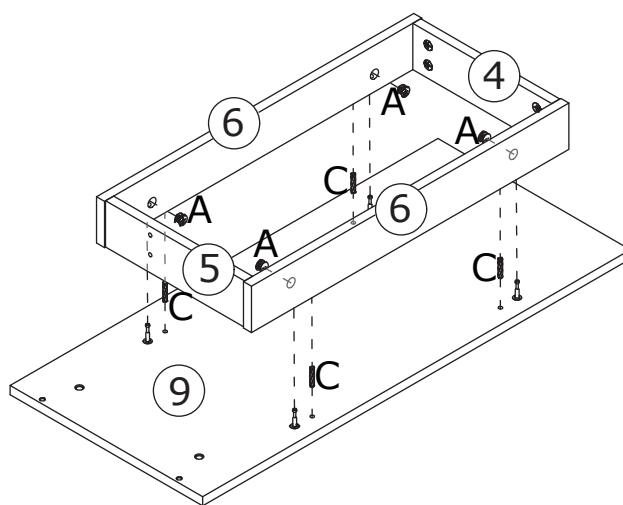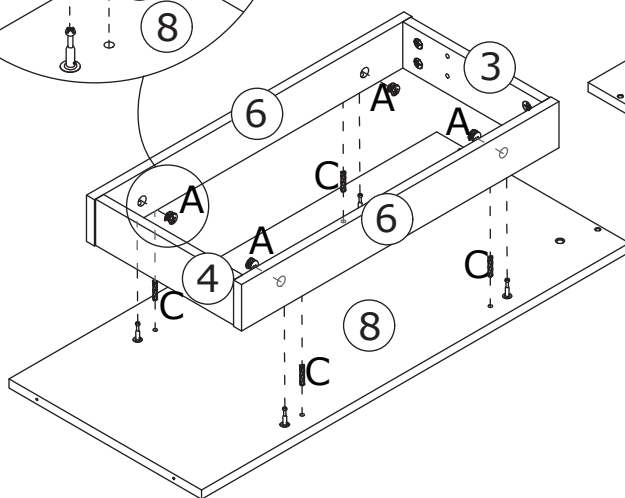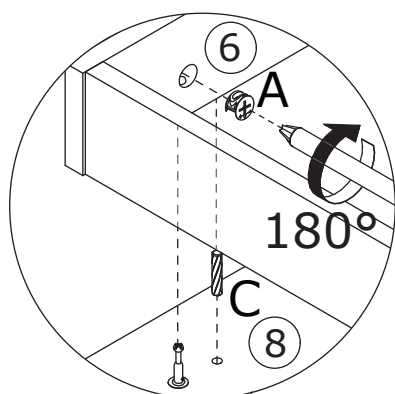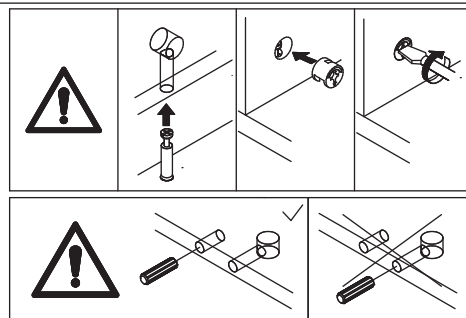




5

 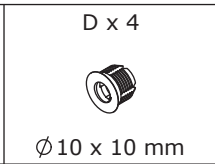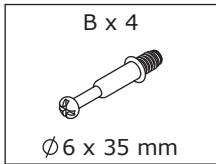



First install plug (D) onto panel 7, then screw self-tapping rod (B) into panel 7.

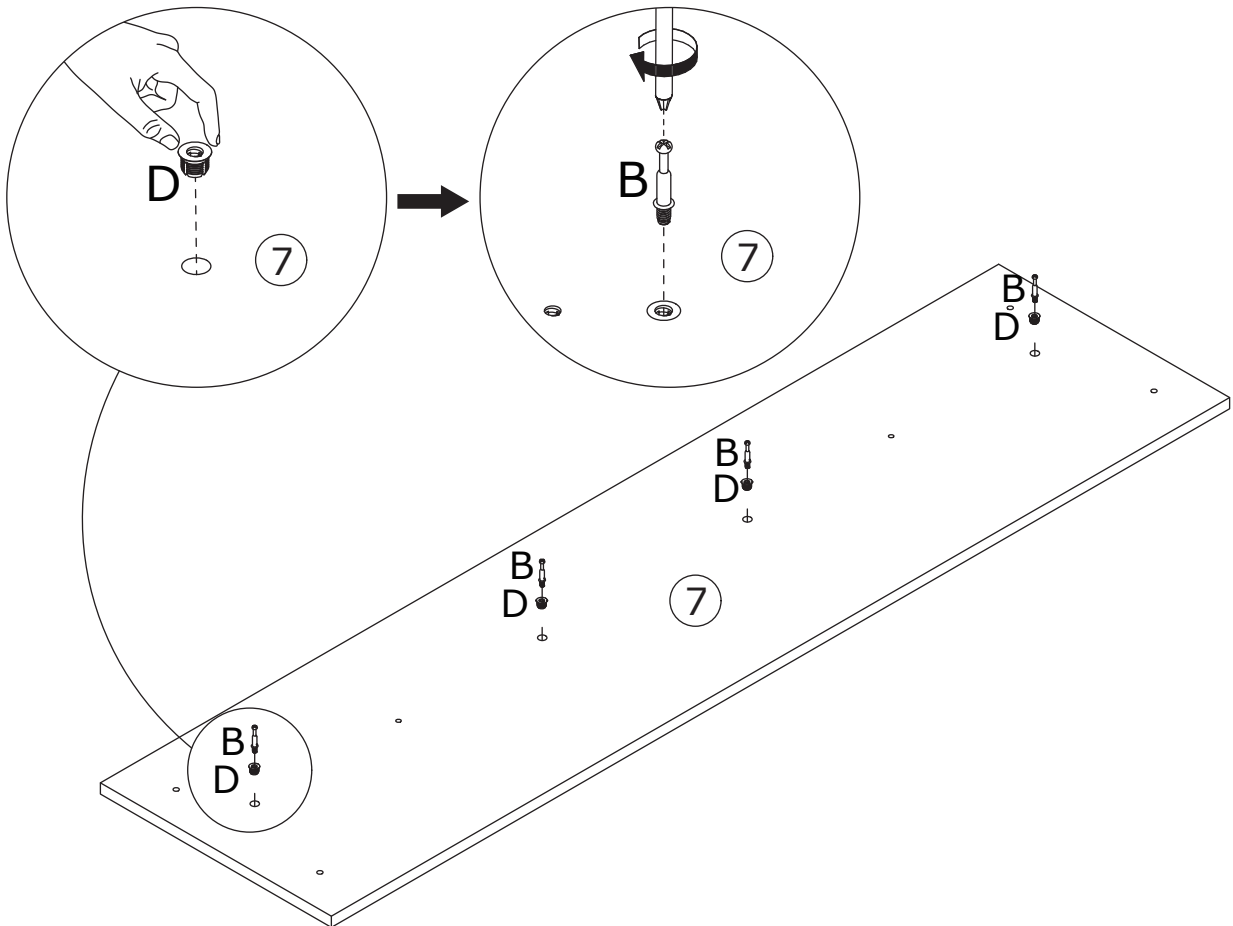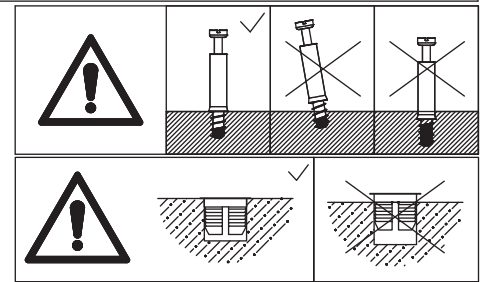



6

 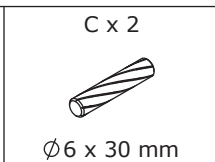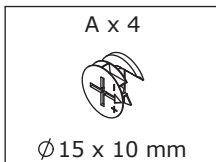



Connect panel 12 to panel 7 using wooden dowel (C), then tighten by turning eccentric wheel (A) clockwise.

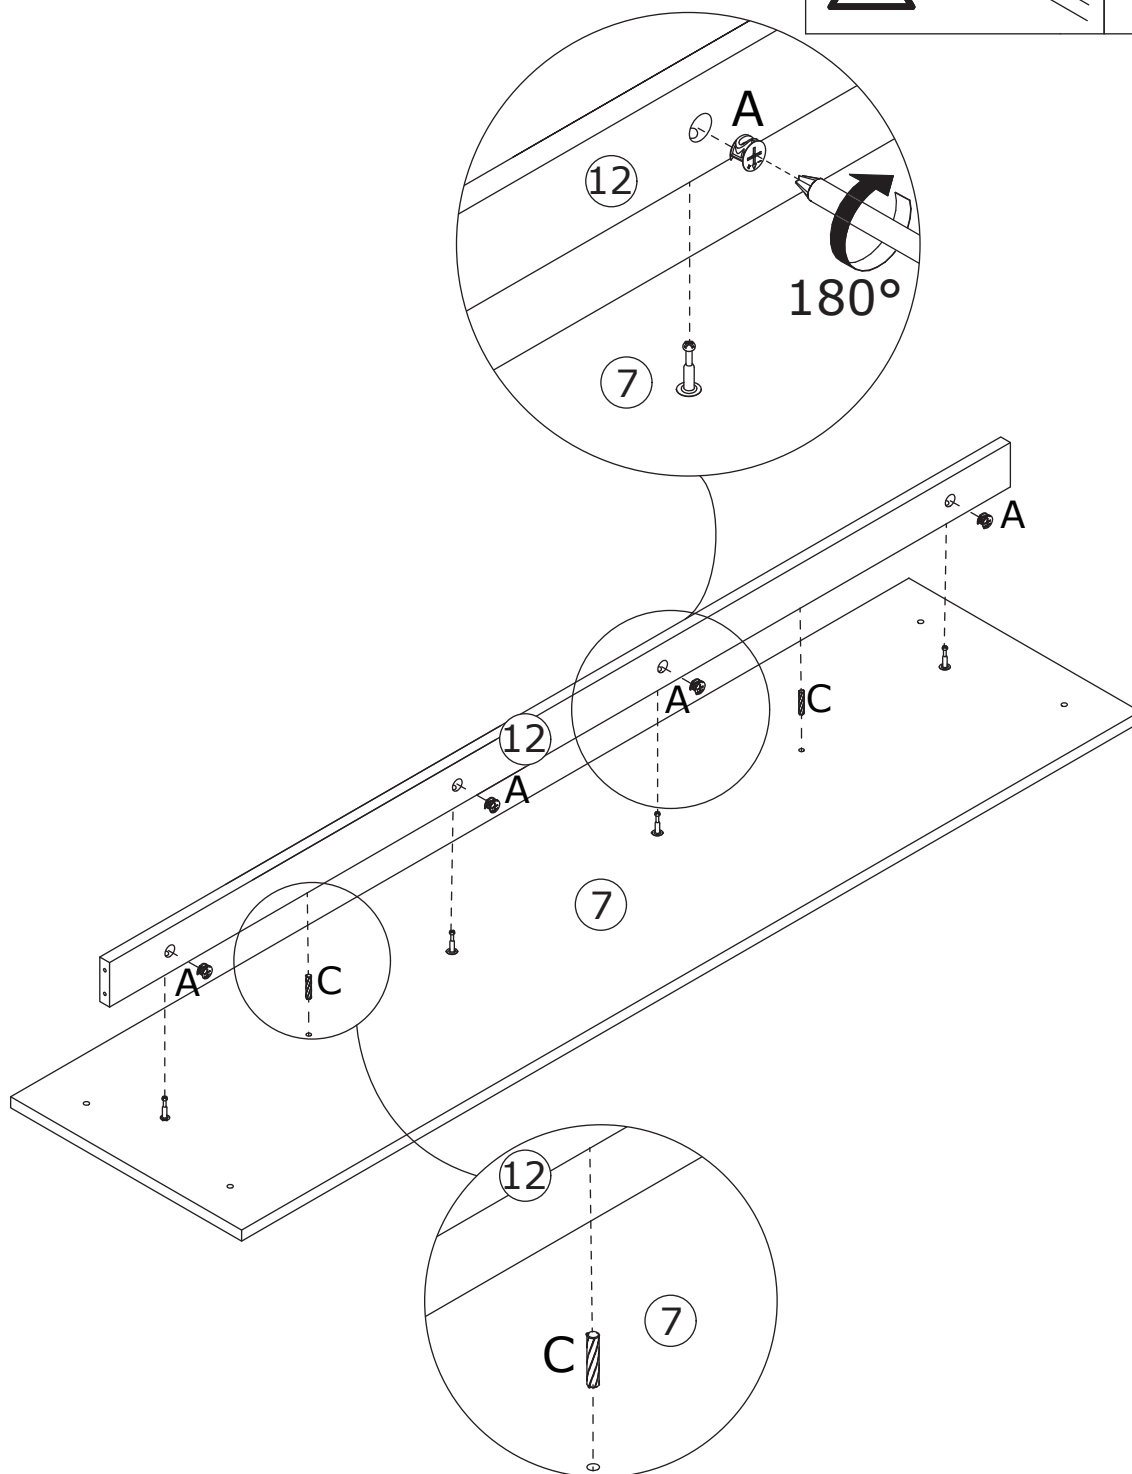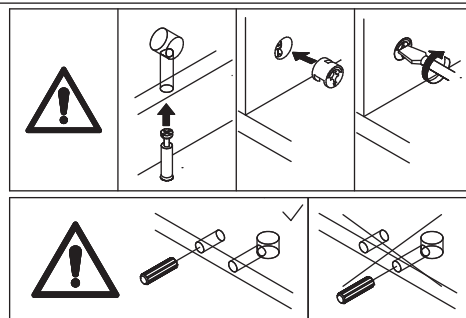


7

 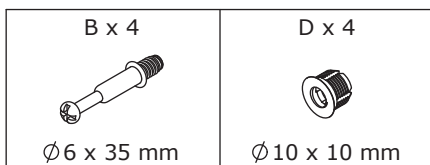



First install plug (D) onto panel 1 and 2, then screw self-tapping rod (B) into panel 1 and 2.

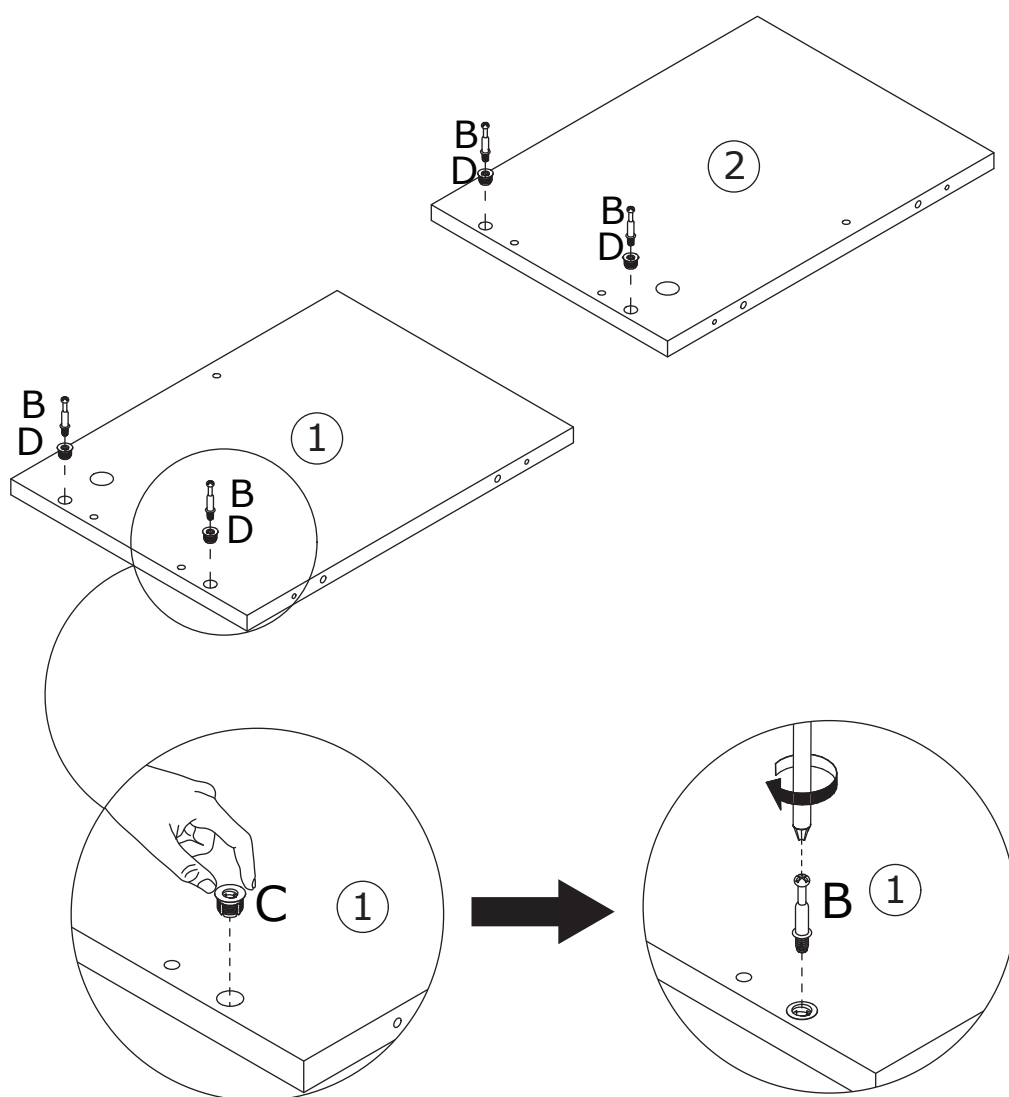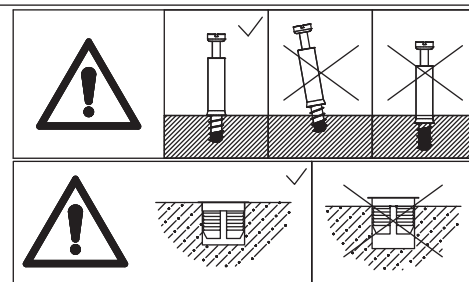




8

 A x 4  Ø 15 x 10 mm	C x 4  Ø 6 x 30 mm	
--	---	---




Connect panel 11 to panel 1 and 2 using wooden dowel (C), then tighten by turning eccentric wheel (A) clockwise.

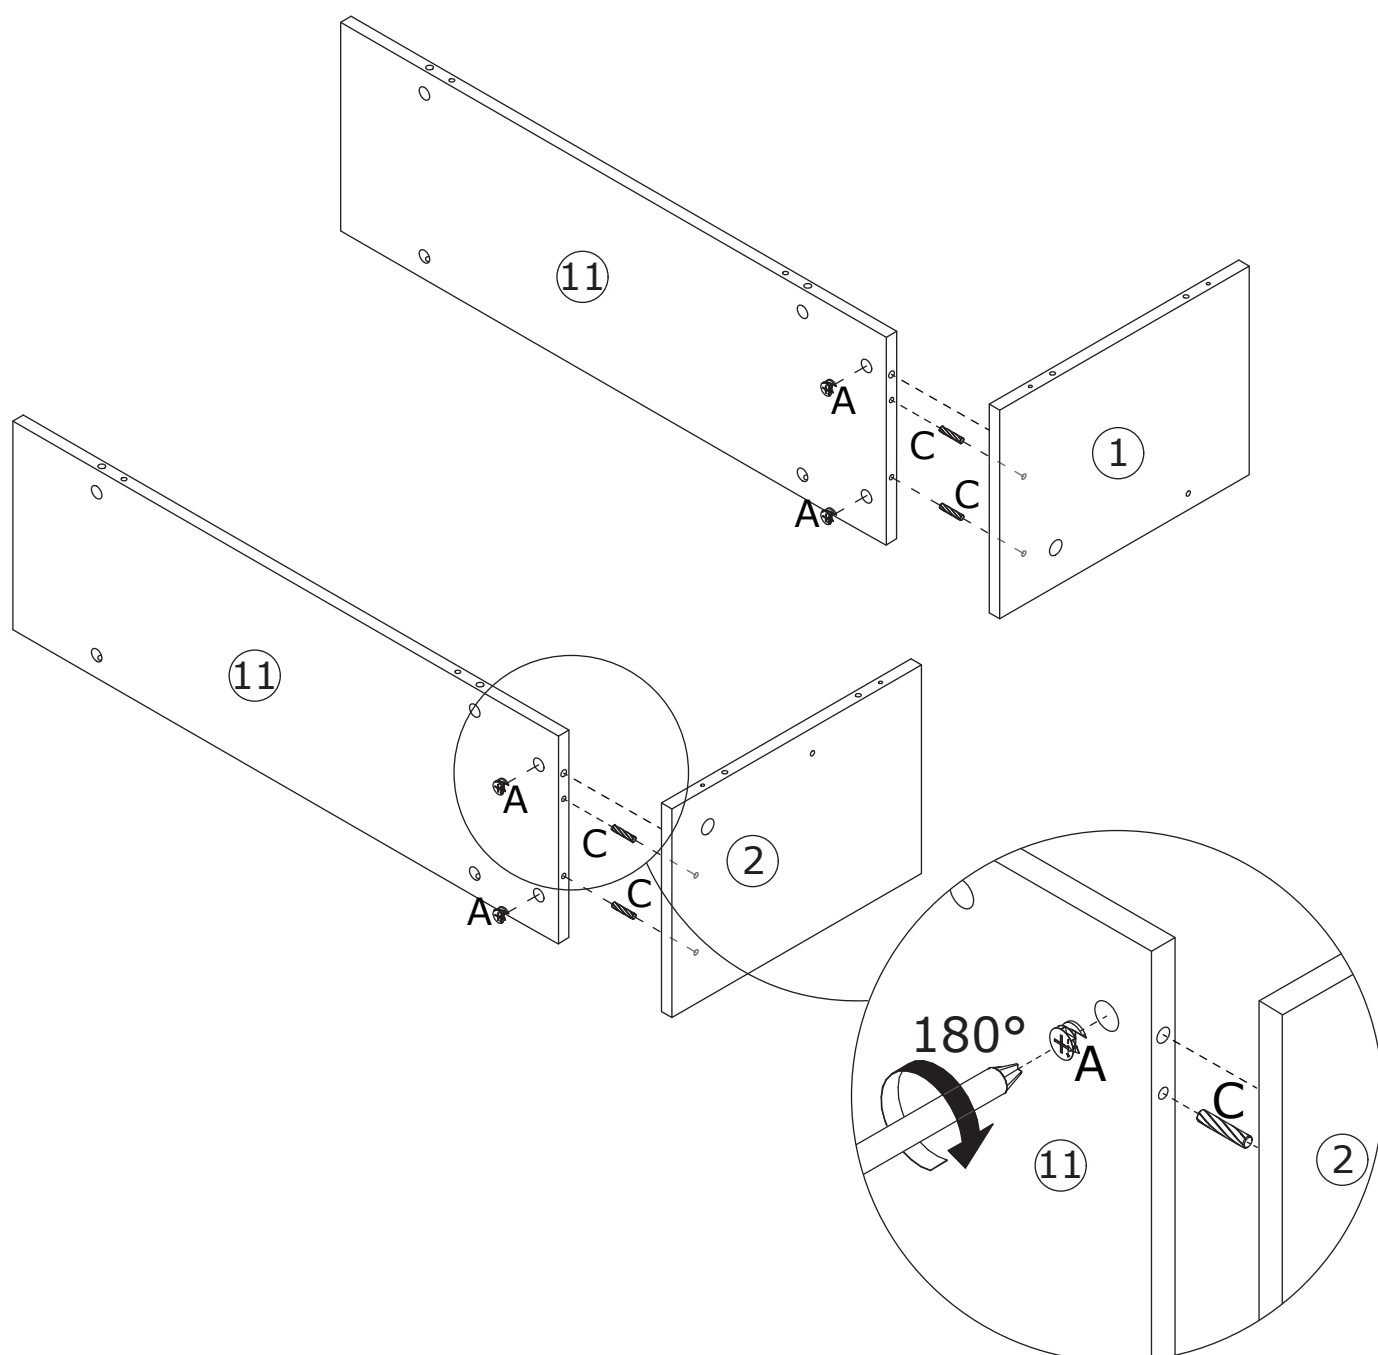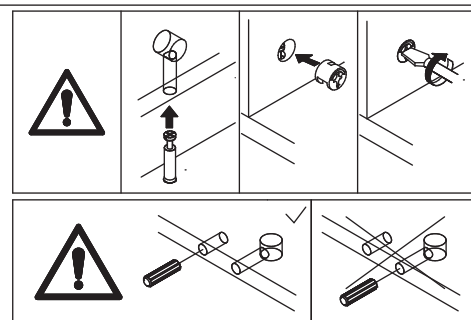

9

 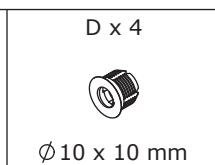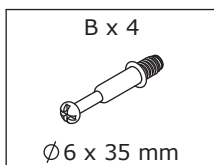

First install plug (D) onto panel 8 and 9, then screw self-tapping rod (B) into panel 8 and 9.

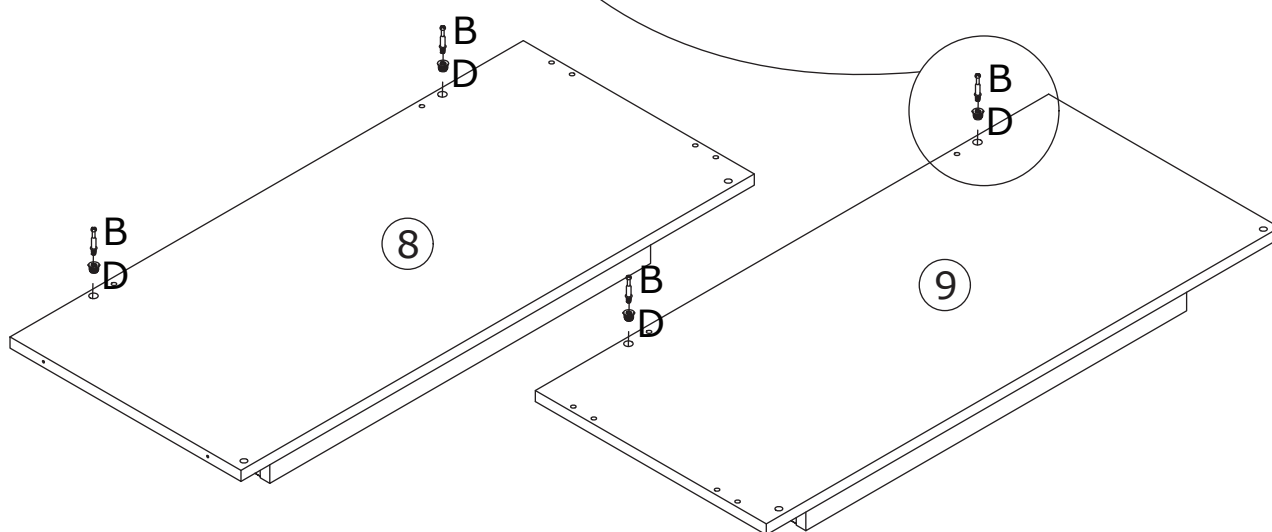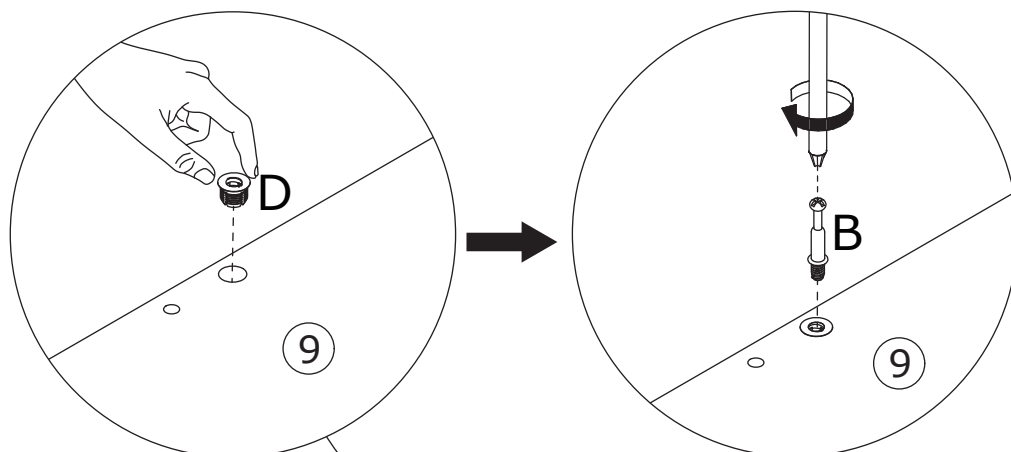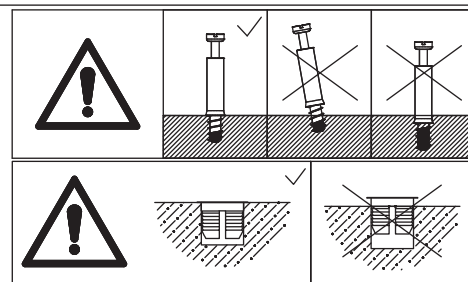

10

A x 4

 


Ø 15 x 10 mm



C x 8



Ø 6 x 30 mm





Connect panel 11 and 1 to panel 8, panel 2 and 11 to panel 9 using wooden dowel (C), then tighten by turning eccentric wheel (A) clockwise.

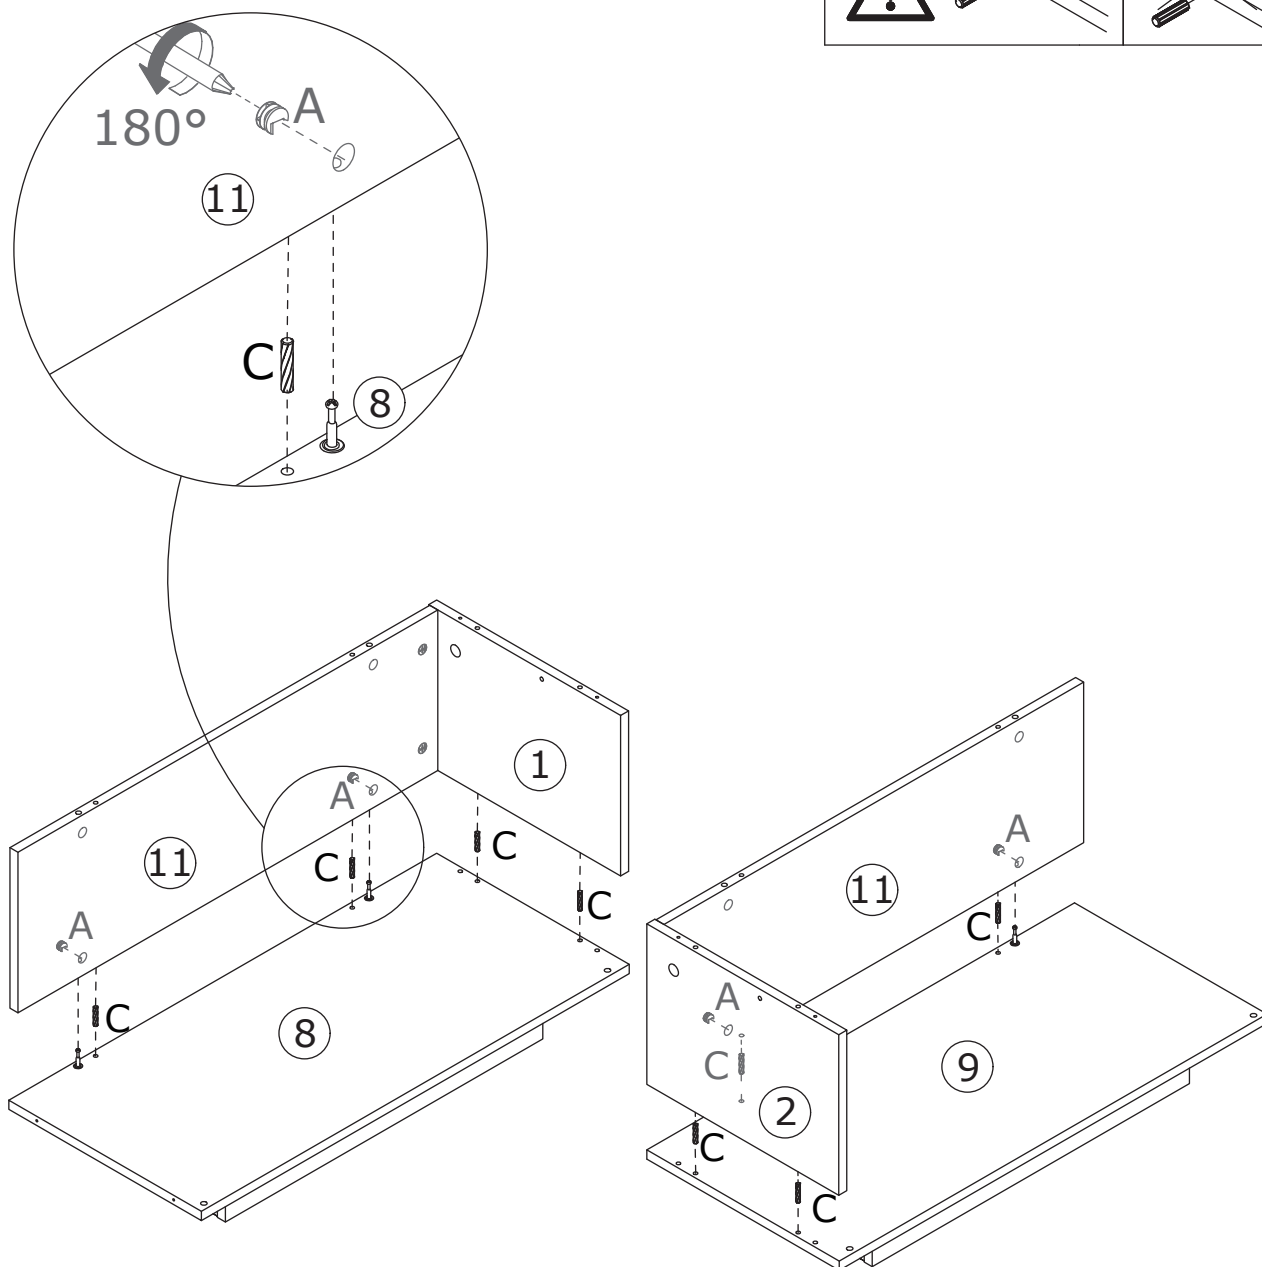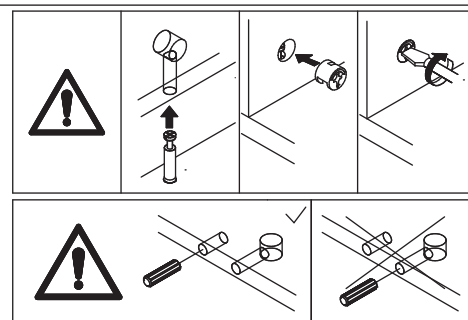


11

 

F x 4

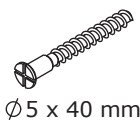

Secure panel 8 and 9 to panel 1 and 2 using screw (F).

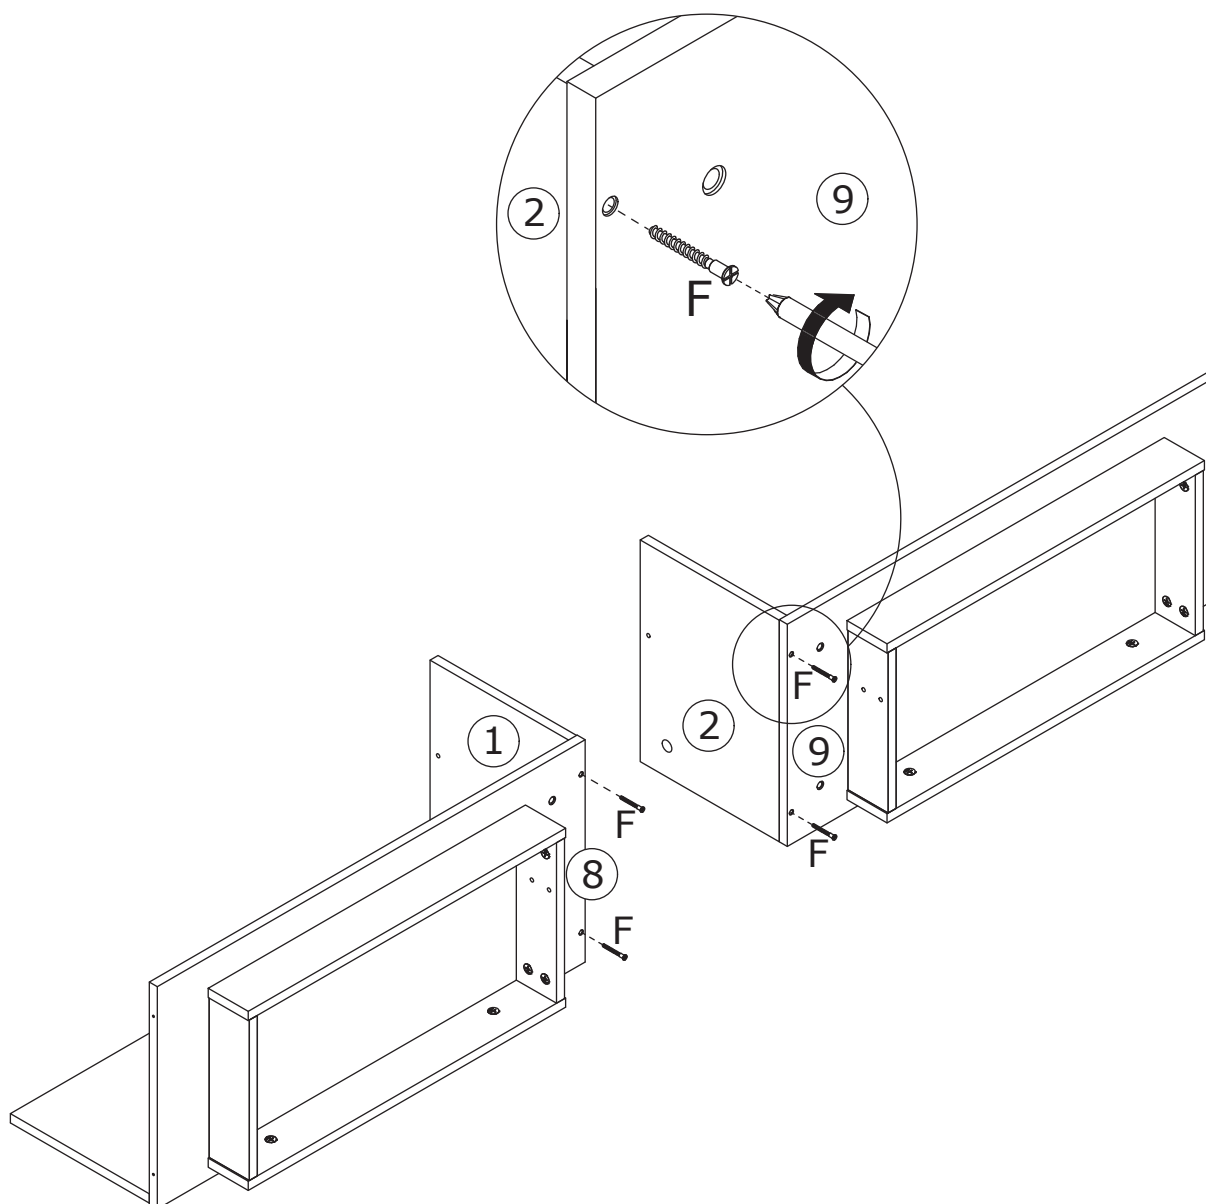


12

  F x 4  Ø5 x 40 mm	N x 4  Ø6 x 25 mm	R x 1 	
--	--	--	---

Connect panel 7 to panel 8 and 9 using screw (N).

Connect panel 12 to panel 3 and 5 using screw (F).

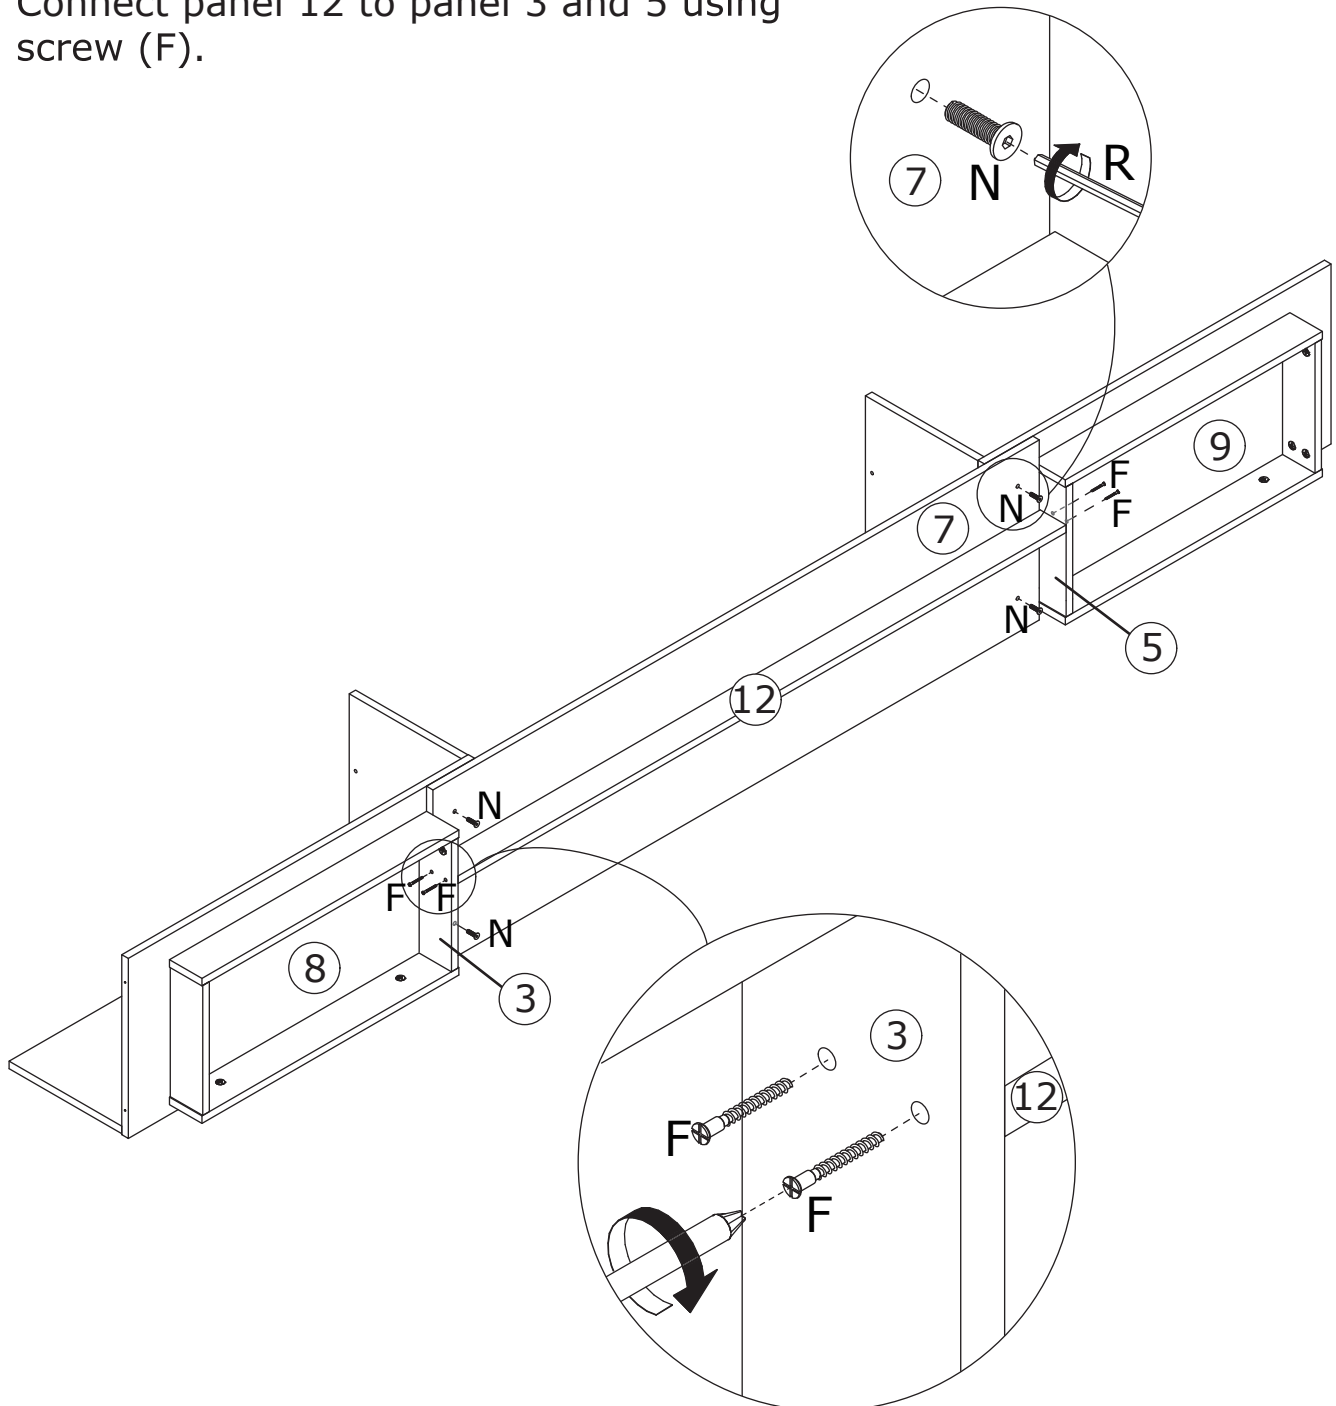


13

P x 1




Pass the LED strip (P) from above panel 7 through panel 2 and 1.

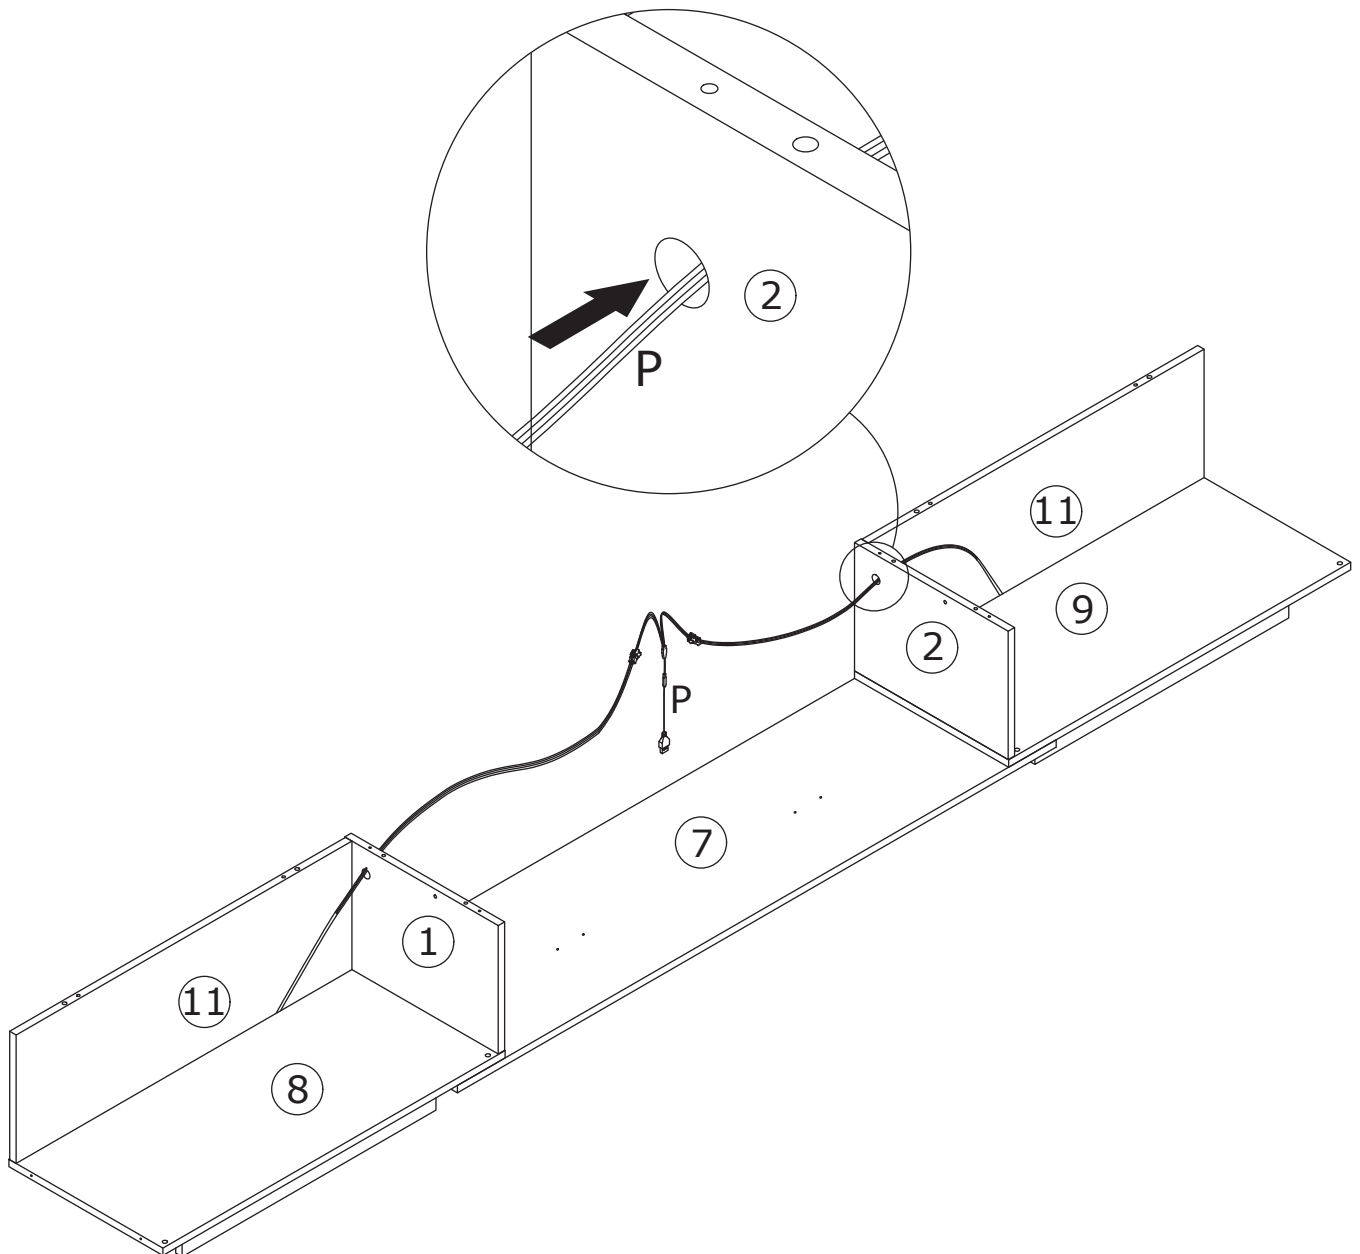

14

 B x 4




Ø6 x 35 mm



D x 4



 Ø10 x 10 mm



First install plug (D) onto panel 14 and 15, then screw self-tapping rod (B) into panel 14 and 15.

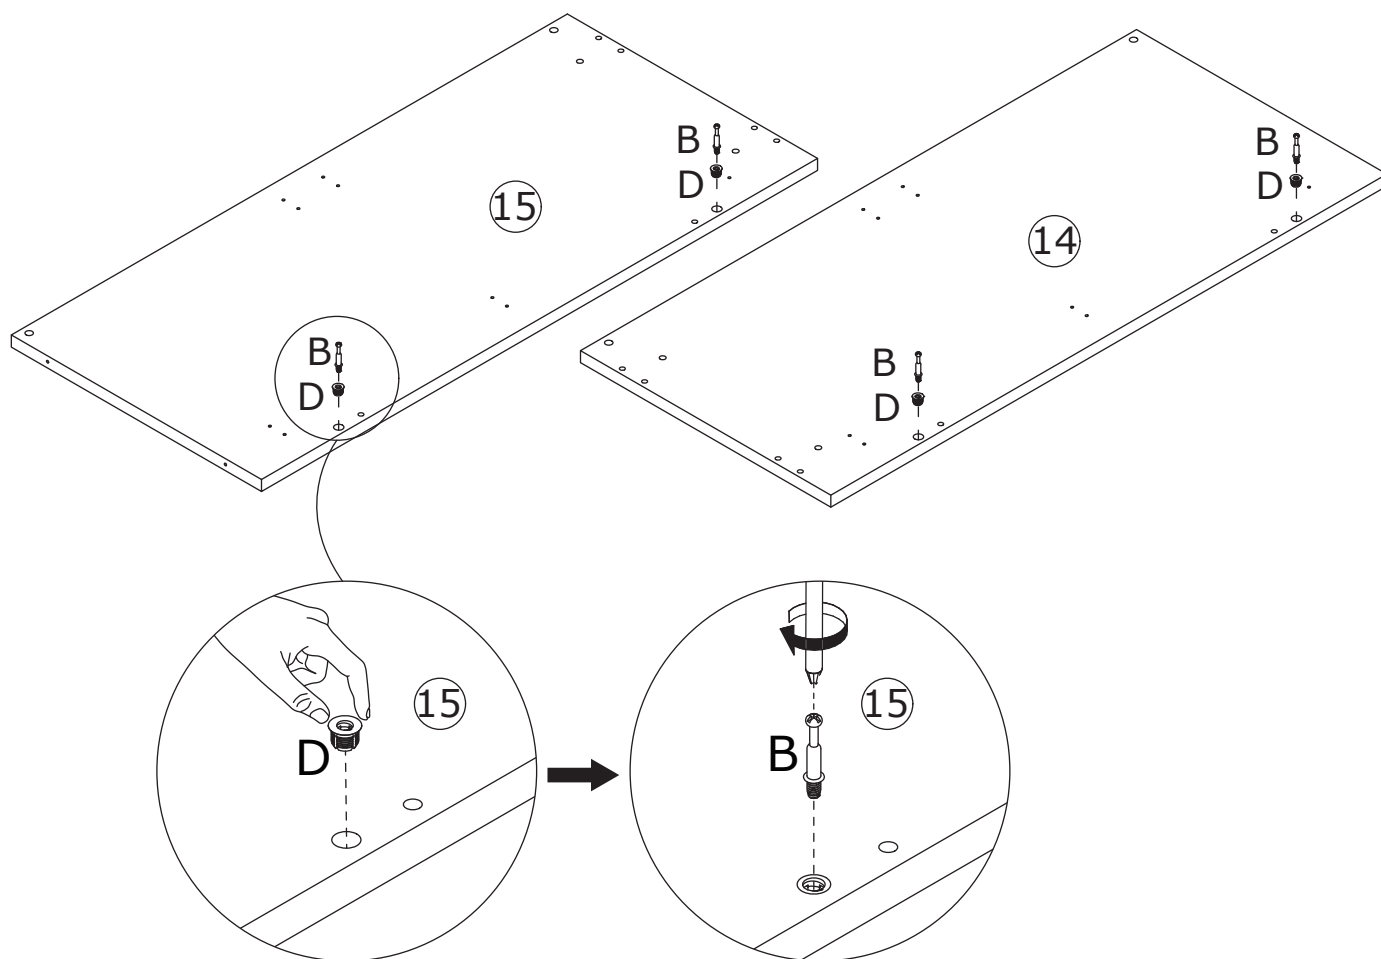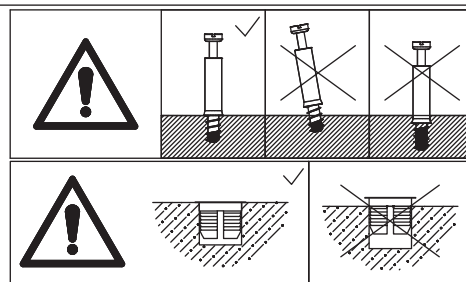



15

E x 8




Ø3 x 14 mm

  G x 2



Attach push-open latches (G) onto panel 15 and 14, and secure them with screws (E).

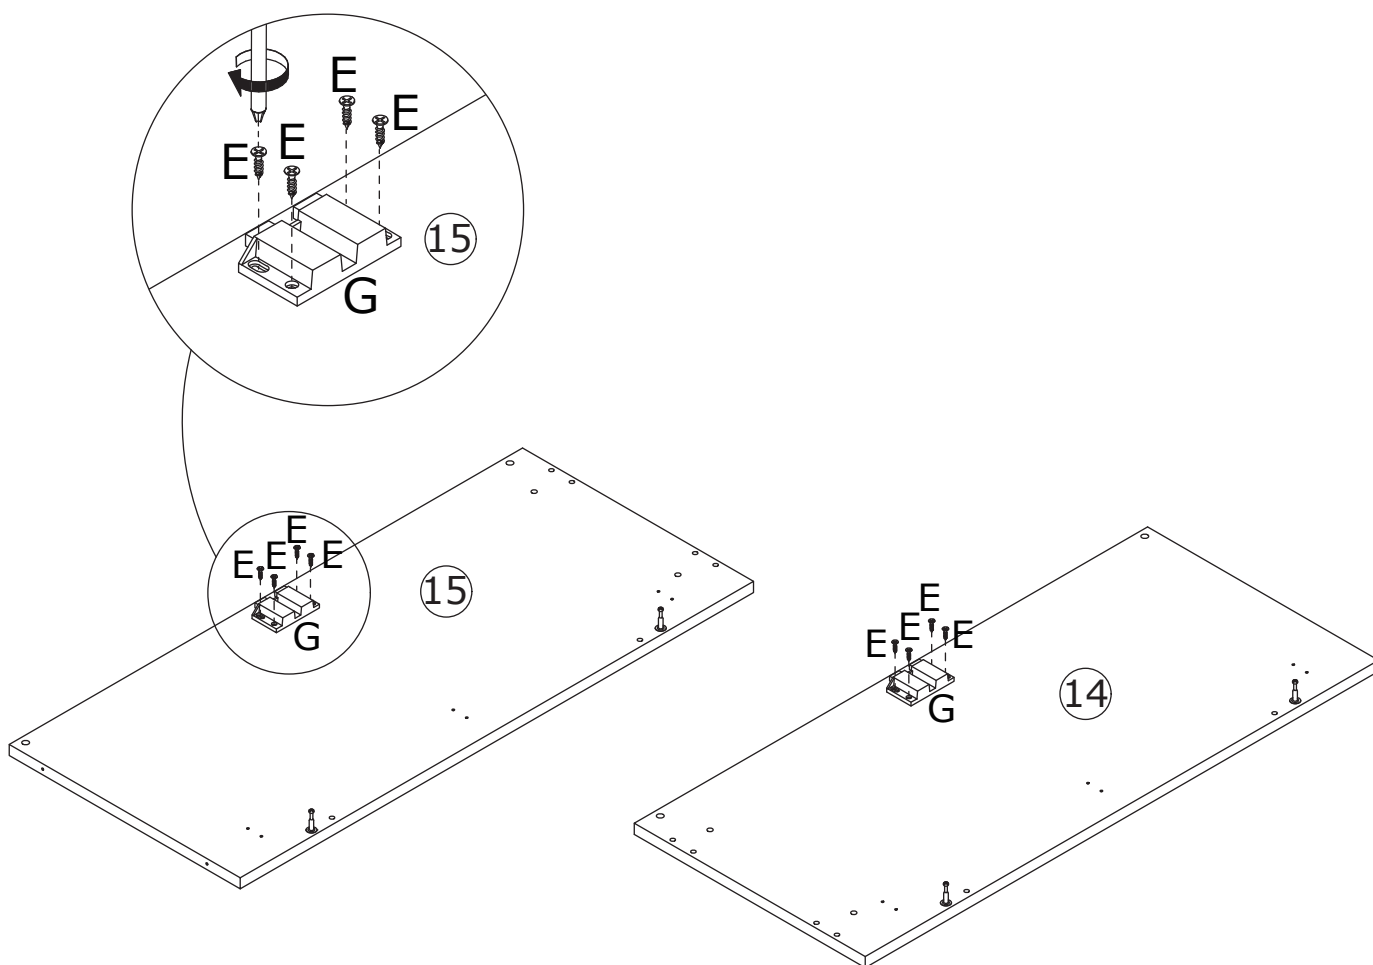

16

A x 4



 
Ø 15 x 10 mm

C x 8




Ø 6 x 30 mm

F x 4





Ø 5 x 40 mm

 

Connect panel 14 to panel 2 and 11, panel 15 to panel 1 and 11 using wooden dowel (C), then tighten by turning eccentric wheel (A) clockwise.

Secure panel 14 and 15 to panel 1 and 2 using screw (F).

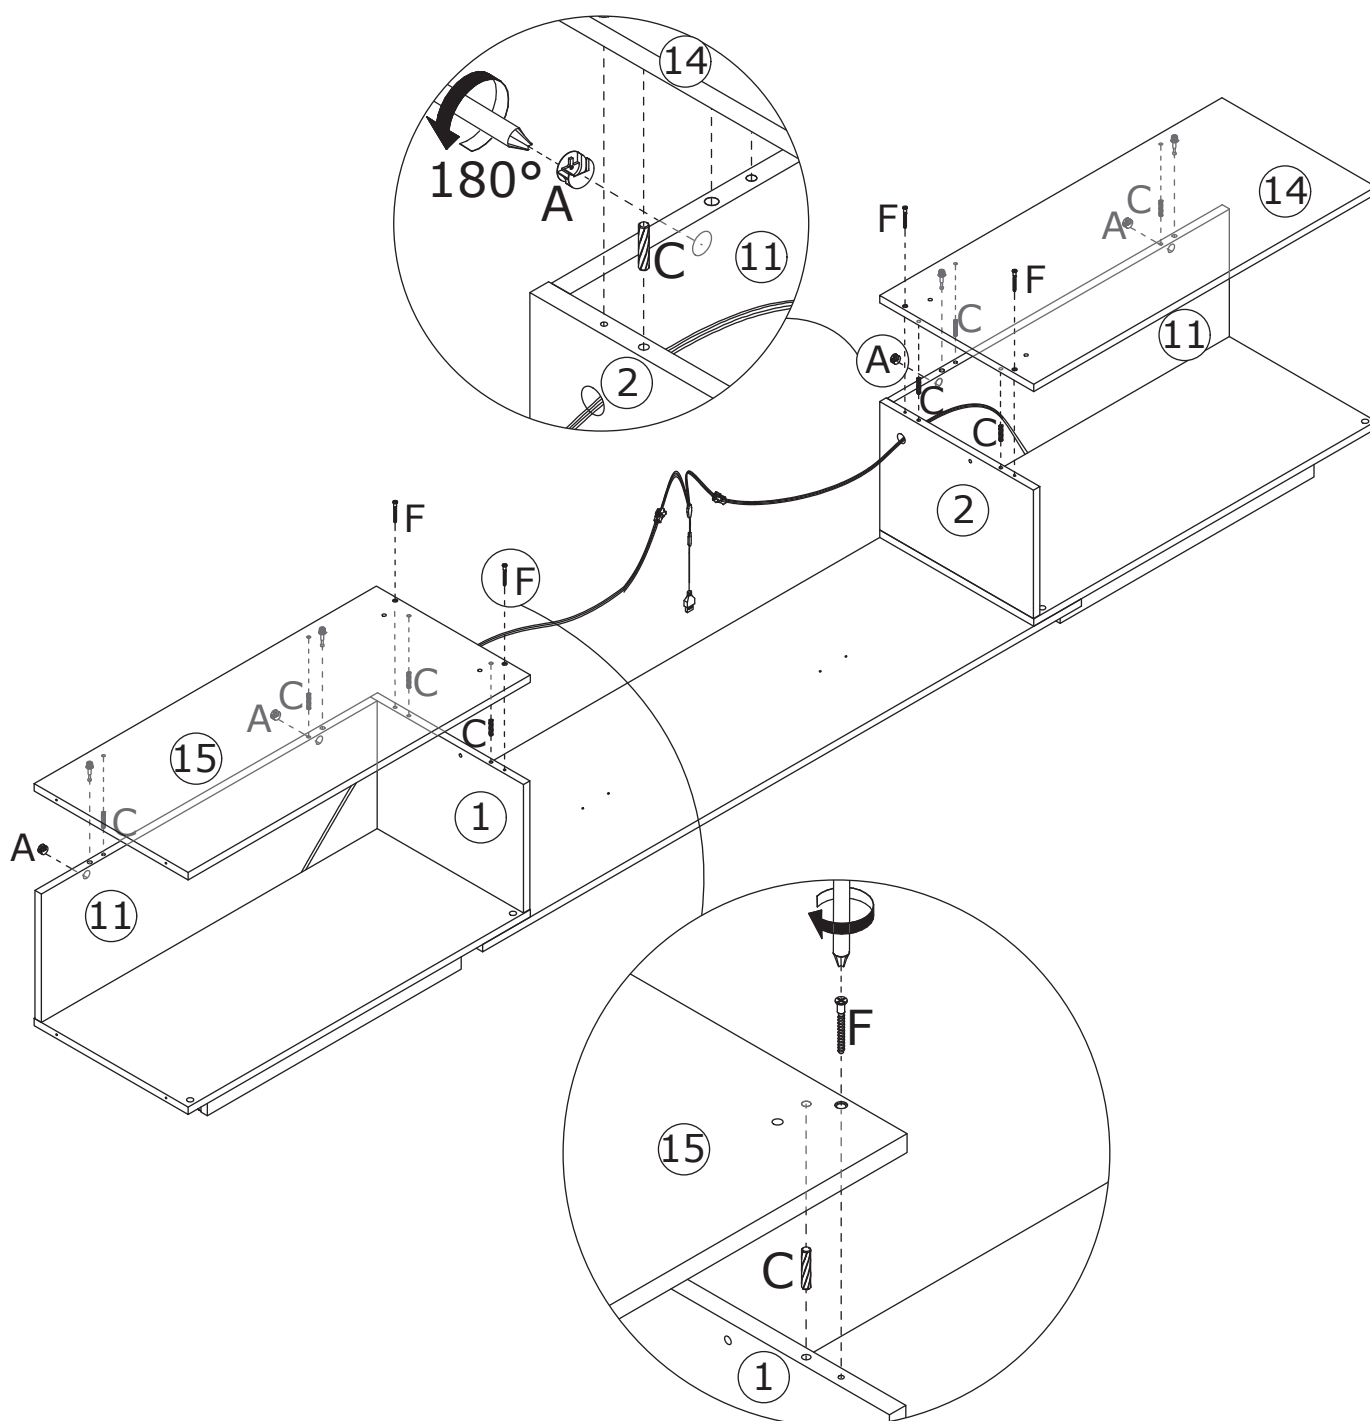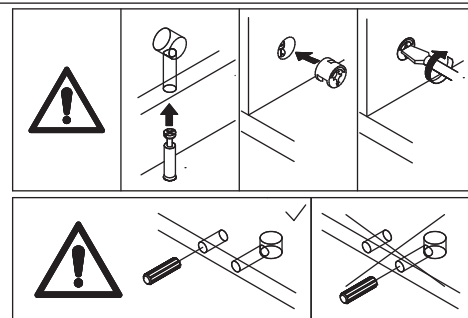


17

E x 12




Ø3 x 14 mm

 
M x 6




Use translucent clip (M) to secure the LED strip to panel 14 and 15.

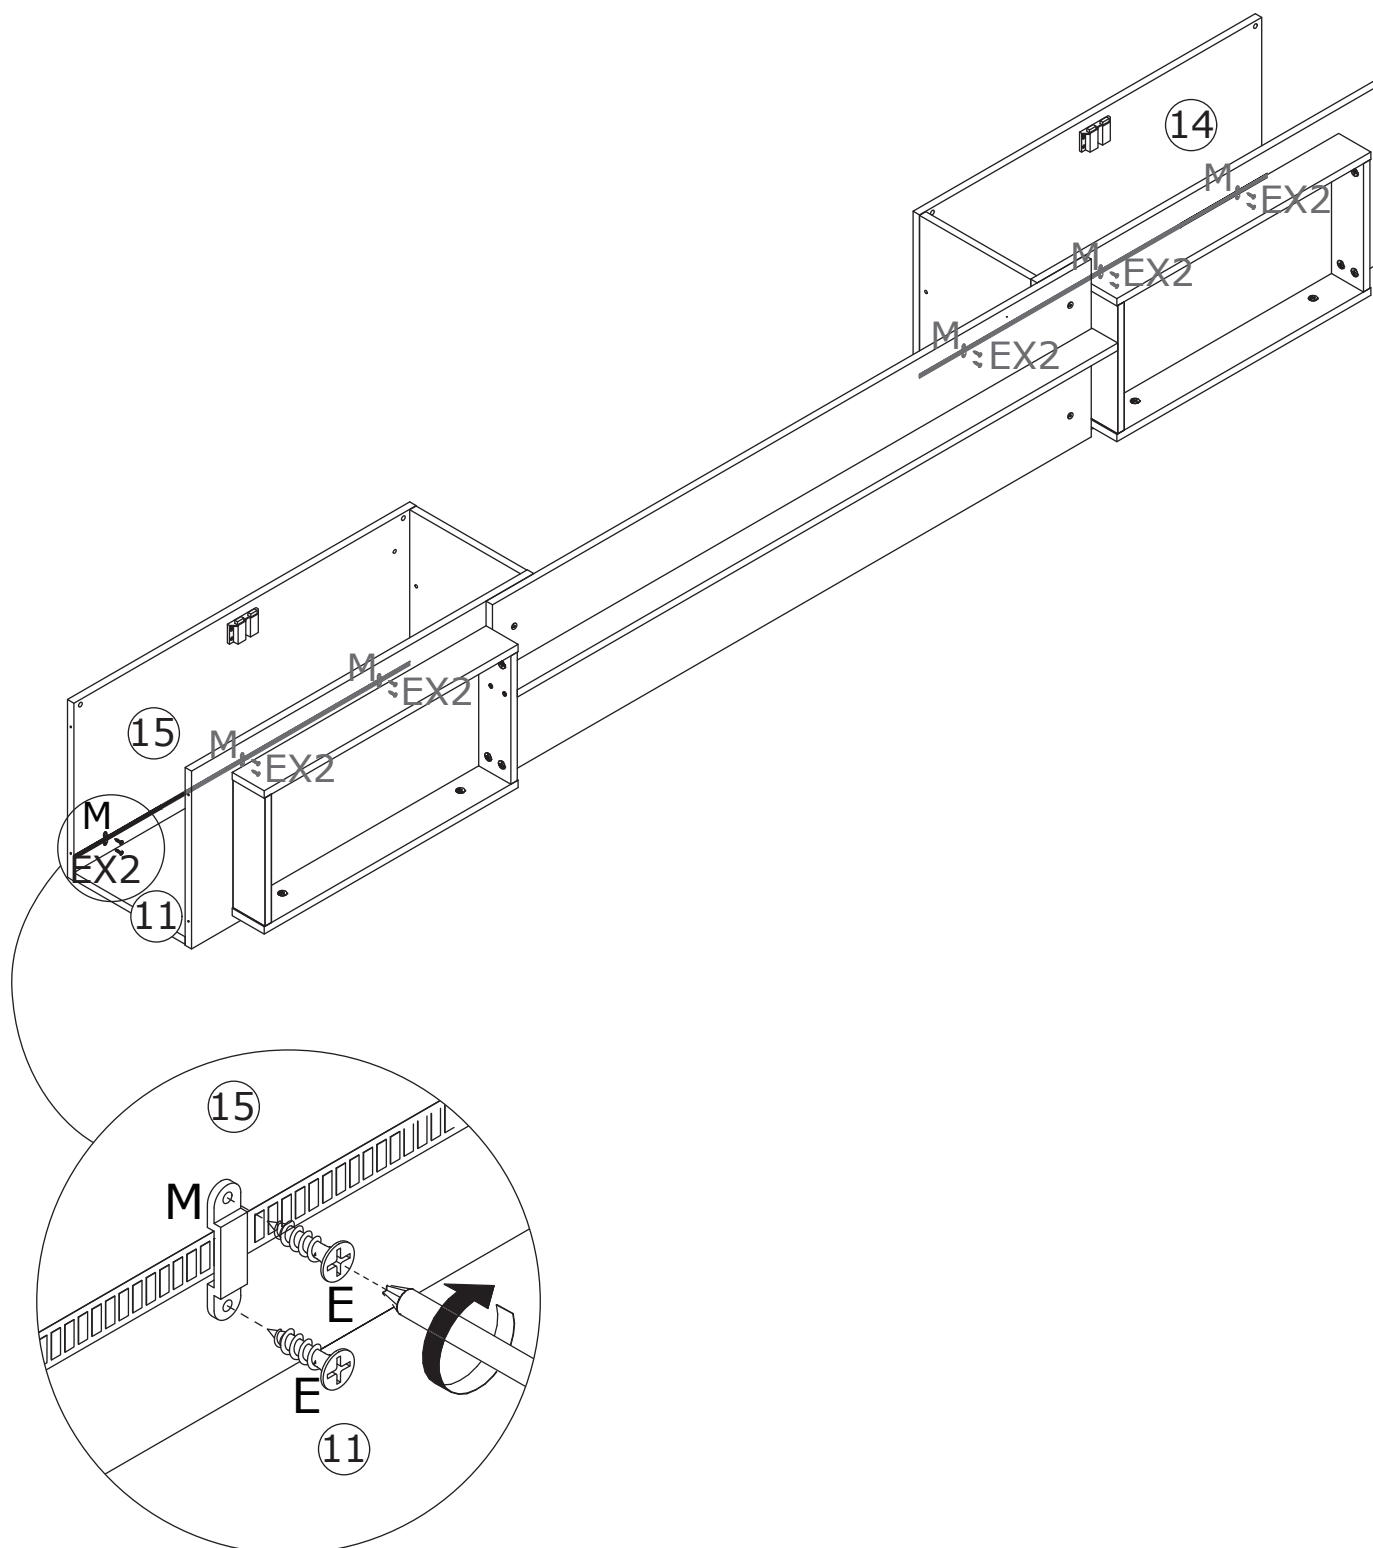

18

 
H x 8		L x 8	
H-1	H-2		
			
Ø5 x 3.5 mm		Ø3.5 x 25 mm	

First install part (H-1) onto panel 16, then secure them using flat-head self-tapping screw (L), and finally cover with part (H-2).

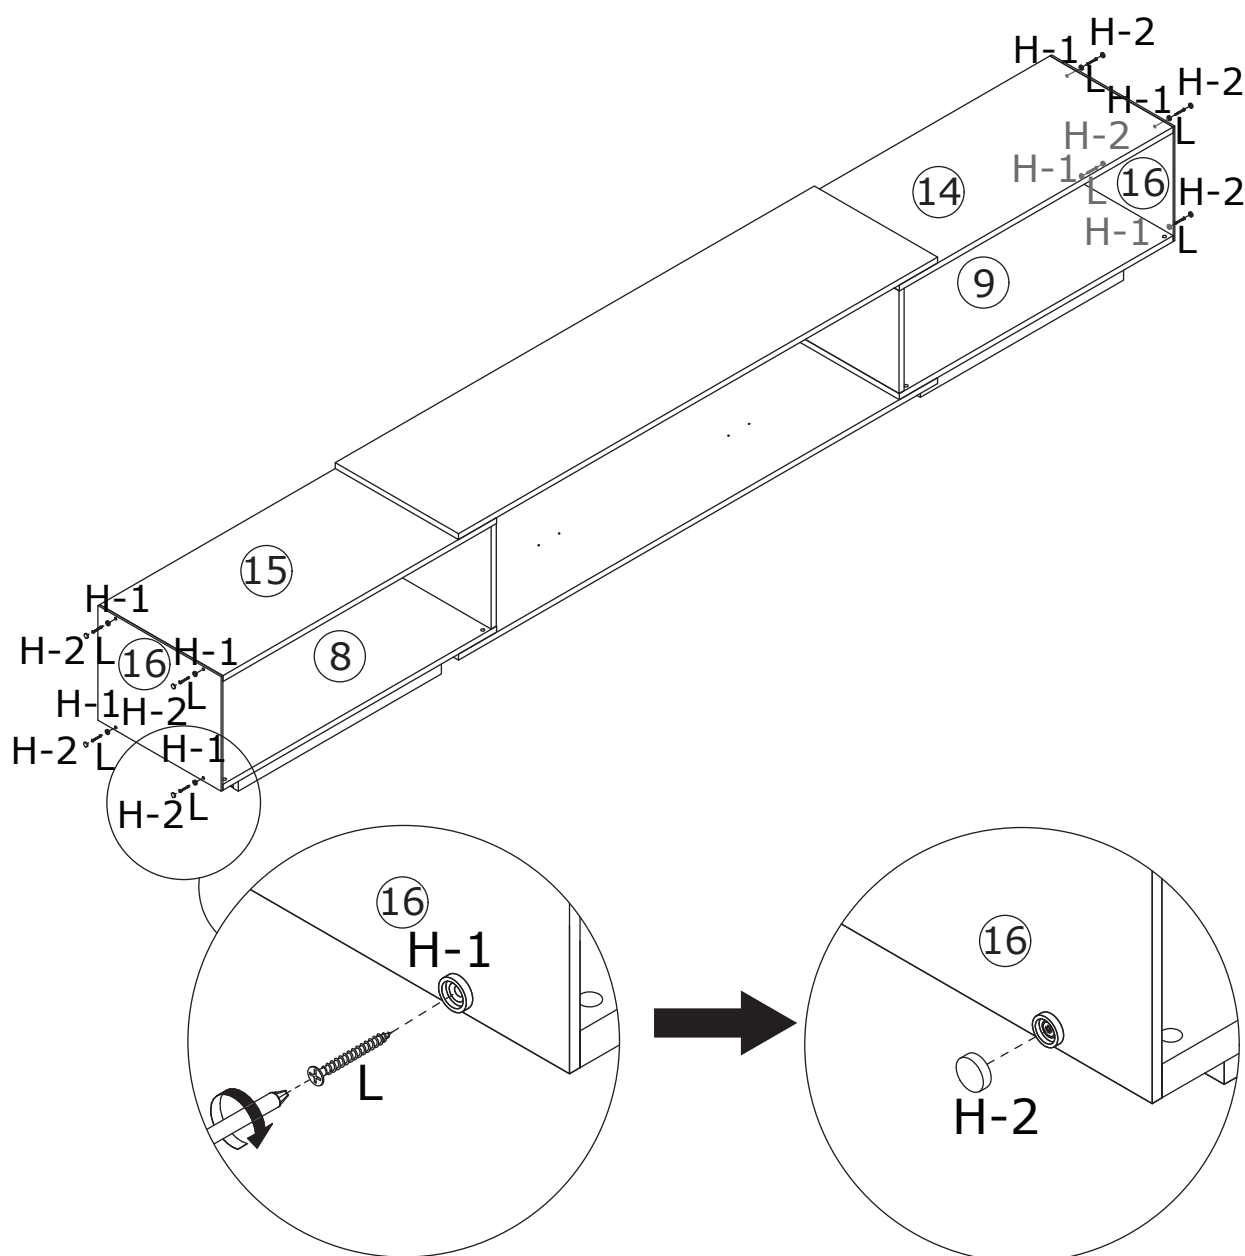

19

 B x 4




Ø6 x 35 mm



D x 4



 Ø10 x 10 mm



First install plug (D) onto panel 13, then screw self-tapping rod (B) into panel 13.

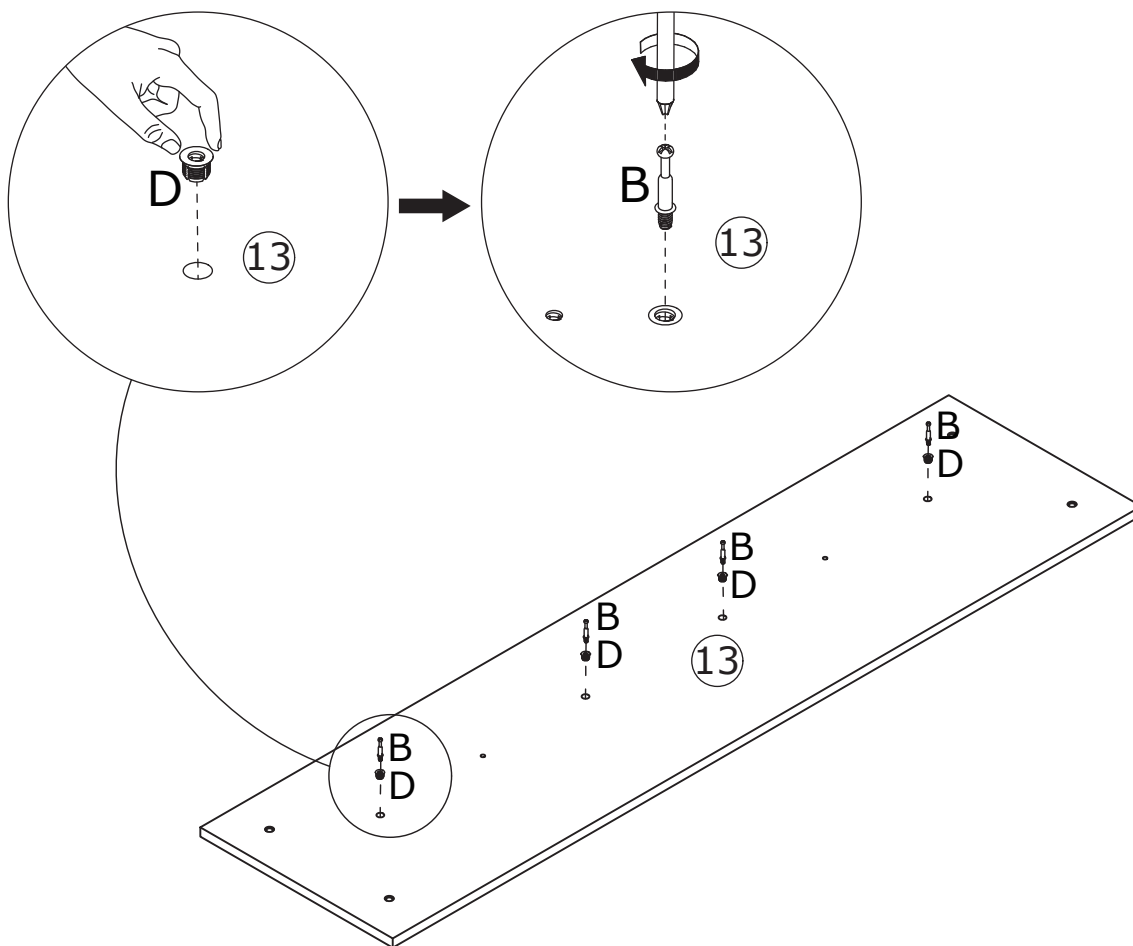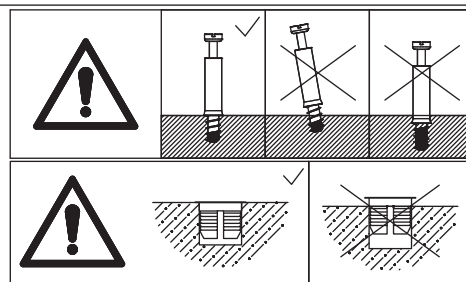

20

A x 4

 


Ø 15 x 10 mm



C x 2



Ø 6 x 30 mm




Connect panel 10 to panel 13 using wooden dowel (C), then tighten by turning eccentric wheel (A) clockwise.

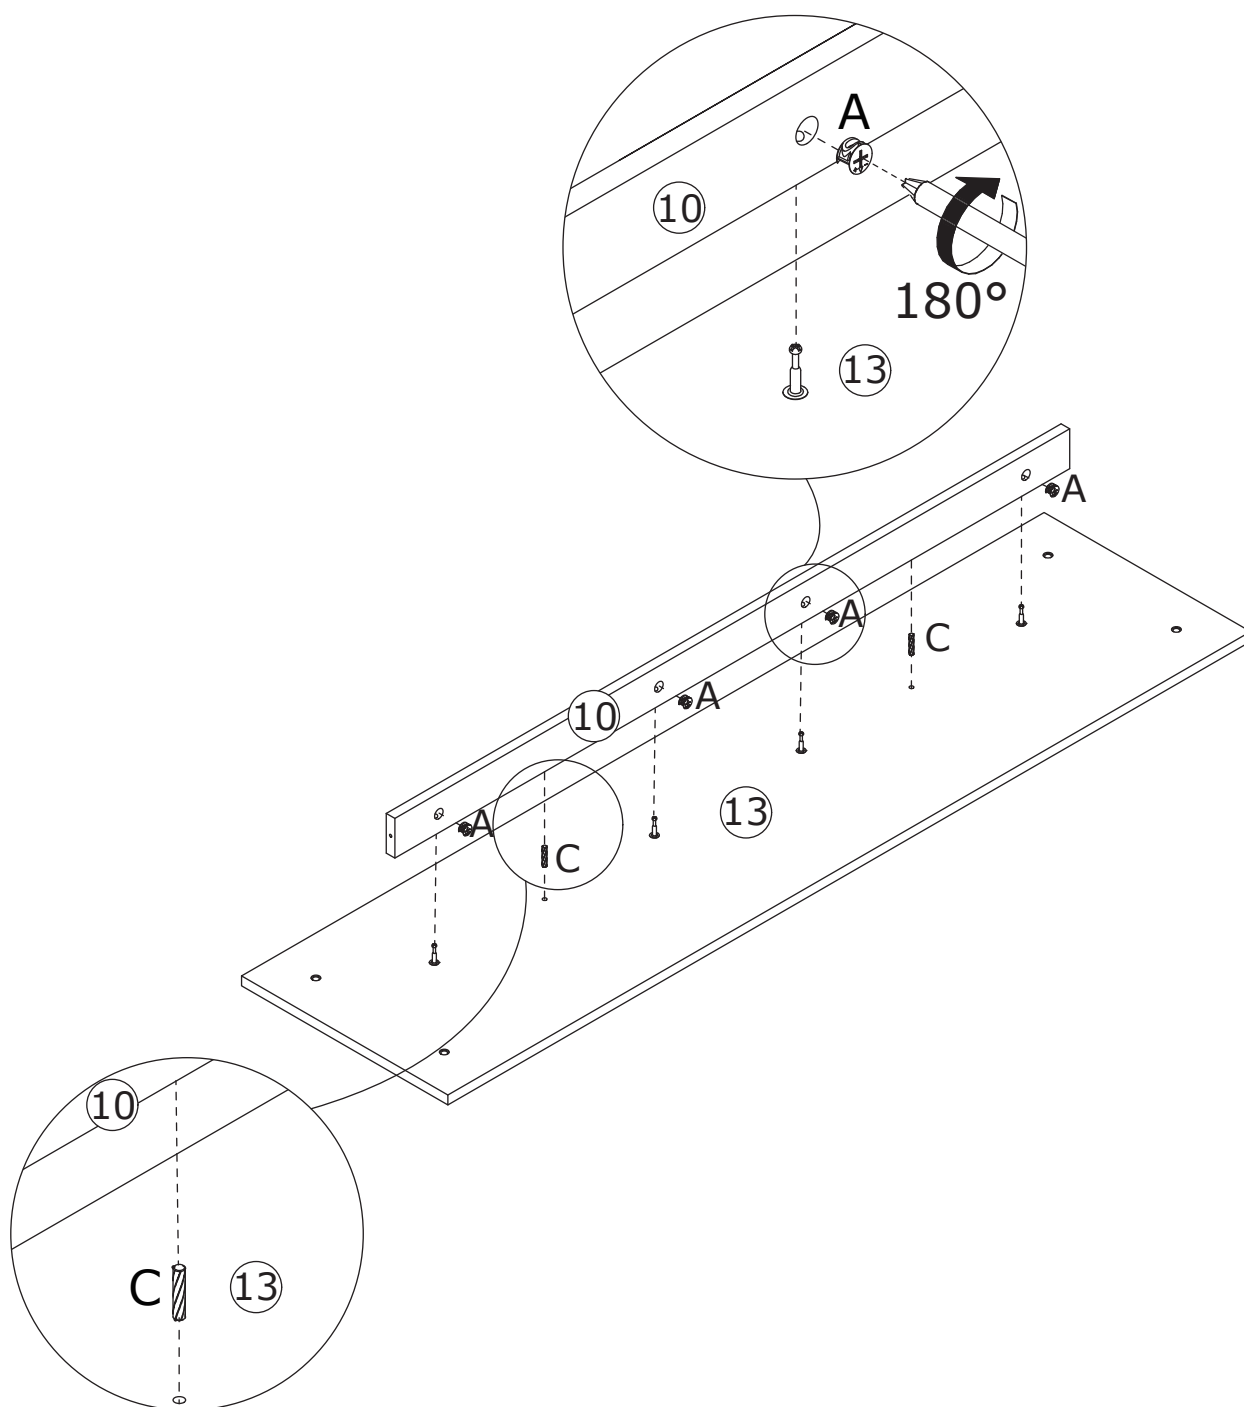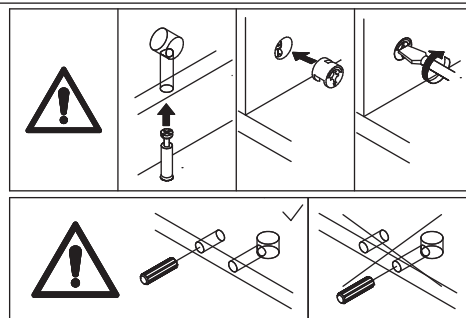

21


F x 2

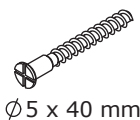

N x 4




 R x 1



Secure panel 14 and 15 to panel 13 using screw (N).

Secure panel 1 and 2 to panel 10 using screw (F).

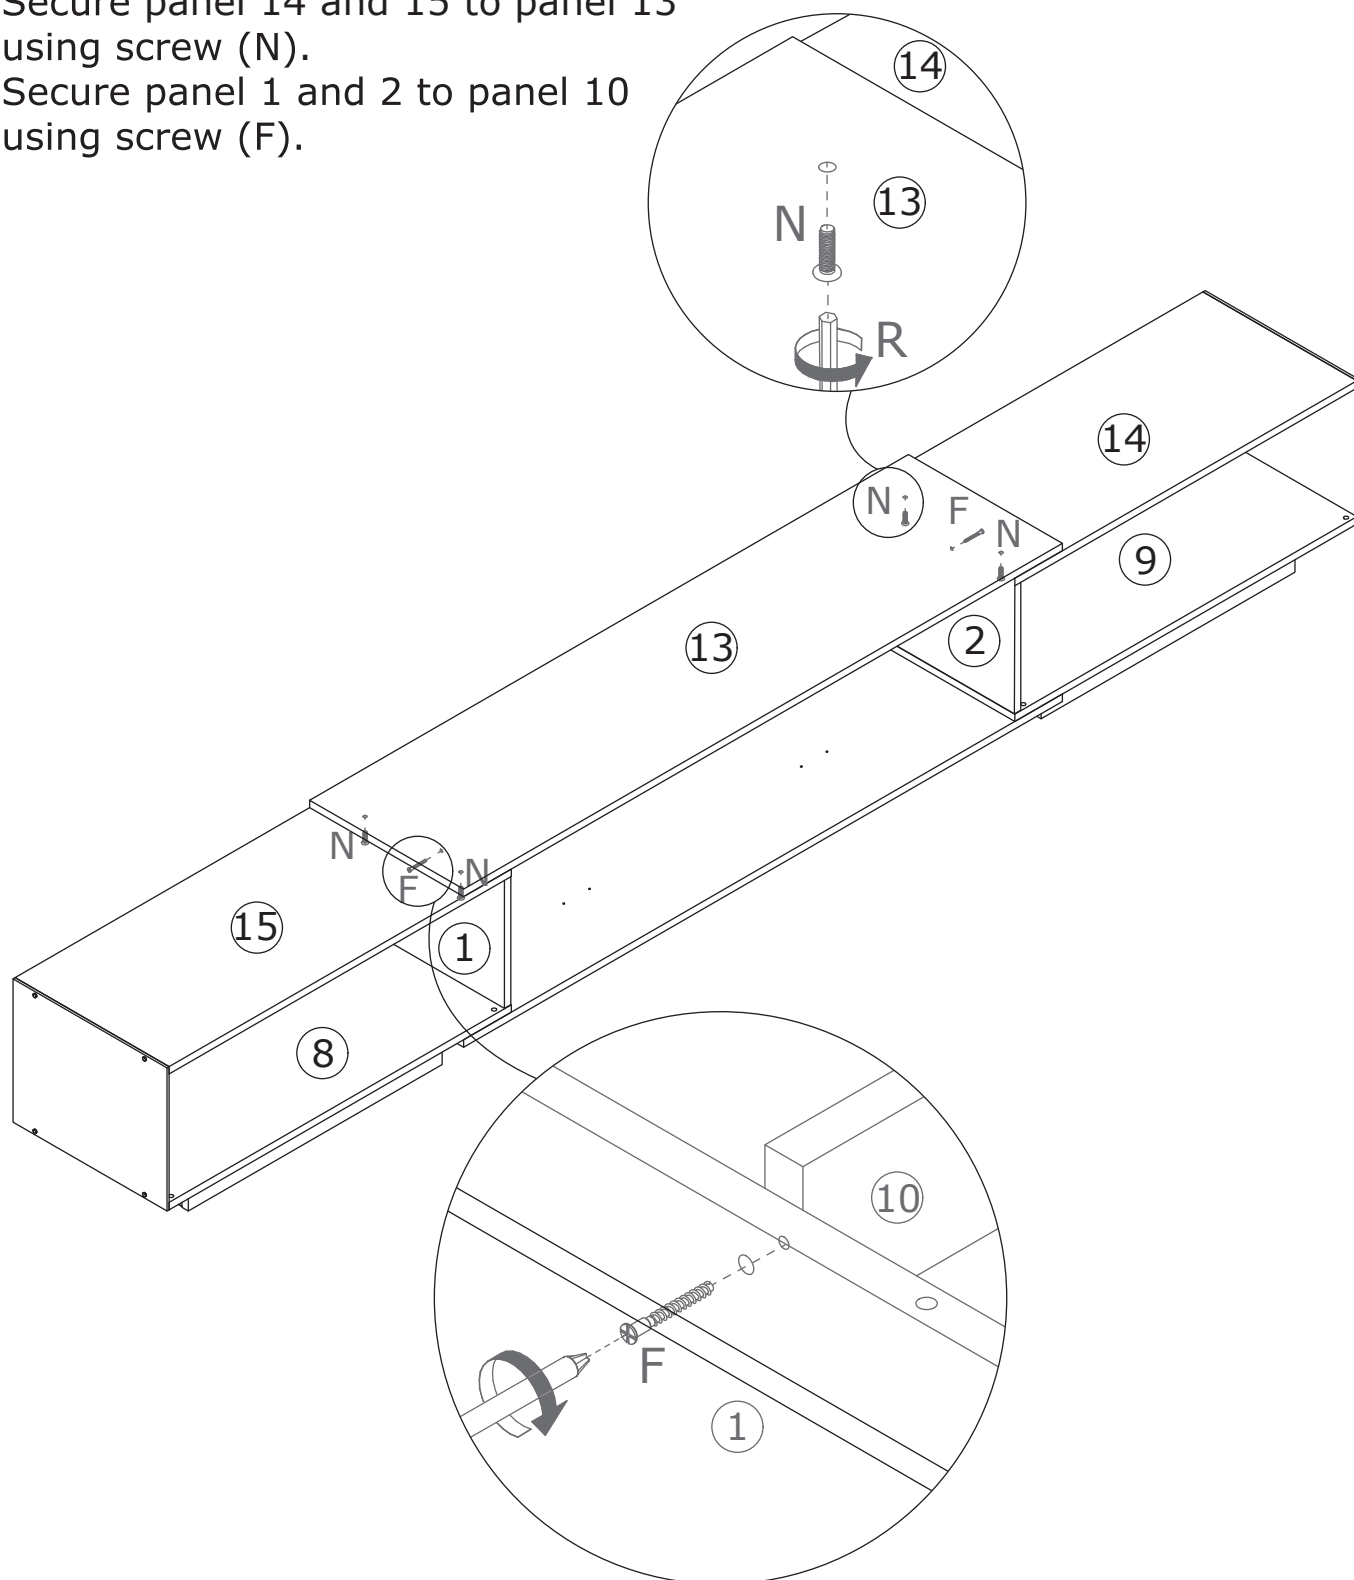


22

J x 4

J-3

 x2

Insert part (J-3) into panel 8, 9, 14 and 15.

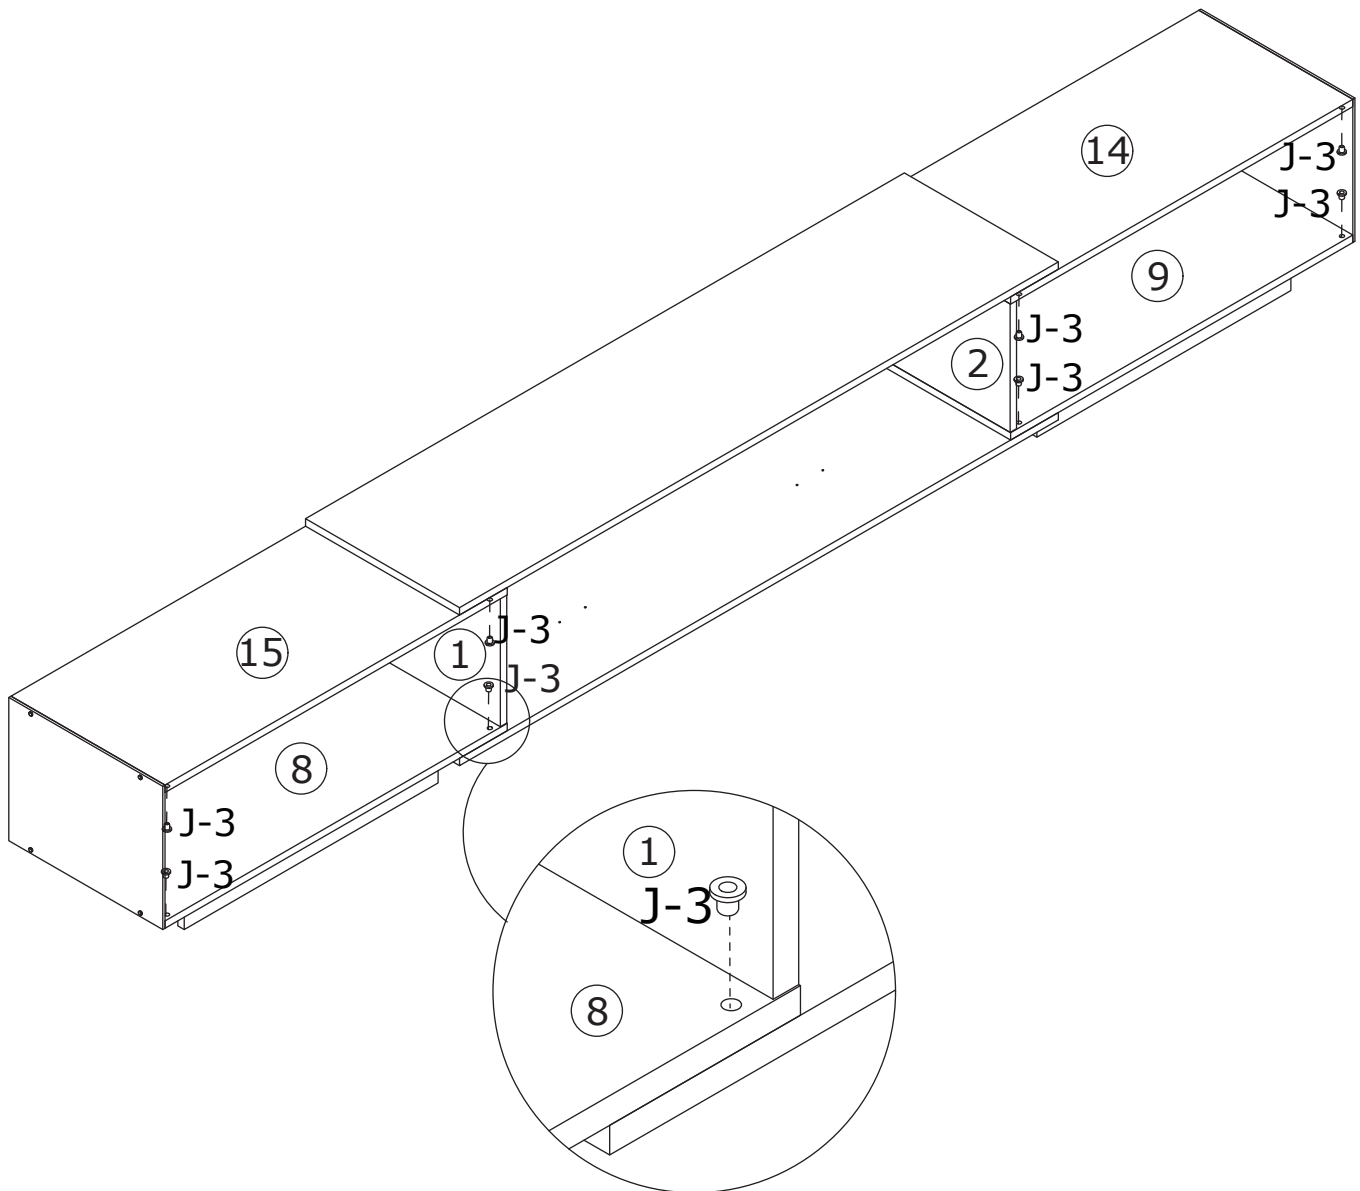

23

J x 2



 
J x 2





J x 2



J x 2




Install part (J-1) and (J-2) onto glass panel 17, use screw (J-4) to secure part (J-5) inside part (J-1) and (J-2) against panel 17.

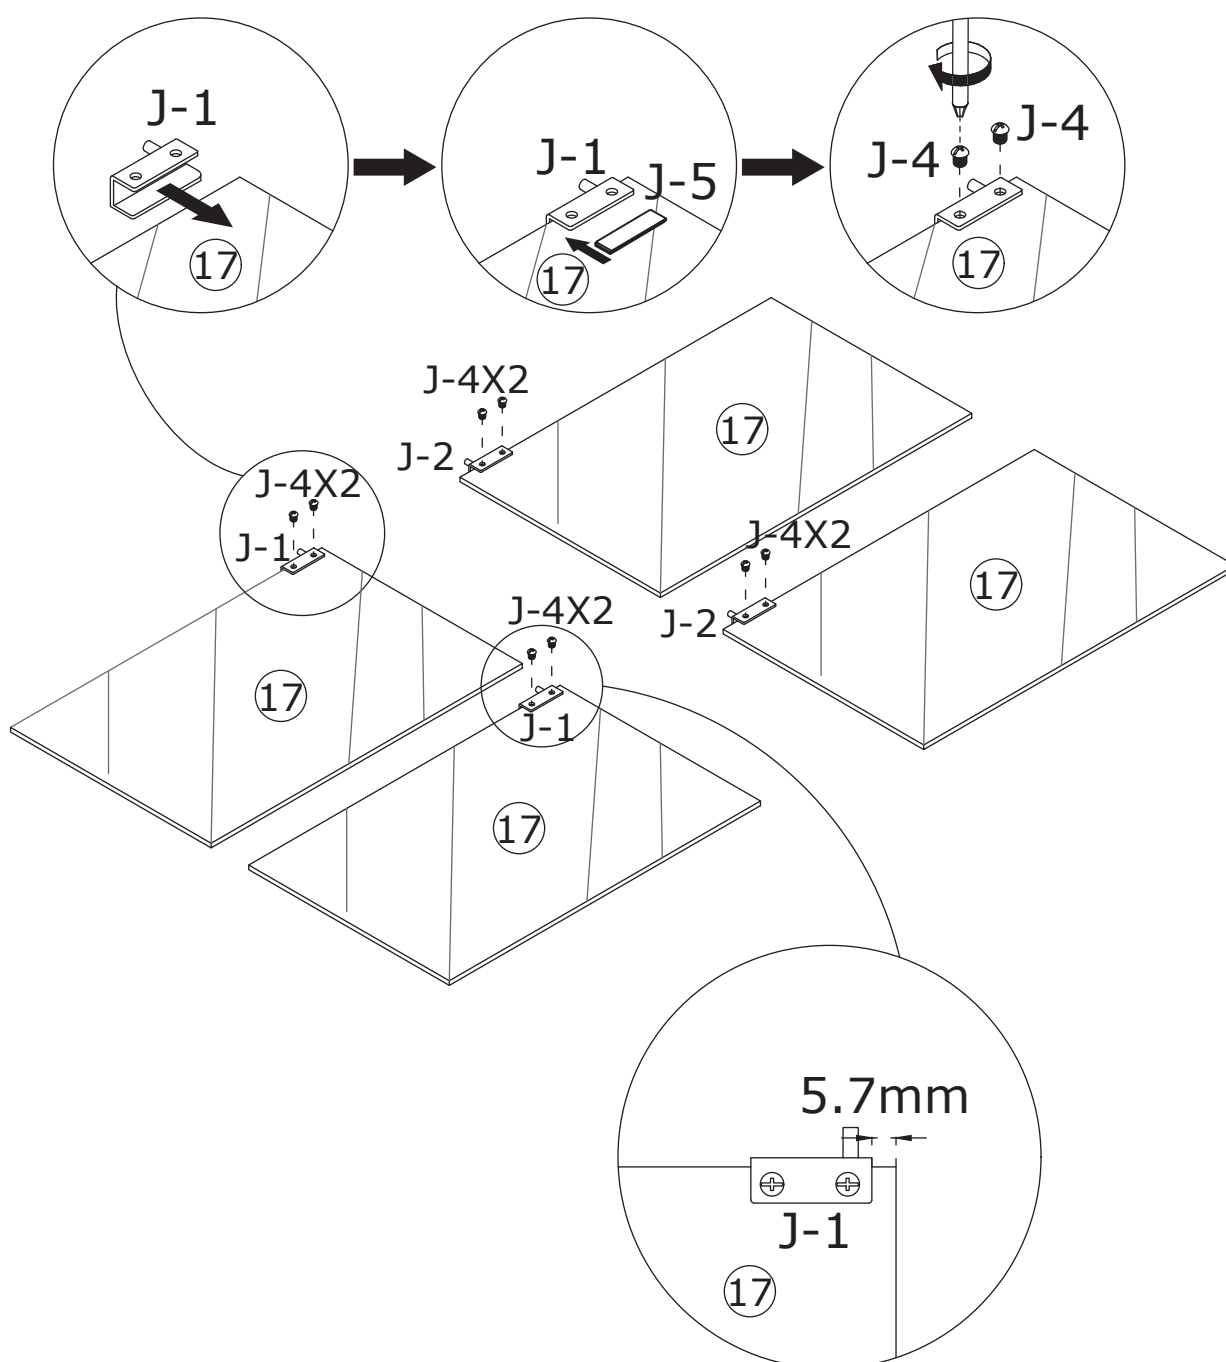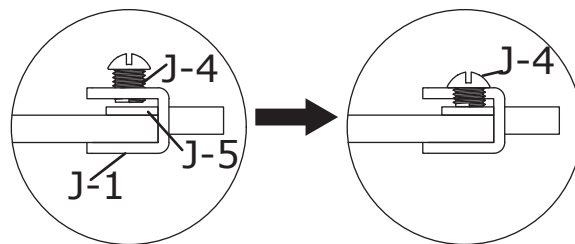

24

J x 2 J-1 	J x 2 J-2 	
---	---	--

Insert part (J-1) and (J-2) into (J-3).

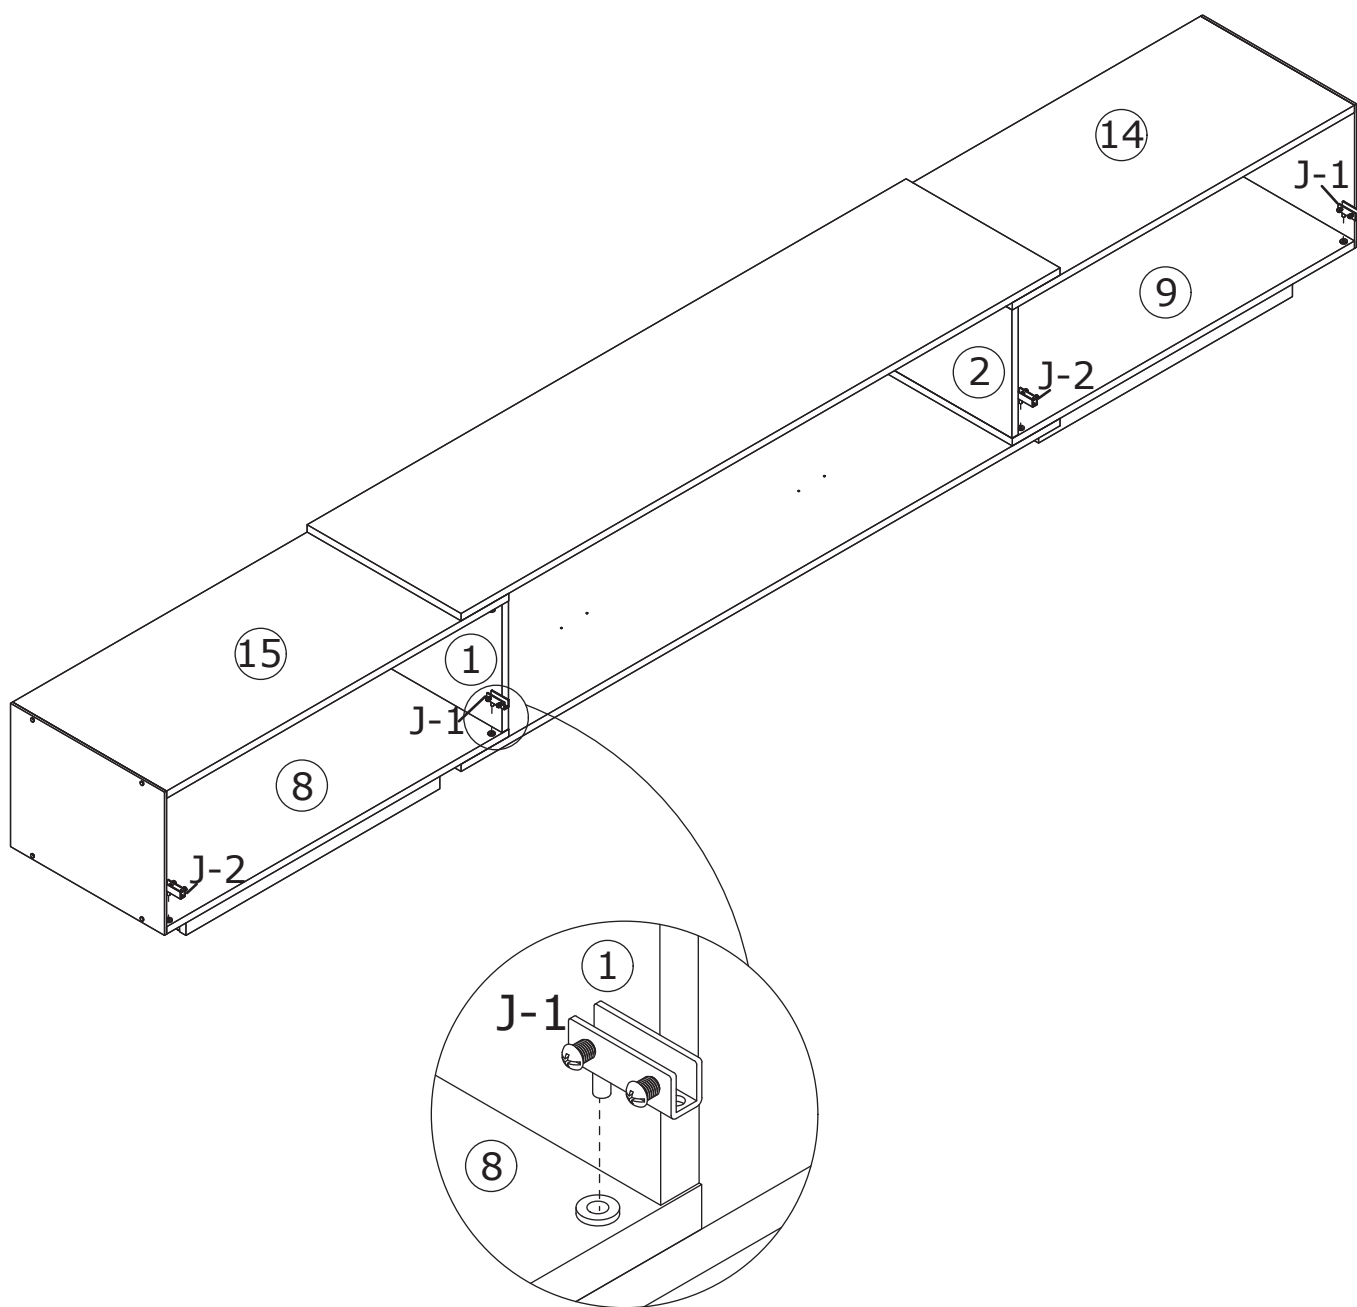

25

 
J x 1

J-4




J x 1

J-5



First insert part (J-2) upward into panel 14, then push panel 17 into (J-1), and finally use screw (J-4) to secure part (J-5) to panel 17. Note: panel 17 should be pushed into (J-1) with a 5.7mm margin from the edge.

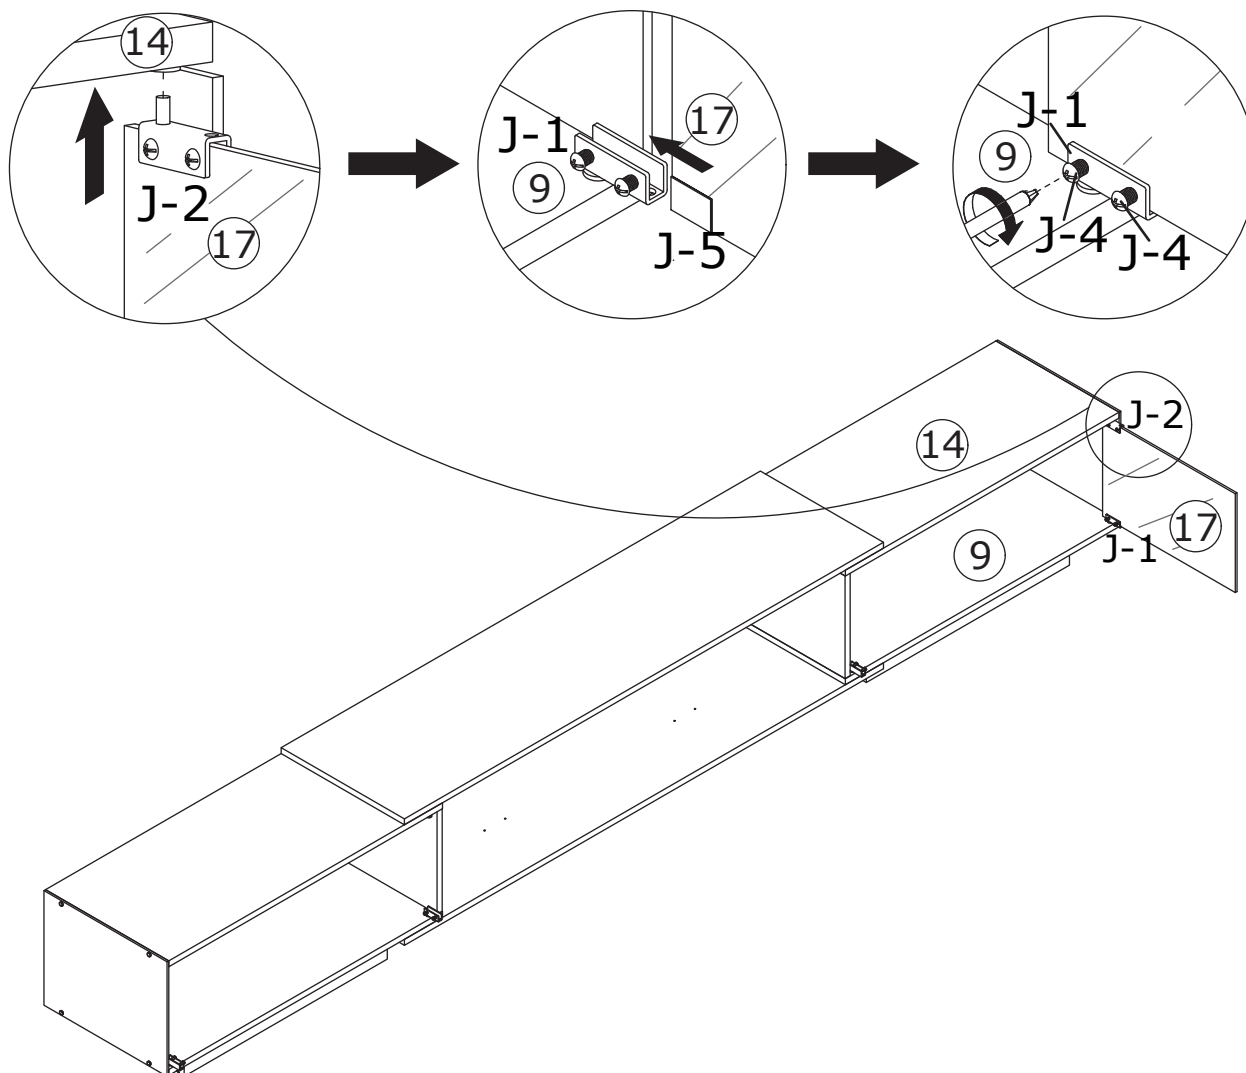

26

 
J x 1

J-4




J x 1

J-5




Push panel 17 into part (J-2), use screw (J-4) to secure part (J-5) to panel 17.


Note: panel 17 should be pushed into (J-2) with a 5.7mm margin from the edge.

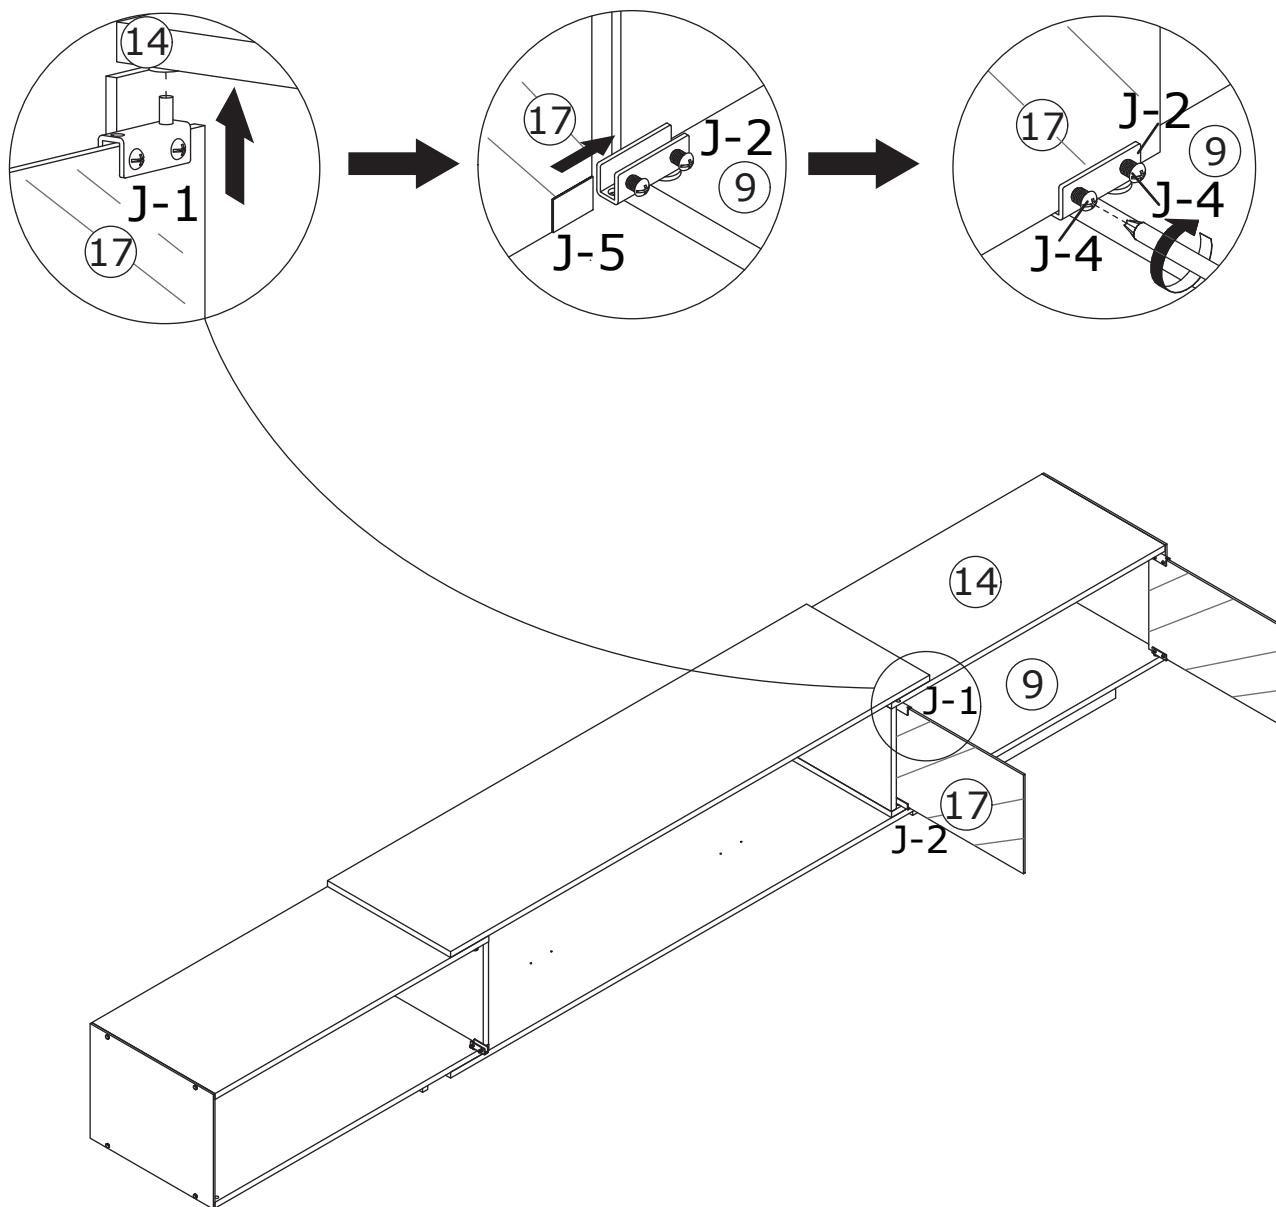

27

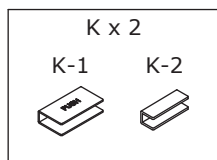

First install part (K-1) onto panel 17,
then cover part (K-2) over part (K-1).

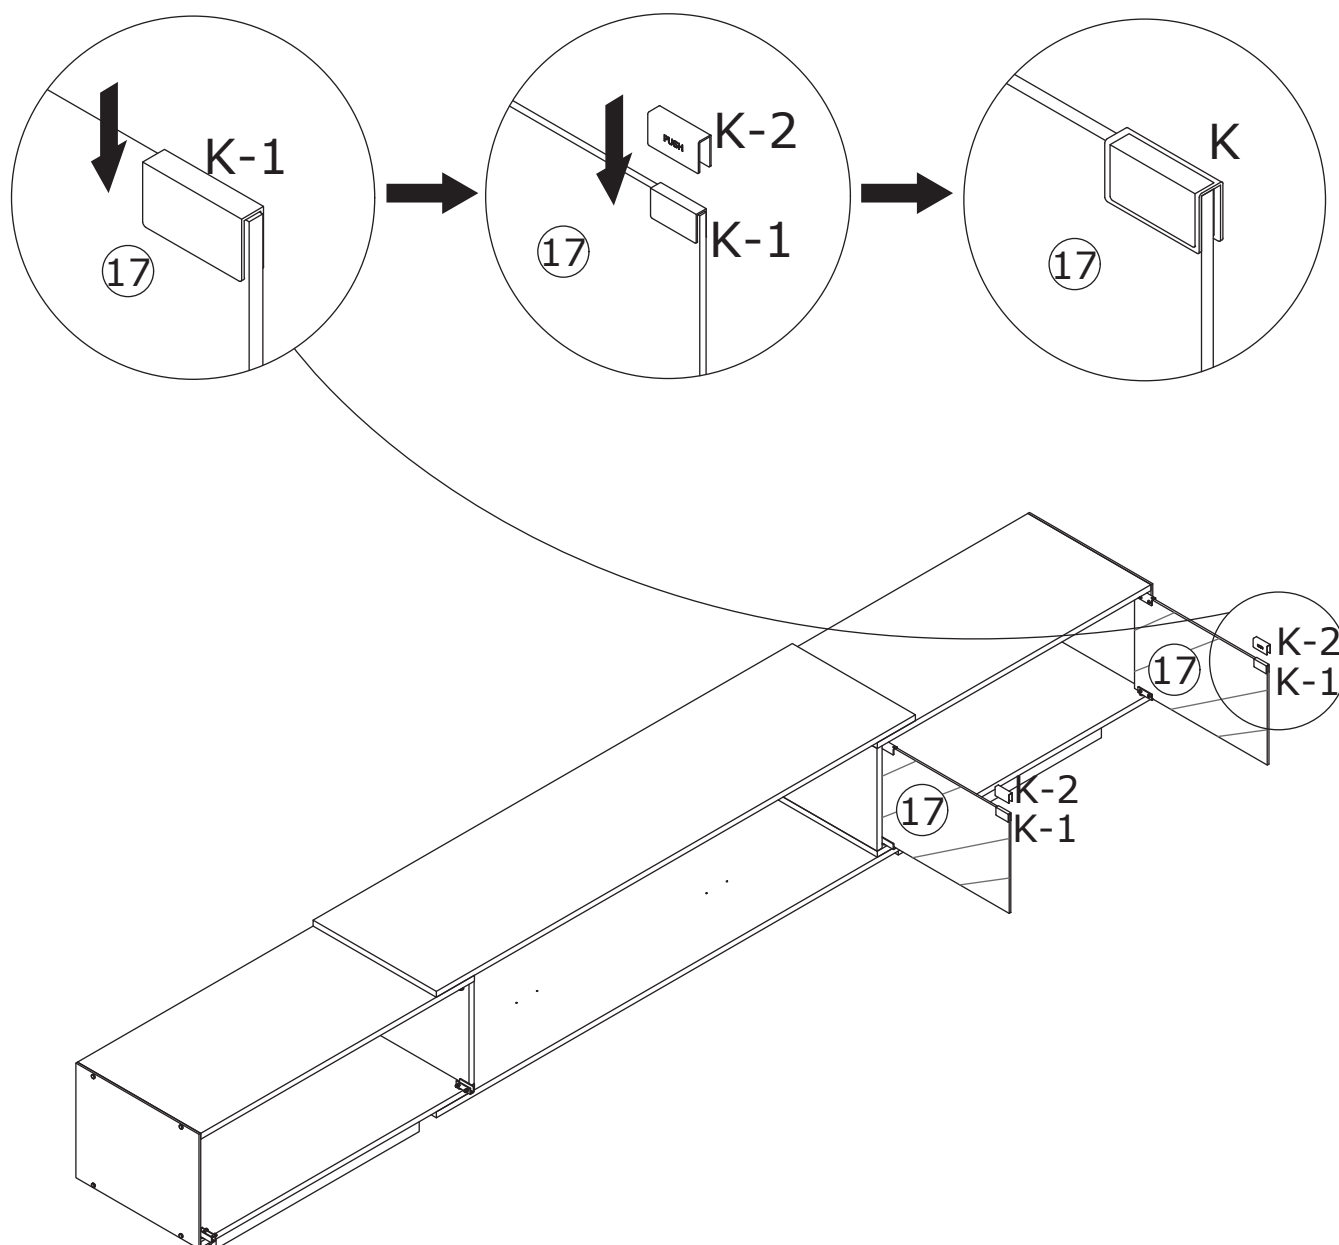

28

 
J x 1

J-4




J x 1

J-5



First insert part (J-2) upward into panel 15, then push panel 17 into part (J-1), and finally use screw (J-4) to secure part (J-5) to panel 17.

Note: panel 17 should be pushed into part (J-1) with a 5.7mm margin from the edge.

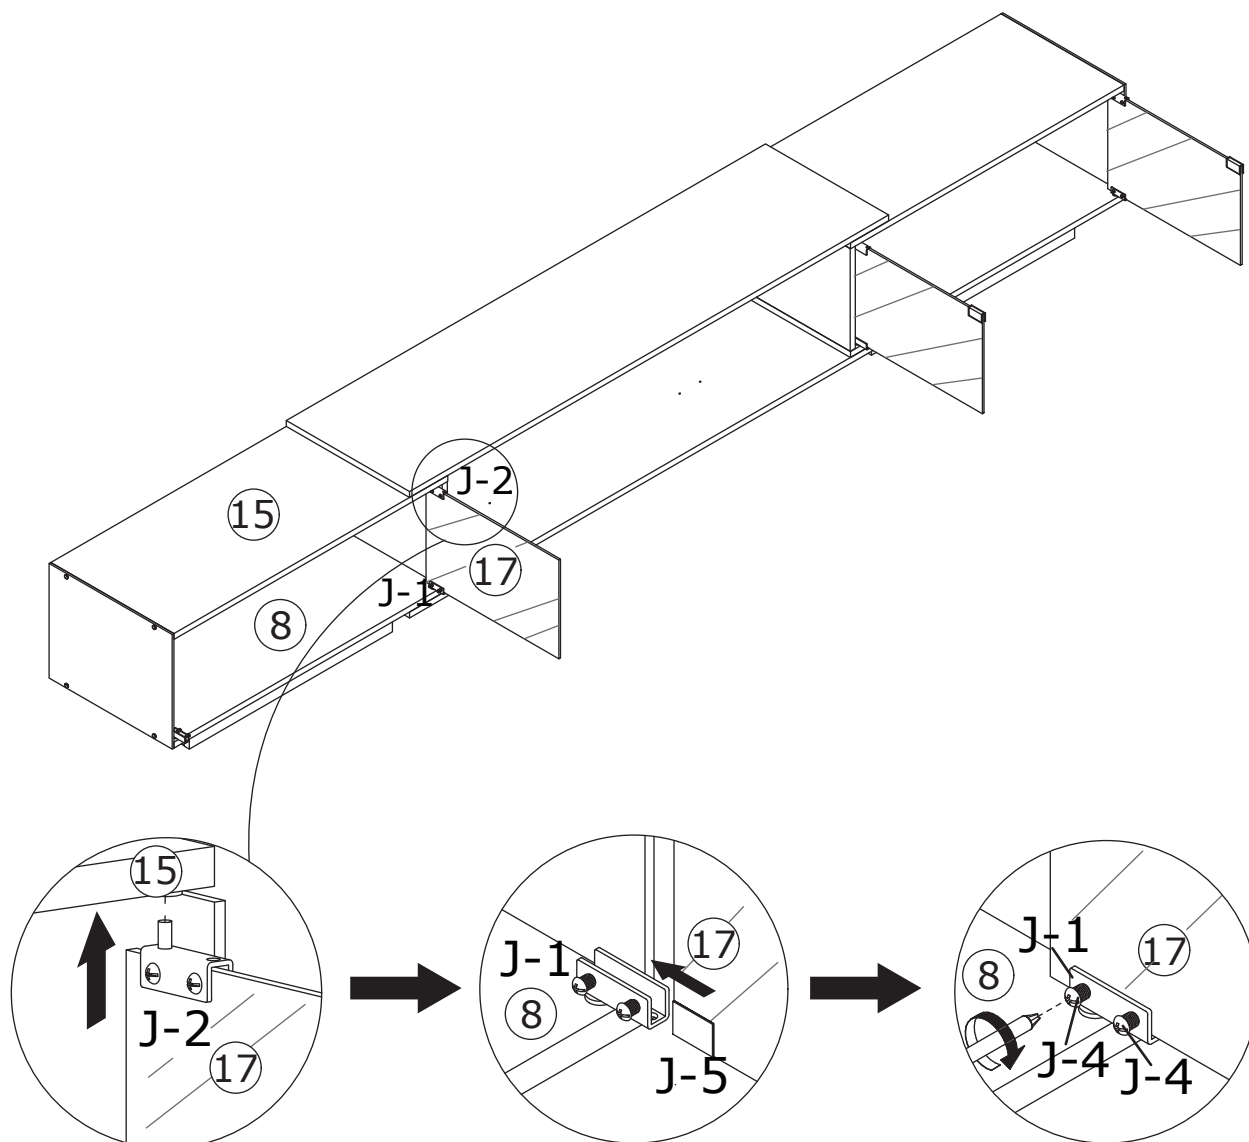

29

 
J x 1

J-4




J x 1

J-5




First insert part (J-1) upward into panel 15, then push panel 17 into part (J-2), and finally use screw (J-4) to secure part (J-5) to panel 17.



Note: panel 17 should be pushed into part (J-2) with a 5.7mm margin from the edge.

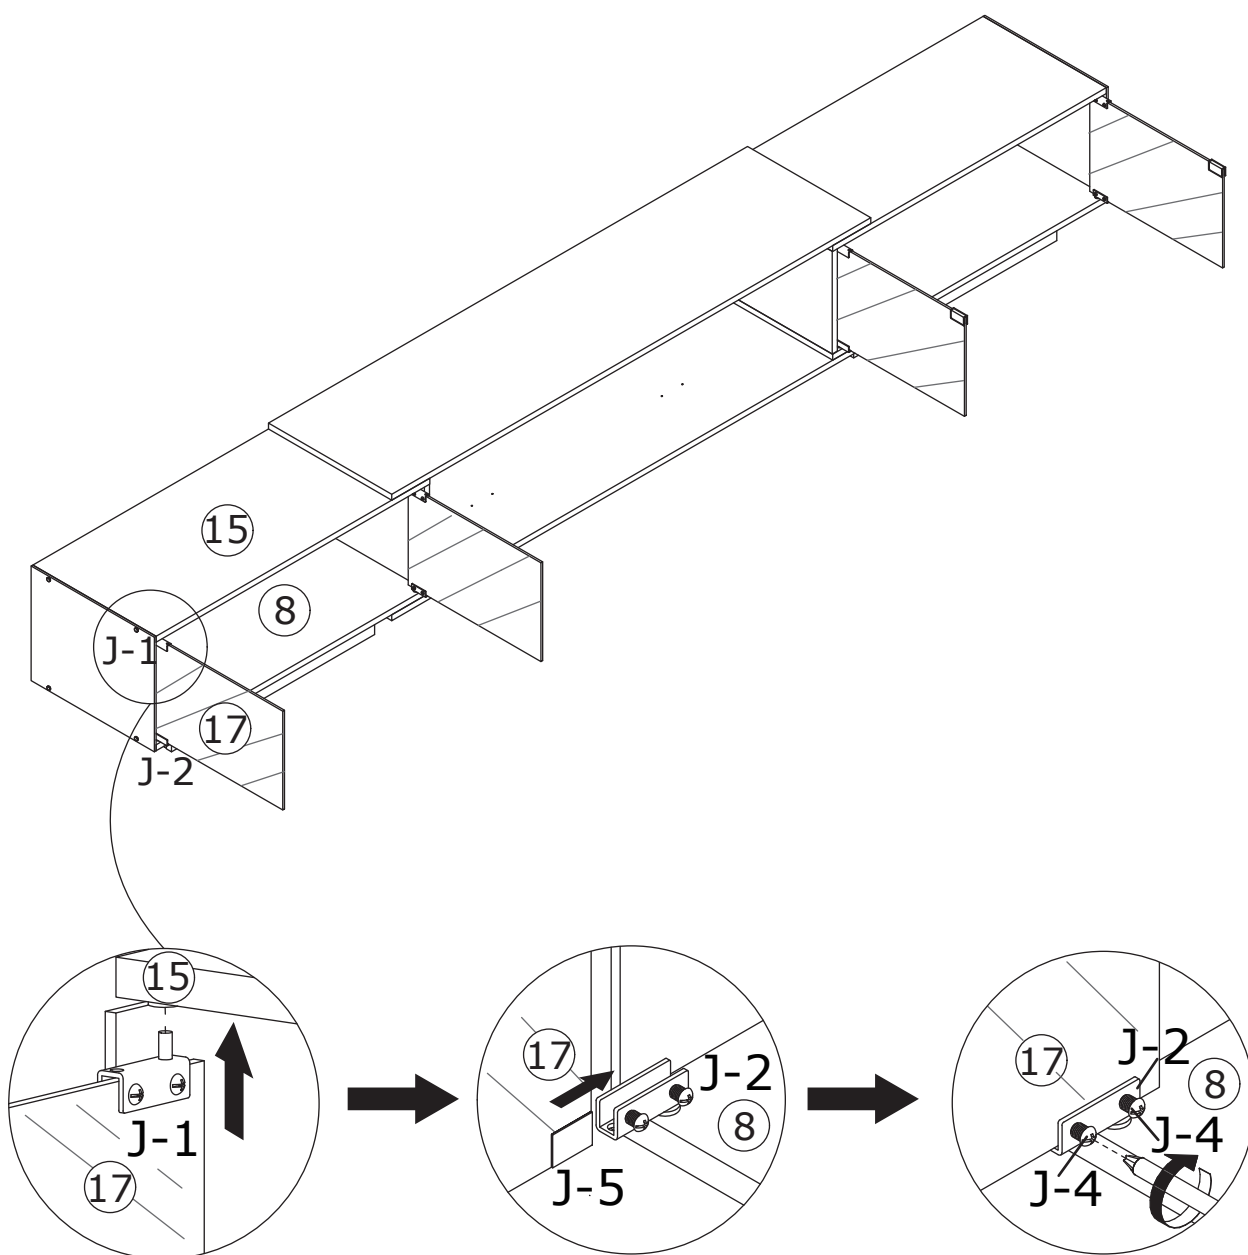

30

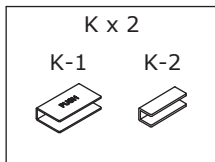


First install part (K-1) onto panel 17, then cover part (K-2) over part (K-1).

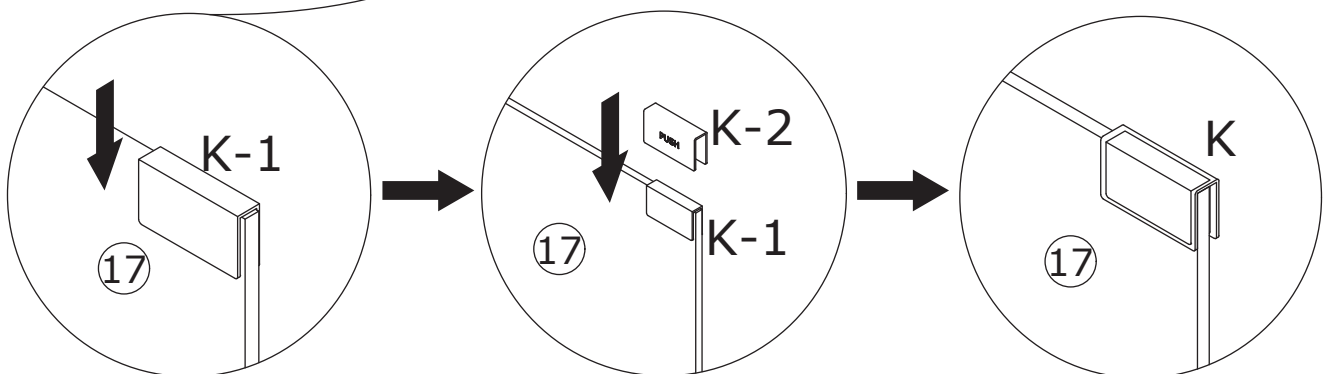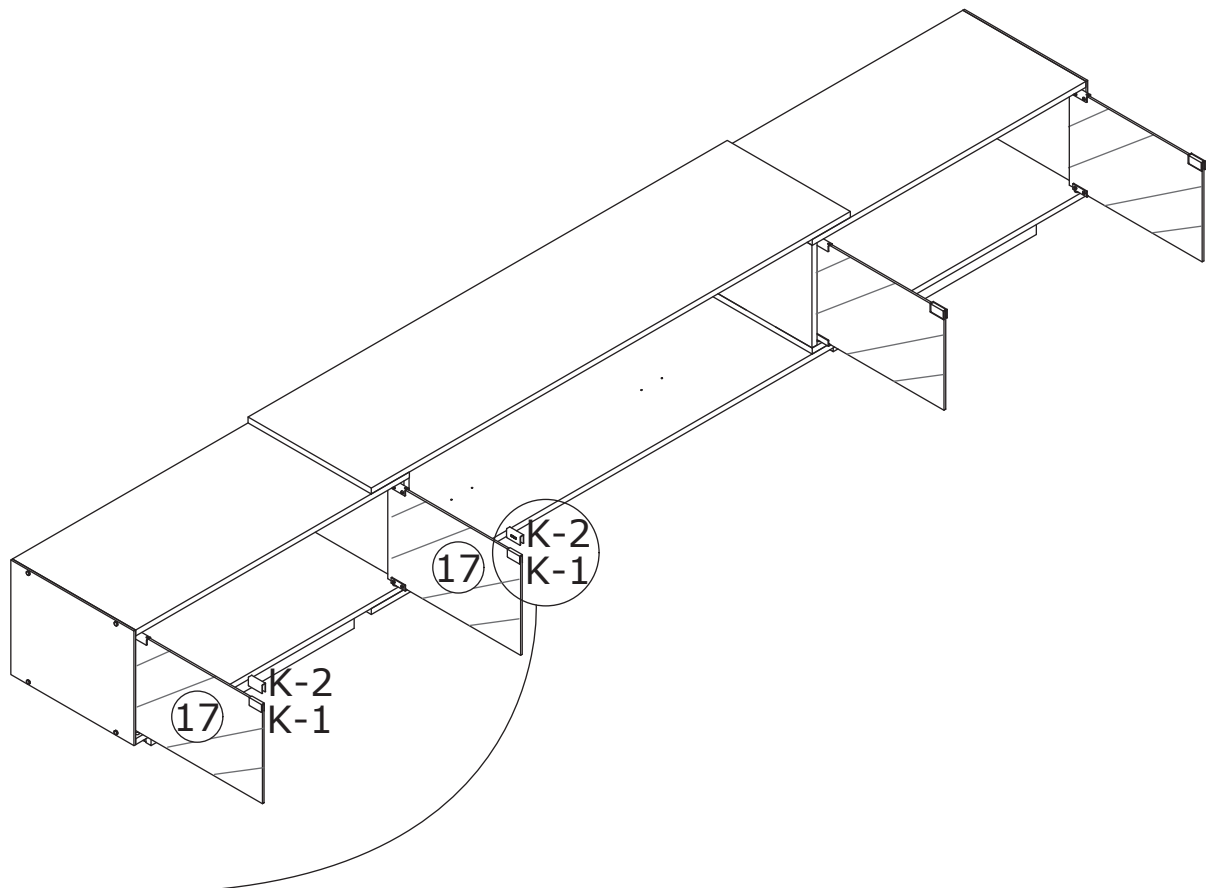

31

Insert the fireplace into the unit.

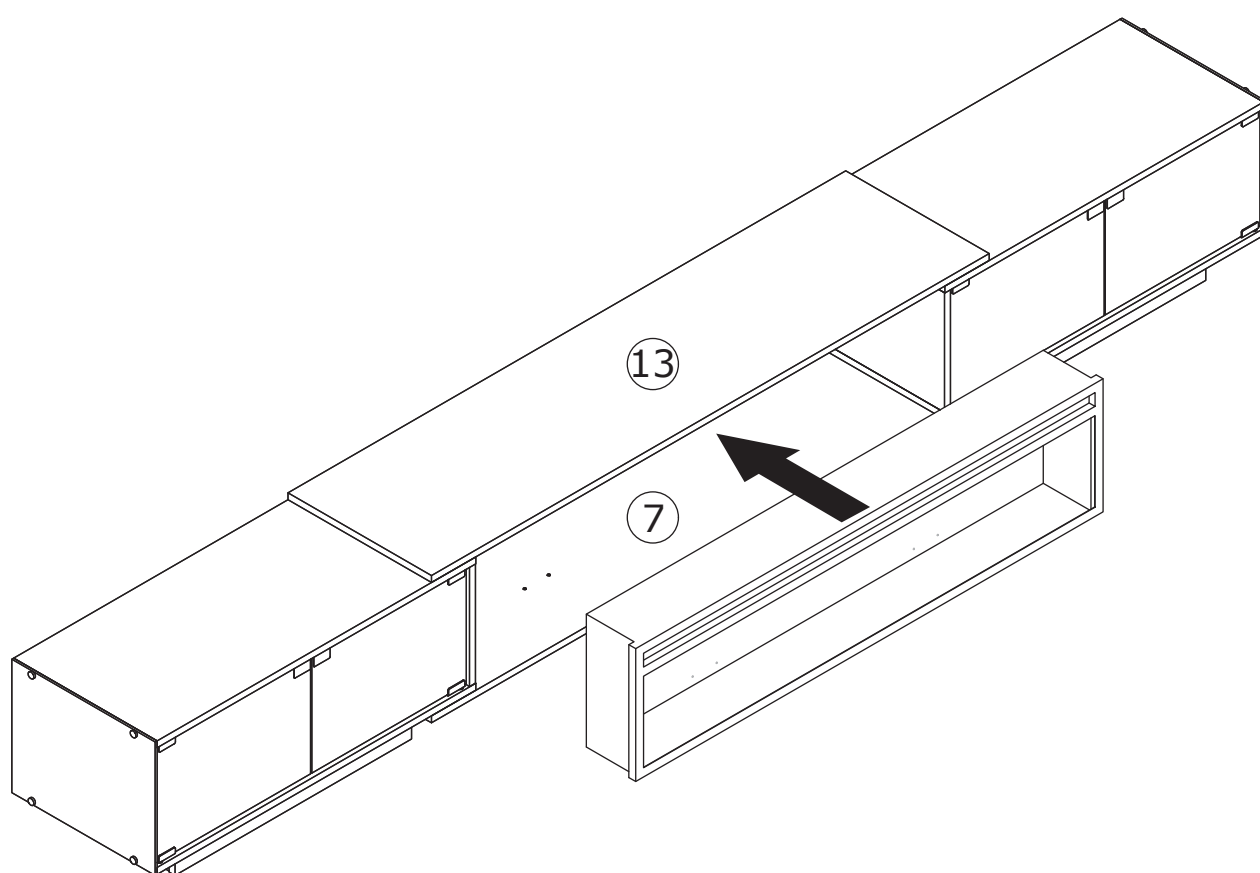


32


Q x 8



 Ø 3.5 x 14 mm




Secure the fireplace to panel 7 using screw (Q).

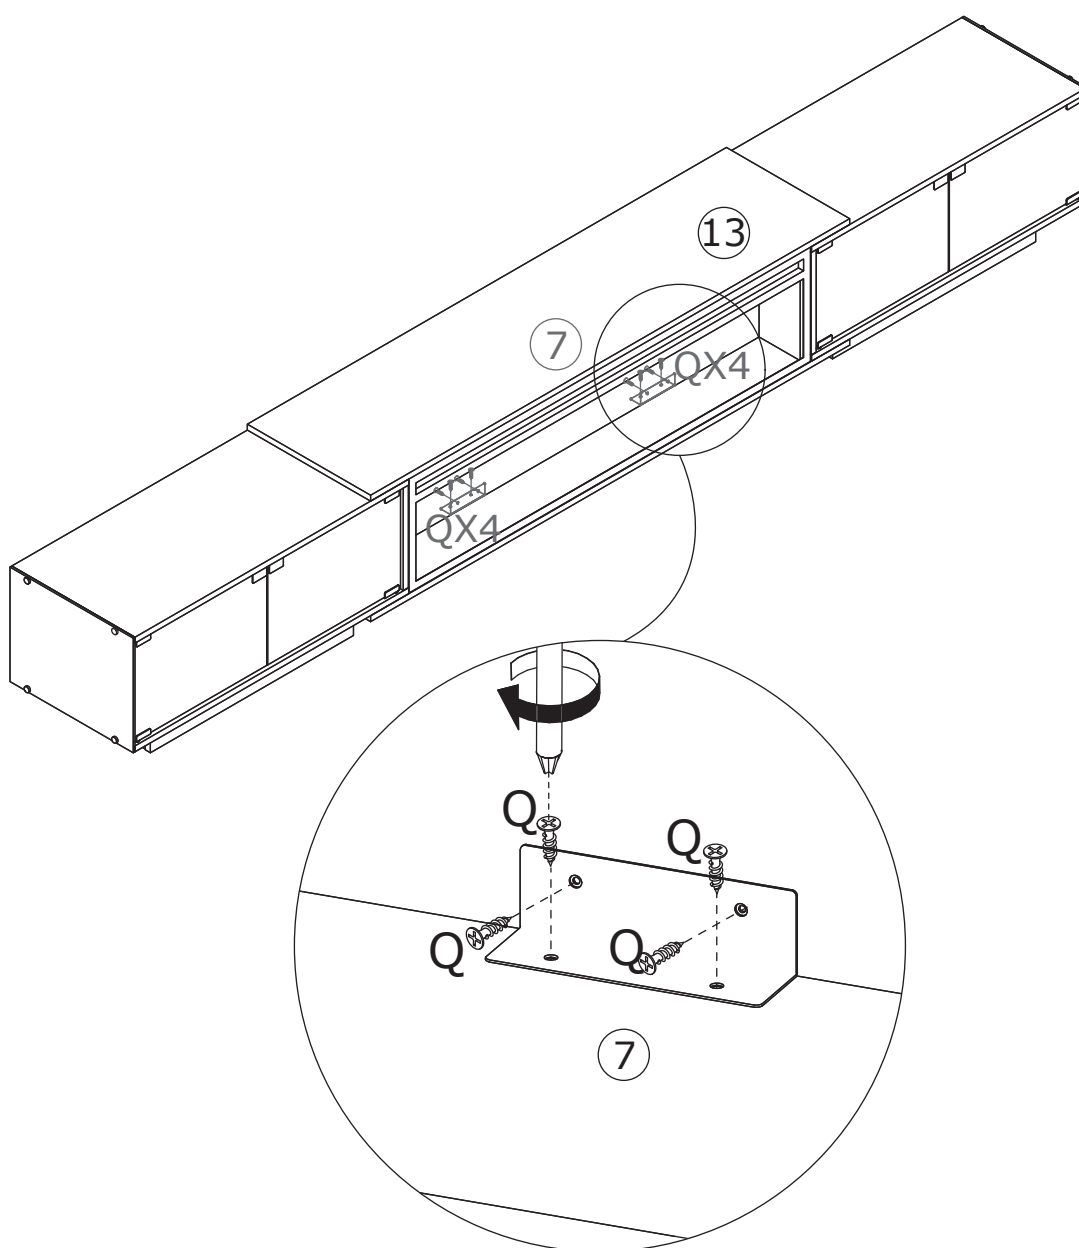


33


To open the door, gently press part (K).

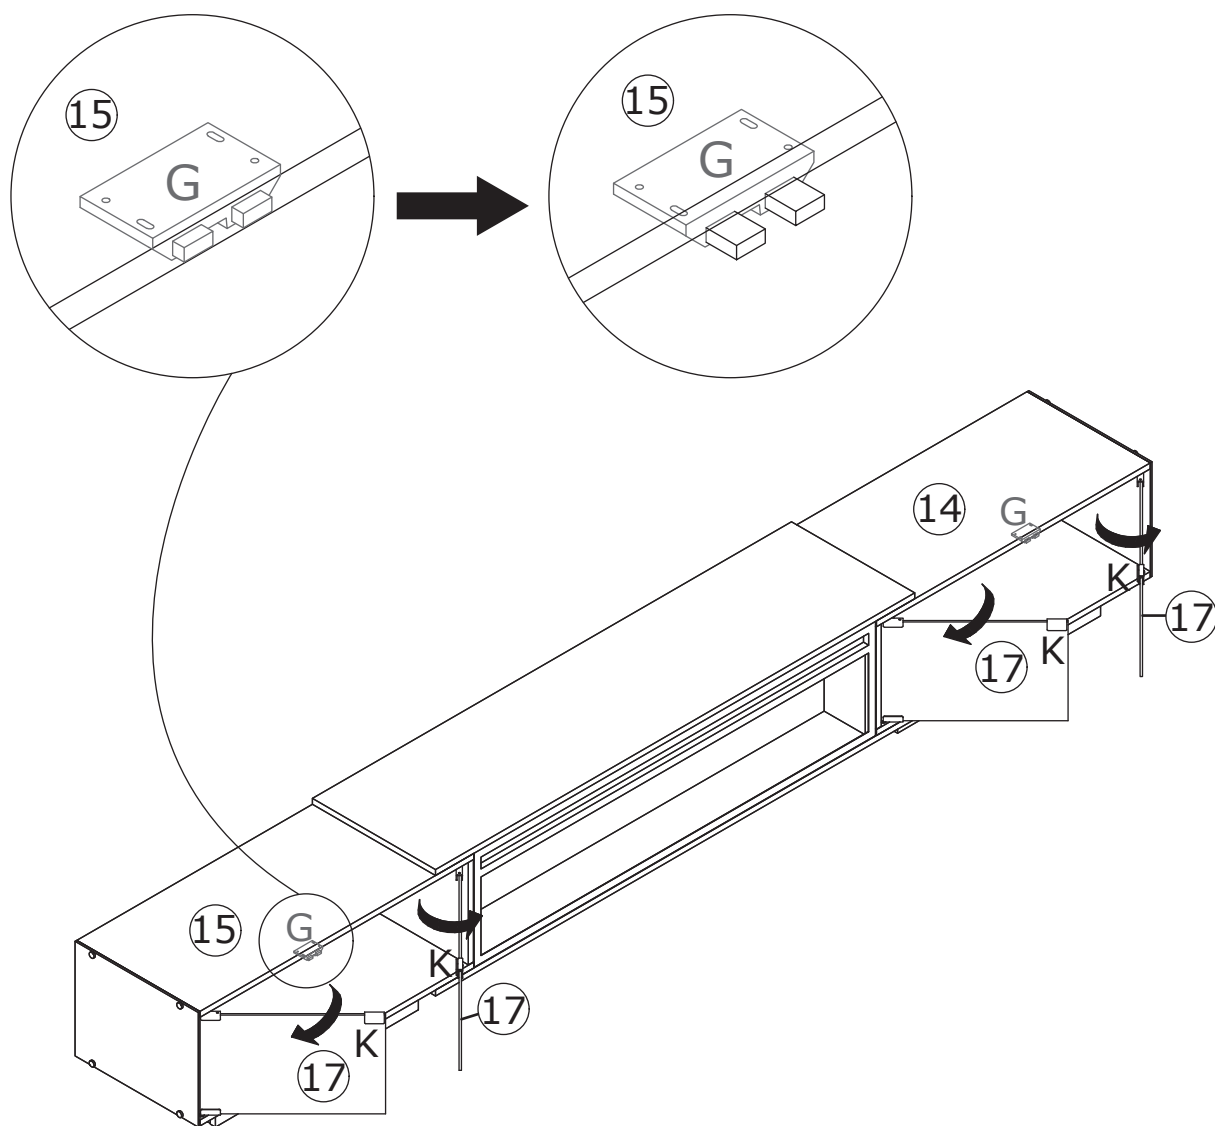


34

To close the door, gently press part (K).

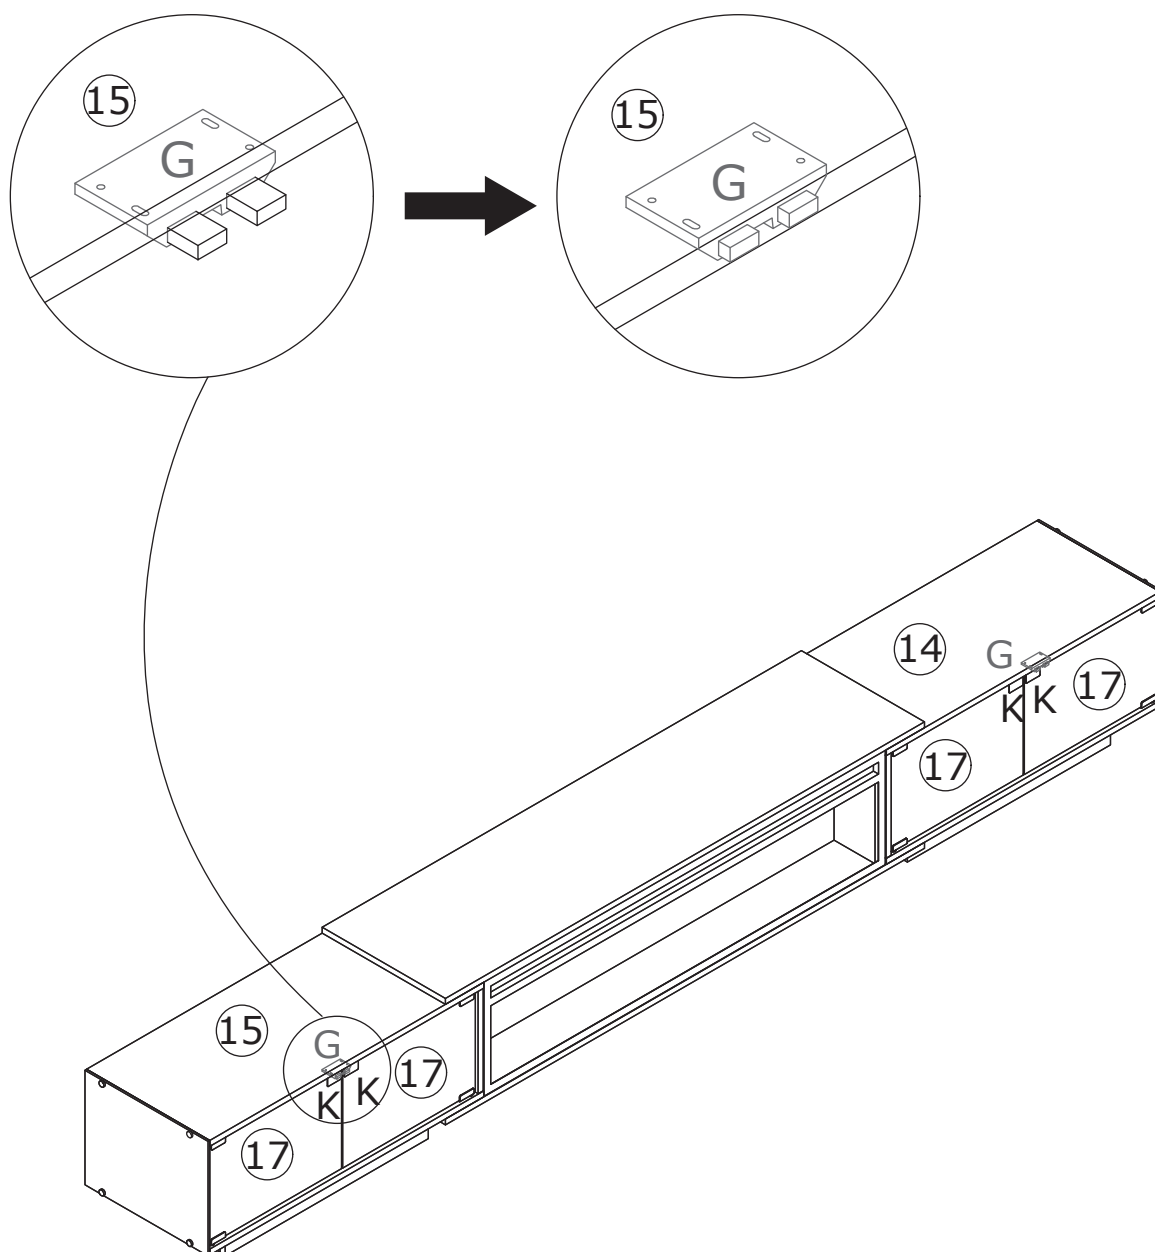

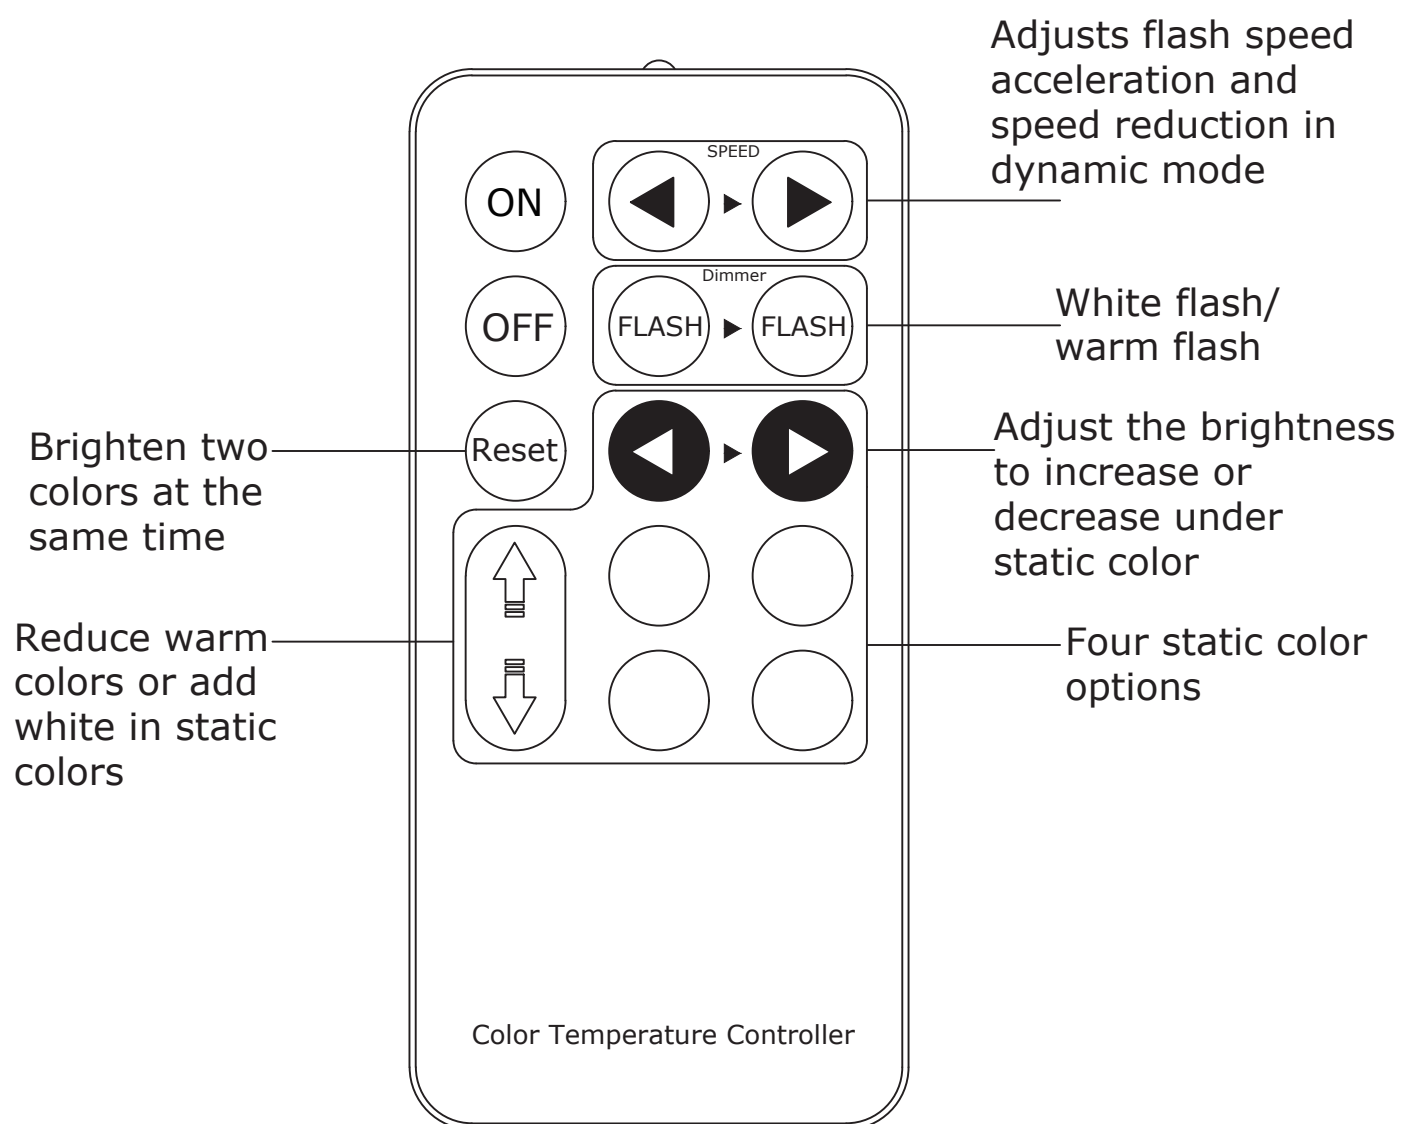

Pull out the plastic tab before using.

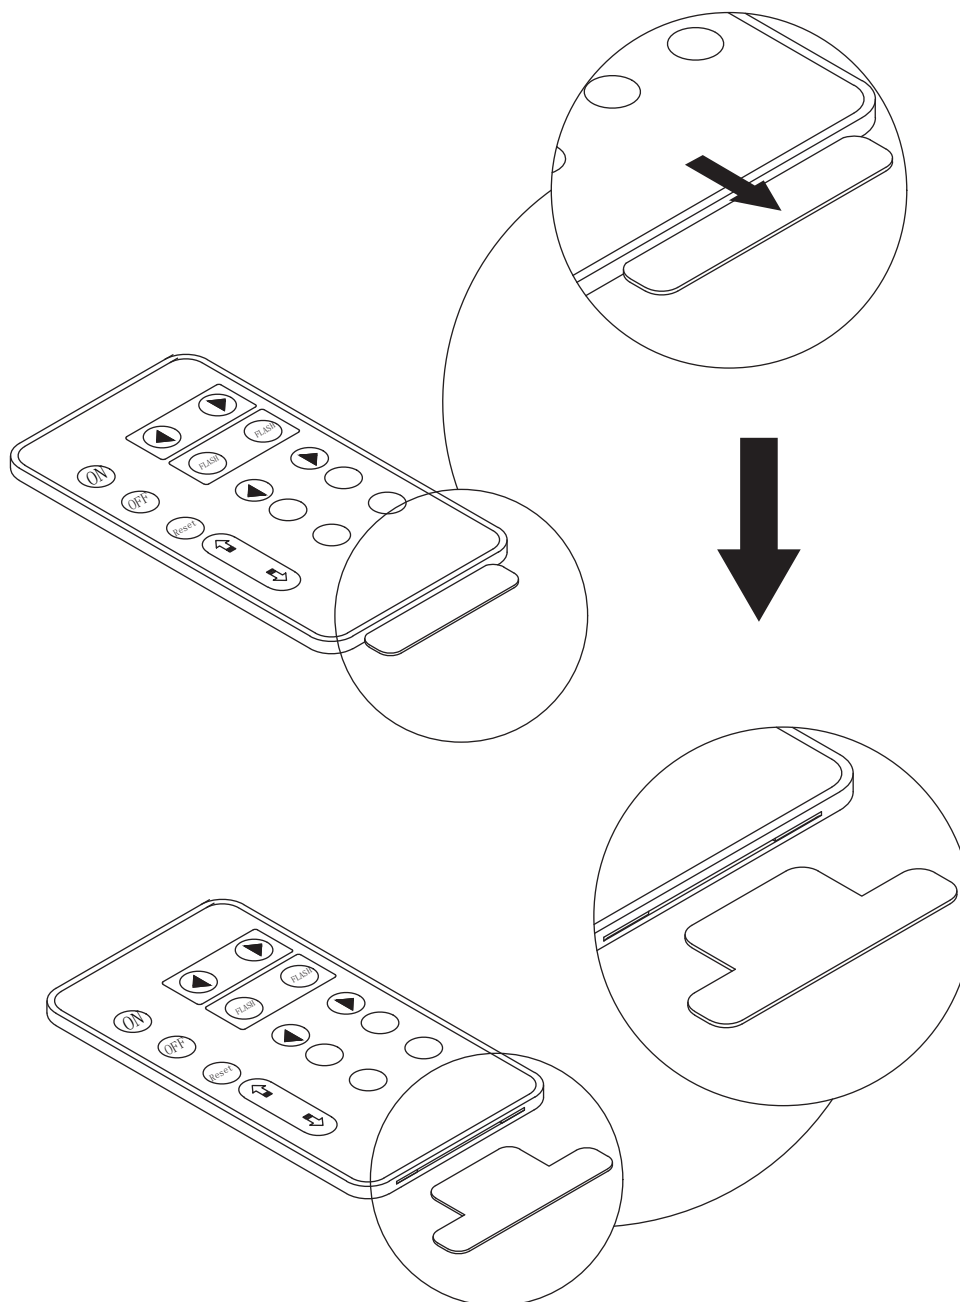

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068