 




LED Light Up Prancing Reindeer

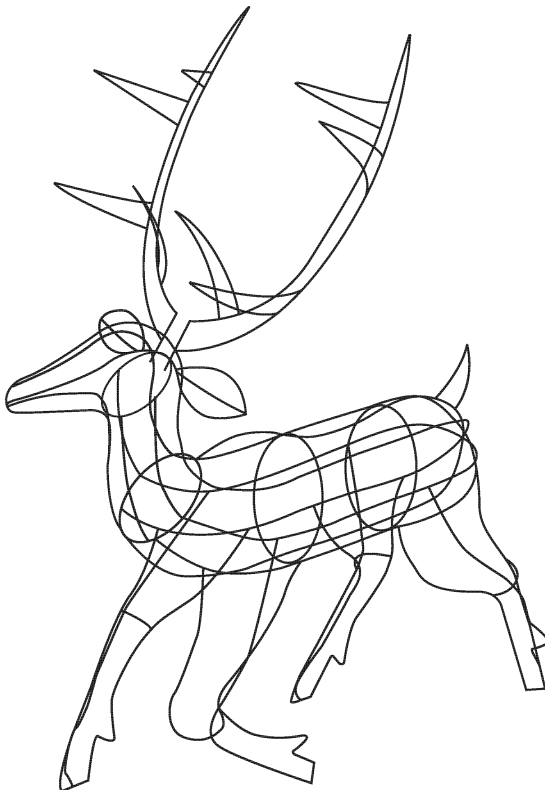

INSTRUCTION MANUAL

ITEM NUMBER: 71419

READ THESE INSTRUCTIONS BEFORE USING AND RETAIN FOR FUTURE REFERENCE



IMPORTANT: Read these instructions carefully before using this appliance and keep them for future reference.



WARNING! Read all safety warnings and instructions. Failure to follow these may result in electric shock, fire and/or injury.

SAFETY INFORMATION:

- The intended use of this appliance is explained in this instruction manual. The use of accessories other than those recommended may present a risk of personal injury.
- **Always** check the mains voltage corresponds to the voltage on the rating plate.
- This appliance is **not** intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or a lack of experience and knowledge unless they have received supervision or instruction concerning its use by a person responsible for their safety.
- Children **must** be supervised to ensure they do not play with this appliance.
- This appliance can be used by children aged 8 and above, and persons with reduced physical, sensory or mental capabilities, or a lack of experience and knowledge providing they have been given supervision or instruction concerning its use in a safe way and they understand the hazards involved.
- Children **must not** carry out cleaning or maintenance on this appliance.
- **Never** disconnect this appliance by pulling on the power cord.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have received supervision or instruction concerning its use in a safe way and they understand the hazards involved.
- This appliance is **not** intended to be used with a separate timer or remote-control system.
- **WARNING:** When positioning the appliance, ensure the power cord is not trapped or damaged.
- **WARNING:** Do **not** locate multiple portable socket outlets or portable power supplies at the rear of the appliance.

ADDITIONAL SAFETY INFORMATION:

- Keep all packaging away from children.
- Do **not** bend the power cord.
- **Never** touch the appliance, power cord, or plug with wet hands.
- **Only** use this appliance for its intended purpose.
- This appliance can be used indoors and outdoors. However, the Transformer **must** remain indoors and **not** in wet or humid conditions.
- The LED lights are non-replaceable.
- Avoid stretching or damaging the appliance.
- Do **not** connect this appliance electronically to any other product.
- **Always** disconnect from the power source if left unattended for long periods or when not in use.
- Keep away from flammable materials, naked flames, and excessive heat.
- Do **not** cover this appliance. Ensure there is adequate airflow around it.


- Do not use if the appliance, insulation, or power cord are damaged or malfunctioning. Regularly check for damages.
- Discard this appliance if the insulation is damaged.
- This is **not** a toy. Keep it away from small children and animals.
- Disconnect from the mains when not in use.
- See packaging box for further information.

TRANSFORMER INFORMATION:

- Use this appliance **only** with the Transformer supplied.
- Do not connect directly to the mains without the Transformer.
- This appliance can be used indoors and outdoors. However, the Transformer **must** be connected indoors and **not** in wet or humid conditions.
- The cord of this appliance cannot be repaired or replaced. If it is damaged, the appliance must be disposed of responsibly.
- Do not connect this chain to a power supply whilst it is still in the packaging unless the packaging has been adapted for this purpose.
- Do not connect the chain electronically to another chain unless it has been designed to do so.

COMPONENTS:


- A. Antlers
- B. Head
- C. Body
- D. Transformer
- E. Ground Spikes (x 4)

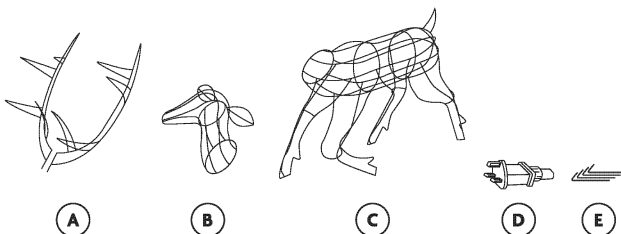

ASSEMBLY:

Please note: When choosing a location to install, ensure the chosen plug socket is close enough to avoid causing a hazard. Avoid stretching the wires that connect the different segments.

1. Attach the Antlers (A) to the Head (B) by slotting them into place. When attached, the Antlers should face forwards.
2. Attach the Head to the Body (C).
3. Connect the Transformer (D) to an indoor plug socket.
4. If placing outdoors, use the Ground Spikes (E) to secure to the ground.

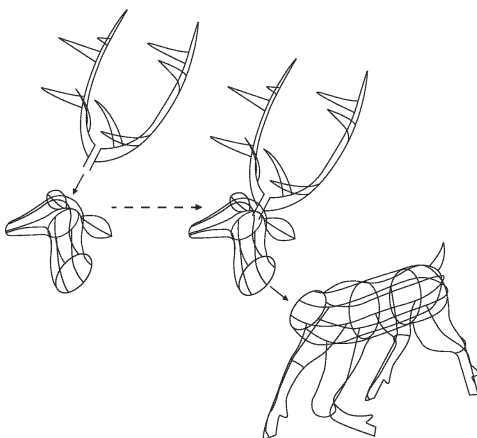

TECHNICAL SPECIFICATIONS:

Product Name: Light Up LED Prancing Reindeer

Item Number: 71419



Non-Replaceable Bulb: Max. 3V, 0.015W

Transformer Input Voltage: 220–240V-50Hz

Transformer Output Voltage: 12V DC, Max. 3.6W

Transformer IP Rating: IP20

Transformer IP Rating: IP44

 **WEEE:** This symbol indicates that this product should not be treated as a normal household waste and it should be recycled. Please take it to your nearest collection facility or further details  contact your local council or visit www.Recycle-more.co.uk.

ERP: The light colour of this product is outside the scope of the limits as defined in erp regulations and therefore only suitable for decorative purposes only. This product is for decorative purposes only, it is not suitable for household room illumination.



ITEM NUMBER: 71419

UK Address (Imported By): Benross Marketing Ltd, Liverpool, L24 9HJ, UK

EU Address: Benross Marketing Ltd, Italielei 1-2000 Antwerp, Belgium

Customer Services: E afterservice@benross.com - T +441518327600

Made in P.R.C.