
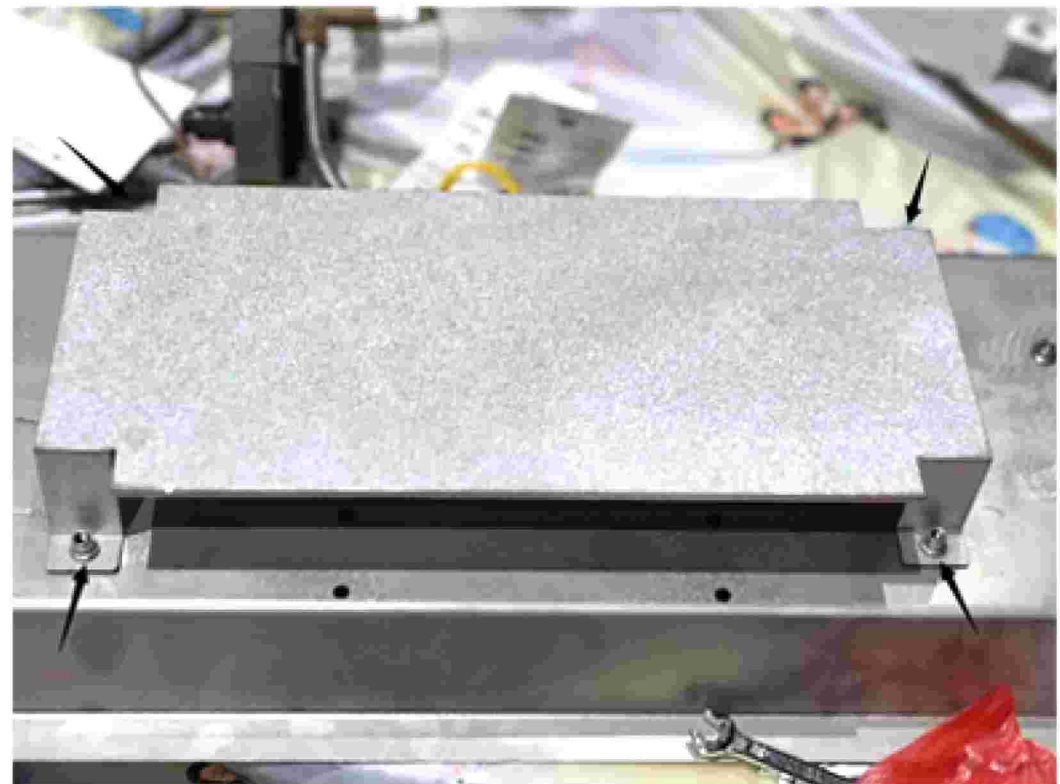


INSTALLATION & ASSEMBLY

WARM REMINDER: WHEN REPLACING THE ORIFICE, ENSURE THAT THE GAS SUPPLY HAS BEEN DISCONNECTED AND THAT THE WORK ENVIRONMENT IS WELL-VENTILATED.



● **STEP 1**

Remove the heat shield pannel on the burner bottom

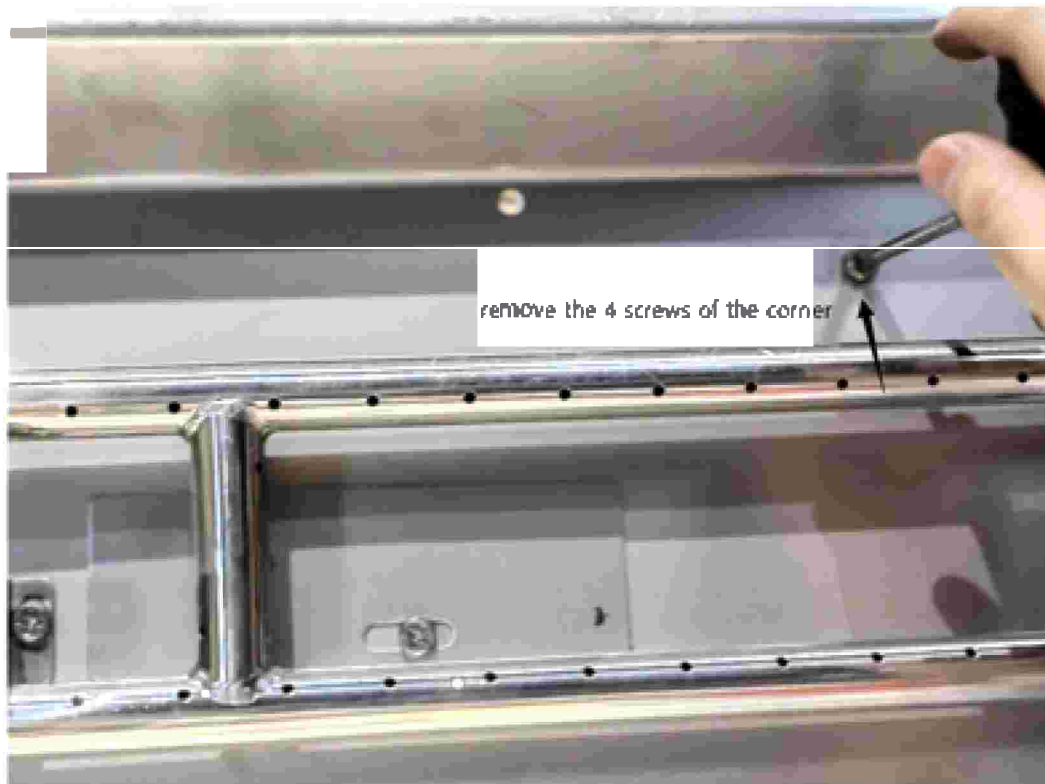

● STEP 2


Locate the metal hose connected to the Orifice and loosen its connection. Remove the ($\Phi 2.4$) Orifice.

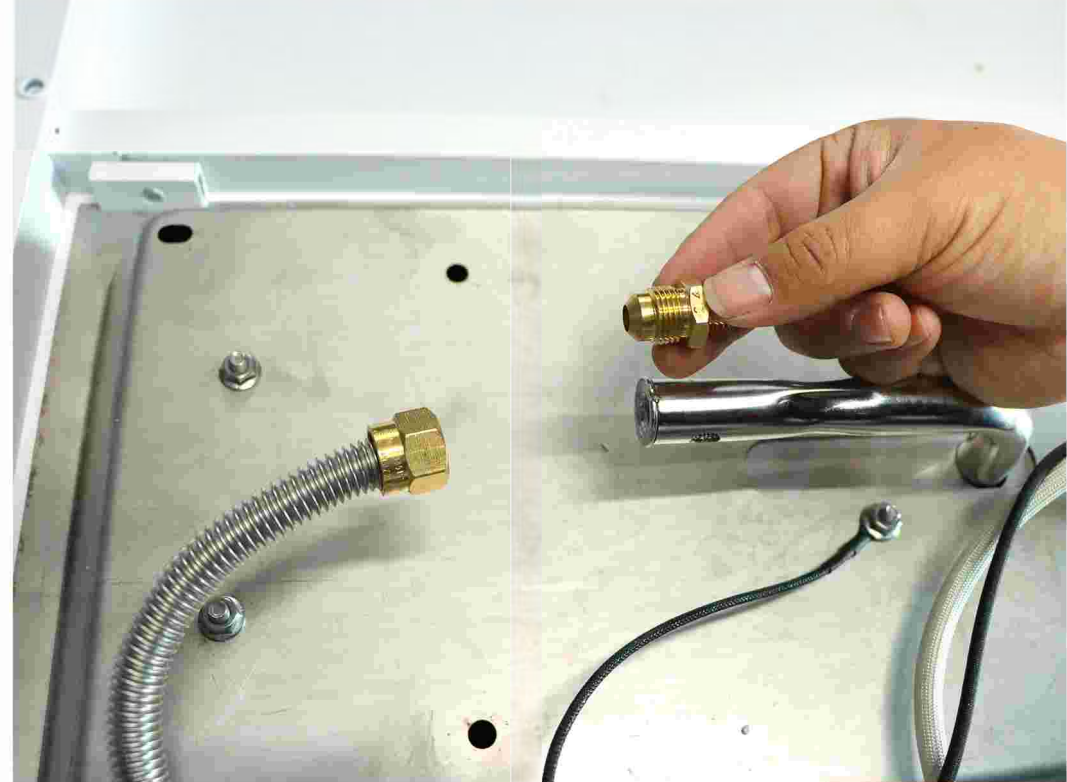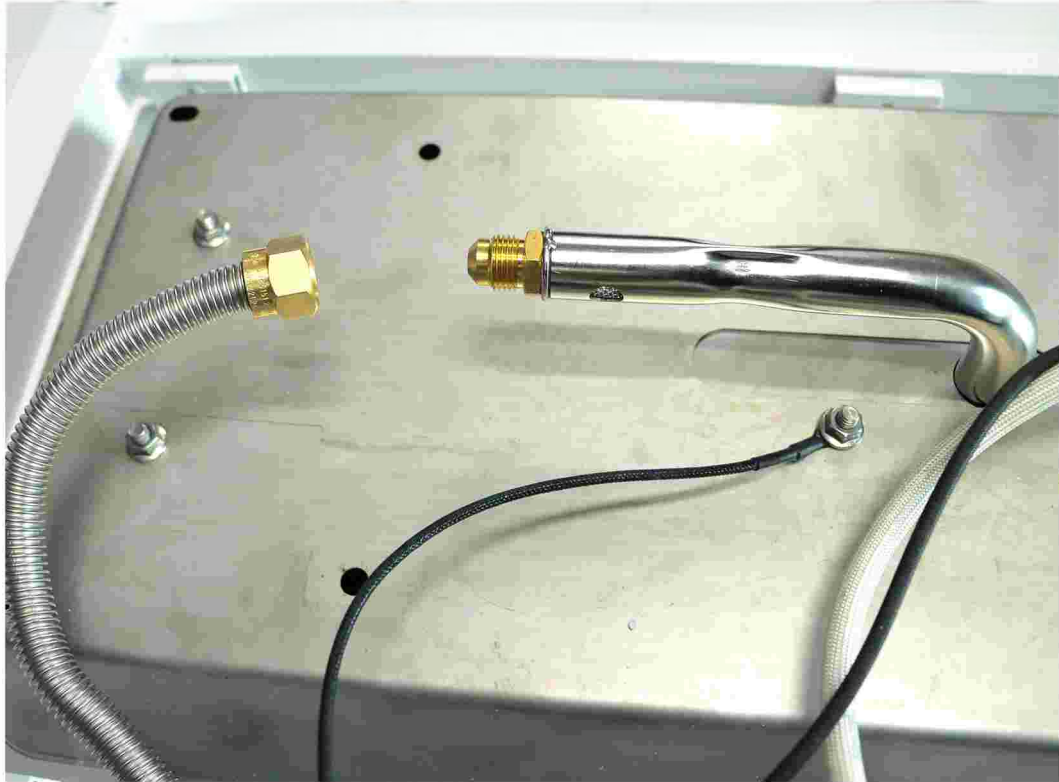

* you need a good screwdriver and twist it with strong force

● STEP 3

Remove the ($\Phi 2.4$) Orifice. Take out the ($\Phi 3.78$) Orifice from the red accessory bag, install it, and confirm that it is securely tightened.

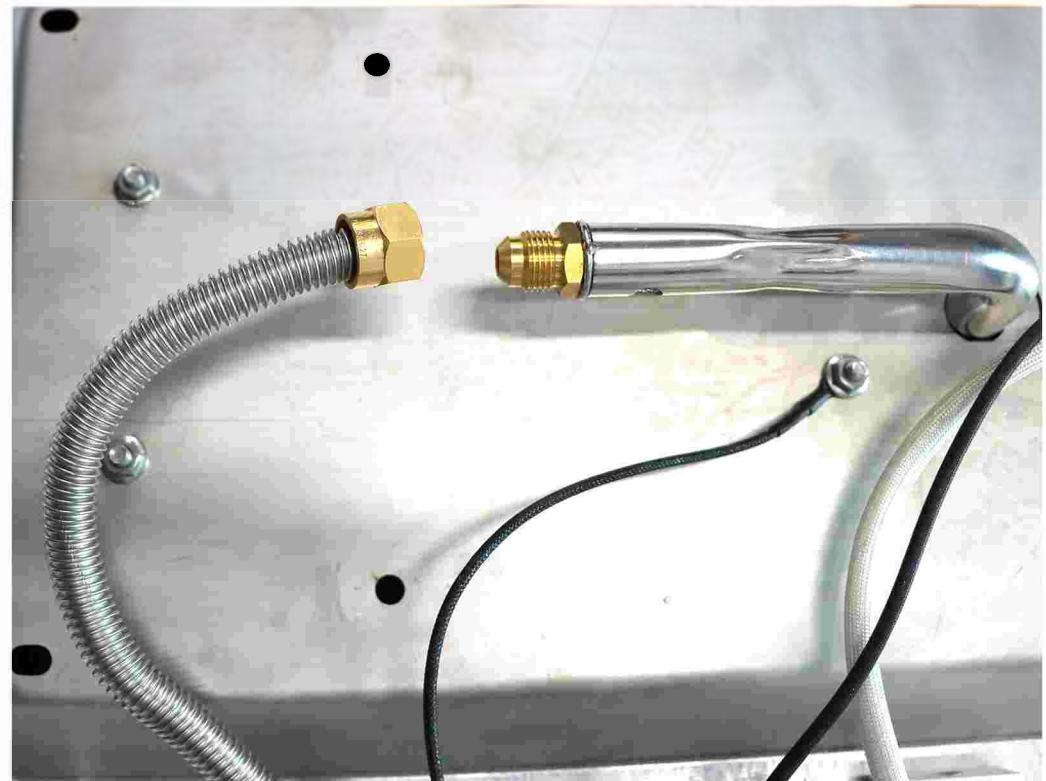

● STEP 4

Screw the metal hose onto the ($\Phi 3.78$) Orifice. Ensure all connections are fully tightened.



● STEP 5

Remove the LP gas valve(original) to NG gas hose

