 


INSTRUCTION

【WALL-MOUNTED ELECTRIC HEATER】

THG019-B

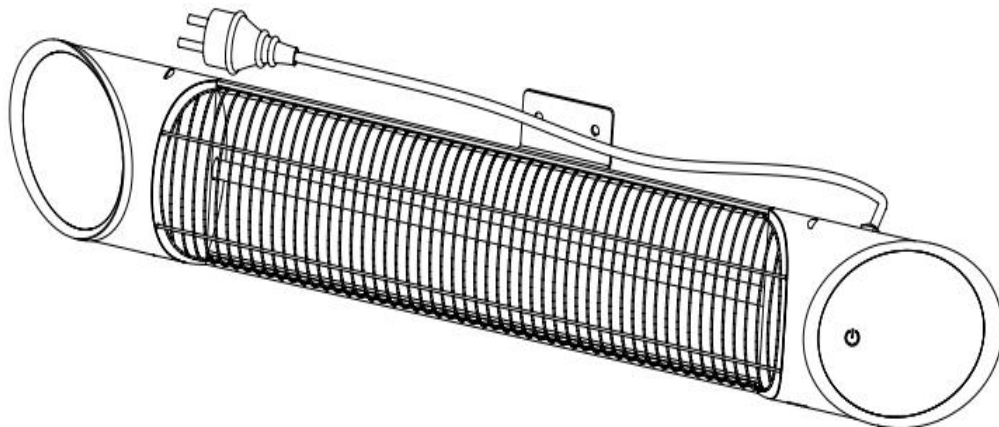

This manual contains important safety information concerning the maintenance, use and operation of this product. Failure to follow the instructions contained in this manual may result in serious injury. If you are unable to read the contents of this manual, please bring it to the attention of your supervisor. Do not operate this product unless you have read and understand the contents of this manual.

IMPORTANT SAFETY MEASURES

When using any kind of electrical appliance, some basic safety precautions must always be followed, including the following:

- 1) To avoid possible electric shocks, do not place the cable, plug or appliance in water or in any other liquid. Do not insert screwdrivers or metallic items inside the appliance.
- 2) If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. In the event of handing of appliances by non-authorized people, the guarantee will immediately cease to be valid.
- 3) Do not use appliances if they are damaged. Do not cover.
- 4) To disconnect electrical appliances, wait until the heater stops and then unplug the cable from the electric socket.
- 5) Do not leave appliances working unattended. Ensure that the heater has come to a complete stop before dismantling appliances. Unplug appliance after each use.
- 6) Do not allow children to use electrical appliance. Do not leave appliance unattended when in use close to children. Children being supervised not to play with the appliance.
- 7) Children of less than 3 years should be kept away unless continuously supervised.
- 8) Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- 9) Do not dispose of this product as unclassified municipal rubbish. Due to the use of electrical and electric parts, this product must be collected separately.
- 10) The heater must not be located immediately below a socket-outlet.
- 11) The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

NOTICE

- 1) The power supplied to this unit must comply with electrical requirement on its label. Damage or fire may result if the incorrect power used.
- 2) Do not use the heater in somewhere with flammable objects, gas, dust.
- 3) In order to avoid scalding, forbid to touch the heater when it works.
- 4) Forbid to put anything on product surface when it is working.
- 5) To avoid possible electric shocks, do not place the heater in bathrooms or similar indoor location.
- 6) In order to avoid fire, do not use the heater with automatic electrified sequencer, timer and other devices.
- 7) Children of less than 3 years should be kept away unless continuously supervised. Children shall not play with the appliance.
- 8) Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

- 9) Turn off all switches and unplug the heater if an emergency situation occurs.
- 10) Please contact with seller if it does not work properly. Do not try to repair the heater by yourself.
- 11) Please contact the seller if you find other problems not covered in this operation manual.
- 12) Cleaning and user maintenance shall not be made by children with supervision.
- 13) **CAUTION** — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- 14) **WARNING:** The appliance shall, under no circumstances, be covered with insulating material or similar material.
- 15) **WARNING:** In order to avoid overheating, do not cover the heater.

 
 
SPECIFICATION

Model:	THG019-B
Feature:	Timer, 3 settings and spare switch
Remote:	Yes
Voltage:	120V~60Hz
Power:	600/1000/1500W
Weight:	2.5 kg
Size:	88 x 13.3 x 13.2 cm

 
 
Parts	Description	Quantity
A	Heater	1
B	L bracket	1
C	Connecting bracket	1
D	M6*8mm screws	2
E	Wrench	2
F	remote control	1
G	M6*80mm screws	1
H	M6*15mm cap screw	1

INSTALLATION

 
Please check all the items against the parts list after opening the box. Only all the items are complete, the installation could be followed.

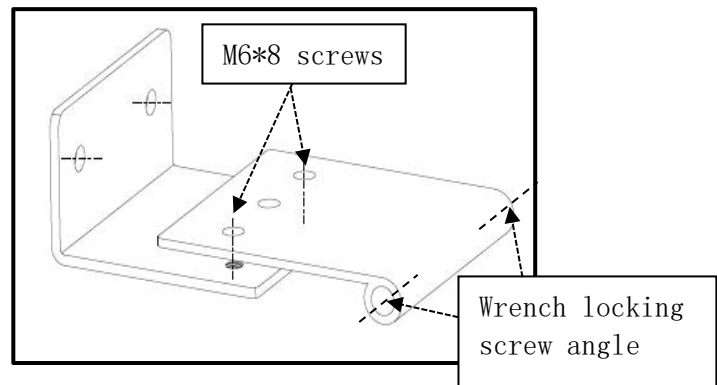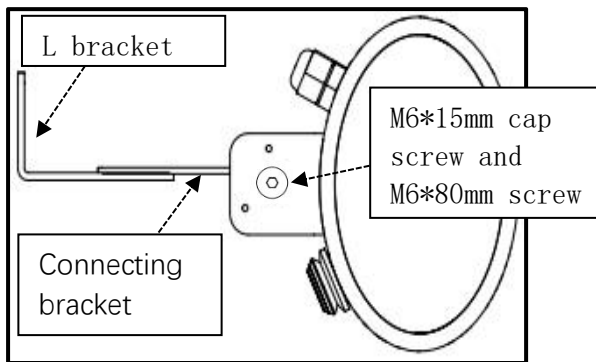

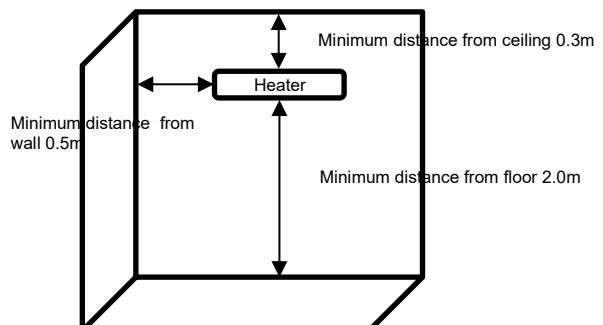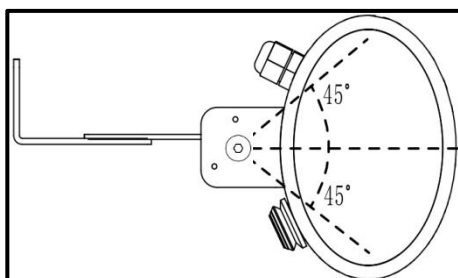

1. Take out all the parts from the plastic bag.
2. Fix the L bracket and the host bracket together with two M6 * 8mm screws.
3. Connect the assembled L bracket to the heater, and use M6*80screws, M6*15 cap screws, and the heater to make their holes concentric. Tighten them with a wrench. If not tightened, tilt them up or down while adjusting the angle
4. When the host is not in operation, a wrench can be used to adjust the fixed angle of the host in the up and down directions
5. Heater's angle would be adjusted from 0° to 45°

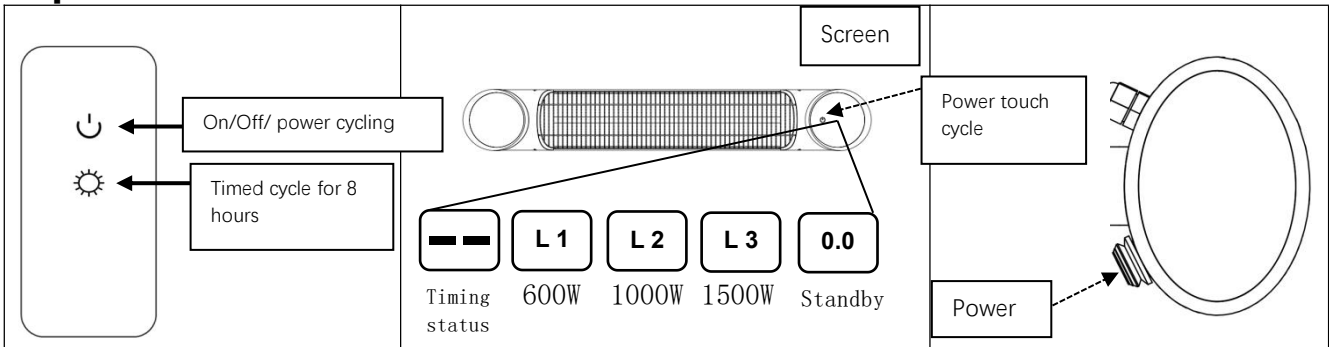


Operation



1. Turn on the Power Switch, then heater screen show '00'
2. Press the remote , heater output change from L1 to L3, 600W-1000W-1500W
3. Press Timer button on remote , heater screen become '--' Touch loop setting the timer. (8 hours max). Cycle setter button, Cycle the timer button for 1-8 hours, and after setting the timing, the normal gear screen will be displayed
4. Press on/off button on remote, heater will turn off and screen show '00'
5. If a remote control is missing, touching the heating switch will also change the heat output.

CLEANING AND MAINTENANCE

- 1) Always turn off and unplug the heater before cleaning.
 - 2) To clean the heater, use a damp cloth and make sure to dry excess water once cleaned.
- *ATTENTION** Do not put the heater directly into any container with water in it.

Correct Disposal of this product	
	<p>This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.</p>

TROUBLE SHOOTING

- 1) If the heater does not emit heat after turning on, please check the power cord whether plugged into electric socket properly.
- 2) In first use, it is normal if the heater appears small amount of smoke and some smell because of protective-oil evaporation.

Add: 1383 S Cucamonga Ave, Ontario CA 91761
 Tel: +1 323 831 2020
 Email: Paraheeter@outlook.com