


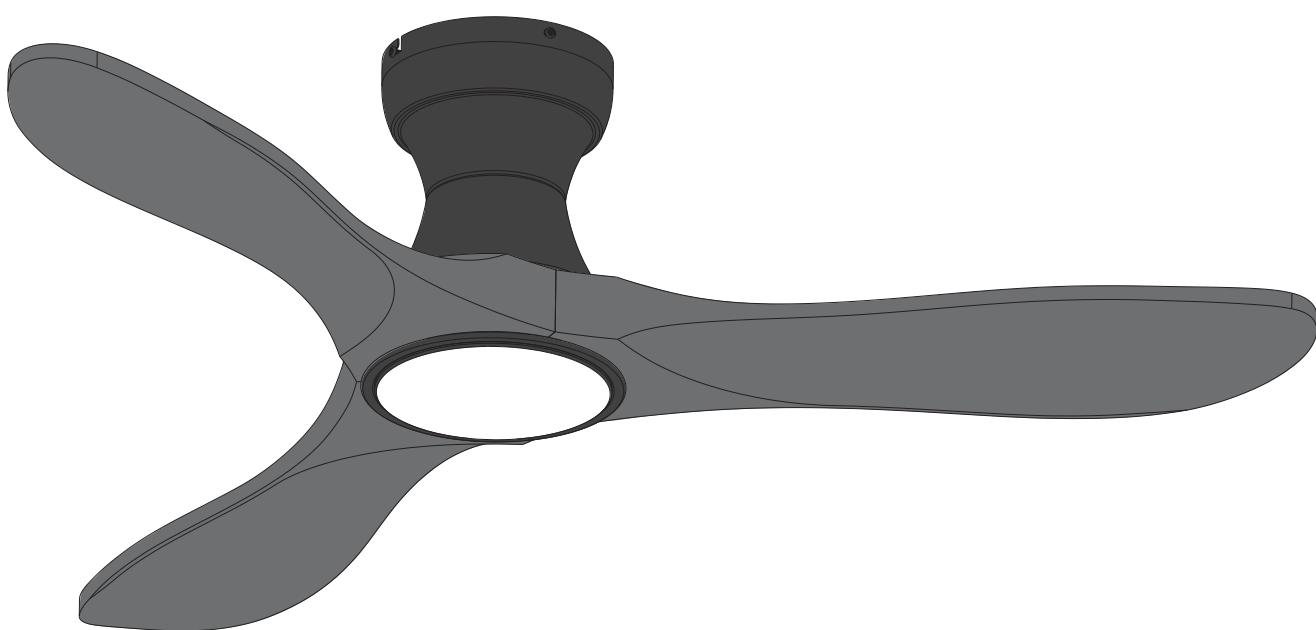

Ceiling Fan

Installation Instruction



SAFETY INFORMATION

Please read all safety information and instructions before installing the ceiling fan and save this manual for future reference.

SAFETY INFORMATION	01
PRE-INSTALLATION	02
INSTALLATION INSTRUCTION	04
OPERATION INSTRUCTION	08
SPECIFICATIONS	09
TROUBLESHOOTING	10




SAFETY INFORMATION



- Before connecting the power supply, make sure that the power supply used matches the specifications of the ceiling fan.
- All wiring must comply with national and local electrical codes ANSI/NFPA70. If you are not familiar with wiring, please use a qualified electrician.
- To reduce the risk of fire or electric shock, **turn off the power** to the fuse box or circuit breaker before installing the fan.
- To reduce the risk of personal injury, attach the fan directly to the building's support structure and ensure that it can accept at least 35 pounds (15.9 kg).
- Make sure that the installation location allows the fan blades to rotate without obstacles.

Installation Location

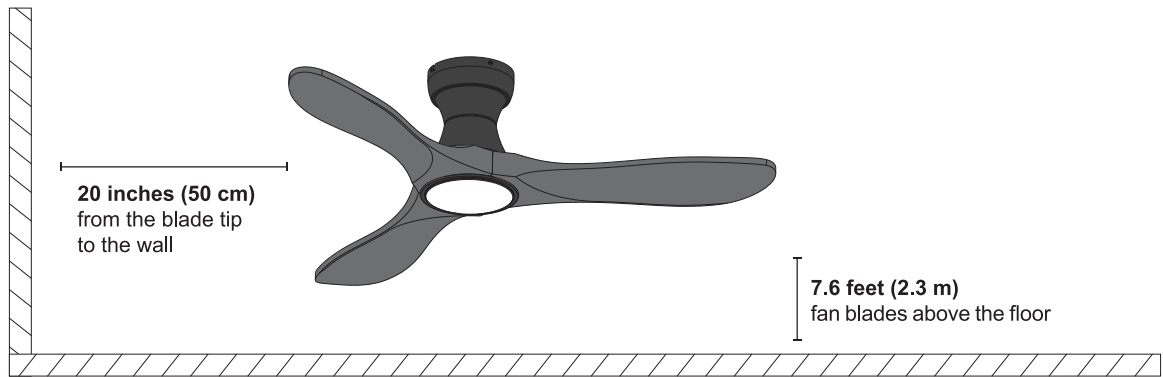


- Do not install the fan with wet hands.
- Do not insert foreign objects between the rotating fan blades.
- Do not bend the fan blades when installing or cleaning the fan.
- Do not disassemble or modify this product or use non-original parts without permission.
- Keep children away from your working area.
- Properly dispose of the fan's packaging material.
- Make sure the ceiling fan is firmly secure to the ceiling. Double check all connections before you restore power.
- Turn off the fan and wait for the blades to stop completely before performing any maintenance or cleaning.
- Do not use with a solid-state dimmer switch. This fan is equipped with a DC motor and remote control system. Connecting it to a wall dimmer switch will cause the fan to malfunction or damage the motor. Use standard ON/OFF wall switches only.

PRE-INSTALLATION


Tools Required (Not Included)



Power Drill

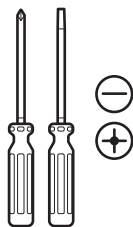


Screwdriver

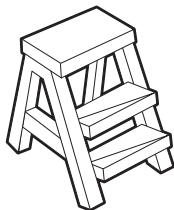

Step Ladder




Wire Stripper

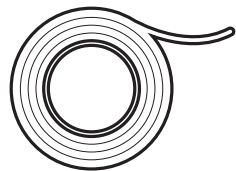


Electrical Tape




Parts List

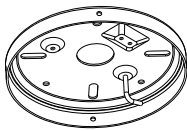


Mounting bracket X1

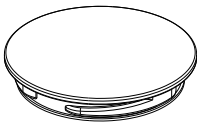

Light Cover X 1

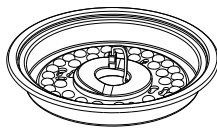


LED & Light Kit Pan X 1

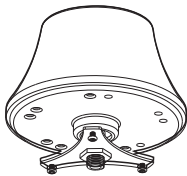


Motor X 1




Canopy X 1

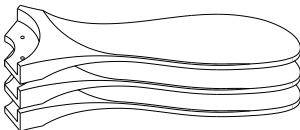


Fan Blade X 3

 


Blade Screw X 8

 


Aircraft Cap X 2

 

Self-tapping Screw X 4

 


Expansion Bolt X 2

 

Remote Control Bracket X 1



 Remote Bracket Screw X 2




Balance Kit X 2



Wire Caps Screw Terminals X 3



Remote Control X 1


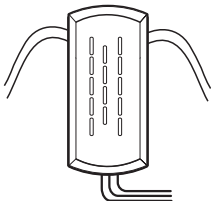


Receiver X 1



INSTALLATION INSTRUCTION


Step 1: Mounting Bracket Installation

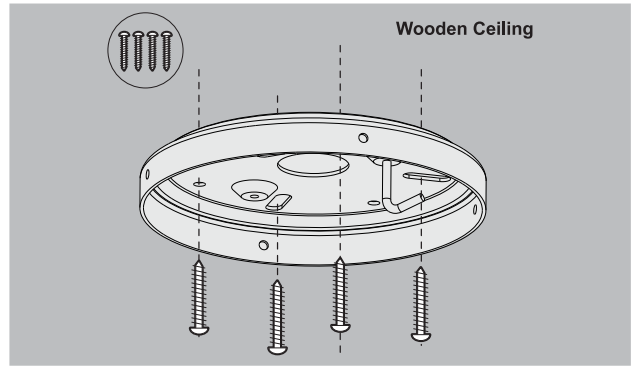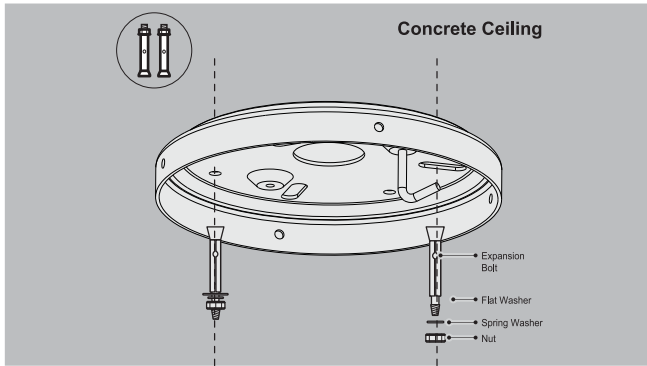


1. Drill holes with electric drill ($\phi 8$ mm).
2. Use expansion screws to fix the mounting bracket to the ceiling.

Fasten the mounting bracket to the ceiling with self-tapping screws.


Step 2: Fan Blade Installation

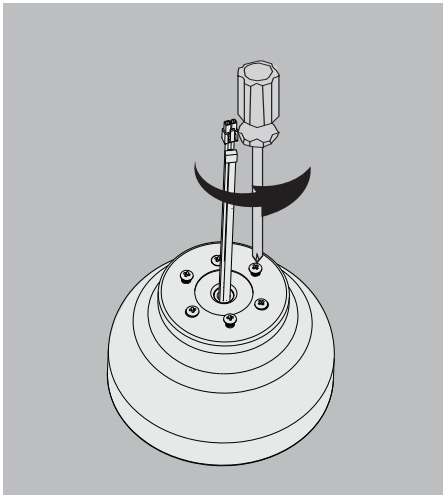


- 1 Loosen and remove the three screws that are not tightened

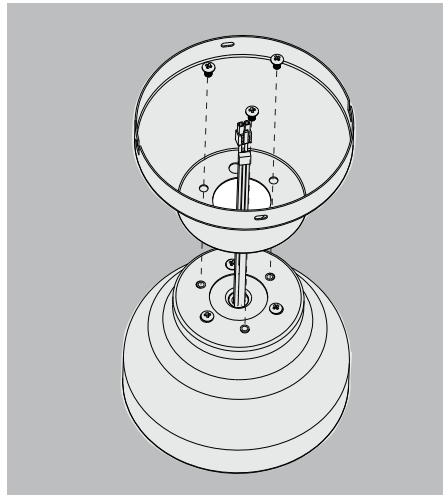


- 2 Align the three holes on the canopy with the main body of the motor and secure in place

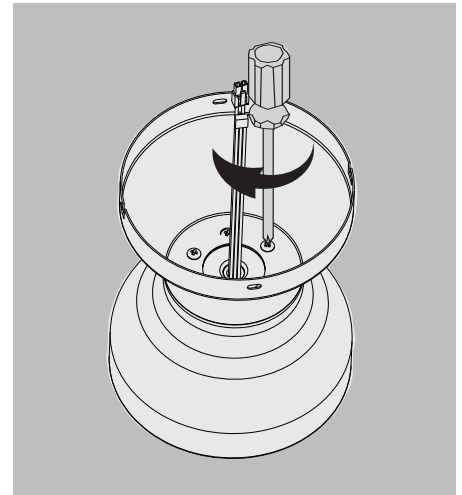


- 3 Tighten the three screws.

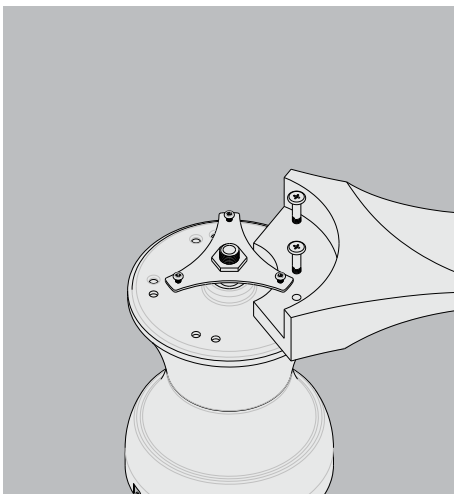

- 1 Place the fan blade on top of the motor, align the holes and tighten the screws

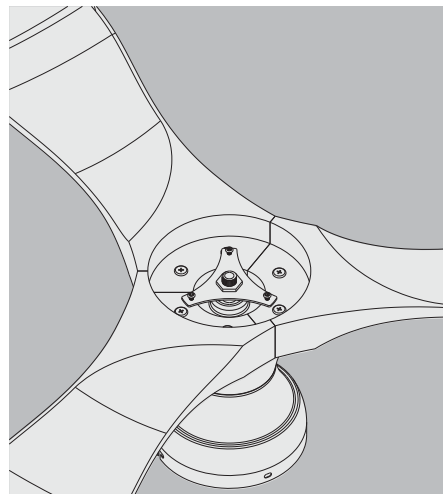

- 2 Install the three fan blades.

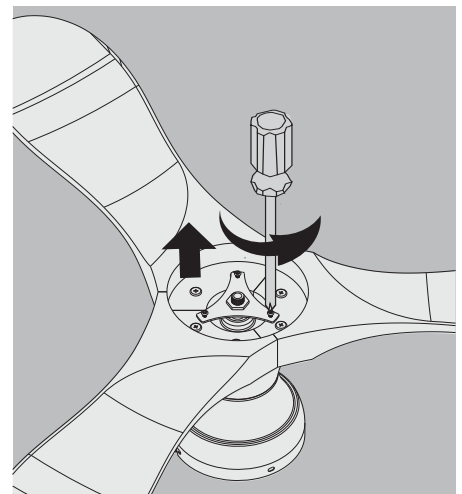


- 3 Loosen the three screws on the light kit mounting plate.

Note:


- The fan blade needs to be aligned with the "center" position of the screw hole group.
- Do not lock the screws when installing the blades and then tighten all the screws after all the fan blades are installed.




Step 3: Installation of LED Board

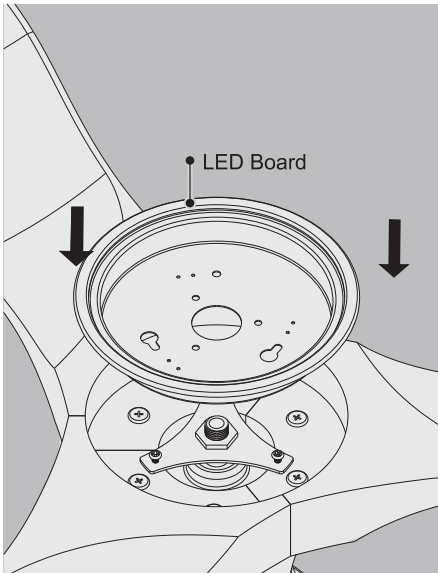

- 3 Thread the motor line through the LED board, then align the LED board with the triangular cover on the motor and put it on.

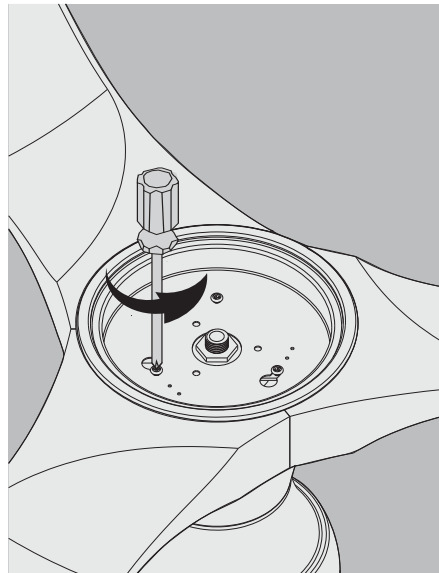



- 4 Install the screws on the triangular cover into the corresponding holes.

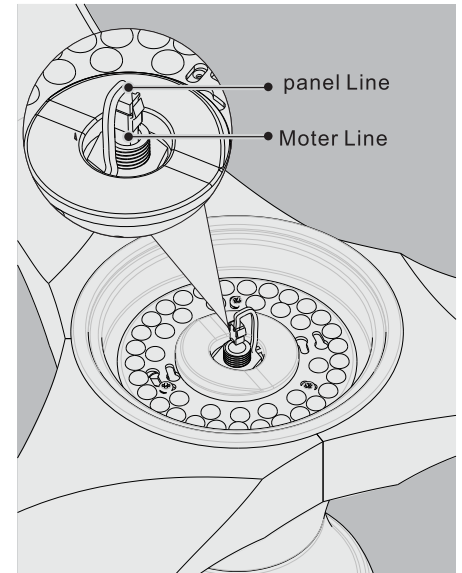

- 5 Connect the motor line and the lamp panel line.


Step 4: Wiring Instruction

⚠ Shut off the power to the fuse box or circuit breaker before wiring.

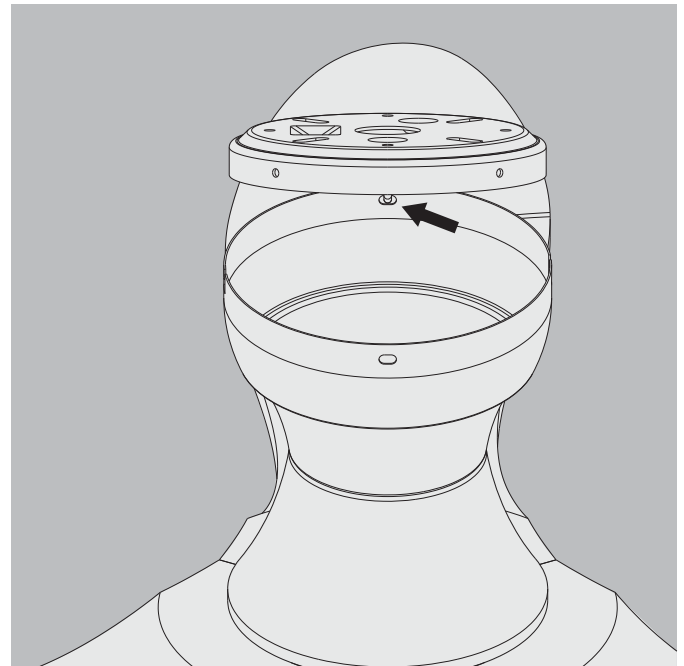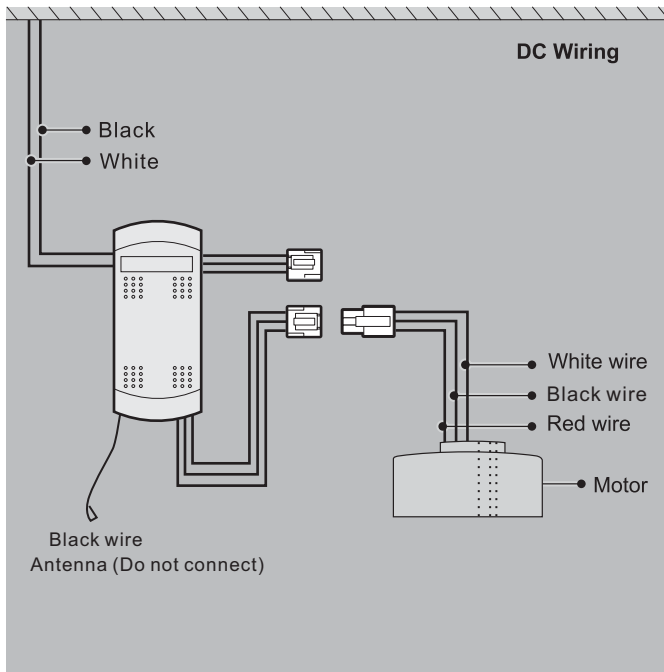


- 1 Connect the receiver separately to the live wire and neutral wire of the power supply, as well as the three wires of the motor and the three wires of the light source. Note: The separate black wire on the receiver is the Antenna. Do not cut, ground, or connect this wire to any power supply. Leave it extended for best reception.
- Connect Black to Live (L)
 - Connect White to Neutral (N)
 - Connect Green to Ground


- 2 Hang the ceiling fan on the hook of the hanging disc.

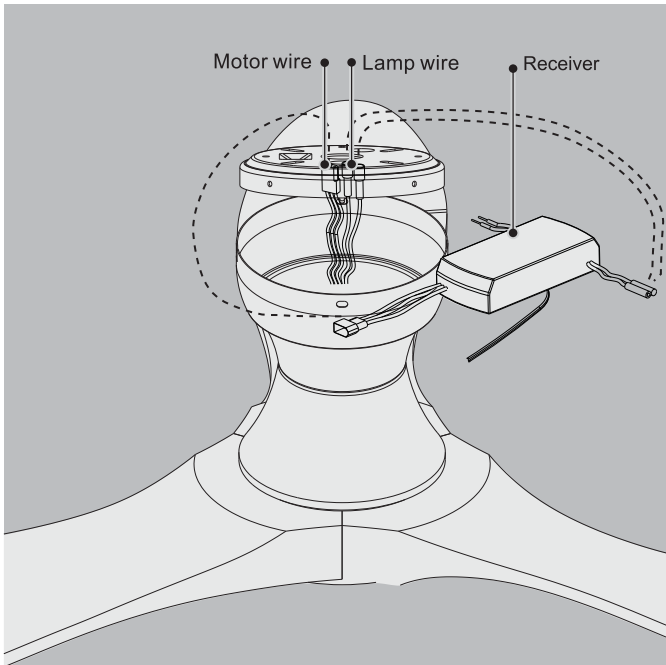


- ③ Connect the motor wire and connect the blue and white wires of the lamp wire to the blue and white wires of the receiver respectively

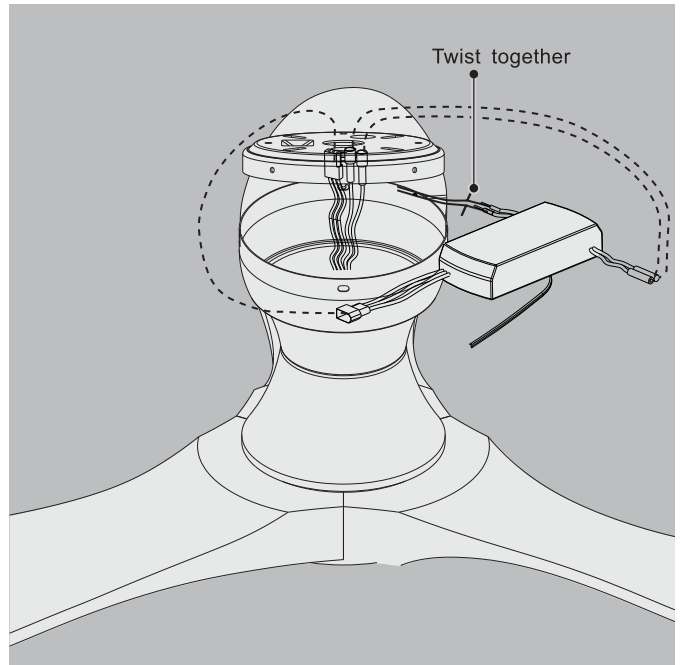

- ④ Twist the two black wires (L) together and the two white wires (N) together

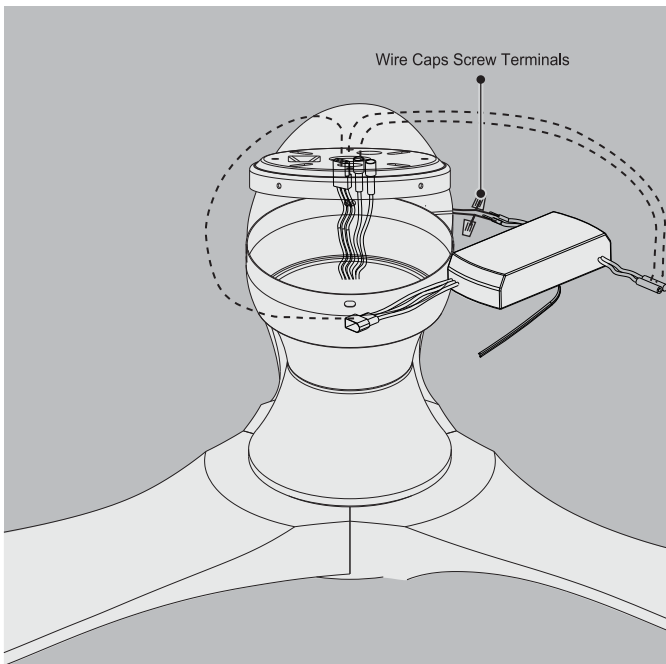


- ⑤ Screw on the wire caps at the wire head

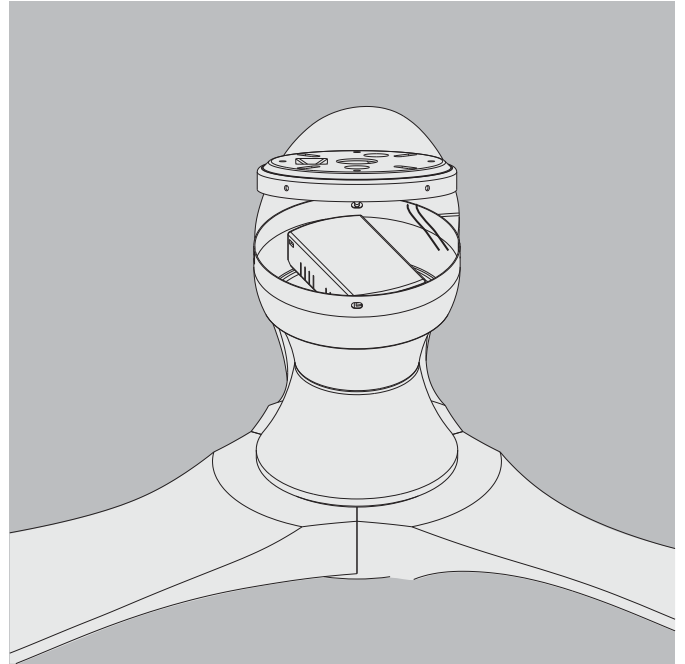


- ⑥ Put the receiver inside




Step 5: Install the ceiling fan

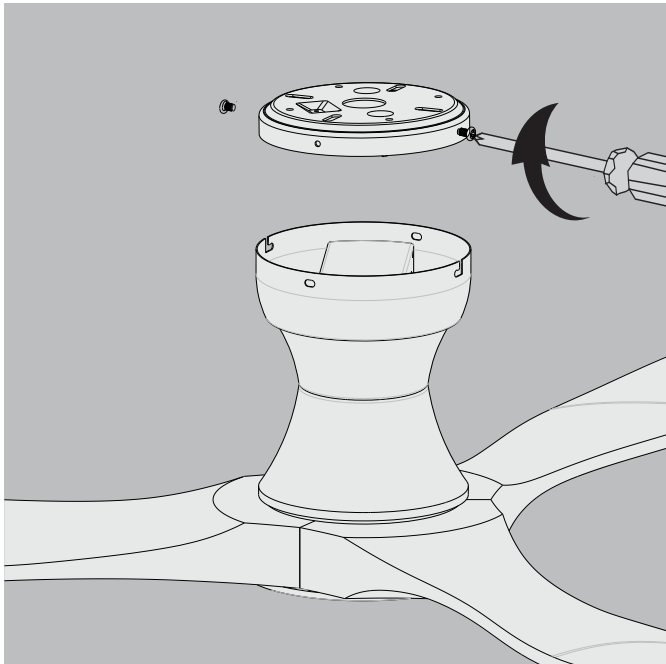


③ Install the screws on both sides of the hanging disc (leave 3-5mm)

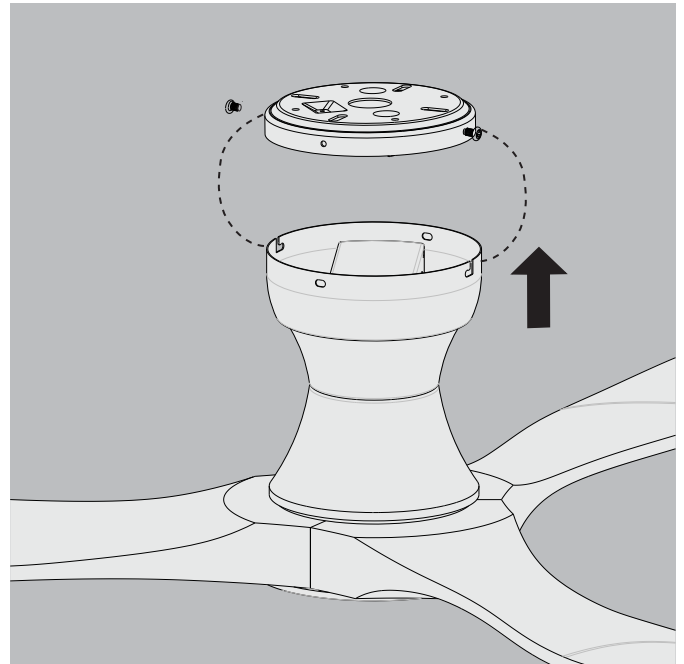

④ Insert the ceiling fan into the gap position

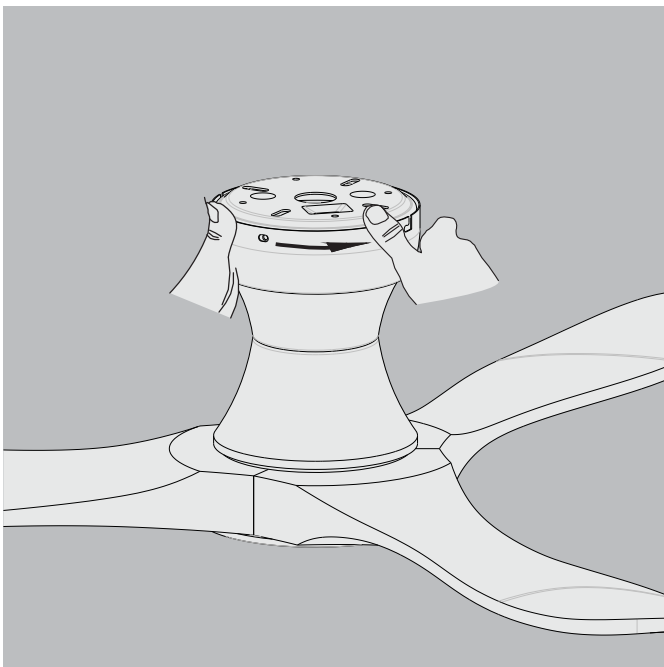


⑤ Rotation to the right

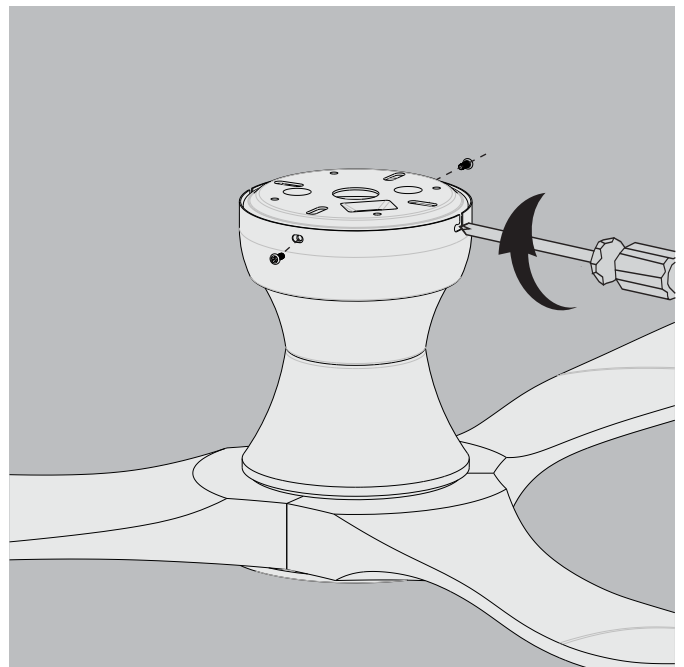


⑥ Tighten the four screws



Step 7: Install the Lampshade

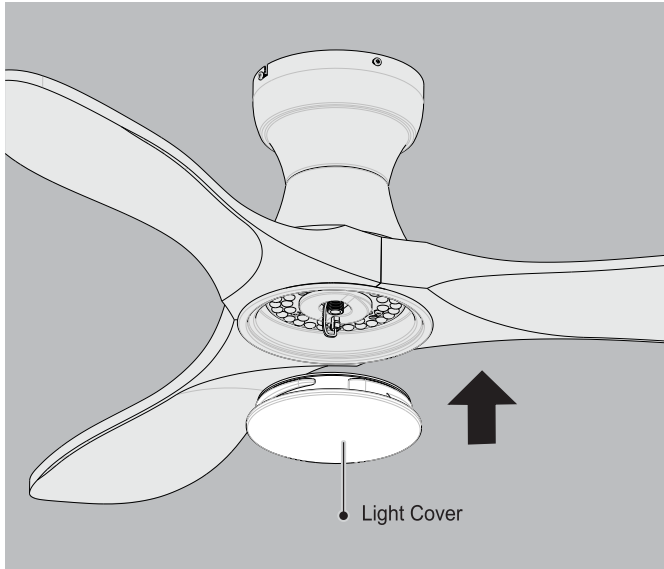


① Put the light cover to the LED board.

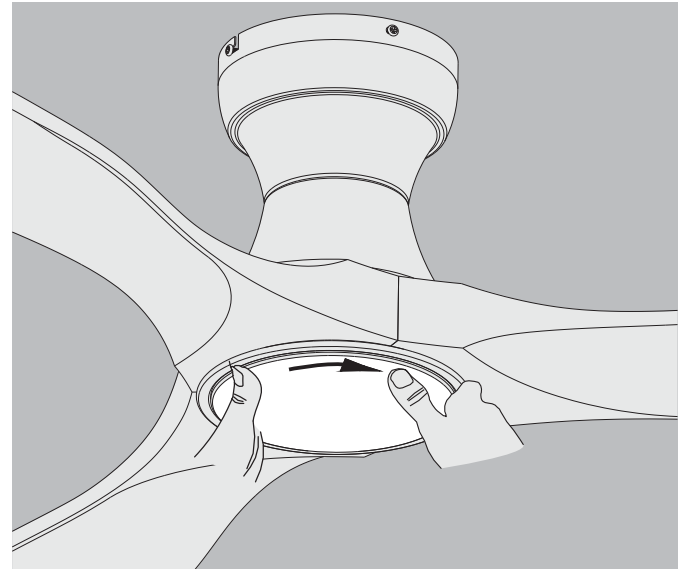

② Spin forward to tighten the light cover.

OPERATION INSTRUCTION

Control Method

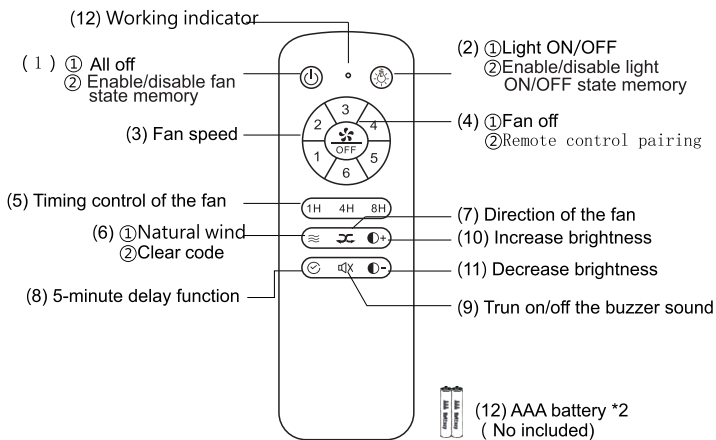

Notice:

The remote controller only needs to be paired once. After the paired product, the controller will have memory. The products have been paired before leaving the factory. When the remote control is damaged or lost, it is necessary to implement remote control pairing before using a new remote control.

(1) All OFF:

- ⊗ Turn OFF the Fan and Light together.
- ⊗ Long press: press and hold the key for 2-3 seconds. A long press produces a long beep to activate the memory function for the fan's state before power-off. A long Pressing again will produce two short beeps to deactivate the memory function.

(2) Light ON/OFF:

- ⊗ Press the key to turn on or turn off the light.
 - ⊗ Long press: press and hold the key for 2-3 seconds. A long press produces a long beep to activate the memory function for the light's state (on or off) before power-off. A long Pressing again will produce two short beeps to deactivate the memory function.
- (Just remember the state (on or off) of the light, not the light's color temperature)

(3) Fan speed:

- ⊗ Press keys 1-6 to adjust the fan speed.

(4) Fan OFF / Remote control pairing:

- ⊗ Turn OFF the fan.
- ⊗ For remote control pairing, press and hold the button for 3-5 seconds within 30 seconds of powering on. The buzzer will emit a long beep to confirm that the pairing is complete.
Note: The remote controller only needs to be paired once. After pairing, it will retain memory. Products are pre-paired at the factory. If the remote control is damaged or lost, pairing with a new remote control is necessary before use.

(5) Timing control of the Fan:

- ⊗ Press the 1H/4H/8H keys to set the fan timer for 1, 4, or 8 hours. The fan will automatically turn off when the timer ends. During the timing function, all functions of the ceiling fan can be operated. To cancel the timer setting, press key(1) or key(7) while the timing function is active.

(6) Natural wind:

- ⊗ Press the key to activate the natural wind mode, which automatically adjusts the fan speed between levels 1 and 6.
- ⊗ Press and hold this button until a long beep is heard to clear the code. Then, press and hold the 'FAN OFF' button to re-pair and restore the program to factory settings.

(7) Direction of the fan:

- ⊗ Change the direction of the fan using the appropriate controls.

(8) 5-minute delay function:

- ⊗ Press the key to activate the 5-minute delay function for the light, after which it will automatically turn off.
- ⊗ Note: After the delay, the fan remains unchanged. This function is primarily for pre-sleep lighting delays. If used before leaving, you'll need to manually turn off the fan with 'Fan OFF'.

(9) Turn ON/OFF the buzzer sound:

- ⊗ Press the key to toggle the buzzer sound on or off.

(10) Increase brightness:

- ⊗ Press the key to increase brightness.

(11) Decrease brightness:


- ⊗ Press the key to decrease brightness.

AAA battery (2):


- ⊗ Install 2 AAA batteries before use.
- ⊗ Remove the batteries when not in use for an extended period.



Reversible Function

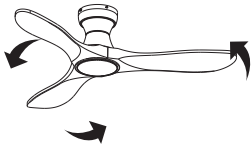


Summer (Forward):
A downward airflow creates a cooling effect.

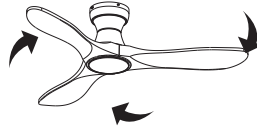


Winter (Reverse):
An upward airflow increases the indoor temperature.

PS: If you want to change the fan's rotation direction, please press the button while the fan is running.

Enable fan memory:

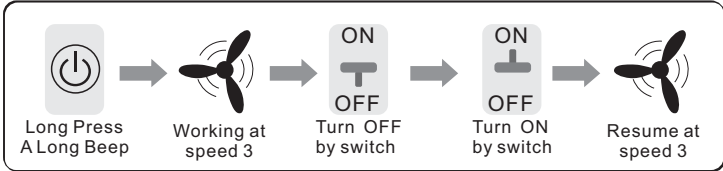


Disable fan memory:

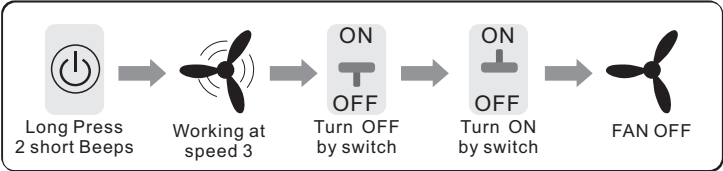

※ Long press = press and hold for 2-3 seconds

SPECIFICATIONS

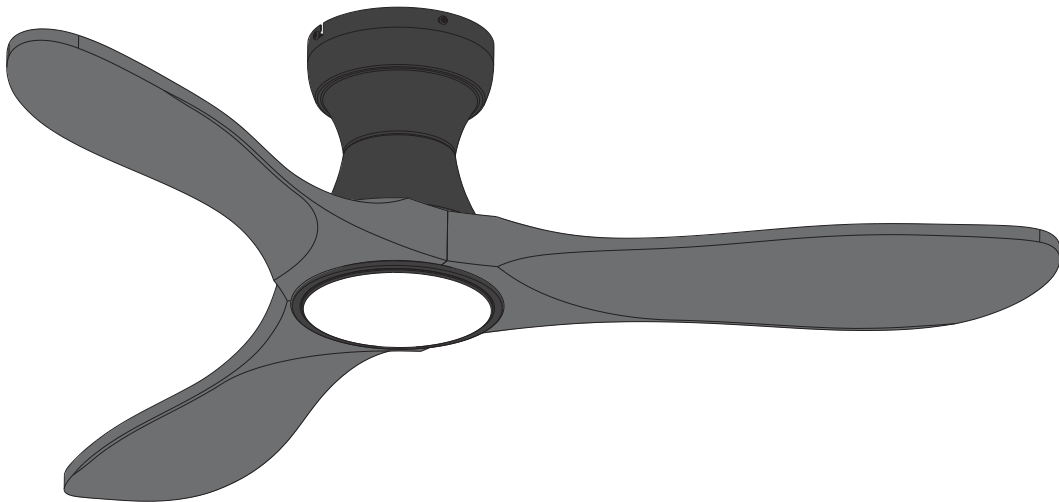

Product Name	Ceiling Fan	Size	36"	42"	52"
		Gross Weight	3 KG	4 KG	5 KG
Rated Voltage	110V-265V	Motor Power	17W	19W	32W
Lamp configuration	20W LED	Motor Spec	Φ106*10	Φ140*10	Φ140*10
Lampshade size	Φ 180 mm	Overall height	280mm		
control method	Remote Control	Fan blade	3 fan blades		



TROUBLE SHOOTING

If there is a problem with the fan during use, please check the following tips for solutions. If the problem still cannot be solved, please contact our after-sales team.

The Fan Does Not Respond to the Remote

- ControlCheck that all wire connections are correct and secure.
- Verify that power is turned on and reaching the receiver.
- Verify that the batteries are installed with the correct polarity (+/-).
- Re-pair the Remote: The signal memory might be lost. Turn off the power at the wall switch for 10 seconds, turn it back on, and immediately long-press the "FAN OFF" (or Pairing) button within 30 seconds until you hear a beep.

The Fan Makes a Repetitive Ticking Noise

- Check for obstructions in the rotor path.
- Ensure the mounting hardware at the ceiling is firmly fastened.
- Ensure all other hardware and blade attachments are tight.
- Allow the fan a "Break-in Period" of 24 hours.

The Fan Wobbles.

- Make sure the mounting plate and hardware at the ceiling are firmly fastened.
- Make sure all screw fittings on the fan are tight.
- If necessary, use the self-tapping screws provided to further secure the bracket to the joist.
- Use the Balance Kit: If the fan still wobbles after tightening all screws, use the included Balance Kit. Place the clip on the blade to locate the heavy side, then adhere the balance weight to correct the imbalance. (Refer to standard balancing instructions).

Airflow is Insufficient

- Check Rotation Direction: Ensure the fan is in "Summer Mode" (Counter-clockwise rotation) for downward airflow.
- Check Blade Orientation: Verify the blades are not installed upside down. The concave side (curved inward) or the finished side should face downward. Inverted blades will move very little air.

Buzzer Warning Codes The system monitors the fan's status and emits warning beeps if an error occurs:

Beeps	Error Description	Solution
1	Over Current	Check if the motor wires are short-circuited.
2	Over Voltage	Check if the input voltage is too high.
3	Under Voltage	Check if the input voltage is too low or connections are loose.
4	Motor Stalled	(Most Common) Check for obstacles preventing the blades from spinning.
5	Phase Loss	Check if the 3 motor wires (Yellow/Gray/White) are securely connected.
6	Over Heat	Controller is overheating. Allow it to cool down.

CONTACT INFORMATION

We want to hear your voice! Feel free to touch base if you encounter any issue when using our product(s) or want to know more about our brand.

We will be more than happy to provide top-notch pre-sales & after-sales service 24/7.

Contact us through Amazon:

- 1.Go to Your Orders.
- 2.Find your order in the list.
- 3.Select Problem with order.
- 4.Choose your topic from list displayed.
- 5.Select Contact seller.

Contact us through E-mail: