



G66DQ-AC
Electric Oven
User Manual

SAFETY INFORMATION

Thank you for purchasing our product. We hope you enjoy using the many features and benefits it provides. Before using this product please study this entire Instruction Manual carefully.

Only then will you be able to operate your appliance safely and correctly. Warmly recommend retain the instruction manual and installation instructions for future use or for subsequent owners.

 
The appliance is only intended to be fitted in a kitchen. Observe the special installation instructions.

WARNING

1. When the oven is first switched on, it may give off an unpleasant smell. This is due to the bonding agent used for the insulating panels within the oven. Please run up the new empty product with the conventional cooking function, 250 °C, 90 minutes to clean oil impurities inside the cavity.
2. During the first use, it is completely normal that there will be a slight smoke and odors. If it does occur, you merely have wait for the smell to clear before putting food into the oven.
3. Please use the product under the open environment.
4. If the appliance is defective, unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact the after-sales service. Incorrect repairs are dangerous. Repairs may only be carried out and damaged power cables may only be replaced by one of our trained after-sales technicians.
5. The cable insulation of the electrical appliances may melt when touching hot parts. Never bring the cables into contact with hot parts.
6. Must plug off this oven when you clean it with wet cloth or sponge , or may result in an electric shock.
7. A defective appliance may cause electric shock. Never power on it, then contact the after-sales service.
8. The appliance becomes very hot when it's working, do not touch the interior surfaces of the appliance or the heating elements.

Clean door glass

1. Press button on the right and left side of the cover.
2. Remove the cover. After removing the cover, the door glass can be easily removed to clean.
3. When finish cleaning door glass , put the glass and cover back, then press on it until it clicks audibly into place.

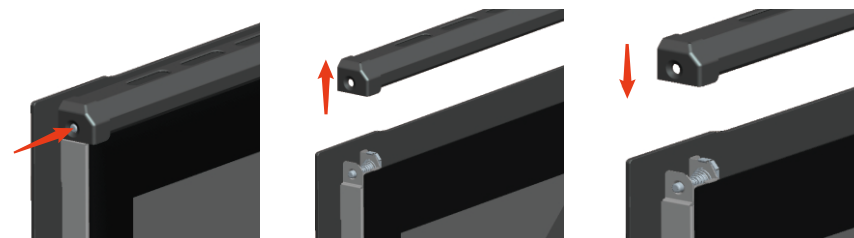

Glass panel: The glass surface of the door and control panel should be cleaned immediately as soon as it gets dirty. The firm dirty can be cleaned with a neutral detergent. Do not scrub with steel wire to avoid scratching the surface. After cleaning, wipe it with a dry cloth.


Technical Sheet

Production	Single Wall Oven
Item No.	G66DQ-AC
Rated Voltage	240V
Rated Frequency	60Hz
Rated Power	3000W
Capacity	66L
Dimension(WxHxD)	595X595X575mm
Installation Size(WxHxD)	565X595X580mm


APPLIANCE DOOR

With good care and cleaning, your appliance will retain its appearance and remain fully functional for a long time. This will tell you how to remove the appliance door and clean it.

 For cleaning purposes, you can unlock the hinge to remove door, as below fig shows.

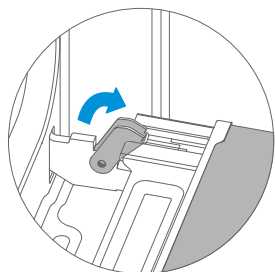

Unlock position

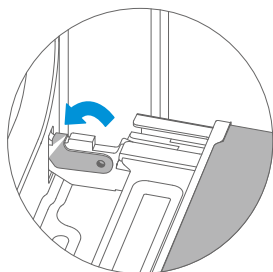 


Lock position

For clean door glass

1. Press button on the right and left side of the cover.
2. Remove the cover. After removing the cover, the door glass can be easily removed to clean.
3. When finish cleaning door glass , put the glass and cover back, then press on it until it clicks audibly into place.

 How to remove the door

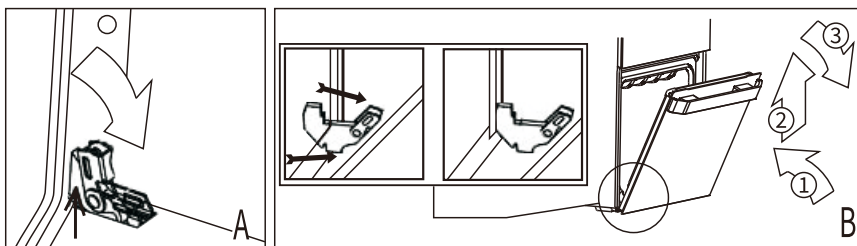

Before remove the door, make sure cooling down enough to a safety temeperature

- 1) open the door
- 2) Lift the hinge tabs, and then pull them fully outward to the end of the stroke
- 3) Close the door, take down the door through steps ①②③, and put it aside gently.

Install the oven door

 
1. Insert the hinge into the connecting hole and snap it in place;
2. Fully open the door, press the hinge card inward to jam the hinge;
3. Close the door and check if it is in correct position.

WARNING



9. Always allow the appliance to cool down.
10. Keep children at a safe distance.
11. Accessories and ovenware become very hot. Always use oven gloves to remove accessories or ovenware from the cavity.
12. Alcoholic vapors may catch fire in the hot cooking compartment. Never prepare food containing large quantities of food with high alcohol content.
13. The accessible parts become hot during oven working. Never touch the hot parts. Keep children at a safe distance.
14. Hot air escape when you open the appliance door, it may not be visible depending on its temperature. When opening, do not stand too close to the appliance. Open the appliance door carefully. Keep children away.
15. Scratched glass door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents to clean the door glass.
16. When opening and closing the door, keep your hands away from the hinges to avoid trapped.
17. Combustible items stored in the cavity may catch fire. Never store combustible items in the cavity. Never open the appliance door if there is smoke inside. Switch off the oven and cut off power immediately.
18. Greaseproof paper may come into contact with the heating element and catch fire. Only cover the surface required with greaseproof paper when it is necessary, Greaseproof paper must not protrude over the accessories.
19. This appliance is intended to household used only.
20. This appliance can be used by children aged from 8 years and above and person with reduced physical,sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliances in a safeway and understand the hazards involved.
21. Cleaning and user maintenance shall not be made by children without supervision.
22. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years.
23. If the supply cord is damaged, it must be replaced by the manufacturer, its sevice agent or similarly qualified persions in order to avoid a hazard.

INSTALLATION

unit:mm

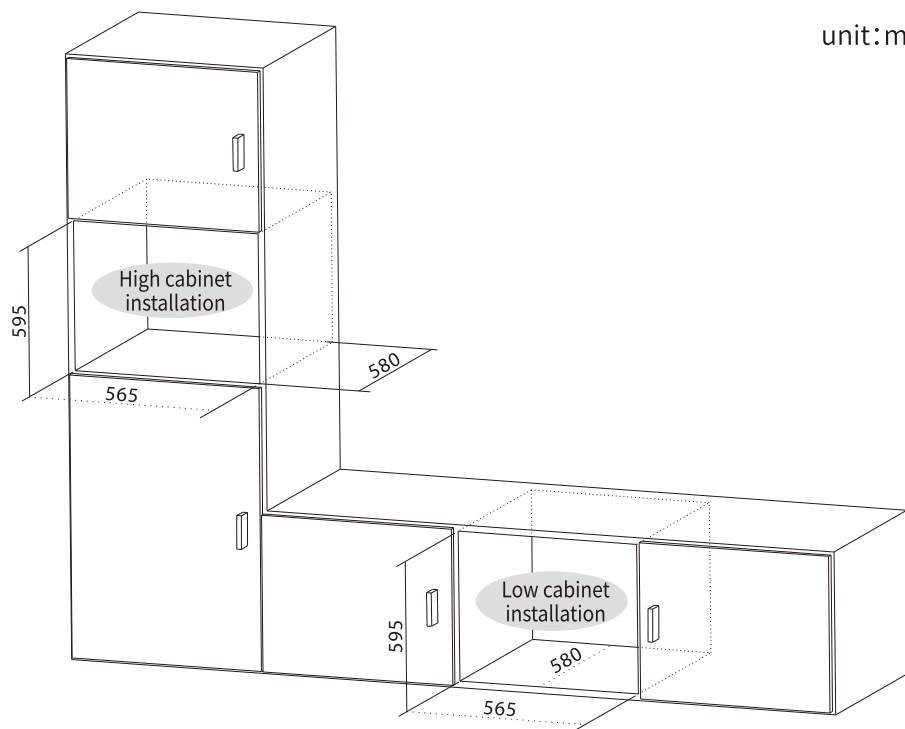

Mounting screw fixing position

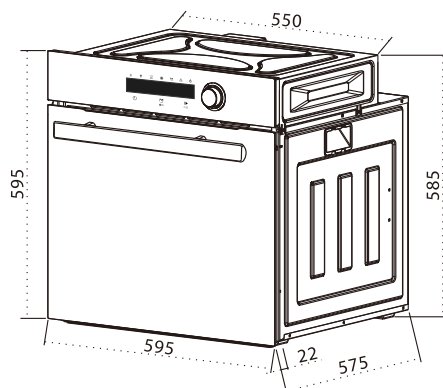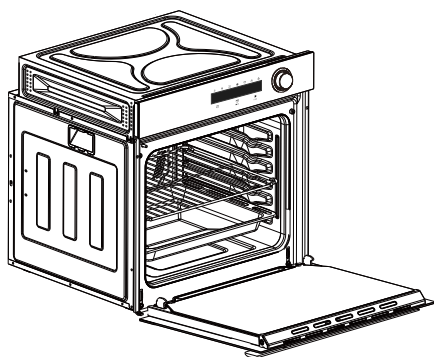  

Cooking Mode

Symbol	Heater	Default time	Time Range	Default Temp	Temperature Range	Remark
	Bom	00:20	00:05-03:00	130°C	100-180°C	
	Top + Bom	00:20	00:05-03:00	150°C	100-230°C	
	Up	00:20	00:05-03:00	130°C	100-230°C	
	Top + Up	00:20	00:05-03:00	150°C	100-230°C	
	Top+ Bom + Fan	00:20	00:05-03:00	150°C	100-230°C	
	Top+ Up +Fan	00:20	00:05-03:00	150°C	100-230°C	
	Ba + Fan	00:20	00:05-03:00	150°C	100-230°C	
	Preheat	00:20	00:05-03:00	150°C	100-250°C	Top + Up + Fan
	Defrost	00:30	00:05-03:00	58°C	40-60°C	Ba + Fan
	Fermentation	01:00	00:05-10:00	38°C	38-58°C	Ba + Fan
	Dehydrate	02:00	00:30-24:00	80°C	70-90°C	Ba + Fan

Remark: "Ba" means back heater, "Up" means upper inner heater, "Bom" means bottom heater

"Top" means upper external heater

USING YOUR APPLIANCE

Caution!

The oven will not stop working when open door, be careful when you need to open the door when it's working.

After the appliance switched off, it is still very hot inside the cavity. Never touch the interior surfaces of the appliance or the heating elements. Use oven gloves to remove accessories or ovenware from the cavity, and allow the appliance to cool down.

Keep children at a safe distance at the same time to avoid the injury of burns.

 
Tips

1. Clean the cooking compartment after each use.
2. Always remove flecks of lime scale, grease, starch and albumin immediately.
3. Use suitable ovenware for baking, roasting, grilling.

INSTALLATION

1. The electric oven should be placed in a stable, firm and easy-to-operate cabinet.
2. Install the oven as shown in the figure below to ensure air circulation around the electric oven;
3. The cabinet where the electric oven is placed must be firm, and the cabinet floor can withstand a weight of more than 60 kg; cabinet materials (wood, adhesive, Mixture) must withstand temperature above 120°C;
4. When move the electric oven, you should lift the electric oven from side handle hole and the bottom of the electric oven (do not drag the door or handle to move the electric oven), put the electric oven into the cabinet and slowly push it into the cabinet. Open the electric oven door and fix the electric oven on the cabinet with two self-tapping screws;
5. Before connecting power, please make sure:
 - The socket and circuit connected to the power supply must be reliably grounded;
 - After connect to the power supply, please check whether the power cord is in contact with heat-prone accessories. If there is contact, keep it away from a safe distance;
6. All installation and connection operations must be performed by professionals.

CONTROL PANLE DESCRIPTION

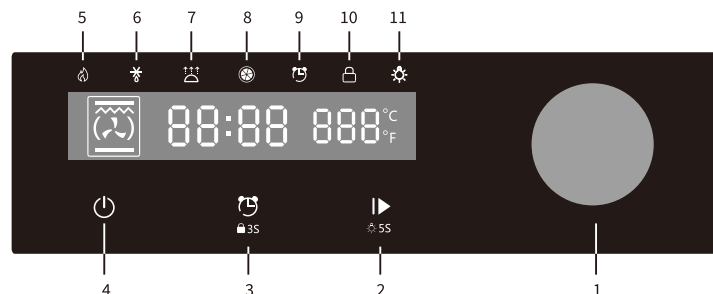

NO.	Symbol	Function description
1		Select & confirm temperature, time & function, Press for 5S to change temperature unit.
2		Pause / start oven Press 5S to turn on/off lamp
3		Preset Press for 3S for child lock
4		Power ON/OFF
5		Preheat function indicator
6		Defrost function indicator
7		Fermentation function indicator
8		Dehydrate function indicator
9		Preset indicator
10		Child lock indicator
11		Lamp indicator

USING YOUR APPLIANCE

After the oven has been electrically connected, put food into cavity, turn the function knob to select functions, turn temperature knob to select temperature, then turn the timer to select time, the oven start to work.

1: Turn on the oven

After the oven has been electrically connected, press , then the oven standby, the display turn on;

2: Preheat

- (1) Rotate the knob to select preheat , the indicator twinkling;
- (2) Press the knob to confirm, the time twinkling;
- (3) Rotate the knob to set time;
- (4) Press the knob to confirm, the temperature twinkling;
- (5) Press to start;
- (6) After preheat finish, then start to cooking food.

3: Set cooking program

- (1) Rotate the knob to select a cooking mode;
- (2) Press the knob to confirm, the time twinkling;
- (3) Rotate the knob to set temperature;
- (4) Press the knob to confirm, the temperature twinkling;
- (5) Put the food into cavity, close the door;
- (6) Press to start;
- (7) After cooking finish, you can hear a beeping;
- (8) Press to turn off the oven.

4: Child lock

Press for 3S, the buttons locked.

5: Turn on lamp during cooking

Press for 5S, then the lamp turn on, press 5S again, lamp turn off.

6: Change the temperature unit

Press knob for 3S then the unit will change to °C or °F when setting the temperature.