





 



# 78" CONSOLE TABLE




## ASSEMBLY INSTRUCTIONS

HARDWARE LIST				
1		Bolts	8 x 65 mm	12
2		Lock Washer	8 mm	12
3		Flat Washer	8 x 22 mm	12
4		Allen Wrench	73 x 29 x 5 mm	1

PARTS LIST		
A 	B 	C 
TABLE TOP 1 PC	SIDE RAIL 2 PCS	LEG 2 PCS

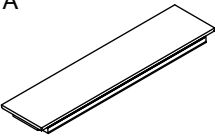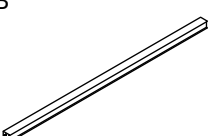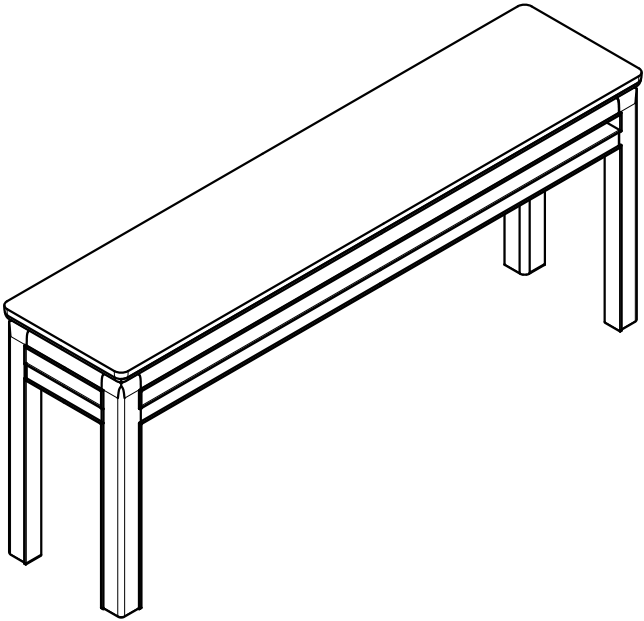

### STEP: 1

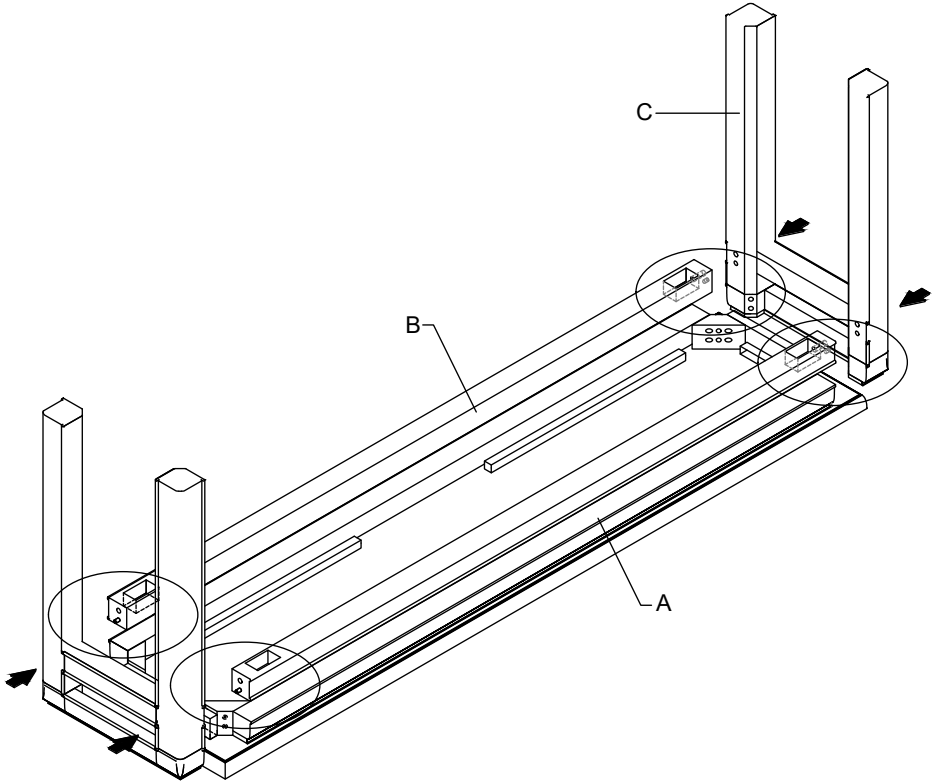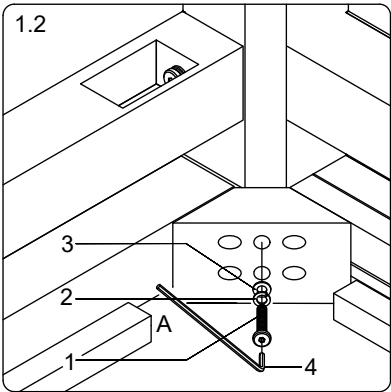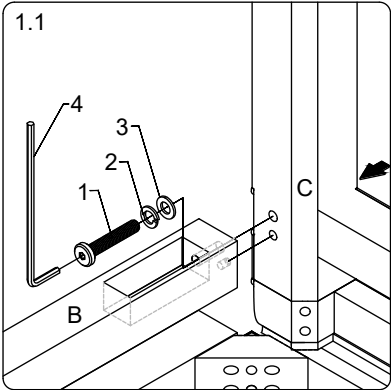

# 78" CONSOLE TABLE

## ASSEMBLY INSTRUCTIONS

### STEP: 2

#### ADJUST FLOOR LEVELERS

Your furniture has been expertly crafted and pre-adjusted by professionals. However, slight shifts can occur during transportation. If you notice that the doors are not perfectly aligned or the furniture wobbles, a quick adjustment can help ensure stability and a seamless look.

#### ADJUST FLOOR LEVELERS

**Check for Stability** – Place the furniture in its final position on a level surface. If it wobbles or doesn't sit evenly, the floor levelers need adjusting.

**Locate the Levelers** – These are small adjustable feet found at the bottom corners of your furniture.

**Adjust as Needed** – Using your hand or a wrench, turn the levelers clockwise to raise or counterclockwise to lower the furniture. Make small adjustments and check stability after each turn.

