 




Table

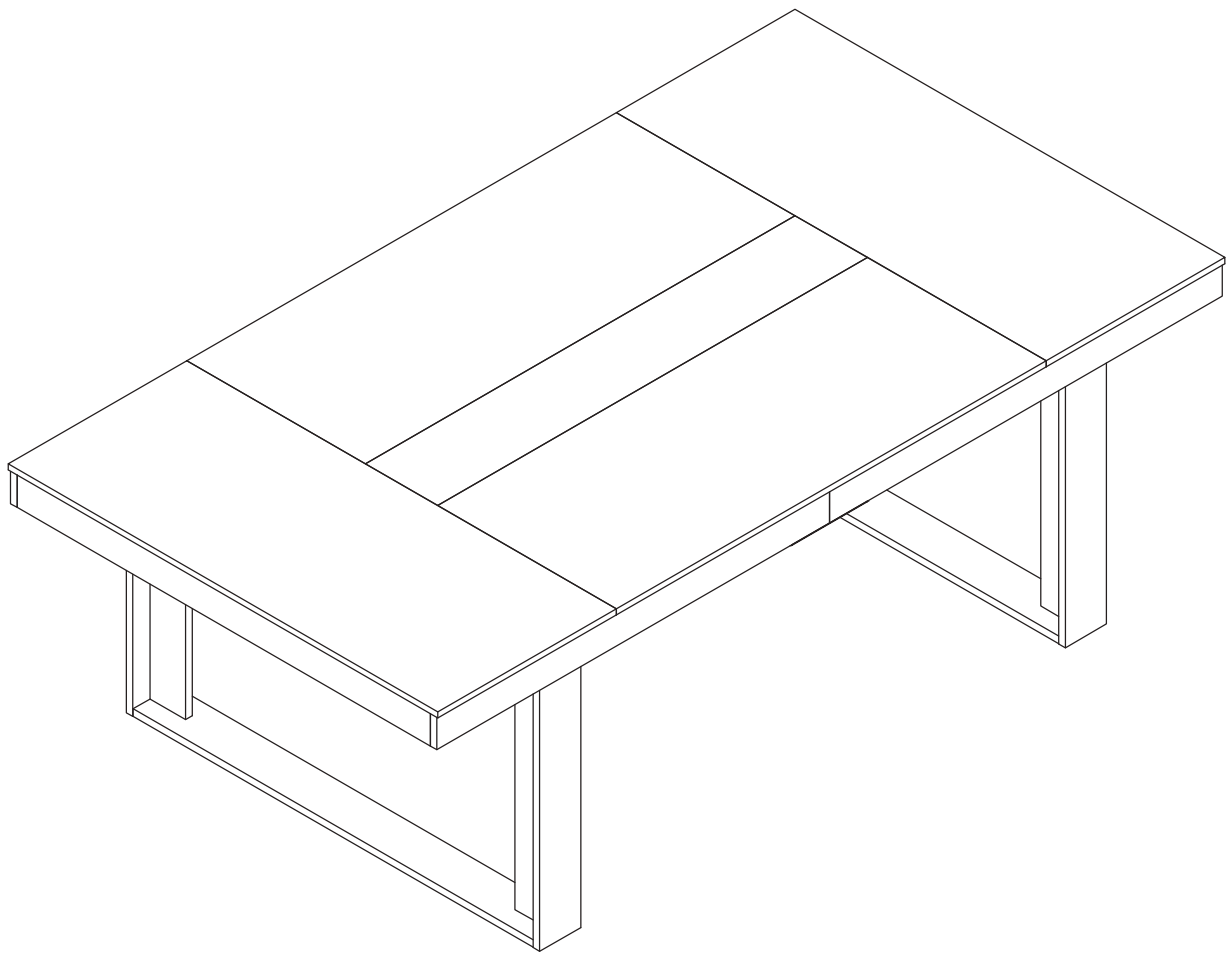




IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

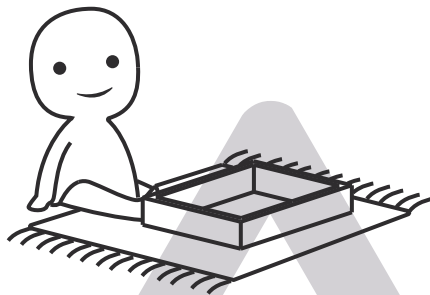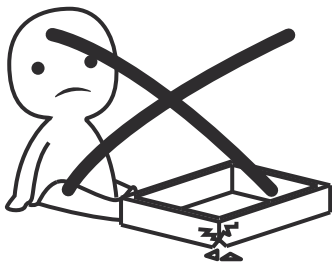


AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer- could be a rug.

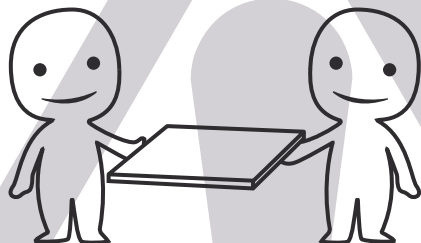

IMPROVE EFFICIENCY !

 Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

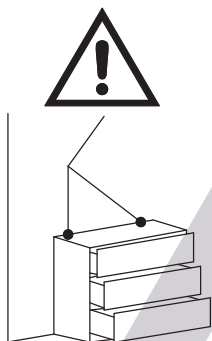

ANTI-TOPPLE WARNING !

 
Overturnd furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

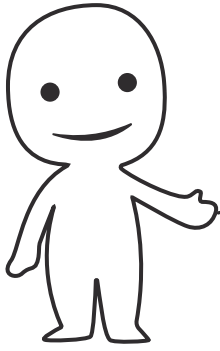


Please prepare the following tools

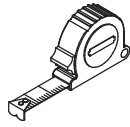   

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 66




Ø6 x 35 mm

B x 80




Ø15 x 9 mm

 C x 24




Ø4 x 45 mm

 D x 54



Ø6 x 30 mm

 E x 14



Ø6 x 50 mm

F x 14



 
Ø6 x 10 mm

G x 16




Ø6 x 14 mm

H x 1




J x 8

 

Ø4 x 25 mm

 K x 16





Ø6 x 25 mm

M x 16



  N x 2

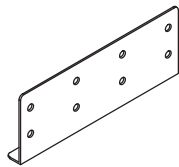


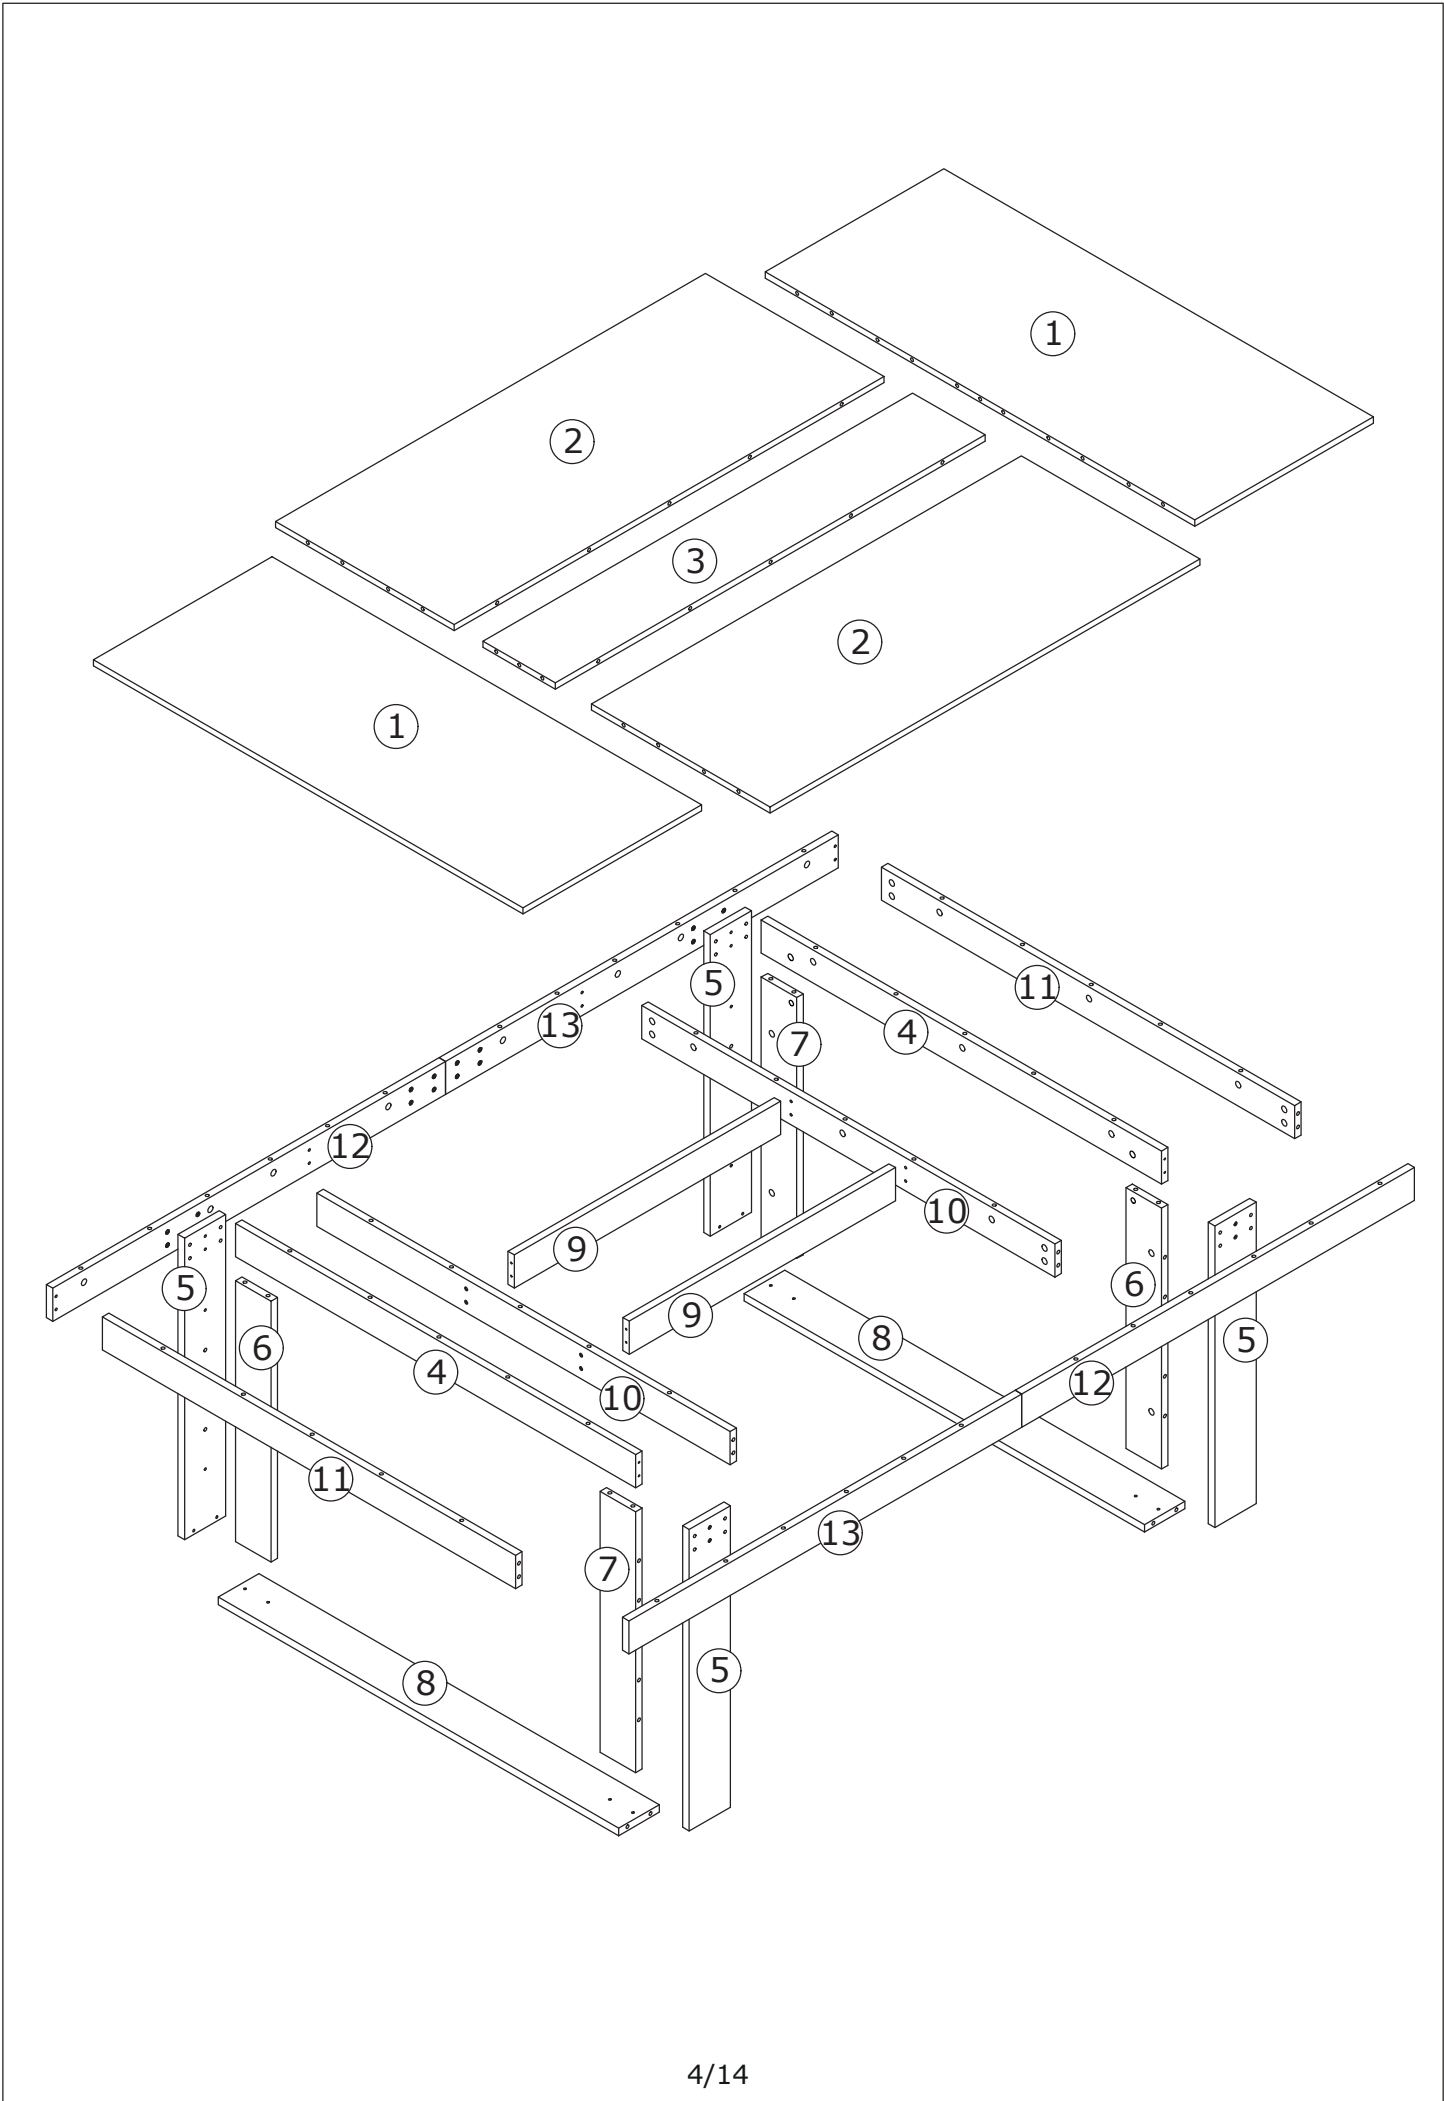


1




Cam Bolt (A) to plate 5 with across screwdriver, as shown.

  Insert the wooden tenon (D) into plate 4 and 5, as shown.

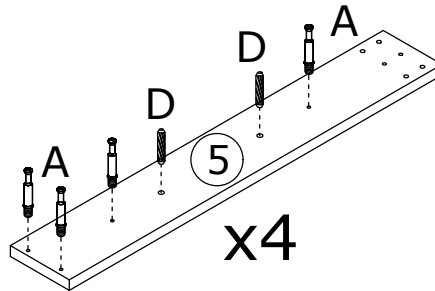
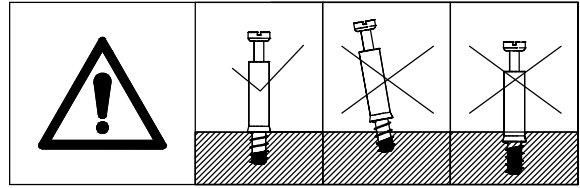


2

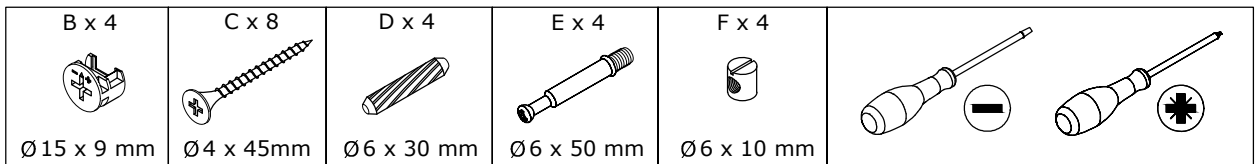 




Connect Plate 6 and 7 with plate 8 using screw(C) as shown.

  Insert wooden dowel(D) into plate 4 at first. Add nut(F) into corresponding holes in plate 6 and 7, then insert quickfit screw(E) into the two plates, turn nut to tighten.

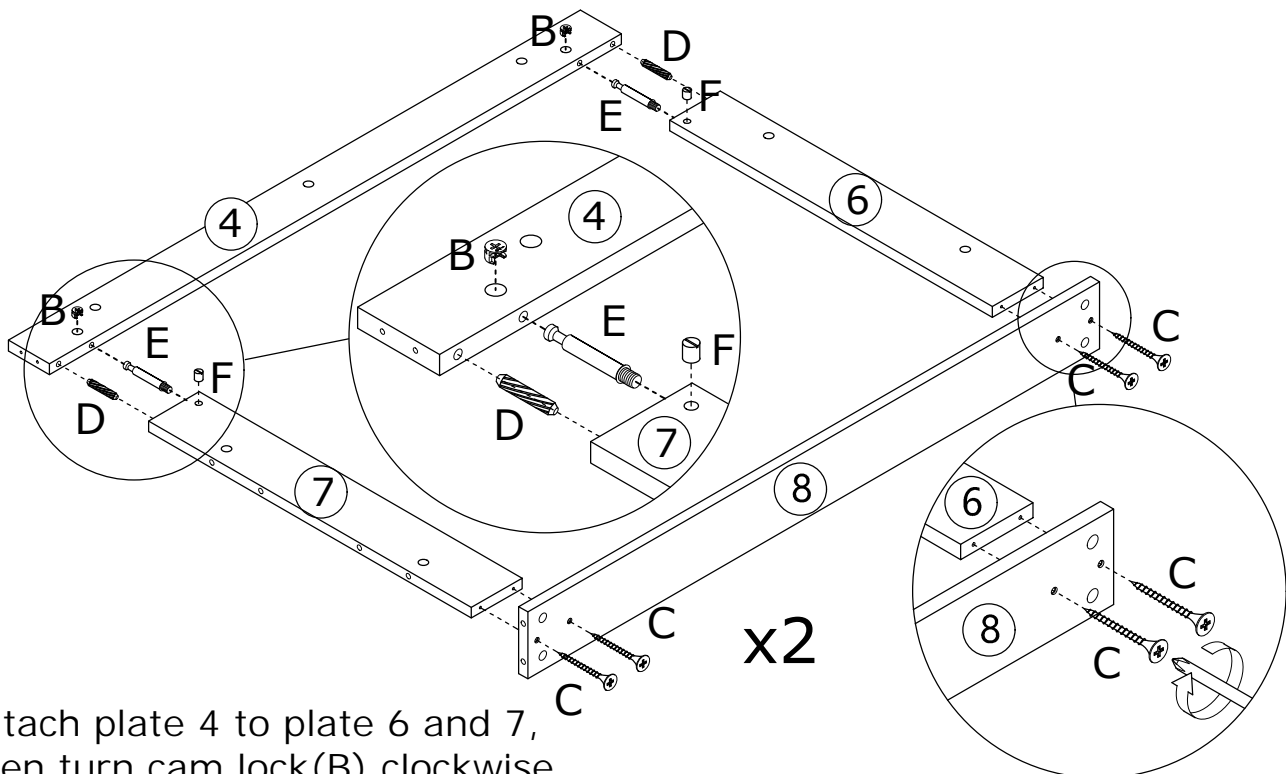
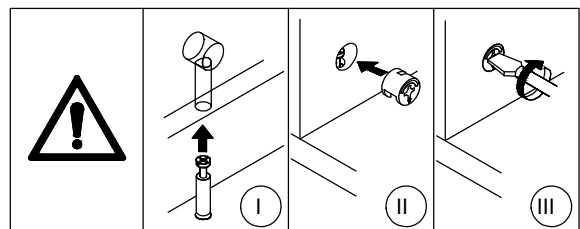


Attach plate 4 to plate 6 and 7, then turn cam lock(B) clockwise to tighten as shown.

  
 
3

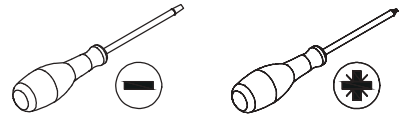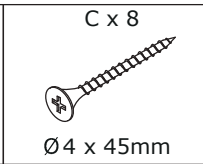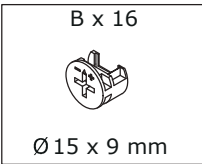

  
Attach No.5 to No.6 and No.7 plate respectively using screw(C) as shown. Insert cam lock(B) into No.6, No.7 and No.8 plate, turn them clockwise to tighten as shown.

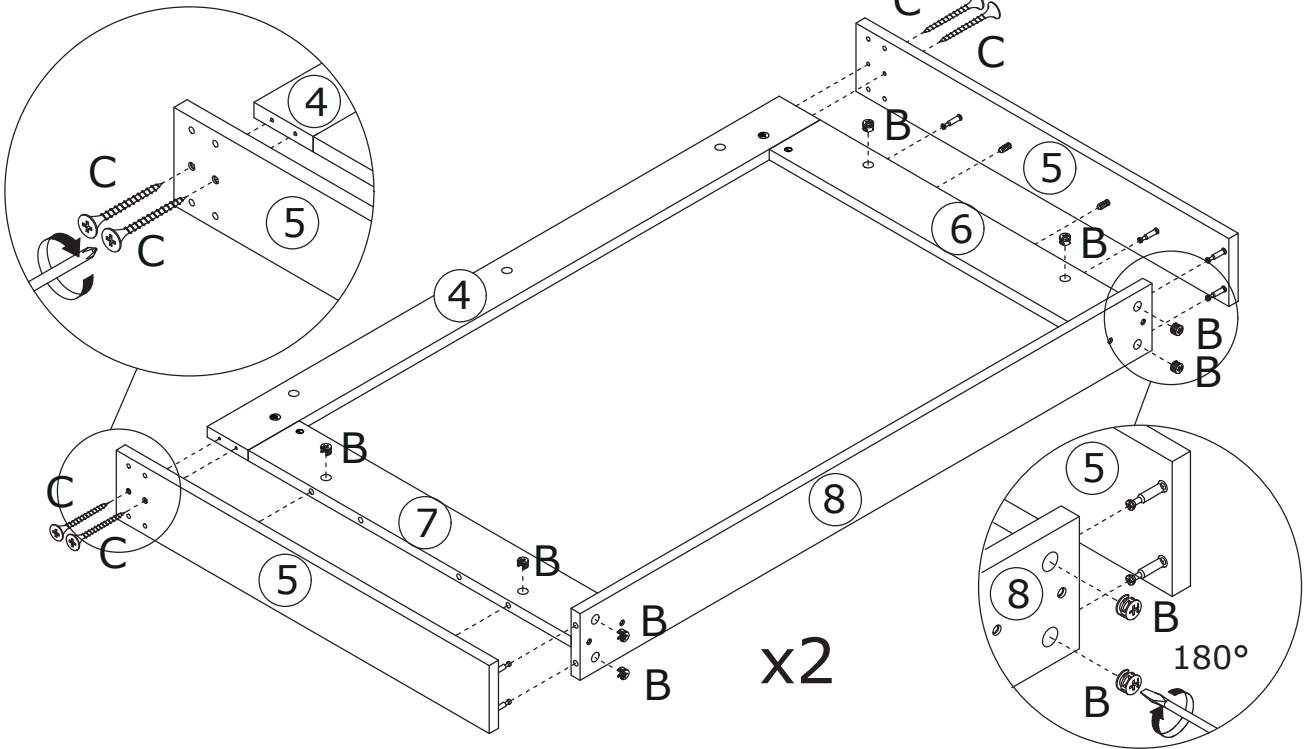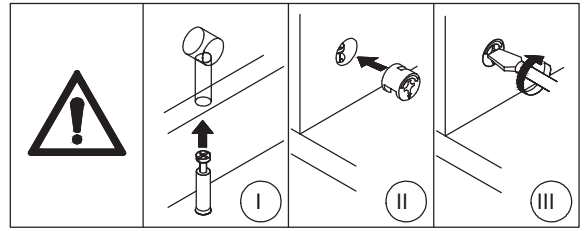

4

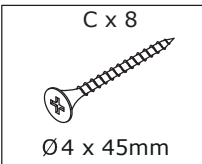  

 Connect two No.10 plate with two No.9 using screw(C) as shown.

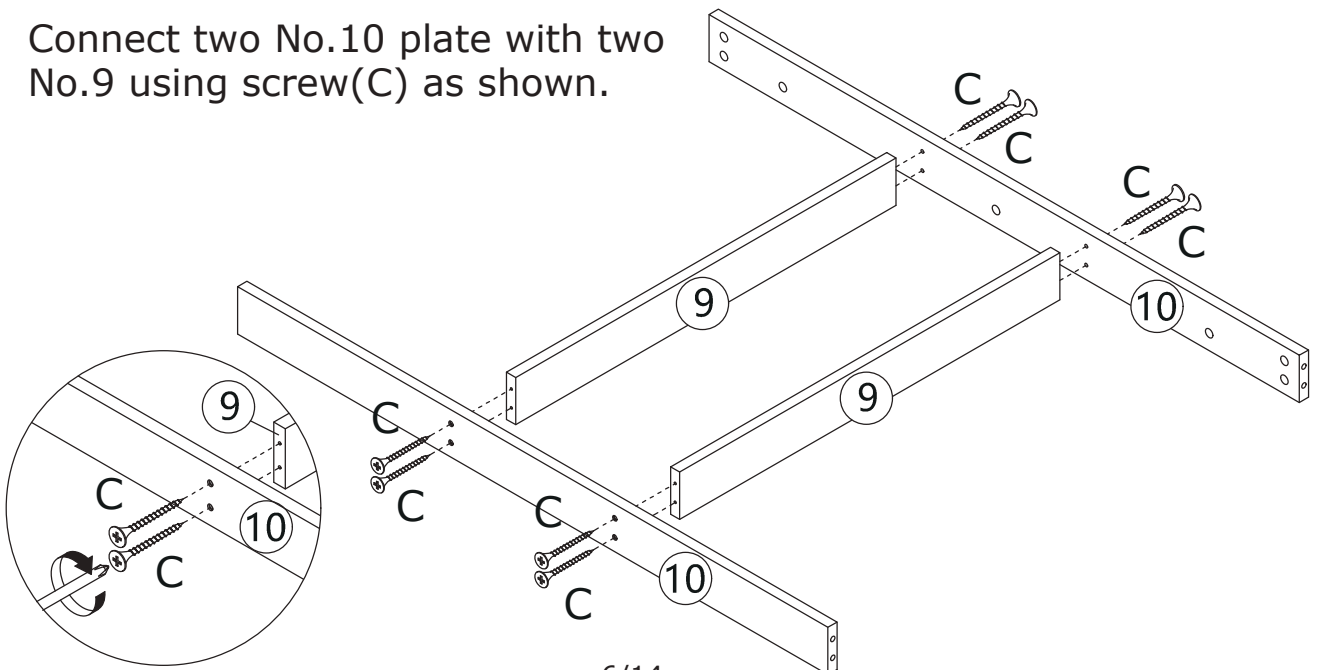


5

<p>D x 22</p>  <p>Ø6 x 30 mm</p>	<p>E x 10</p>  <p>Ø6 x 50 mm</p>	<p>F x 10</p>  <p>Ø6 x 10 mm</p>	
---	---	---	---


Add slotted nut(F) into corresponding holes in No.3 and No.2(x2) plate at first. Then insert quickfit screw(E) into them as shown.

 Insert wooden dowel(D) into No.3 and No.2(x2) plate as shown.


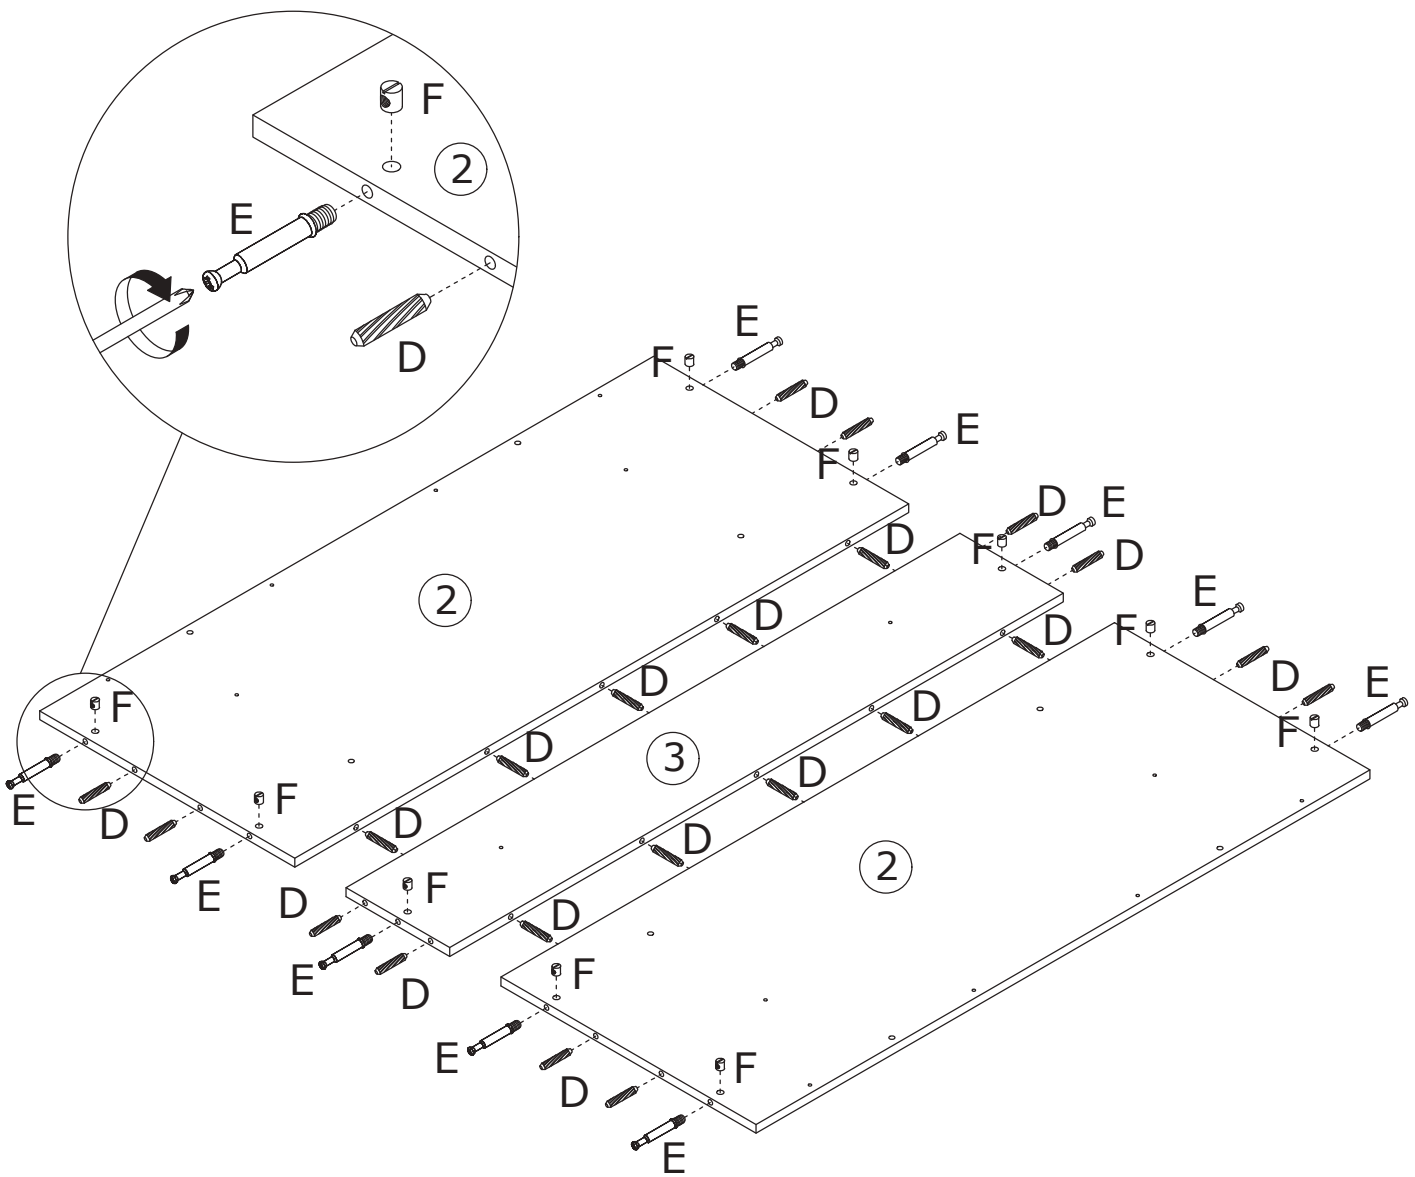


6



 
B x 10
Ø15 x 9 mm



      
 
Connect two No.1 plate with the component and turn cam lock(B) clockwise to tighten as shown.

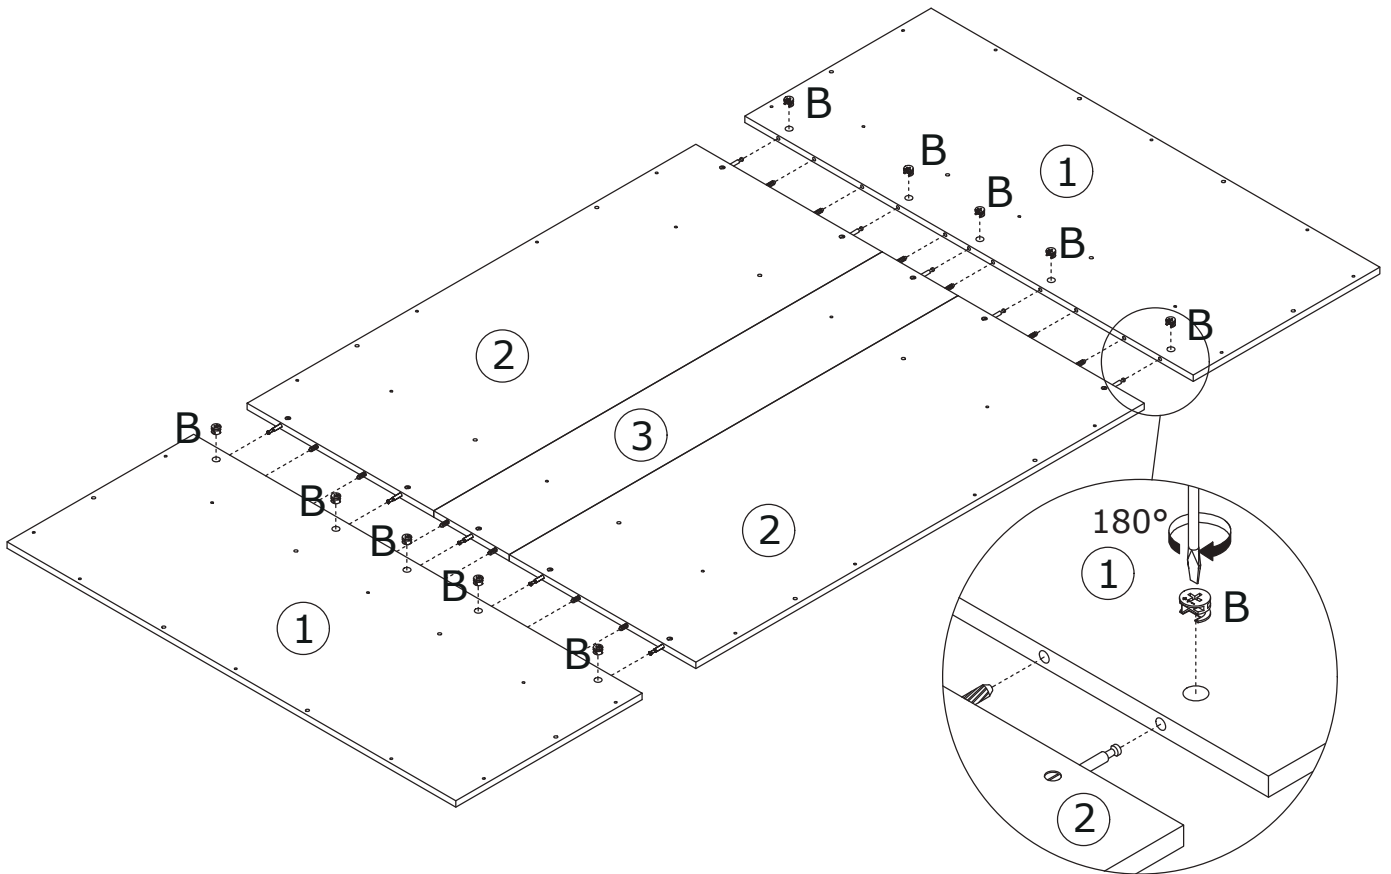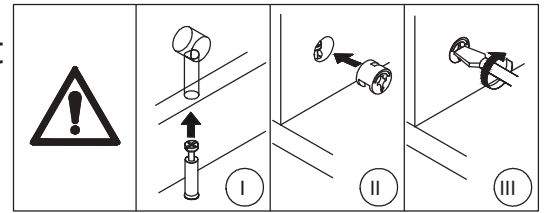

 

 
 
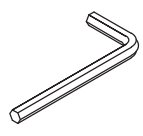 
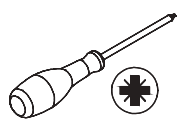 
7

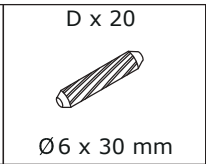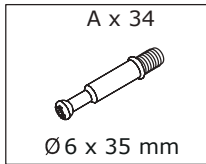


Insert quickfit screw(A) and wooden dowel(D) into No.1, No.2 and No.3 plate with a screwdriver.

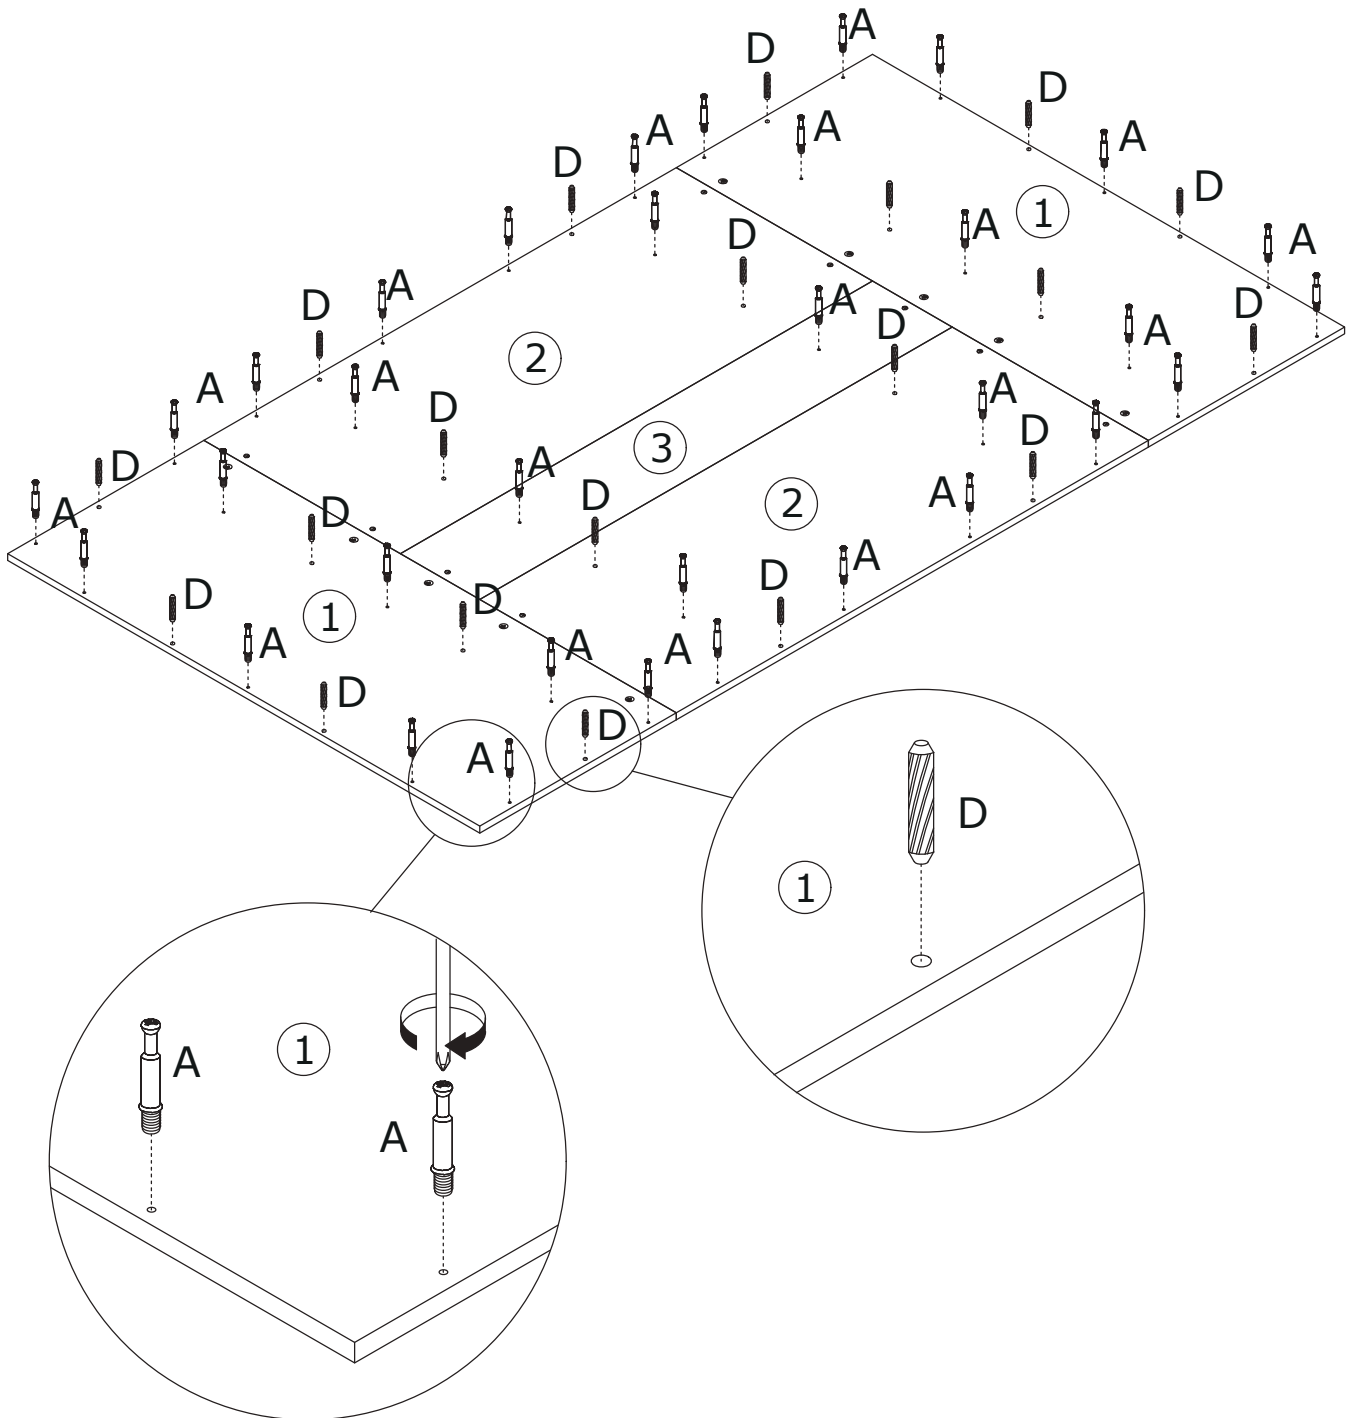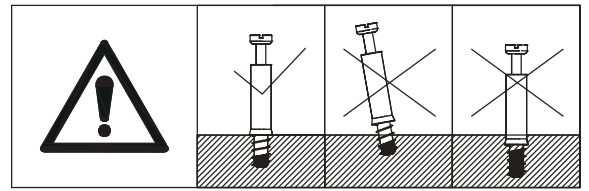


8

<p>A x 16  Ø6 x 35 mm</p>	<p>G x 16  Ø6 x 14 mm</p>	<p>J x 8  Ø4 x 25 mm</p>	<p>N x 2 </p>	 
--	--	---	---	--

 Fix iron sheet(N) with No.12 and No.13 plate using screw(G) as shown. Then reinforce with screw(J) again.

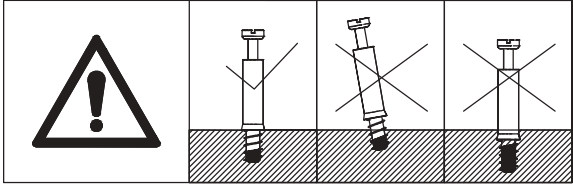


 Insert quickfit screw(A) into No.12 and No.13 plate with a screwdriver as shown.


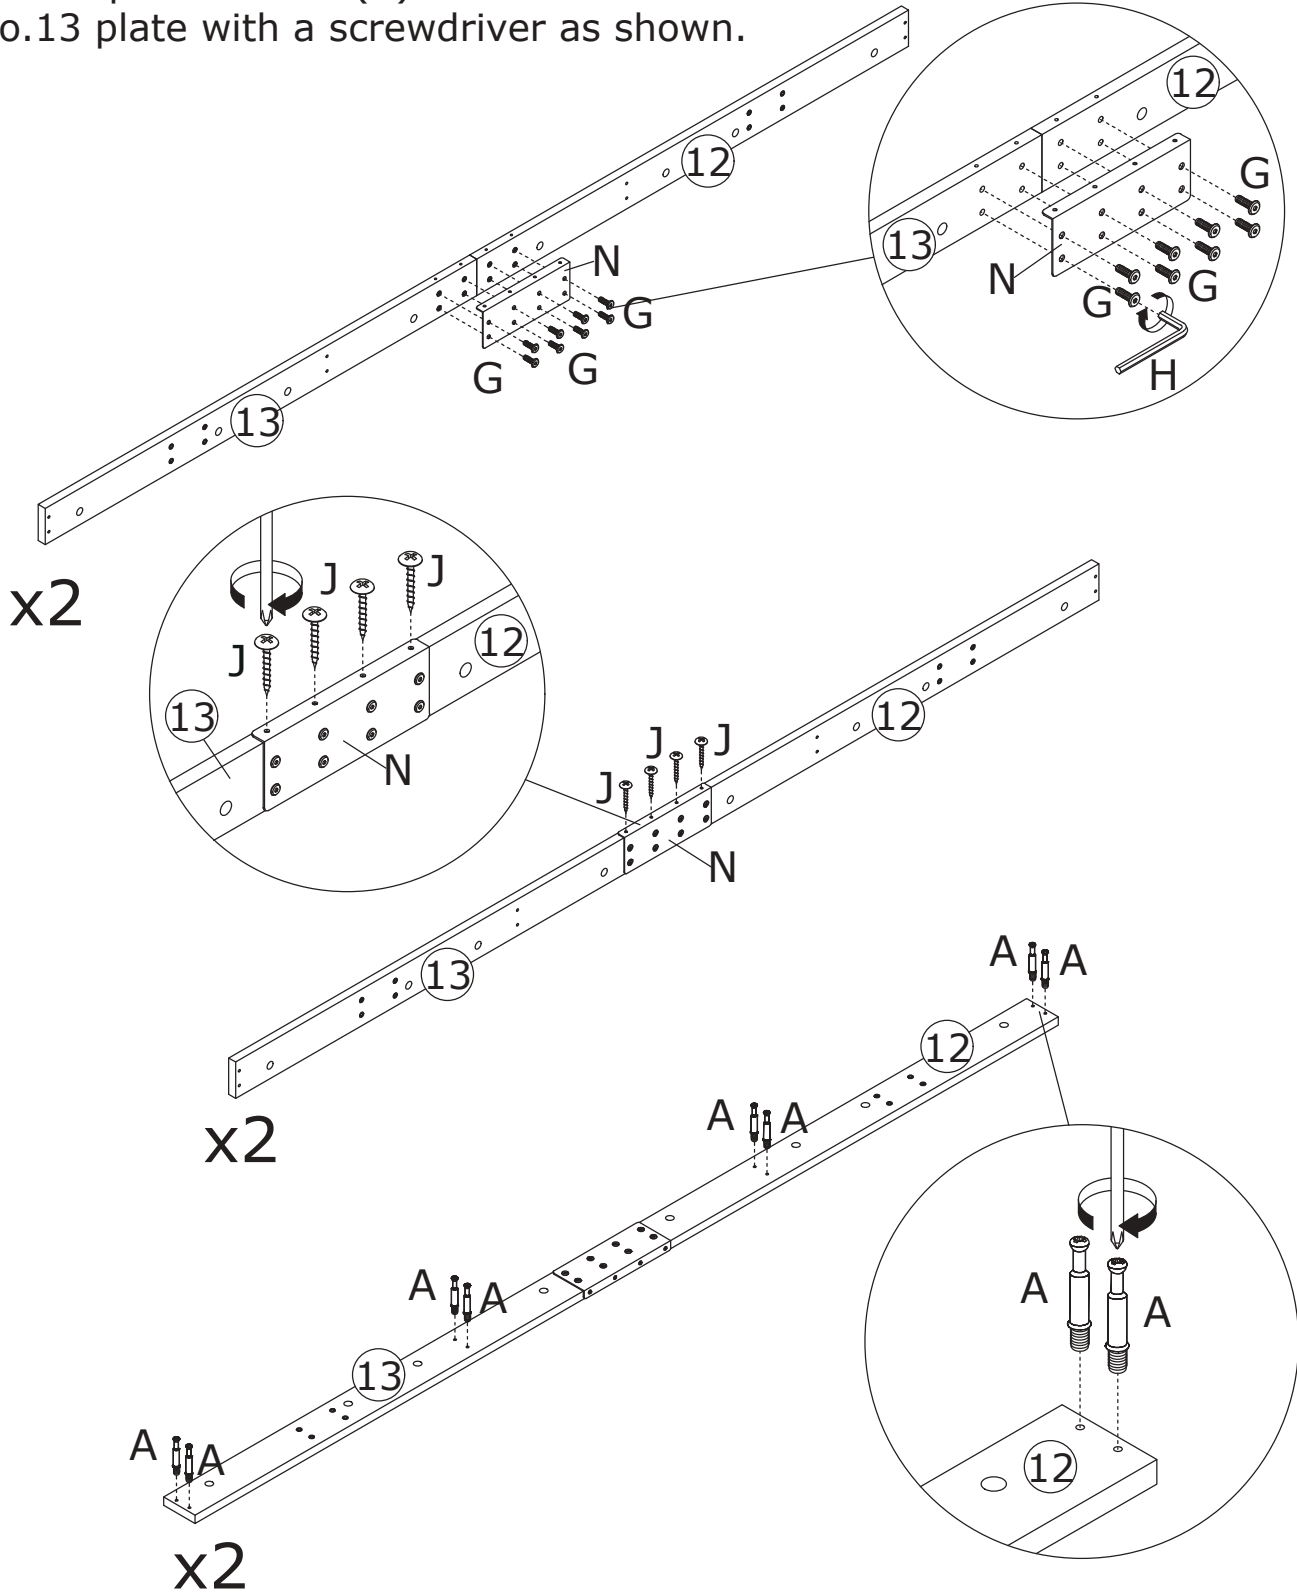


9

 B x 16
Ø15 x 9 mm



  Connect No.11 with No.12 and No.13 plate, then turn cam lock(B) clockwise to tighten as shown.

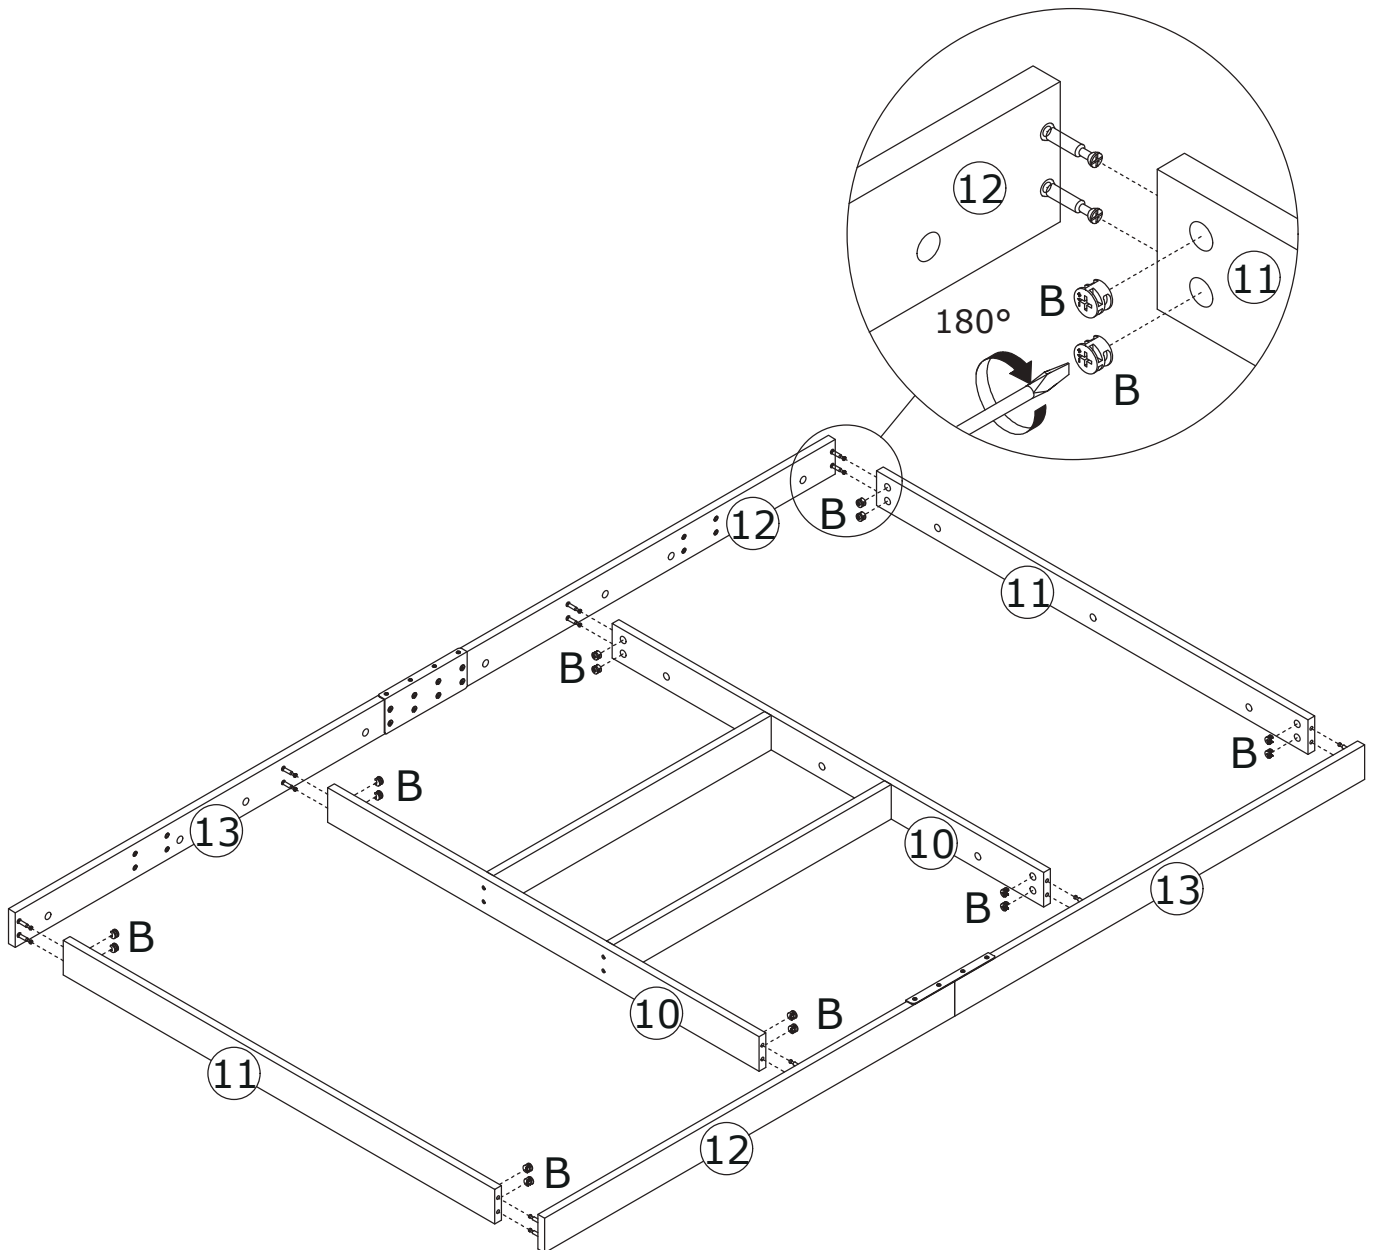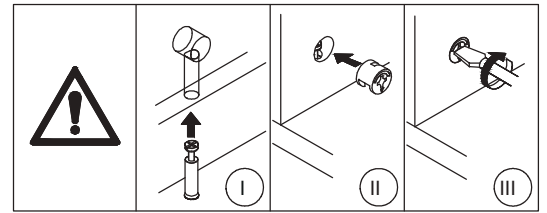


10



B x 28



 Ø15 x 9 mm



  Connect the two assembled component and turn cam lock(B) clockwise to tighten as shown.

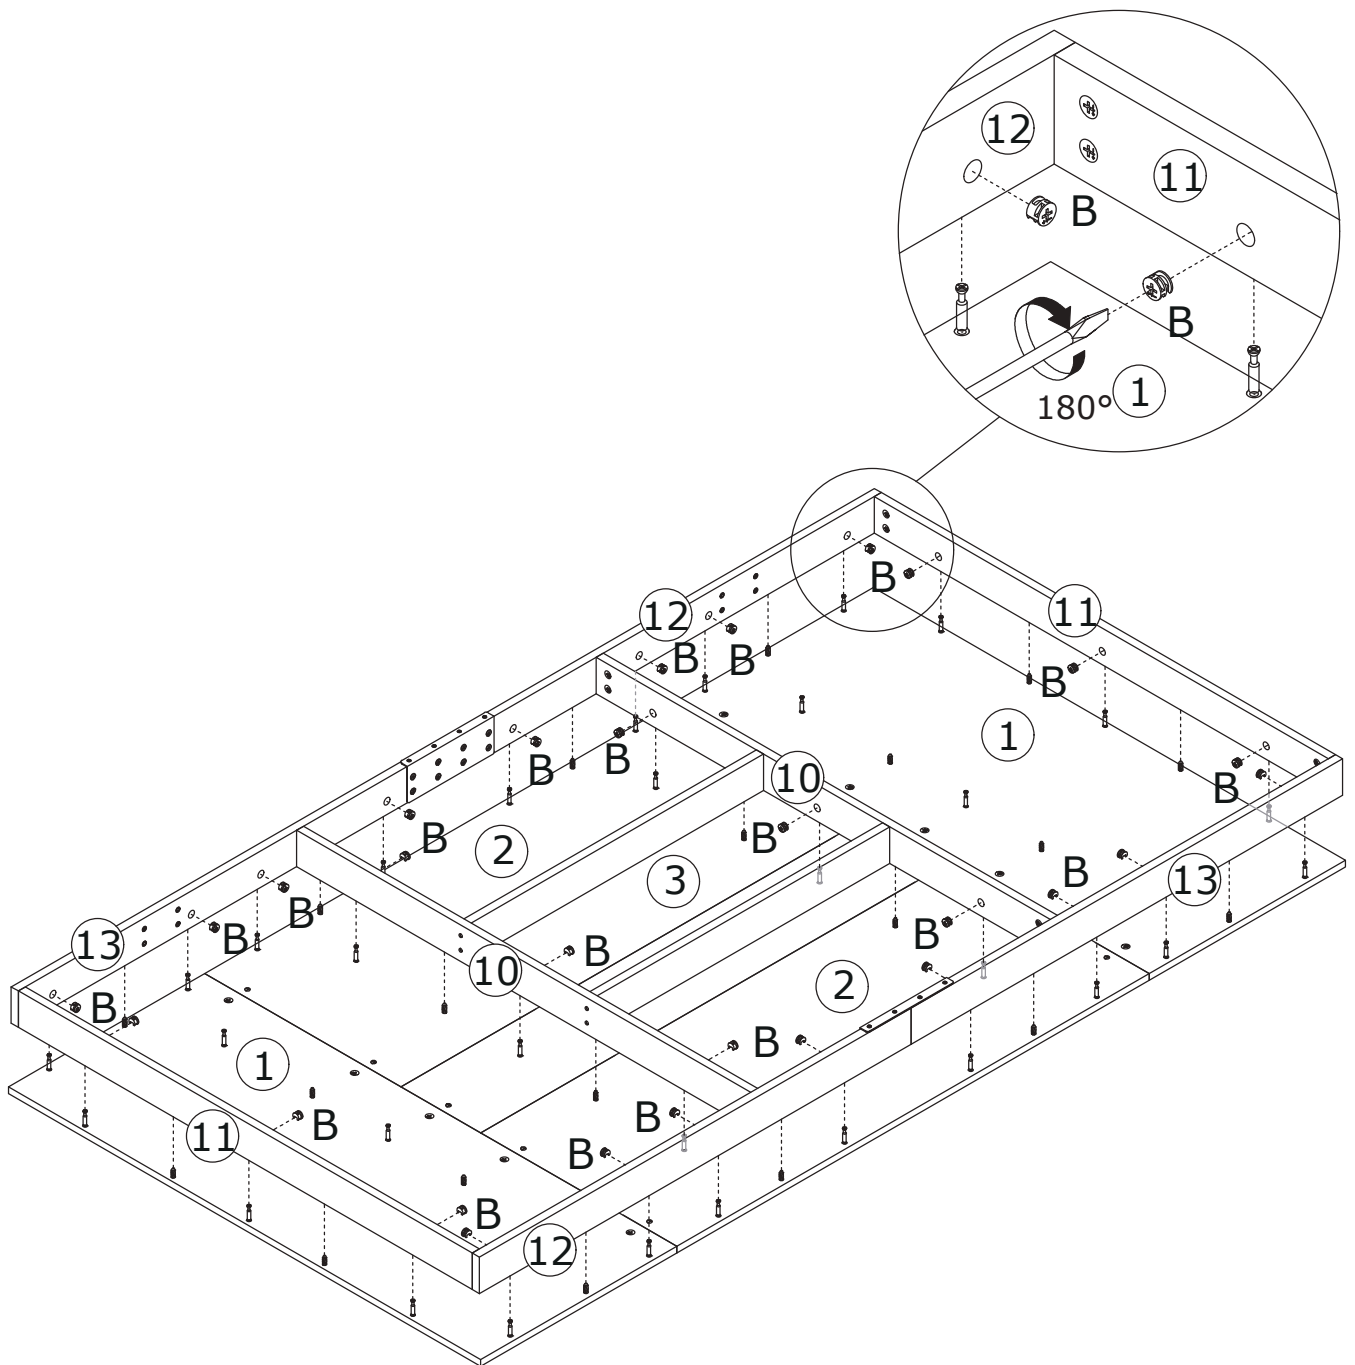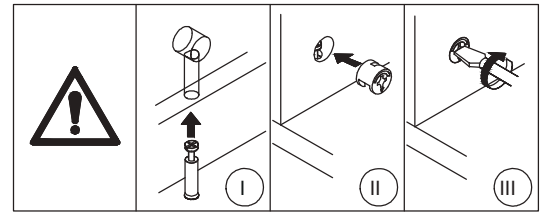


11



B x 6





 
Ø15 x 9 mm



  
Attach the assembled component in step 3 to the unit, then turn cam lock(B) clockwise to tighten as shown.

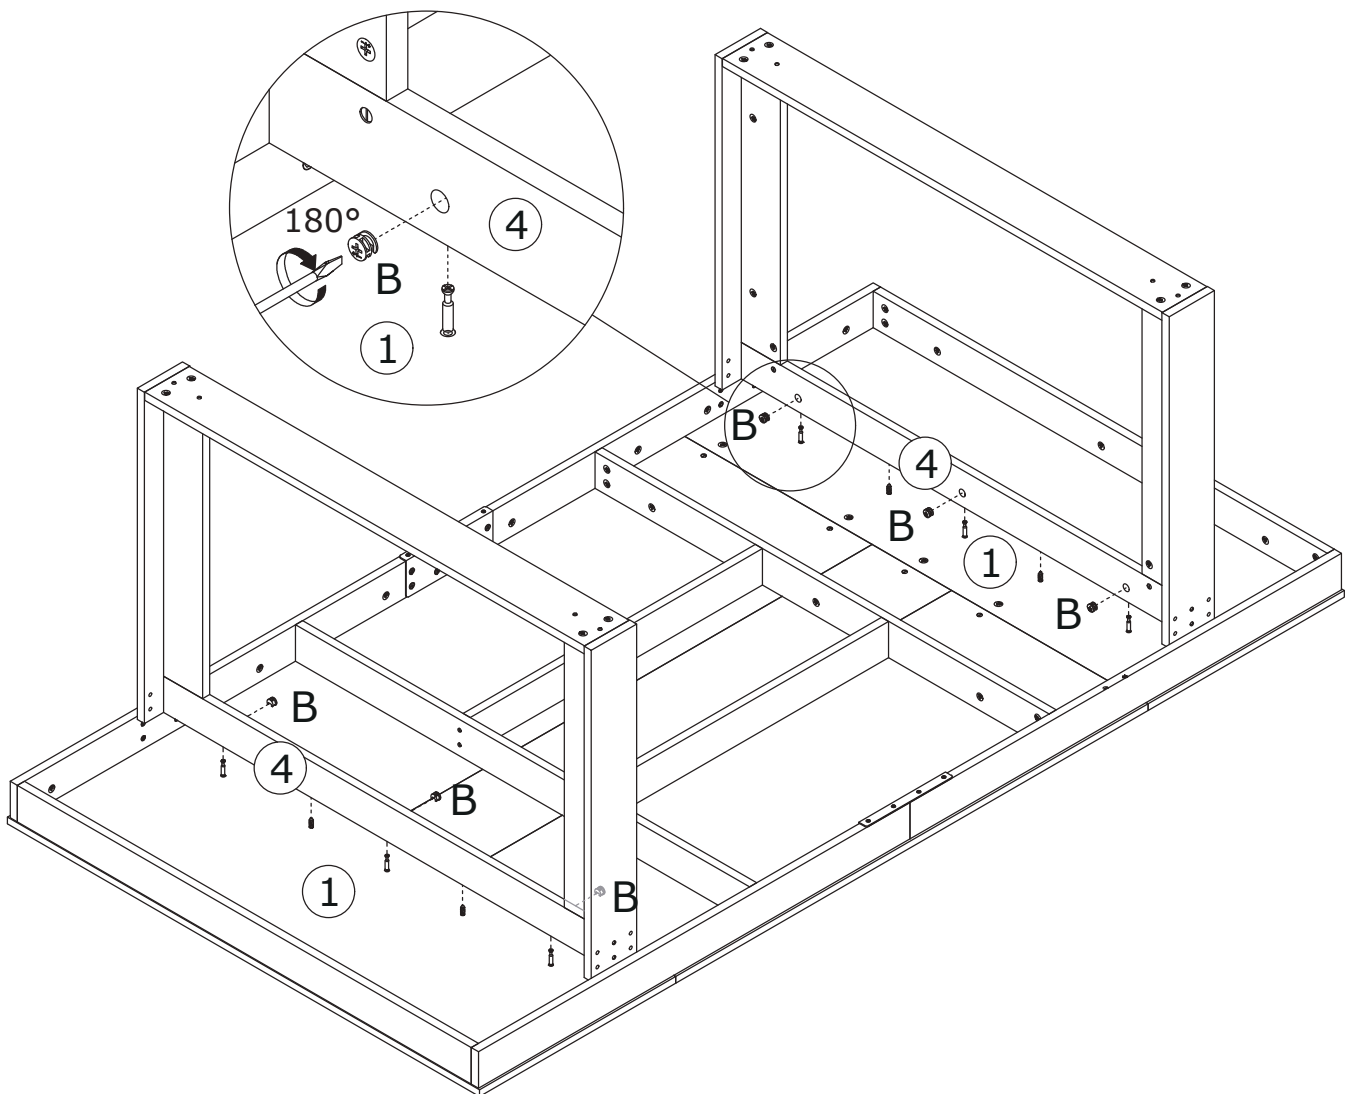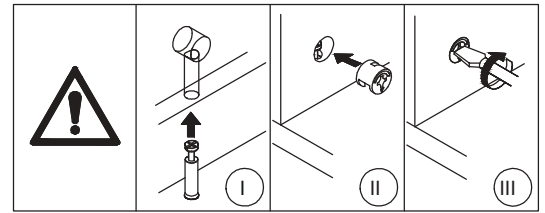

12

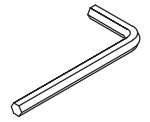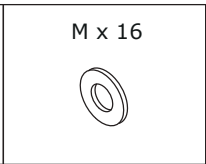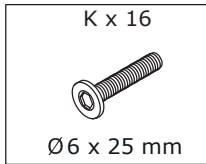   

 Fix No.5 with No.12 and No.13 plate using washer(M,L) and screw(K) as shown.

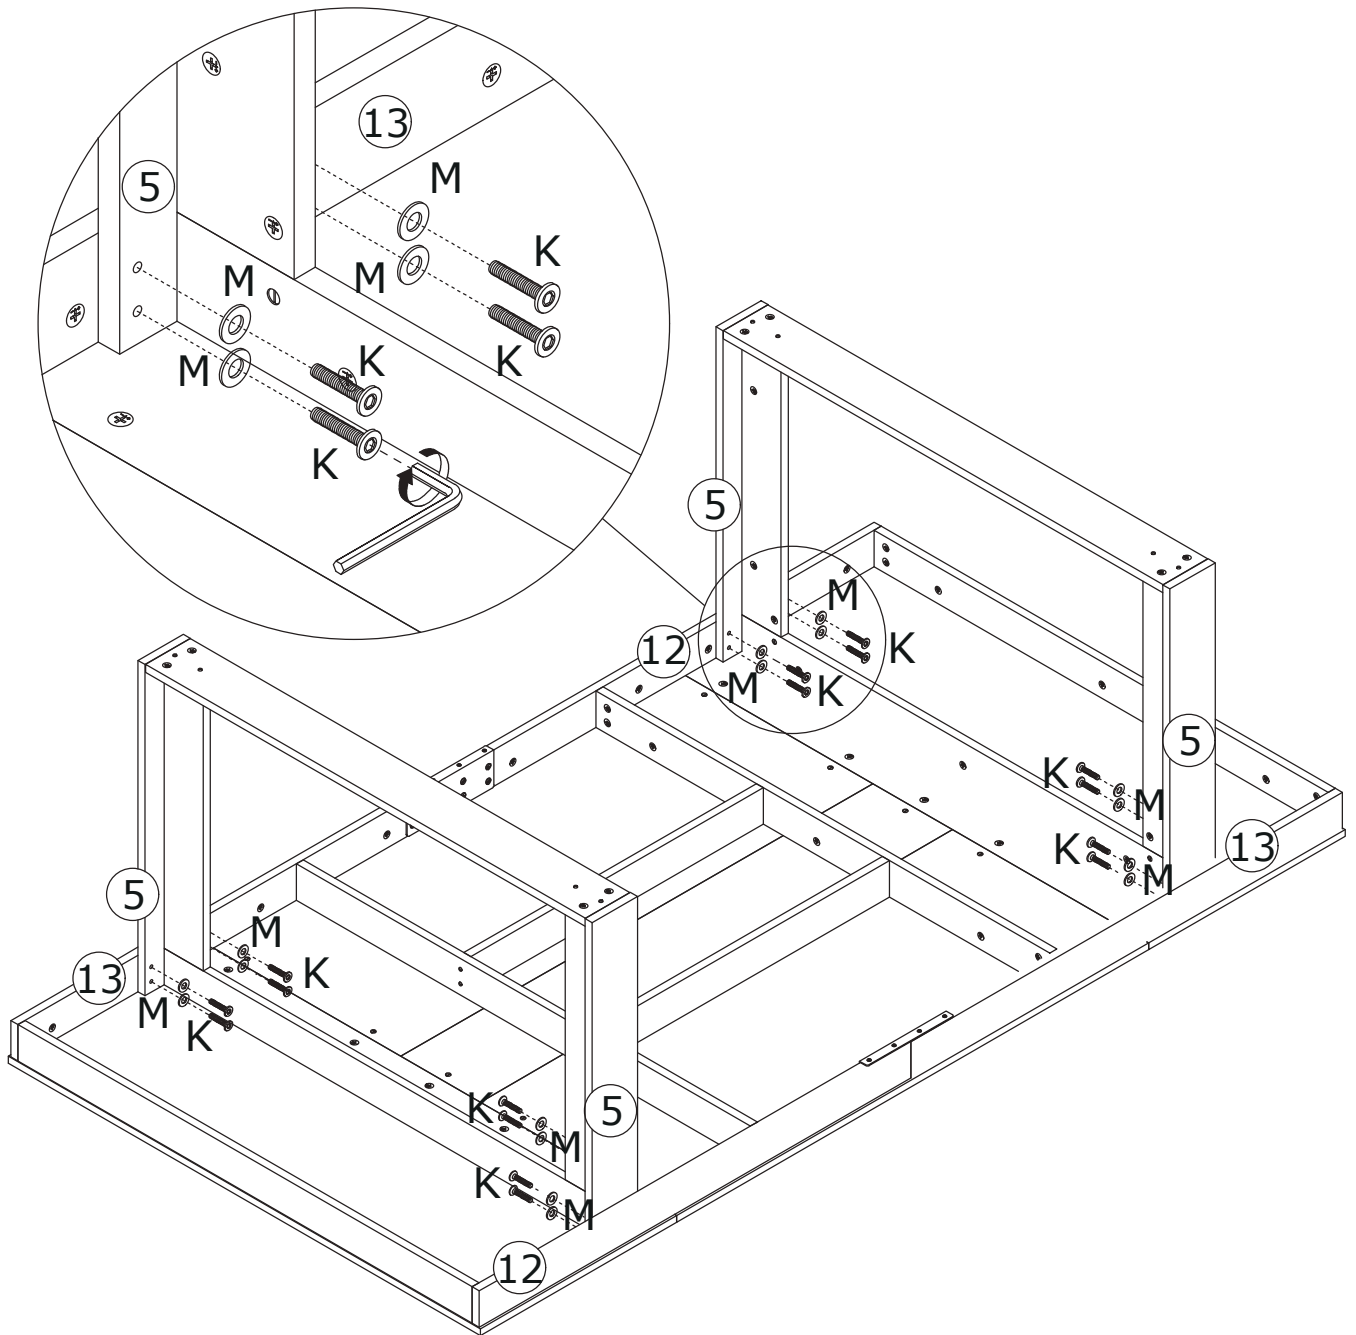

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.