 


Electric Height Adjustable Desk

Assembly Instruction

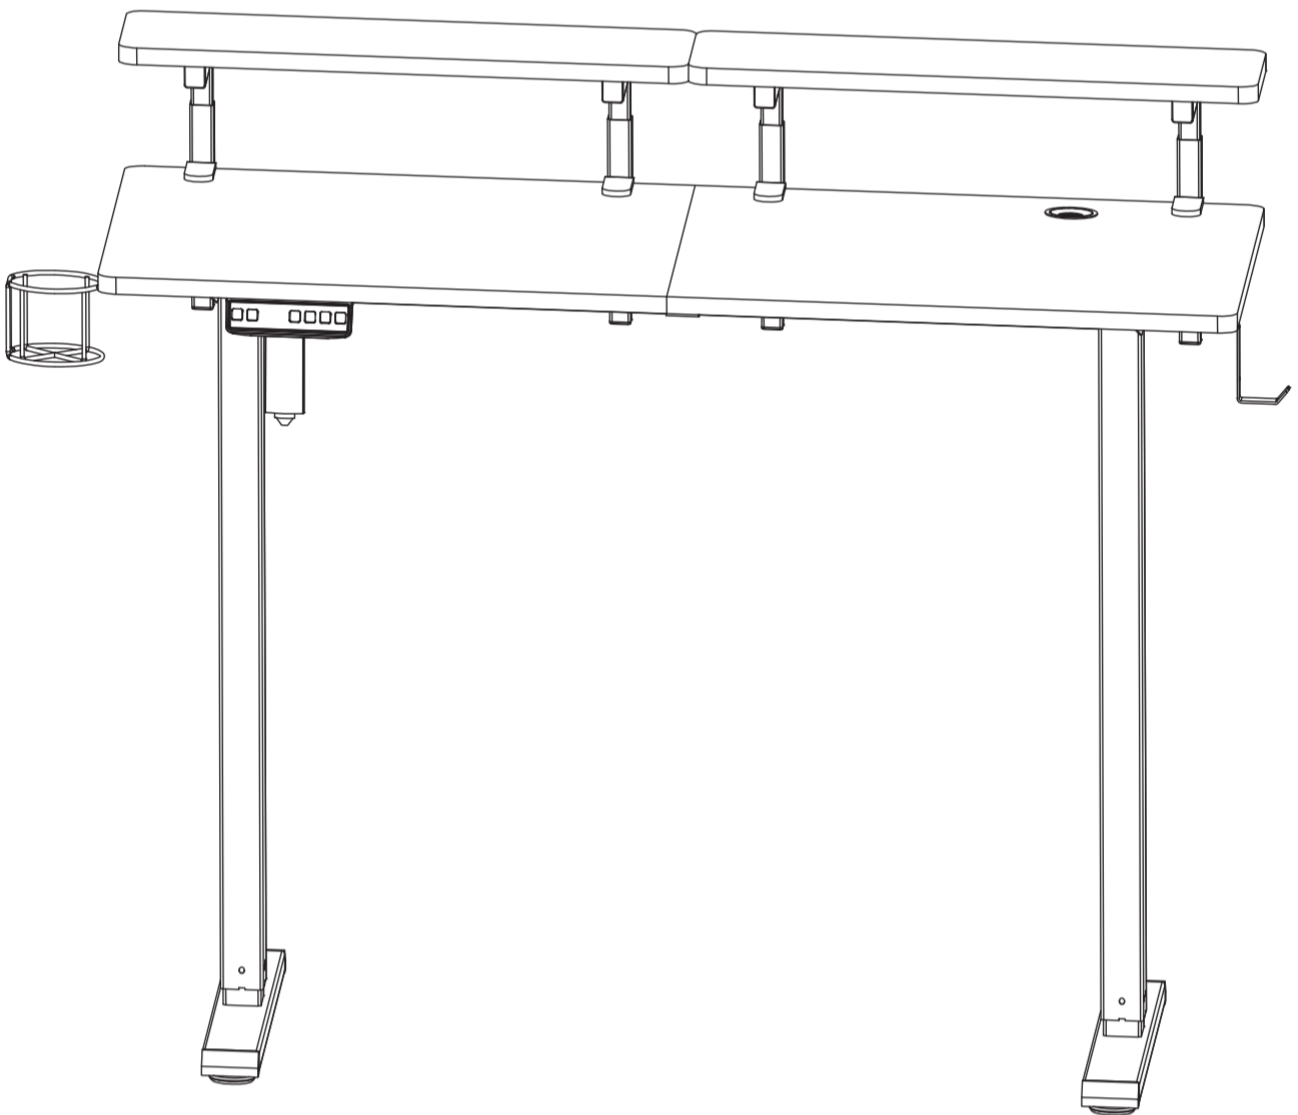

INTRODUCTION

Thank you for purchasing our products. Please read the instructions carefully before installation and keep it in a safe place for future reference. If you need any assistance or support, please feel free to contact our customer support team.












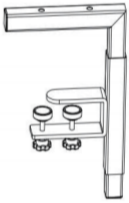
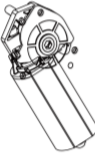
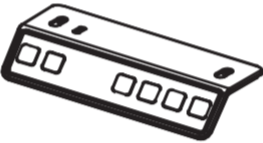
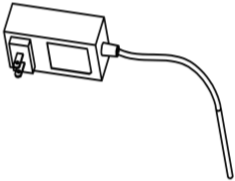
PRECAUTIONS






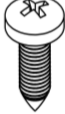


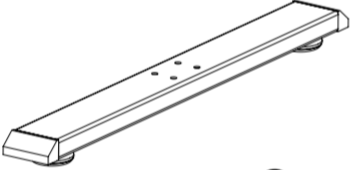

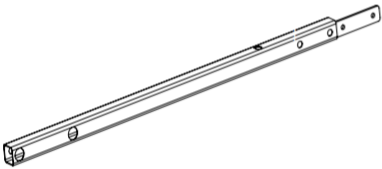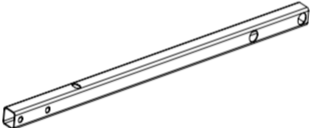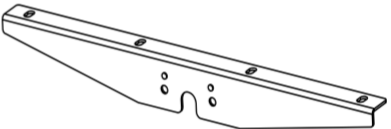

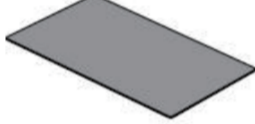
1. There are many components and accessories in the package. Each component and accessory are labeled with a letter or a number, check carefully before using any of them. Keep them away from children to prevent accidents.
2. Please install the product on a clean and soft underlay (such as carpet or cardboard) to avoid scratching or damaging the surface of the product.
3. The main components of the product are relatively heavy. Please pay attention to safety during installation.
4. The product is not stable during installation. Please do not move it randomly before it is completely installed.
5. If you have any questions during installation, please contact the customer service in time.

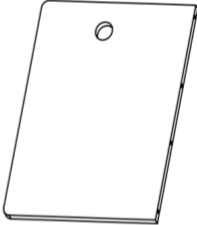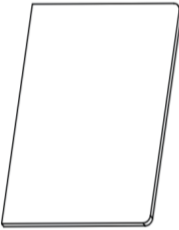*** PLEASE BE SURE TO FOLLOW THE INSTALLATION STEPS IN THE MANUAL TO AVOID UNNECESSARY LOSSES CAUSED BY IMPROPER INSTALLATION.**

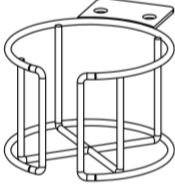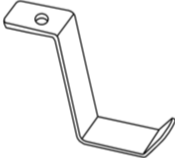 
*** IF YOU NEED FURTHER ASSISTANCE, PLEASE CONTACT THE CUSTOMER SERVICE ONLINE.**

PARTS LIST

 1 × 2	 2 × 1	 3 × 1
 4 × 2	 5 × 2	 6 × 2
 7 × 1	 8 × 1	 9 × 1
 10 × 1	 11 × 2	 12 × 4
 13 × 1	 14 × 1	 15 × 1

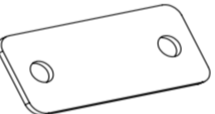 A×1	 B×1	M4*40  C×2
M6*35  D×8	M6*13  E×27	ST4*16  F×2
M6*30  G×8	M6*25  H×8	 I×4
 J×4	 K×2	 L×1
 M×1		

STEP 1

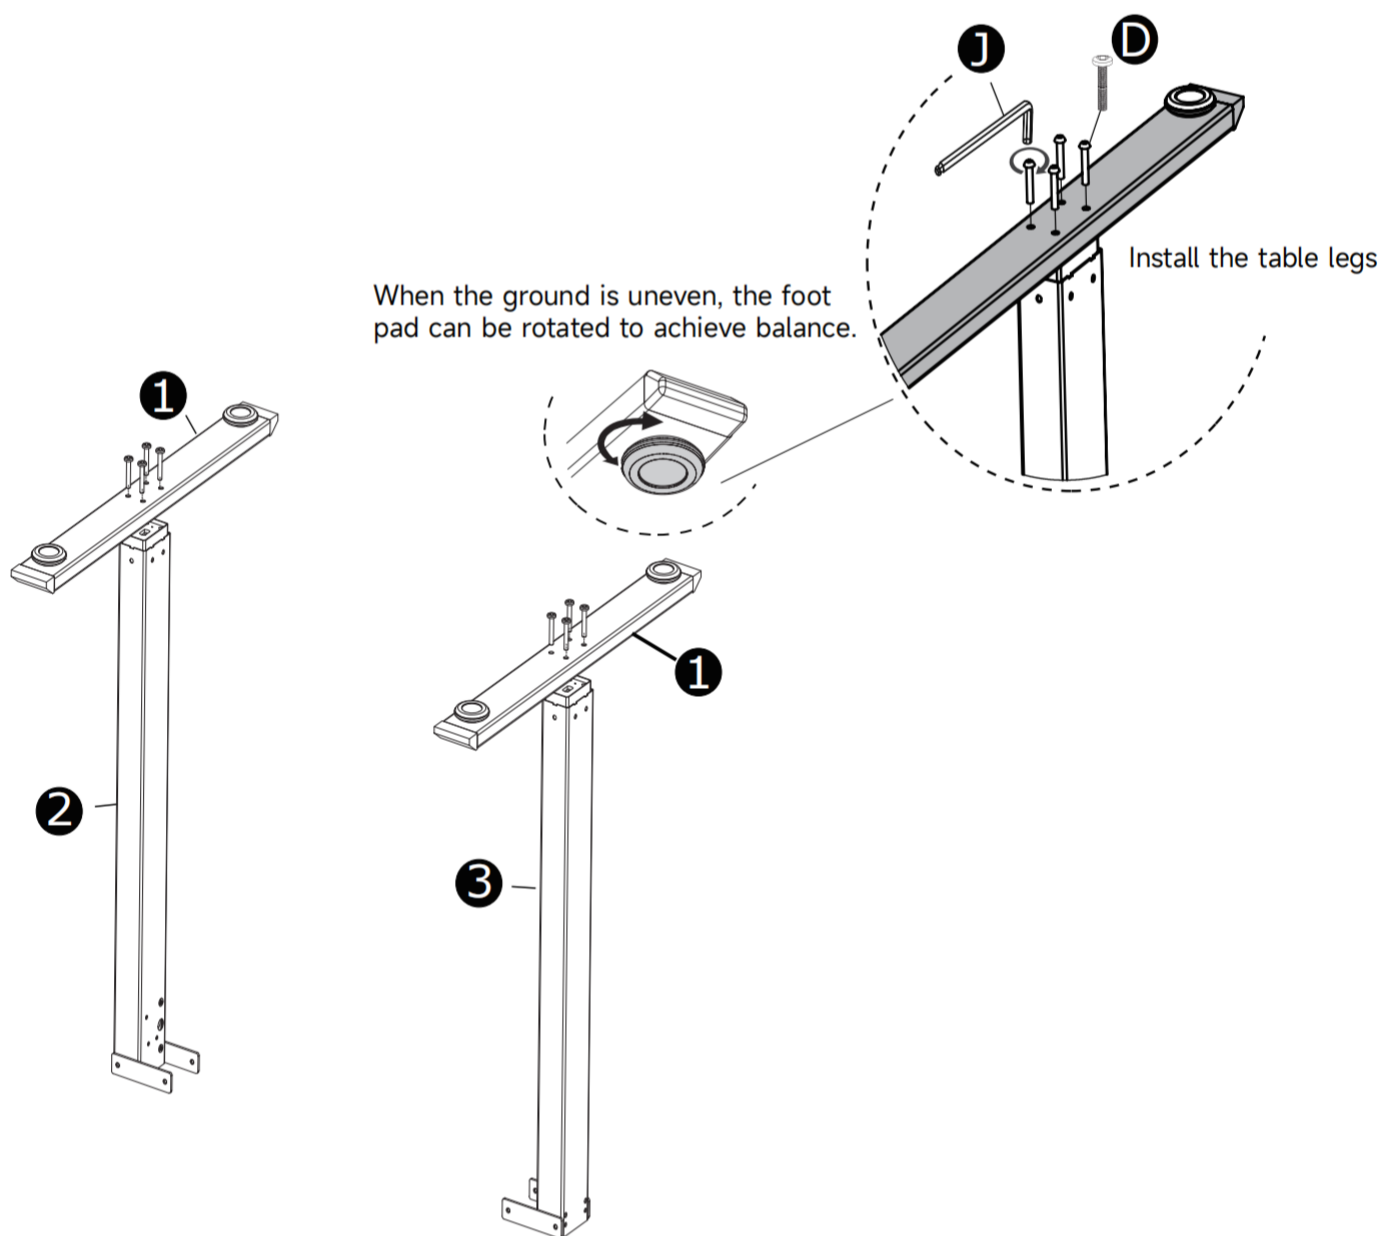


1 x 2
2 x 1
3 x 1




D
M6*35 x8

STEP 2

 
Insert the hex rod into the slot hole of the motor in the direction of the arrow.

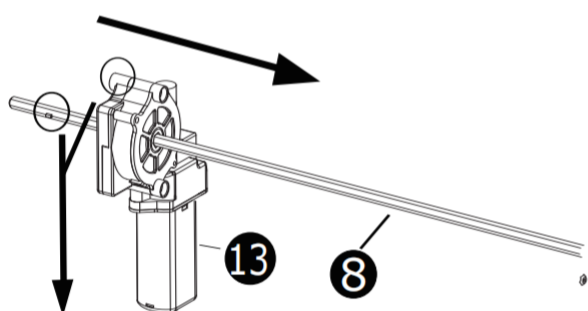

   The protruding places in the circle should be on the same side

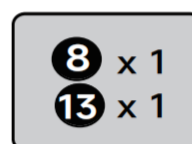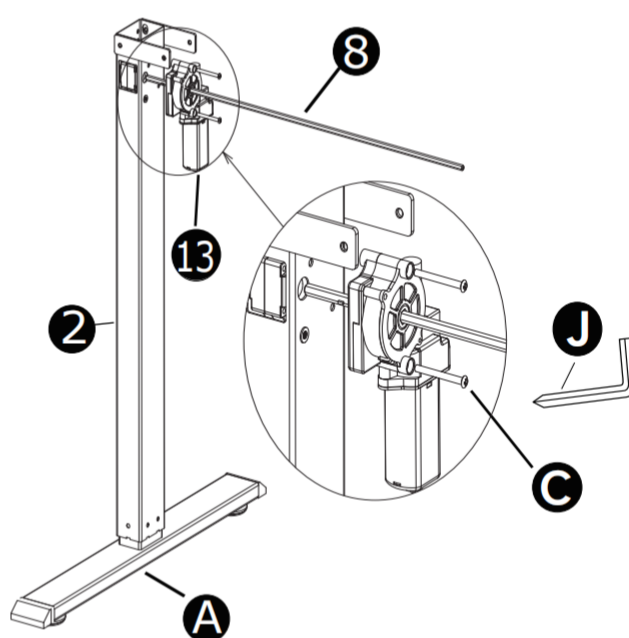

 
STEP 3

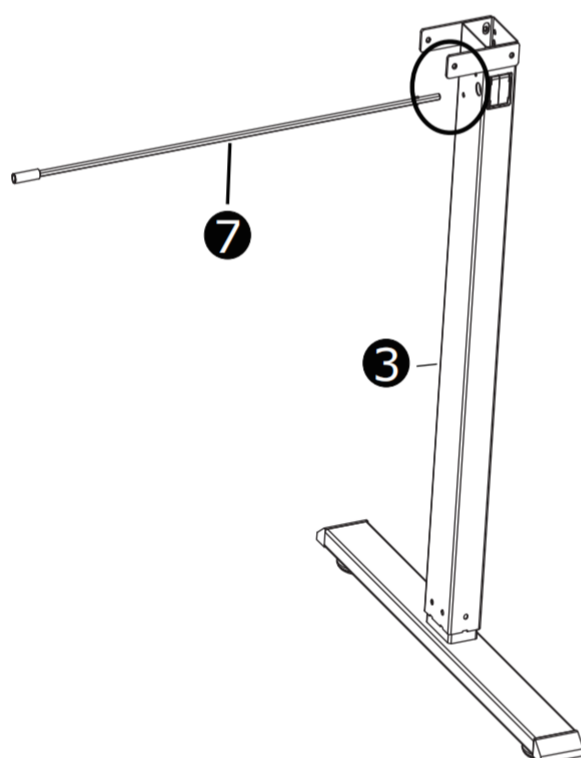


Insert it into the gearbox on the one side

7 x 1

 
STEP 4

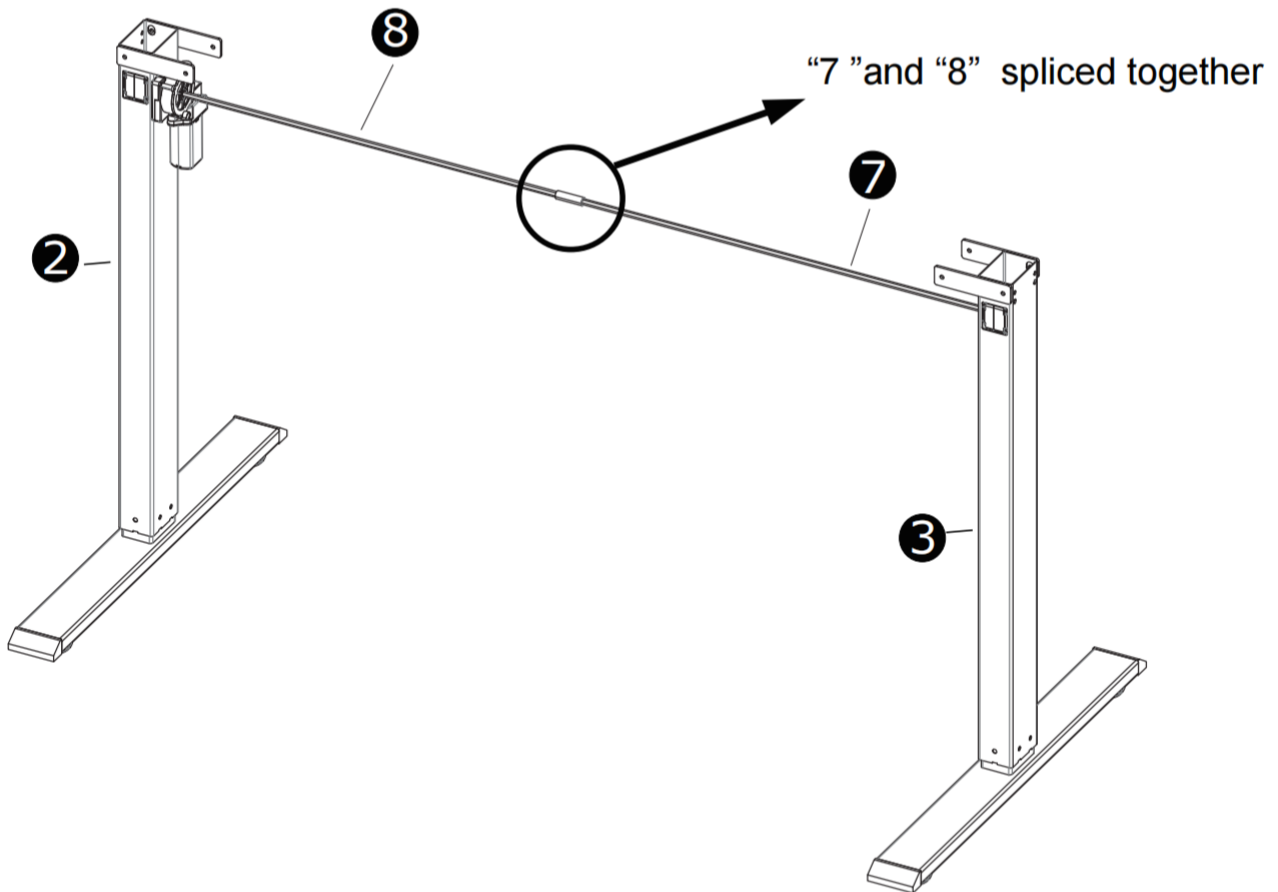

 STEP 5

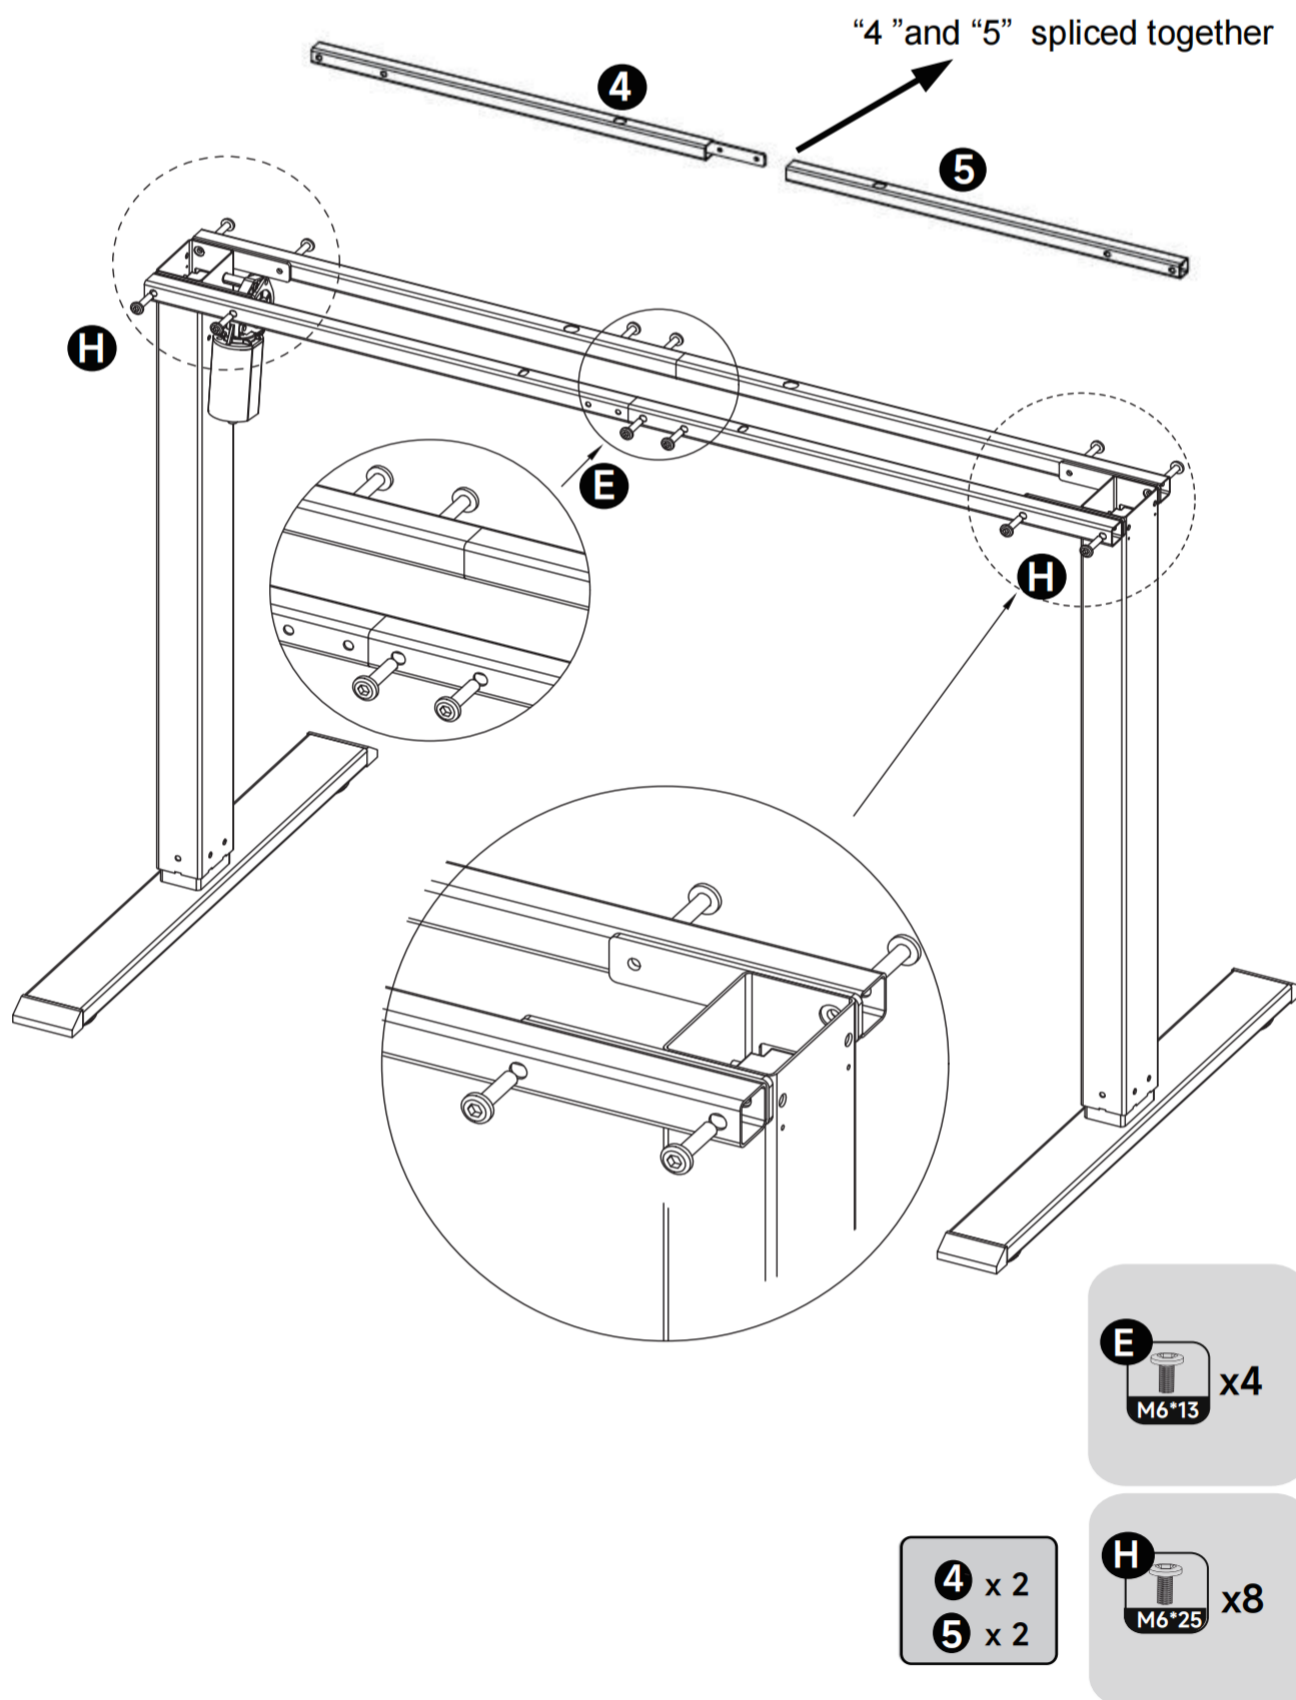


 
STEP 6

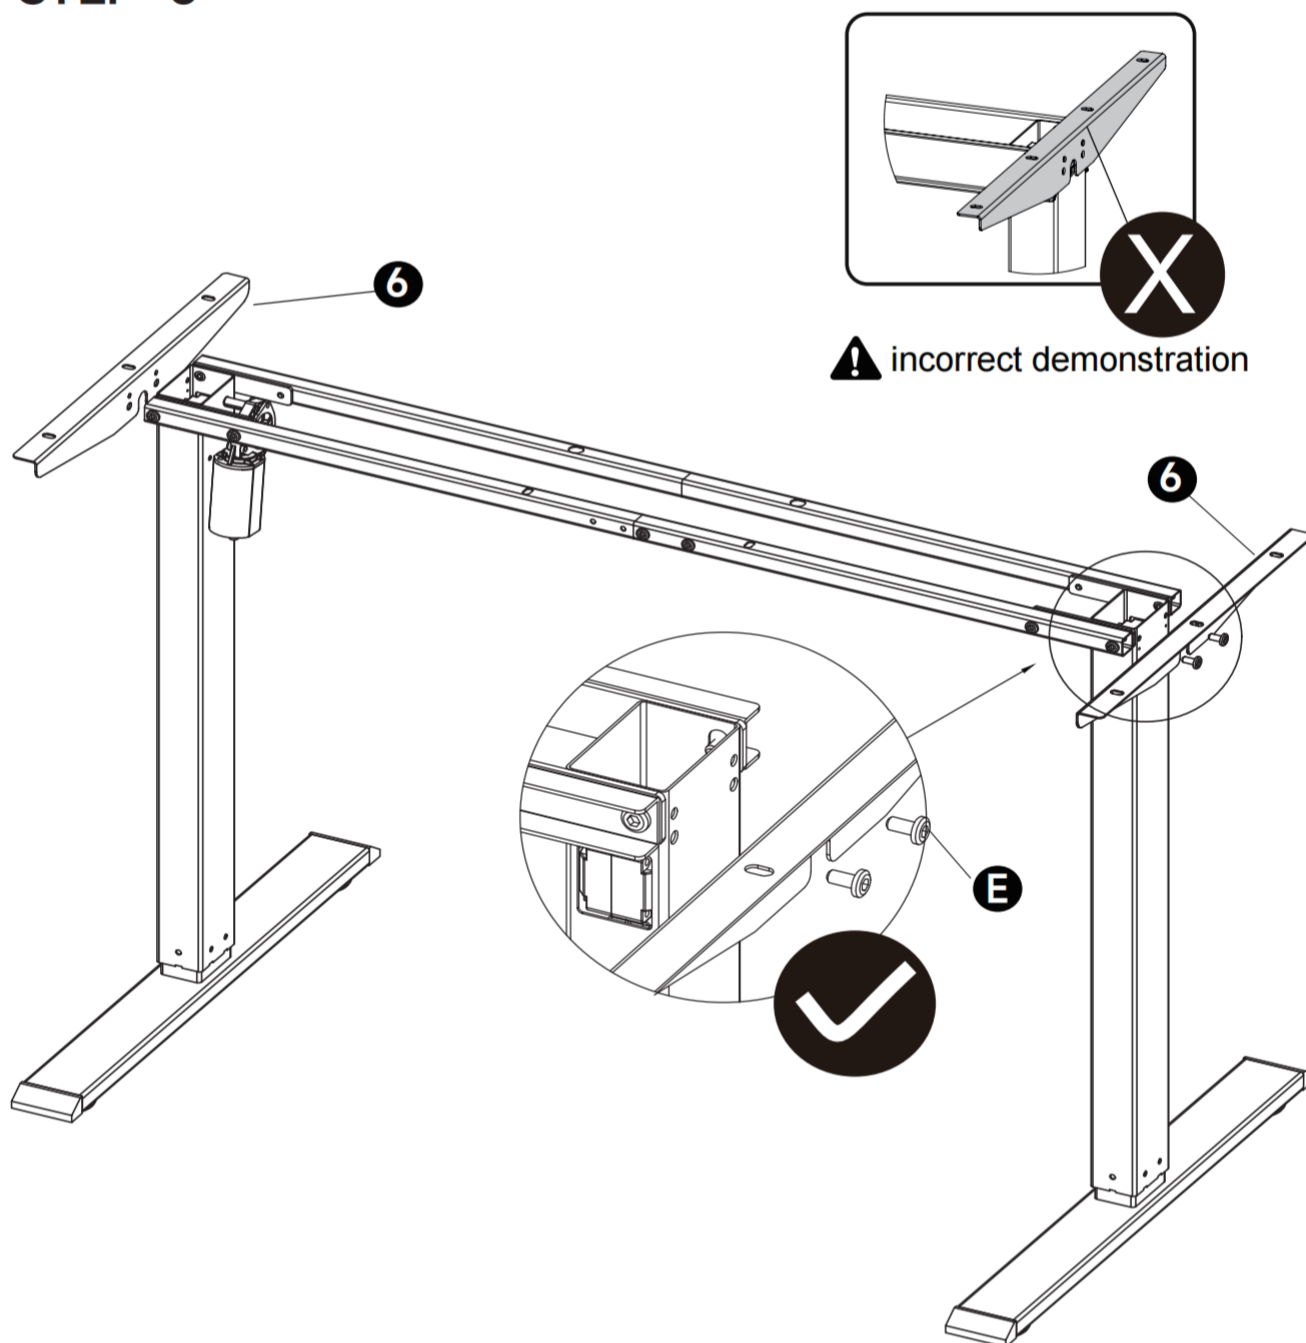



6 x 2

E
M6*13 x4



 
 
STEP 7

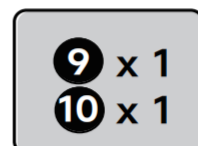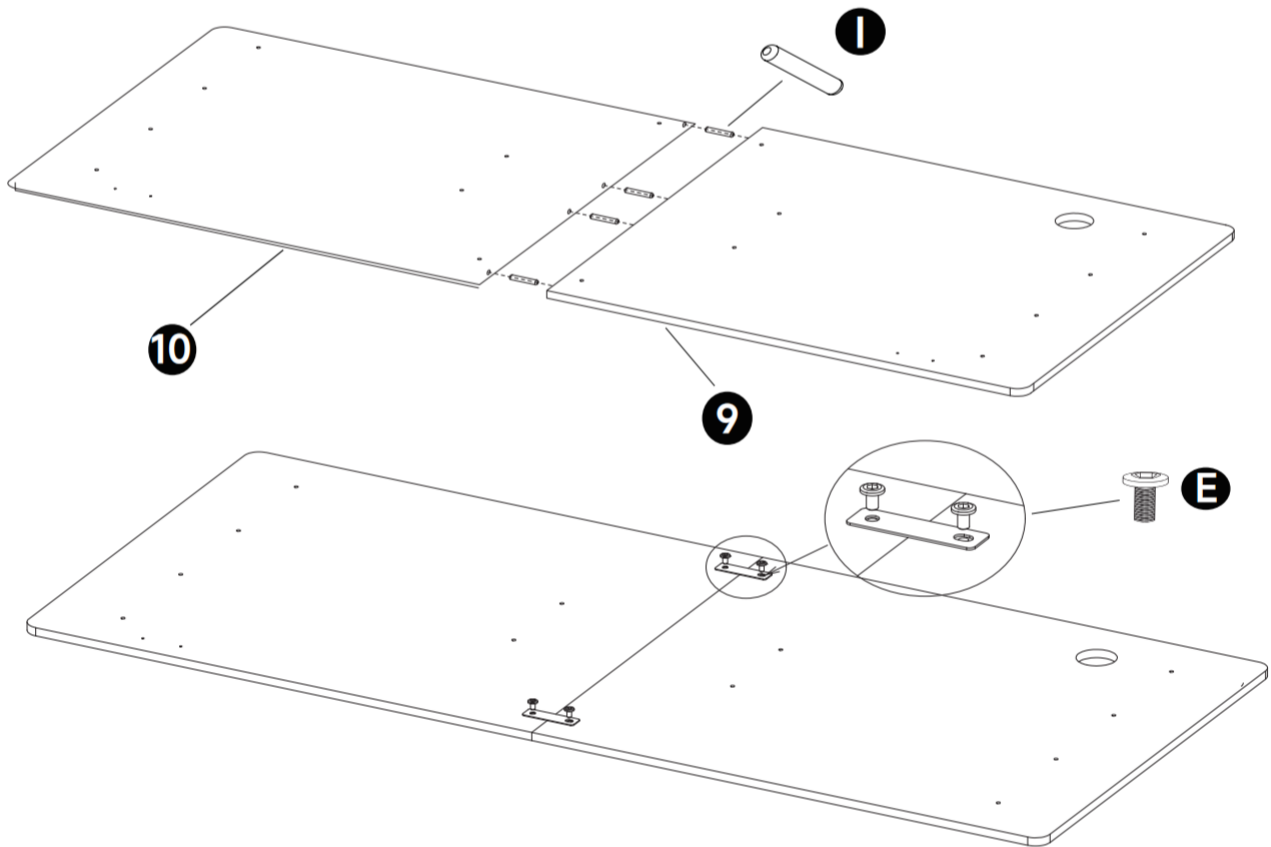

  STEP 8


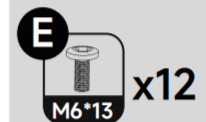
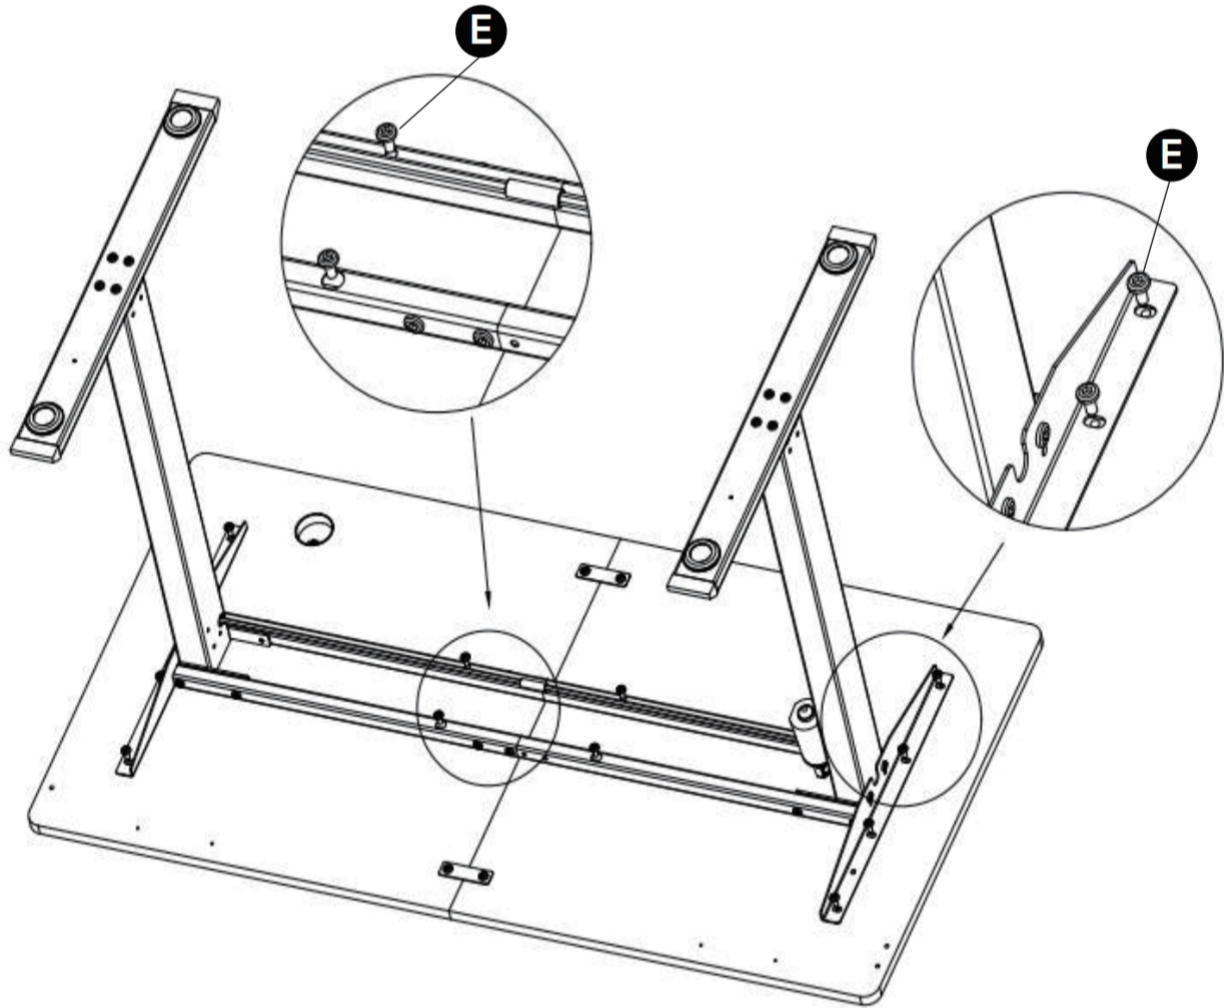


    STEP 9

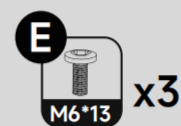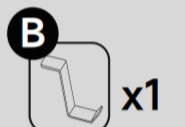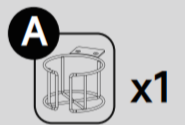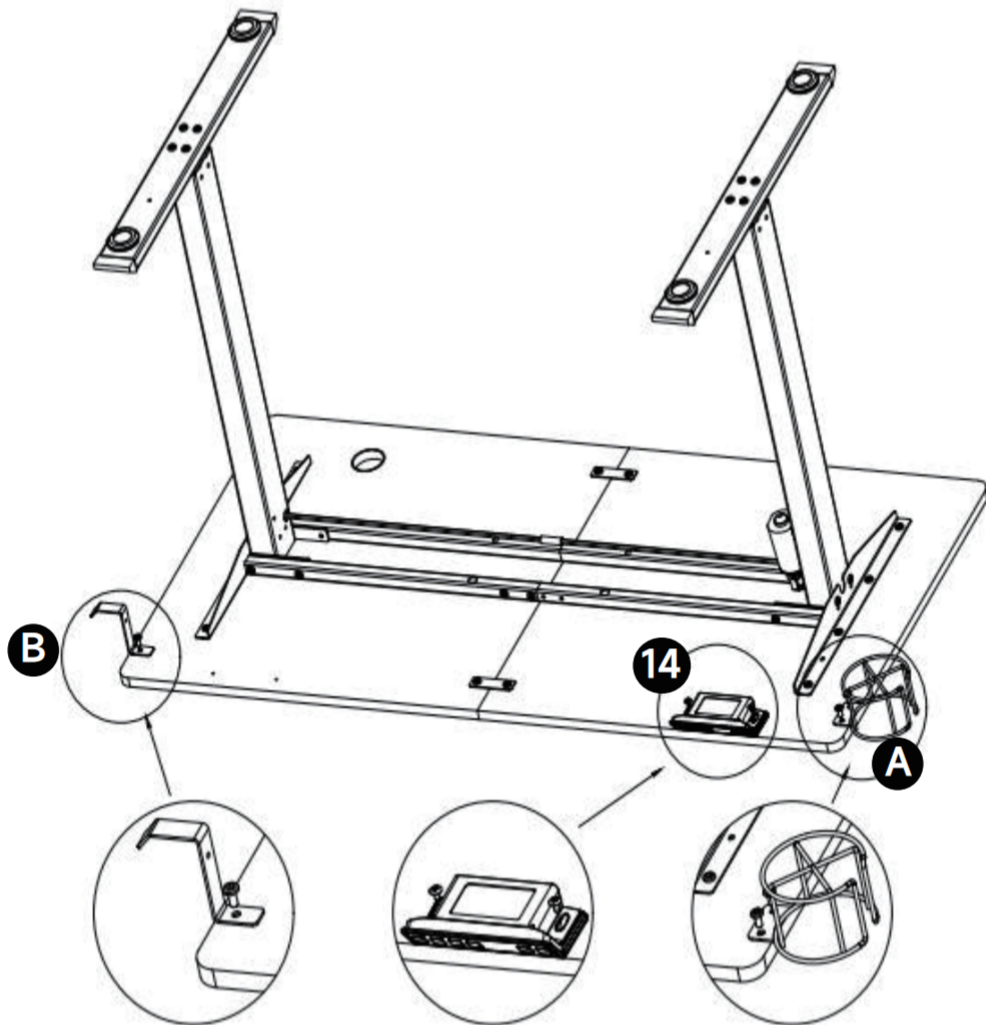


STEP 10

   
X2

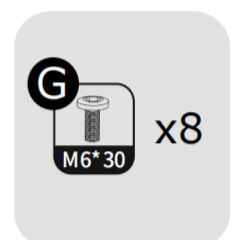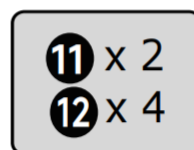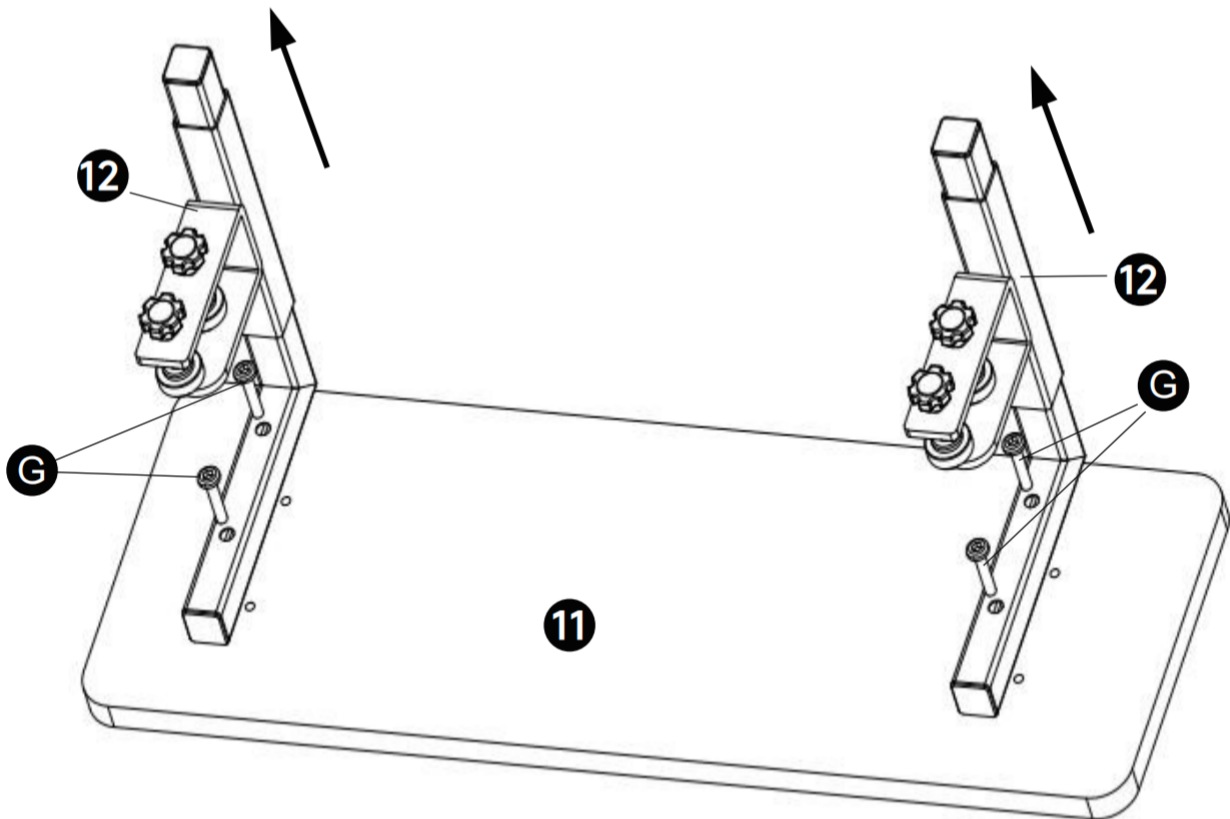

 STEP 11

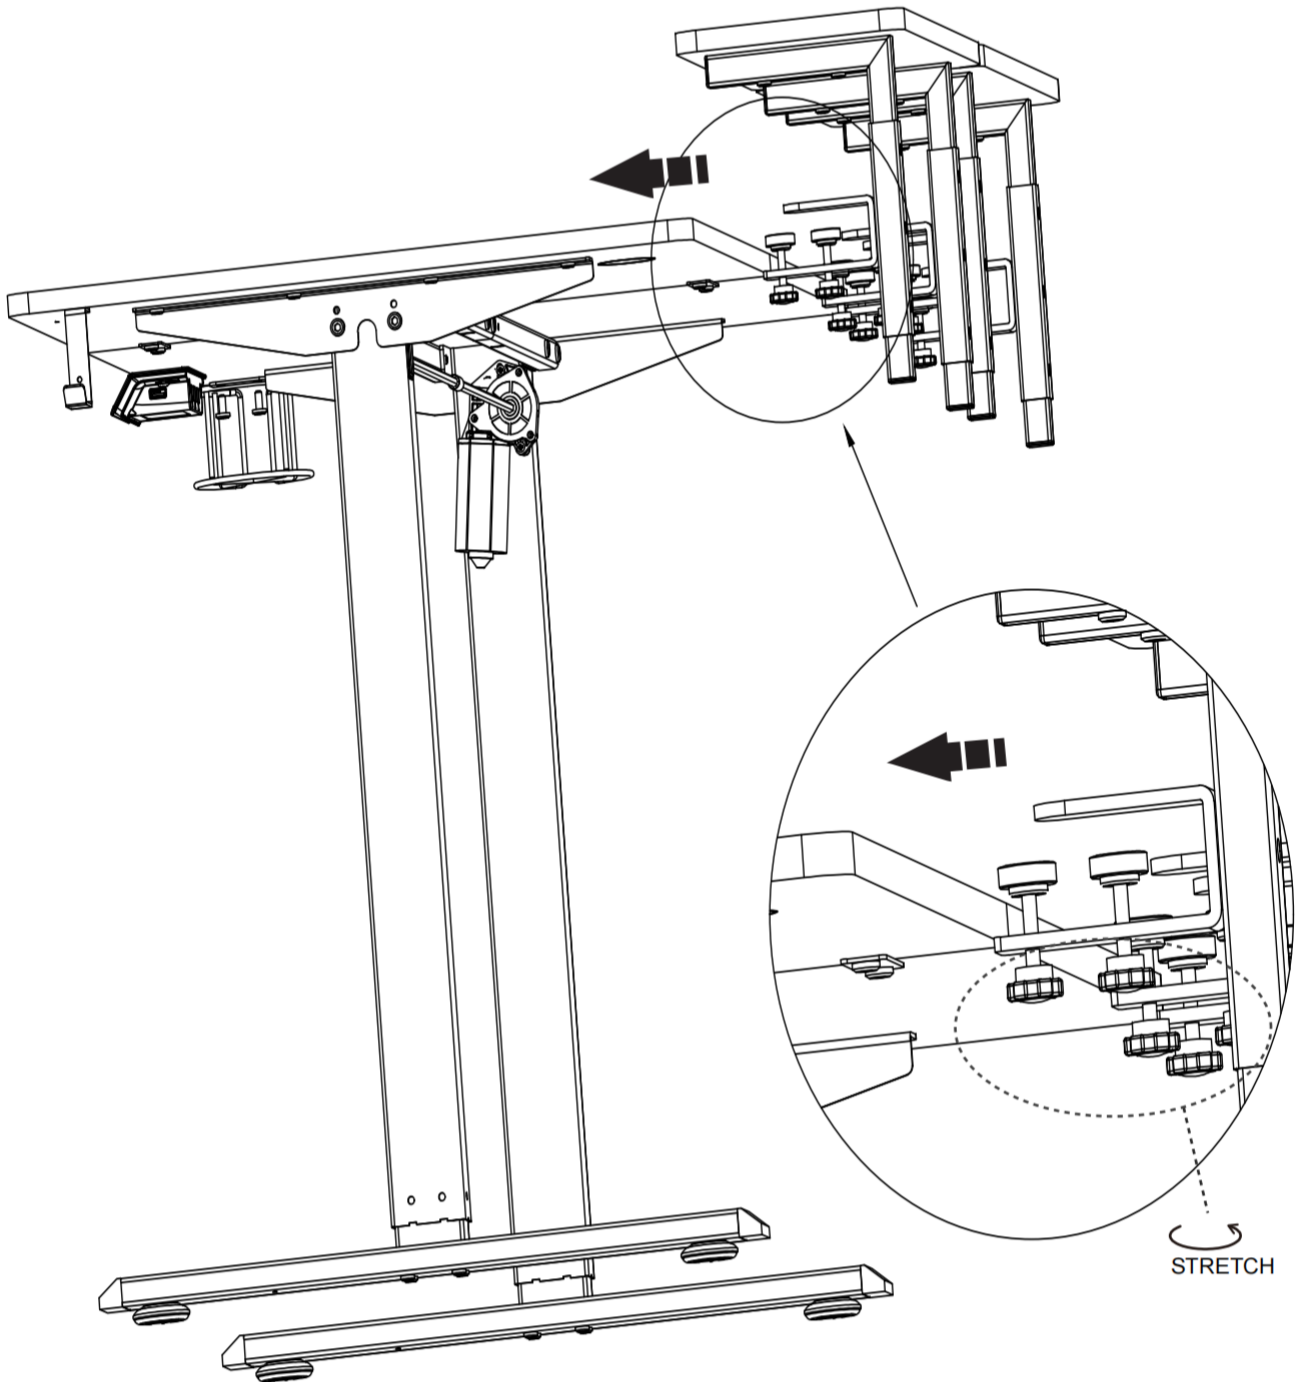

  
STEP 12

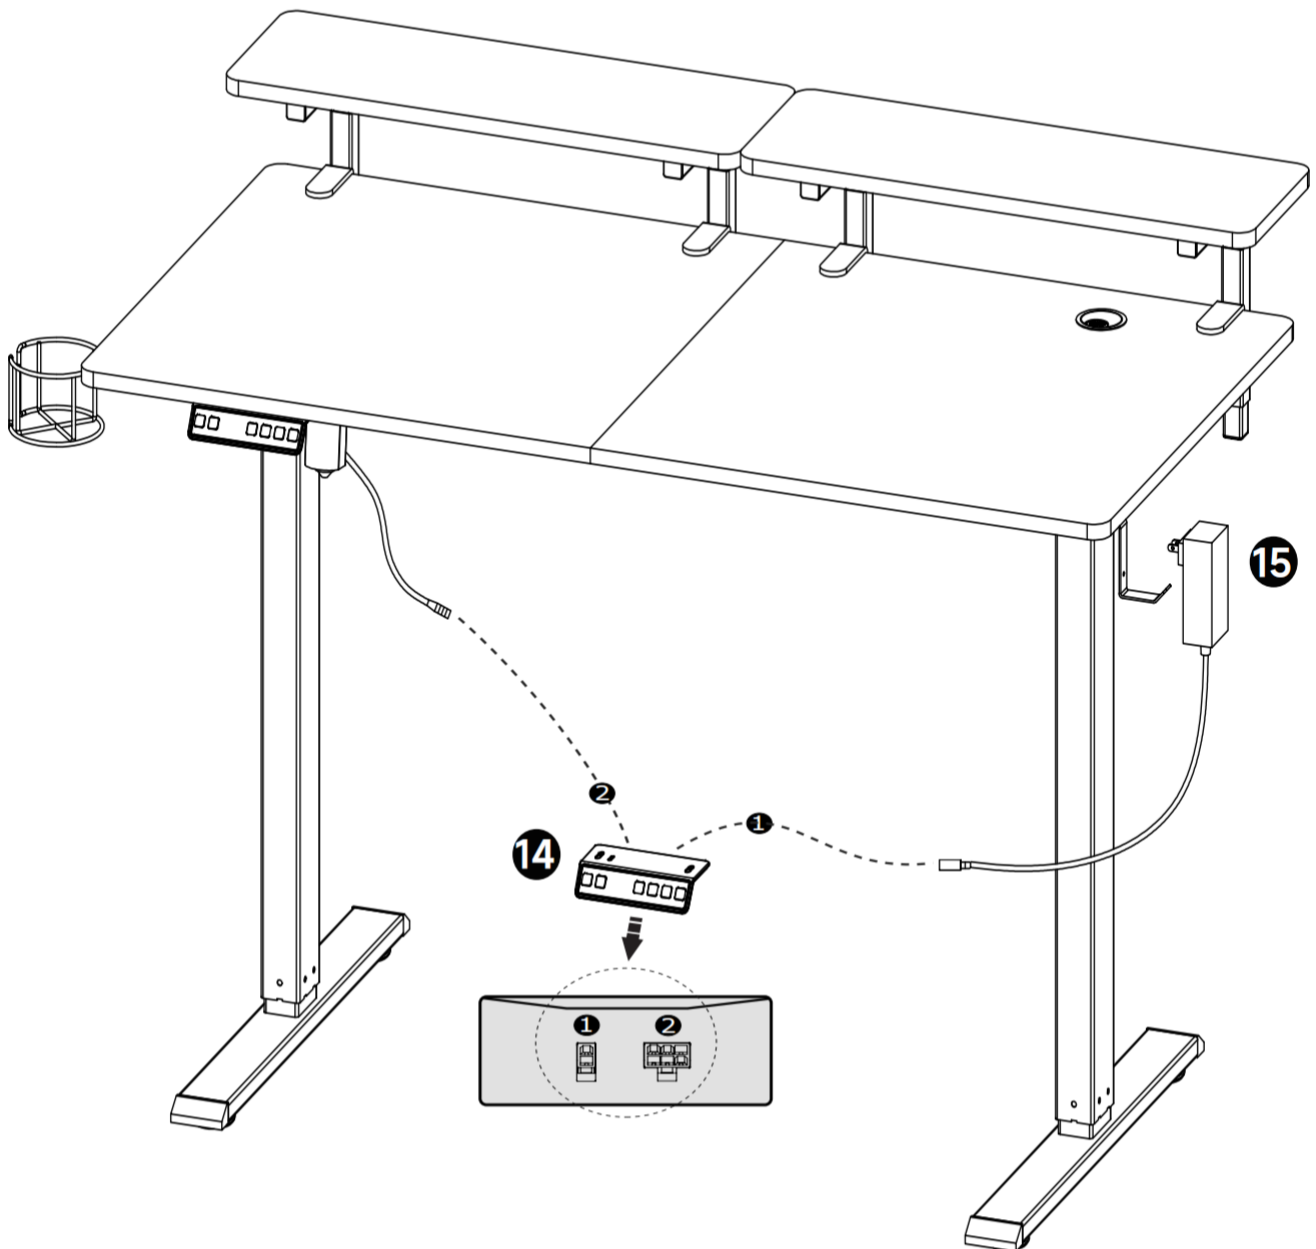




 
 


15 x 1

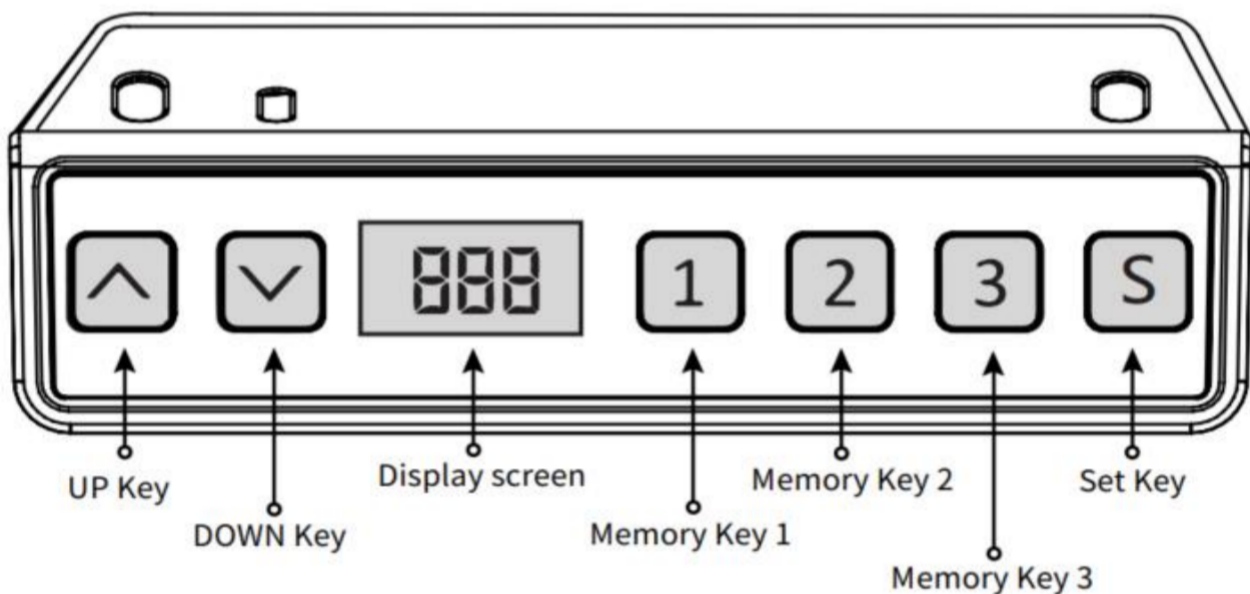
 
OPERATING INSTRUCTIONS

Note: Before using the height-adjustable desk, it's recommended to perform a reset to ensure that both lift columns are at the same height, as they may have slight variations from the factory (see OPERATING INSTRUCTIONS–Reset).





-  UP Key ---- Press and hold the " ^ " button to raise the desk.
 -  DOWN Key ---- Press and hold the " v " button to lower the desk.
 -  Display screen ---- Press any button to wake up the LED display.
 -  Memory Key 1 ----
 -  Memory Key 2 ----
 -  Memory Key 3 ----
- } The desk can store 3 memory heights (memory 1, 2, and 3).
-  Set Key

Reset

Long press the " " key, after running the desktop to the lowest point, keep holding the " " key until the screen flashes " --- " and the buzzer makes a "beep" sound, the screen displays the lowest height value, and the reset operation is successful.




Lift function operation

When the " " key is pressed, the desktop runs upwards until it reaches the highest point of the desktop.

When the " " key is pressed, the desktop runs down until it reaches the lowest point of the desktop.

 
 
 
Memory Position Storage/Memory Location Run

1.Location storage




Press and hold the memory button " ", the buzzer will make a "beep" sound, and the screen will flash "S-1" at the same time, and the current altitude value will be displayed, and the memory storage will be saved successfully. A total of 3 heights can be recorded at the same time (press and hold the memory button " ", the screen flashes "S-2", press and hold the memory " " key , the screen flashes "S-3").




Note: If you set the memory location on the same number key again and save it successfully, the record storage that was previously set by the key will be overwritten.

 2.Memory position operation




Short press the " / / " button, the display flashes the memory position height 2 seconds, the desktop automatically runs to the height of the memory position, and any key can stop running during operation.

3.Lock and unlock

Lock: Press and hold " " + " " + " " at the same time for 5 seconds, when the display shows " L ", it means that the system has been locked and cannot lift the system.

Unlock: Press and hold " " + " " + " " at the same time for 5 seconds, when the digital tube is displayed from "L" to the normal digital display, it means that the system has been unlocked.

Restore factory settings

Method: Press and hold the " + " + " buttons at the same time for 5 seconds, and the screen displays "clr", which means that the parameter is successfully restored.

Error description

Error codes	Description	Resolution
E01	The motor is not connected	Press the up or down button again, if it still persists, please check the column motor connection cable
E02	Motor overcurrent	Press the up or down button again, it still persists, please replace the motor or reduce the load
E03	Motor Hall failure	Press the up or down button again, it still persists, please check the connection or replace the motor
E04	The mains power supply is abnormal	If the cable cannot be eliminated after power failure and reconnection, replace the power supply
E05	The motor current is abnormal	Reconnect the cable after power failure, if it still can't be removed, you need to return it to the factory
E06	The motor power device is bad	Reconnect the cable after power failure, if it still can't be removed, you need to return it to the factory
E09	Motor stalled	Press the up or down button again, it still persists, please replace the motor or reduce the load
Hof	Over-temperature protection	Wait for the temperature to drop, run for 2 minutes, and stop for 18 minutes
r5f	Illegal power outages	Reduce the load or check if the power cable is loose