

READ AND SAVE THESE INSTRUCTIONS

WARNING

ALL ELECTRICAL WORK MUST BE DONE IN ACCORDANCE WITH LOCAL AND/OR NATIONAL ELECTRICAL CODE AS APPLICABLE

TURN OFF POWER AT BREAKER BOX BEFORE INSTALLING, WIRING OR SERVICING THIS PRODUCT.

DO NOT OIL CHIME PLUNGERS.

Oil will cause them to stick during operation. If plungers fail to operate freely due to accumulation of dust, cooking grease, etc., clean with a non-flammable cleaning solvent which will evaporate, leaving a dry surface.

ONE YEAR LIMITED WARRANTY

TERM: One year from date of purchase of the original consumer.

COVERAGE: Products will be free from defects in materials or workmanship. There are no other warranties, express or implied, including, but not limited to, implied warranties of merchantability or fitness for a particular purpose. Not covered: Normal maintenance and service, products subject to misuse, neglect, accident, improper maintenance or service, or installation differing from the recommended installation instructions.

REMEDY: Products will repair or replace, at its option, without charge, any product which is found to be defective under normal use. This is the sole remedy under this warranty. Products will not be liable for secondary, consequential or special damages arising out of or in connection with product use or performance.


This warranty gives you specific legal rights, and you may have other rights, which vary by state. This warranty supersedes all prior warranties.

To qualify for warrant service, please contact evidence of original purchase date and nature of defect.

Products with the following information: model number,

INSTALLER: Leave This Manual With The Homeowner


INSTALLATION

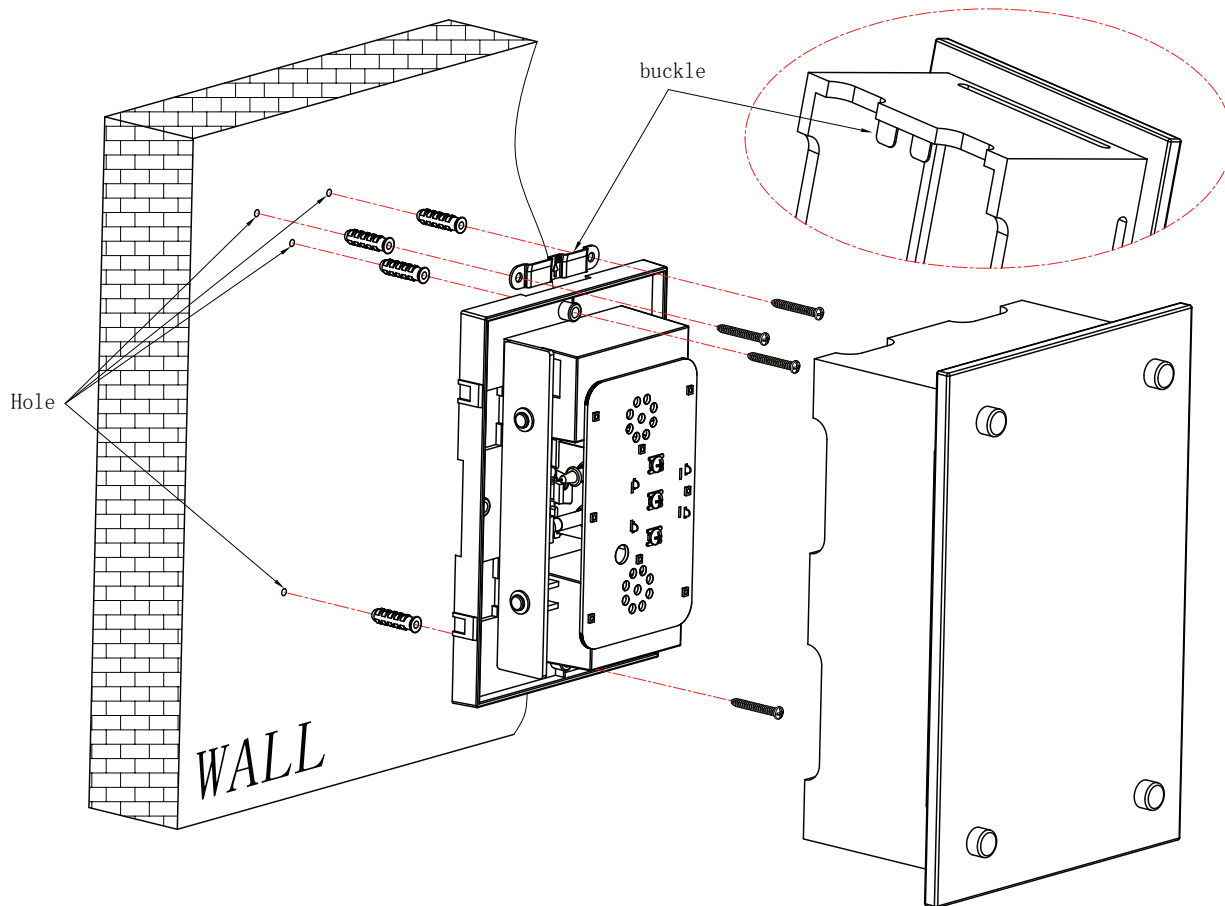

1. Bring wiring through access hole in chime mechanism.
2. Attach chime mechanism to wall with screws provided.
3. Connect wires to correct terminals as shown in wiring diagrams.
4. Turn on power. Make sure buttons operate door chime properly.
(Two notes for front door, one note for second door.)
5. Must use hanging bracket included with chime cover to mount this cover.
Do not hang cover onto chime mechanism base due to its weight.
6. Mount the transformer to a rafter or junction box.
7. To adjust light output, use the dimmer on the chime board.


Door Chime Wiring

One Door Chime

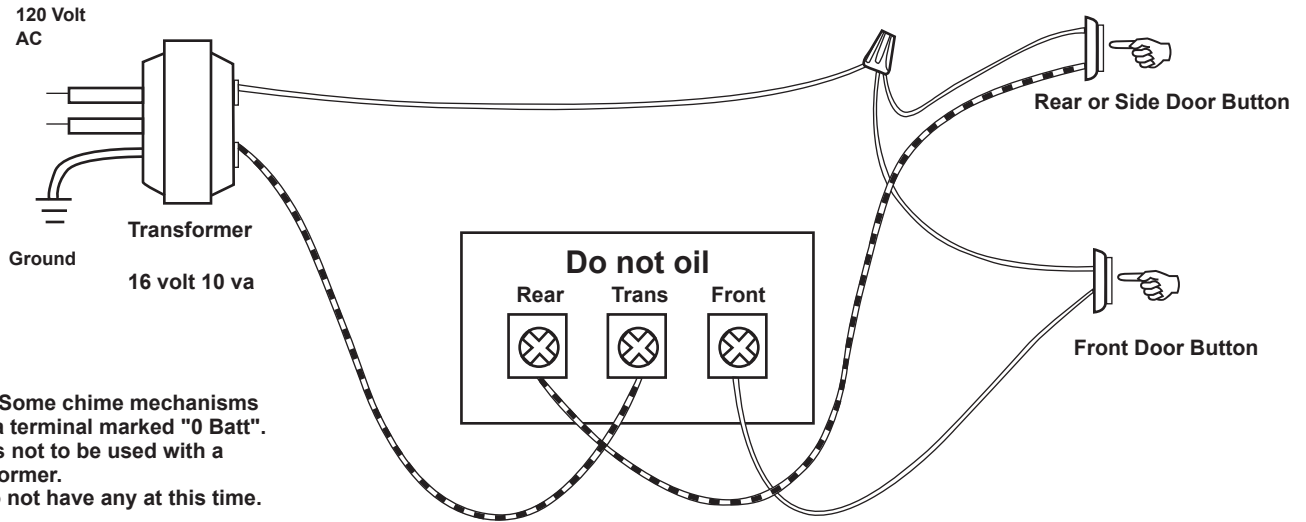


Note: Some chime mechanisms have a terminal marked "0 Batt". This is not to be used with a transformer. We do not have any at this time.

Two Door Chimes

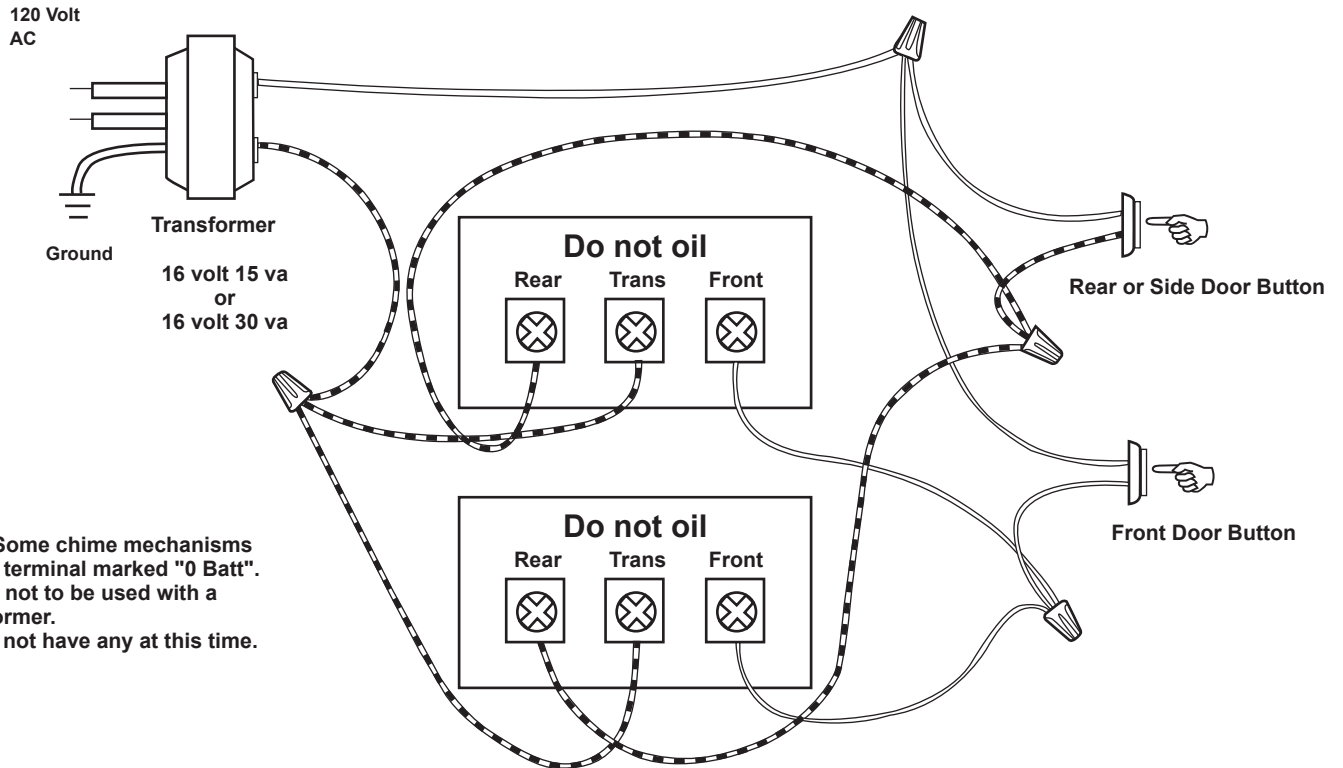

Note: Some chime mechanisms have a terminal marked "0 Batt". This is not to be used with a transformer. We do not have any at this time.

Three Door Chimes

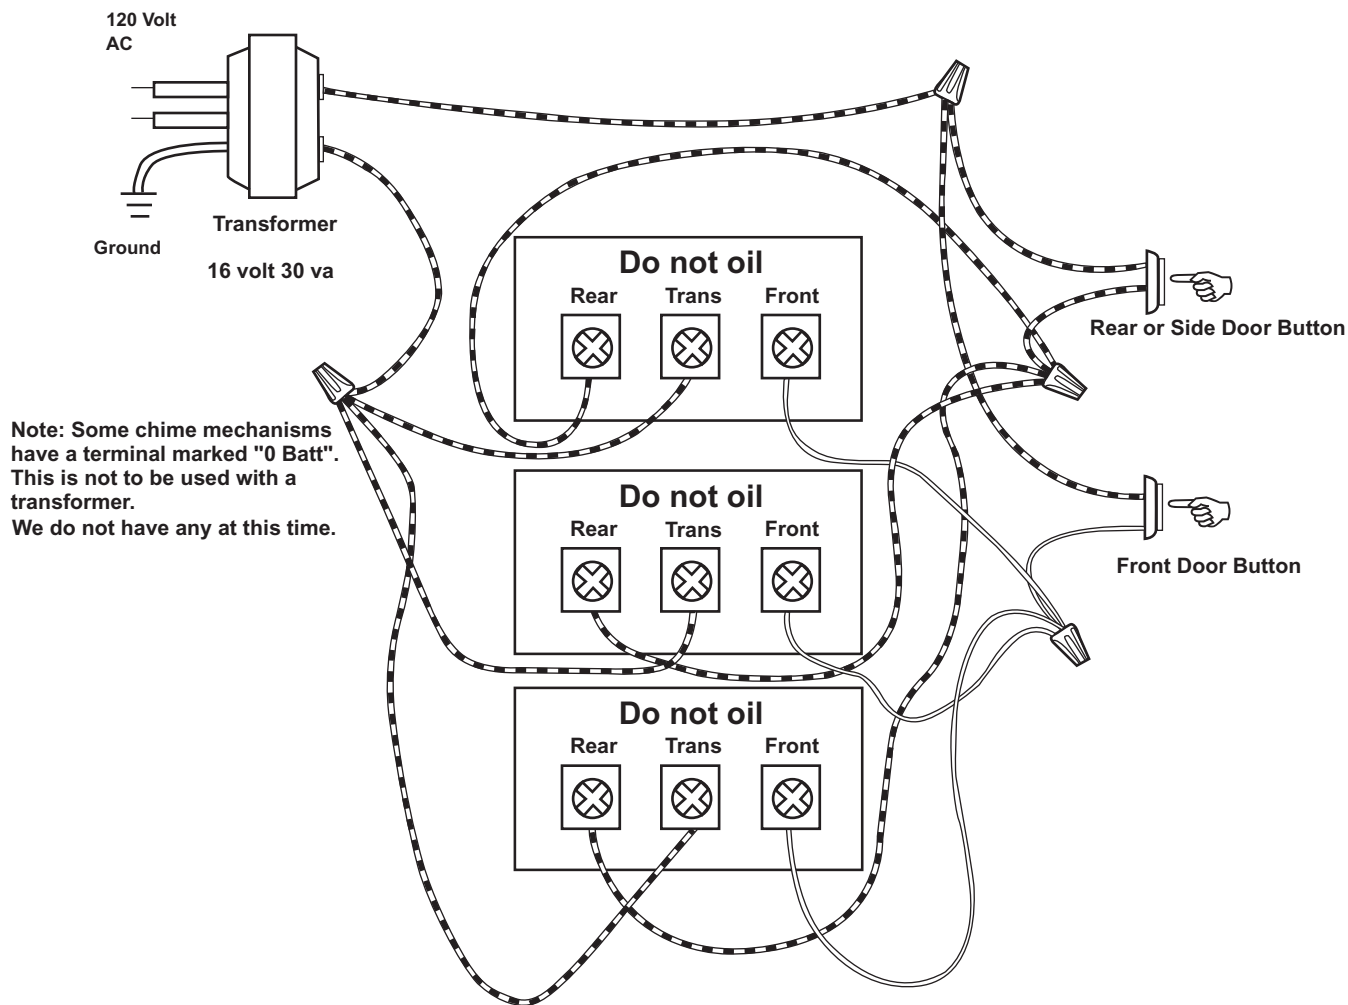

ONE YEAR LIMITED WARRANTY

TERM: One year from date of purchase of the original consumer.

COVERAGE: Products will be free from defects in materials or workmanship. There are no other warranties, express or implied, including, but not limited to, implied warranties of merchantability or fitness for a particular purpose. Not covered: Normal maintenance and service, products subject to misuse, neglect, accident, improper maintenance or service, or installation differing from the recommended installation instructions.

REMEDY: Products will repair or replace, at its option, without charge, any product or part, which is found to be defective under normal use. This is the sole remedy under this warranty. Products will not be liable for secondary, consequential or special damages arising out of or in connection with product use or performance.

This warranty gives you specific legal rights, and you may have other rights, which vary by state. This warranty supersedes all prior warranties.

To qualify for warranty service, please contact

Products with the following information: model number, evidence of original purchase date and nature of defect.