

# ASSEMBLY INSTRUCTIONS

## OUTDOOR LIGHTING

PLEASE READ AND SAVE THESE INSTRUCTIONS:

**Be careful when unpacking the lamp since the wires are connected. If the wires are pulled out of their connectors, the lamp will not turn on.**

1. Carefully organize and place all parts on a smooth, flat surface. Line up all of the parts according to the assembly diagram.
2. Screw the lower pole (B) onto base (A), turn to tighten.
3. Screw the middle pole (C) and upper pole (D) accordingly, turn to tighten.
4. Screw the top part (E) onto pole (D), turn to tighten.
5. Place the shade (F) onto top part (E); use the screws (G) to lock it.

- **Important Note: Screws located in Part E screw holes**

6. Install bulb, Use only with one Max 60W bulb (Bulb not included)
7. Screw the bulb-shield (H) onto the shade spider on shade (F).

**Caution:** Refer to the wattage caution label located near the lamp holder for recommended "maximum wattage, do not exceed recommended wattage."

**Warning:** Do not attempt to replace the bulb while the lamp is plugged into a wall receptacle

Bulb: E26, Type A, 60W X 1 (not included)  
or E26, CFL, 13W X 1 (not included)

