

ABOUT MOTION SENSING OUTDOOR WALL SCONCE


1. The sensor detects across a detection range of 180 degrees. Detection distance up to 40 feet.
2. It may cause to flicker with non-dimmable light bulbs since the sconce has different brightness, so please choose a incandescent bulb or dimmable led bulb.

FUNCTION AND OPERATION

1. **WARM-UP mode:** Turn on the power at the main fuse or circuit breaker box at the first, the light will turn on immediately(100% brightness). Wait for about 20 seconds to allow the sensor to warm up, then the light will automatically enter into the TEST mode.
2. **TEST Mode:** In test mode, when motion is detected, the light will turn to high-level brightness (100% brightness), and stay on as long as the motion is continuing. The light will revert to no brightness after 5 seconds when motion is no longer detected. The time of TEST mode is approximately 140 seconds, then the lantern will automatically enter into the LOW mode. You can also end the TEST mode by quickly turn the wall switch "off-on" (turn off and re-open) in 2s. The red LED indicator flash 3 times quickly to enter the LOW mode.
3. **LOW mode:** The lantern continue to be turned off during the day. At dusk, the light will not turn on. When motion is detected, the light will turn to high-level brightness (100% brightness), and stay on as long as the motion is continuing. The light will revert to no brightness after 120 seconds when motion is no longer detected. Until dawn, the light will turn off automatically. This mode is automatically set when you receive the lantern.
4. **HIGH mode:** At dusk, the light will turn on at low level brightness (40% brightness). When motion is detected, the light will turn to high-level brightness (100% brightness), and stay on as long as the motion is continuing. The light will revert to low-level brightness after 120 seconds when motion is no longer detected. Until dawn, the light will turn off automatically. You need to screw off the cap on motion sensor and turn on HIGH mode switch to transfer to this mode.
5. **DUSK TO DAWN mode:** Within 2 seconds, turn the wall switch "off on"(turn off and re-open), the LED indicator flash ten times, the light will turn into DUSK TO DAWN mode, keep 100% brightness for 6-8 hours, turn off automatically at dawn and revert to your original mode of LOW or HIGH mode.

ATTENTION

1. The product default is set to LOW mode when you receive the product.
2. To ensure the above functions work properly, keep the wall switch in the "ON" position at all times (including during the day).
3. When the wall switch is turned off and re-opened 10S later, the lantern will re-enter the warm-up and test mode.
4. HIGH mode must be used with incandescent bulbs or dimmable LED bulbs because it displays different brightness variations. LOW mode can be paired with any E26 base bulb (60 watt MAX)
5. The installation environment should not have other strong lighting effects. If you buy two or more fixtures at the same time, please make sure that the mounting distance between your two sensor wall lights is $\geq 5ft$ to ensure that the sensors can work properly.

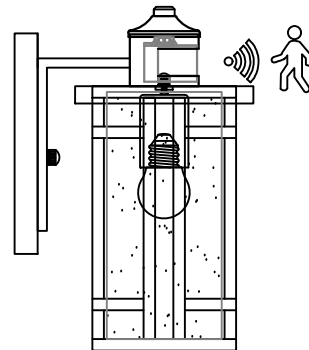

RELATED TO INSTALLATION


GENERAL

- * * * * *
- 1.To ensure the success of the installation, be sure to read these instructions carefully before beginning.
 - 2.Before installations, prepare the required tools, such as Blade screw driver, Adjustable wrench, Step ladder, Wire cutter.
 - 3,All electrical connections must be in accordance with the National Electrical Code. Qualified licensed electricians are required to conduct the installation of electrical wiring.
 - 4.The outlet box that is connected to the lighting must be directly supported by the building structure.
 - 5.Before starting the installation, disconnect the power to prevent electrical shock.
- NOTE:The important safeguards and installations appearing in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution, and care are factors which can not be built into any product. These factors must be applied by the person(s) caring for and operating the fixture.
- * * * * *

INSTRUCTIONS

- 1.Take out all lamp parts. The picture below shows the exact items that you receive in this product. Please note that this picture may look different from the computer generate part table. The parts in the part table are not assembled but some parts in this part picture are assembled, so there may be fewer items in the picture than in the table.
2. **Part Table**
Please note: The parts in this table are completely unassembled, for illustrative purpose. In the actual product that you receive, some parts are assembled and attached together.

CANOPY MOUNTING & WIRE CONNECTION ASSEMBLY STEPS

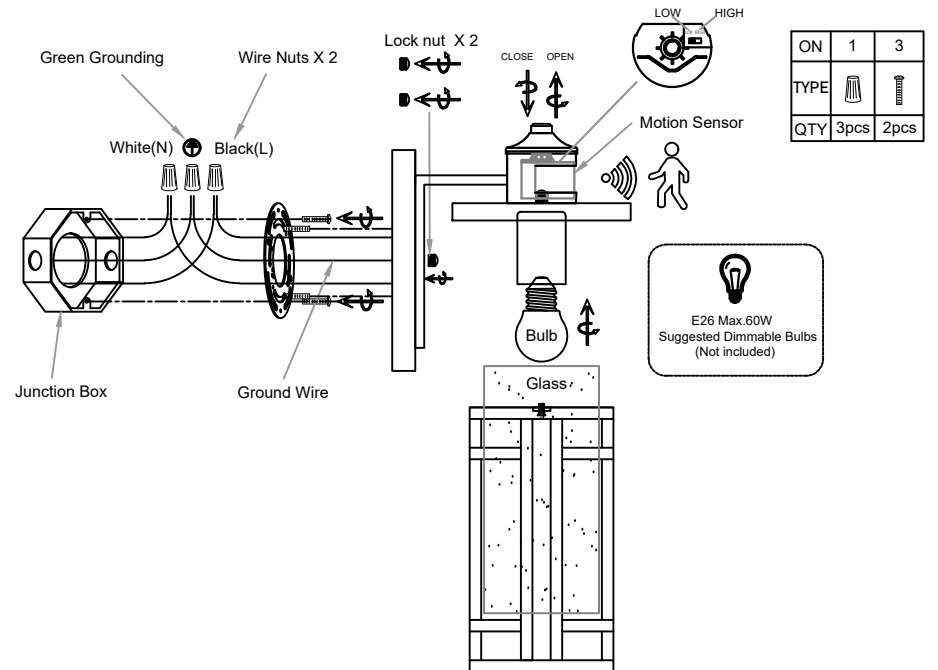

CAUTION

- 1.Rated 120V/60HZ,E26 MAX 60W.
- 2.Care should be taken to avoid damage to the surface of lighting and wire, wearing gloves are recommended when installing.
- 3.Keep lighting away from acid, alkali and other corrosive chemical or gas,clean the lighting with clean soft cloth only.
- 4.Installation must be carried out by qualified electrician only.
- 5.Disconnect the power before installing, cleaning and replacing lighting.
- 6.Never cover the lighting when power is connected.