
 
 
 


<b>FILE TYPE</b>	PKG <input type="checkbox"/>	IM <input checked="" type="checkbox"/>	RL <input type="checkbox"/>	PDQ <input type="checkbox"/>	TRAY <input type="checkbox"/>											
ALL ARTWORK, DESIGN & CREATIVE ARE PROPERTY OF:  1175 PLACE DU FRÈRE-ANDRÉ MONTRÉAL (QUÉBEC) CANADA H3B 3X9 1 800 890 4076	<b>DOCKET: KT-512</b> <b>DATE: November 6, 2023</b> <b>ITEM/SKU#: 12860</b> <b>DESCRIPTION: Holmes 9in Digital Window Fan with Reversible Airflow</b> <b>CUSTOMER/RETAILER: Target</b> <b>DESIGNER: RG</b>			<b>COLOURS</b> <table border="1"> <thead> <tr> <th>DIELINE</th> <th>PROCESS COLOR</th> <th>PANTONE COLOR</th> </tr> </thead> <tbody> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td>BLACK</td> <td></td> </tr> </tbody> </table>		DIELINE	PROCESS COLOR	PANTONE COLOR					BLACK		<b>DIMENSION</b> <b>HEIGHT: 19 cm</b> <b>WIDTH: 42 cm</b>	
	DIELINE	PROCESS COLOR	PANTONE COLOR													
																
	BLACK															
<b>PKG FINISHING 彩盒表面处理</b> Varnish (oil, gloss by default) 上光油 <input type="checkbox"/> Aqueous Coating 上水油 <input type="checkbox"/> Spot-UV <input type="checkbox"/> PP Lamination 覆膜 <input type="checkbox"/> Other (See notes) <input type="checkbox"/> High Res Photo <input checked="" type="checkbox"/>																
ARTWORK IS THE PROPERTY OF L'IMAGE HOME PRODUCTS INC. Printers changing Pantone spot colors to CMYK do so at their own risk and expense. Print artwork at 100% from PDF supplied, unless otherwise specified. Proofs/samples must be sent for approval before mass printing. <b>DO NOT CHANGE ARTWORK IN ANY WAY.</b>			<b>BEFORE MASS PRODUCTION: ELECTRONIC PDF ARTWORK PROOF MUST BE SENT TO L'IMAGE HOME PRODUCTS GRAPHICS DEPT FOR APPROVAL.</b>													
<b>NOTE:</b>																

## CLEANING / MAINTENANCE

### USER SERVICING INSTRUCTIONS

 
#### REPLACEABLE FUSE

If the (2.5 Amp, 125 Volt) replaceable fuse blows, please contact customer service for information on how to order a new fuse.

#### REPLACING THE FUSE

Follow the below instructions to replace the fuse on the plug.

- Unplug the fan.  
Grasp plug and remove from the receptacle or other outlet device.  
**NOTE:** Do not unplug by pulling on cord.
- Open fuse cover, located on the top of the plug, by using your thumb or a flathead screwdriver to slide the cover towards the prongs.  
**NOTE:** Ensure the fuse cover is completely open before attempting to remove fuse.
- Remove fuse carefully by using a small screwdriver to pry it from the compartment at the metal ends of the fuse. (See Figure 2)
- Place plug on a solid, flat surface. Insert new 2.5 Amp, 125 Volt fuse into fuse compartment. Use a small screwdriver to secure the metal ends of the fuse into the compartment.  
**CAUTION:** Risk of fire. Replace fuse only with 2.5 Amp, 125 Volt fuse.
- Slide fuse cover closed completely.  
**NOTE:** If fuse cover is difficult to close, make sure the fuse is completely secured in place by pressing on metal ends of the fuse.  
**CAUTION:** Risk of fire. Do not replace the attachment plug. It contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

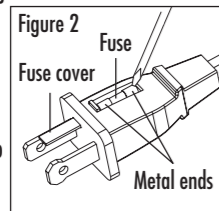

### CLEANING/MAINTENANCE

Follow these instructions to correctly and safely care for this window fan.

#### FAN CLEANING

- Always unplug the fan before cleaning or disassembling.
- Do not allow water to drip on or into the fan motor housing.
- Use only a soft cloth moistened with a mild soap solution.
- Do not use harsh chemicals such as gasoline, thinner or benzene as a cleaner.
- Do not attempt to remove the fan blade.
- Use CAUTION around the motor housing area. Do not allow the motor or other electrical components to be exposed to water.
- It is recommended to periodically clean this fan by lightly running a vacuum cleaner nozzle over the fan grill to remove any dust or dirt.

#### FAN STORAGE

- It is recommended to use the original (or appropriately sized) box.
- Protect the fan from dirt, dust, and moisture.

For inquiries regarding recycling and proper disposal of this product, please contact your local waste management facility.

## WARRANTY INFORMATION

### FCC STATEMENT

#### Potential for Radio/Television interference

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- this device must accept any interference received, including interference that may cause undesired operation.

This product has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. The product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that the interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the product on or off, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and the receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The following importer is the responsible party:

Company Name: SEG Products US Corp.  
Address: 8 The Green, Suite #6962, Dover, DE 19901  
Telephone: 1-959-202-4223

### 3 YEAR LIMITED WARRANTY

This device has a 3 Year limited warranty for the original purchaser from the date of purchase against workmanship and defects in material. If under normal use, your product fails to operate, a replacement or refund will be provided to you with proof of purchase. Star Elite Inc. may deny claims of damage caused by misuse or modifications of this product.

#### How to Obtain Warranty Service

If you have any problems, please do not contact the store.  
Contact our customer service at:  
www.getholmesfans.com  
info@getholmesfans.com  
1-866-769-3166 (8:30 am - 5:00 pm EST) Monday - Friday  
Our customer service will be happy to assist you.

 
© 2024 Sunbeam Products, Inc. All rights reserved.  
HOLMES® is a registered trademark of Sunbeam Products, Inc. used under license.  
Distributed by Star Elite Inc., Montreal, Canada H3B 3X9  
SEH026-010424

Printed In China

# Holmes®

## Instruction Manual

Item: 12860 / 12965 / 12972  
Model: 32510394

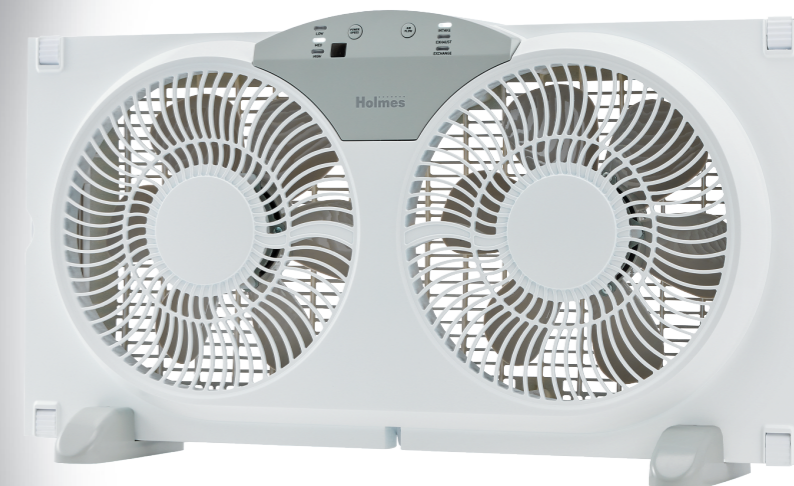

## 9inch Digital Twin-Blade

# Window Fan

PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS

## PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be taken including the following:

1. Read all instructions before using this appliance.
2. Use fan only for purposes described in the instruction manual.
3. To protect against electrical shock do not immerse unit, plug or cord in water or spray with liquids and plug the appliance directly into a 120V AC electrical outlet.
4. Not intended for use by children.
5. Unplug from outlet when not in use, when moving fan from one location to another, before putting on or taking off parts and before cleaning.
6. Avoid contact with moving parts.
7. Do not operate in the presence of explosive and/or flammable fumes.
8. To avoid fire hazard, NEVER place the cord under rugs or any parts near an open flame, cooking or other heating appliance.
9. Do not operate any appliance with a damaged cord or plug after the appliance malfunctions, or has been dropped/damaged in any manner. Discard fan or contact customer service.
10. Do not run cord under carpeting. Do not cover cord with throw rugs, runner, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
11. **WARNING:** To reduce the risk of fire, electric shock, or injury to persons, do not use replacement parts or attachments not recommended by the manufacturer (e.g. parts made at home using a 3D printer).
12. Do not let the cord hang over the edge of a table, counter or come in contact with hot surfaces or leave exposed to high traffic areas.
13. Do not use outdoors.
14. To disconnect, grip plug and pull from wall outlet. Never yank on cord.
15. Always use on a dry, level surface.
16. Do not operate fan until fully assembled with all parts properly in place.

17. This product is intended for household use ONLY and not for commercial or industrial applications.
18. **WARNING:** To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
19. This fan employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short circuit may be present and the product should be discarded or contact our customer service.

### WARNING

 
**• INGESTION HAZARD:** This product contains a button cell or coin battery.  
**• DEATH** or serious injury can occur if ingested.  
**• A** swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.  
**• KEEP** new and used batteries OUT OF REACH OF CHILDREN  
**• Seek** immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.



CR2025/3V

20. This remote includes one lithium CR2025/3V button cell battery. Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate. Even used batteries may cause severe injury or death. Call a local poison control center for treatment information. Non-rechargeable batteries are not to be recharged. Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns. Ensure the batteries are installed correctly according to polarity (+ and -). Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries. Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

## PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

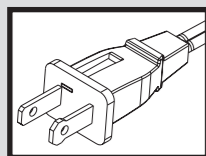

**THIS APPLIANCE HAS A POLARIZED PLUG** (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet.

**DO NOT ATTEMPT TO MODIFY THIS PLUG OR DEFEAT THIS SAFETY FEATURE IN ANY WAY.**

## ASSEMBLY, PARTS AND OPERATING INSTRUCTIONS

**NOTE: MAKE SURE YOU REMOVE ALL CONTENTS FROM THE PACKAGE. PLEASE CHECK PACKAGING MATERIALS FOR PARTS THAT COULD BE REQUIRED TO OPERATE YOUR FAN.**

- The window fan comes fully assembled and is ready for immediate installation.
- Before installation, familiarize yourself with the 6.5 inch (16.5cm) built-in extender (A) on both sides of the fan housing (see Figure 1).

**NOTE: IT IS RECOMMENDED TO KEEP YOUR WINDOW SCREEN IN PLACE.**

**For double-hung windows (designed to fit windows with minimum openings of 23.25 inches (60cm) wide and 11.75 inches (30cm) high**

1. Align the Window Fan horizontally in the window and the Built-In-Extender Panels on both sides.
2. With the window open at least 12 inches, take an accurate measurement of the opening where the unit will be placed.
3. Match your window measurement with the **INSTALLATION GUIDE (SEE NEXT SECTION).**
4. Set the fan in the window ensuring the control panel is facing inward.
5. Carefully close the window onto the top of the fan so that the bottom edge of the window rests behind top line of fan housing. This helps keep the fan in place.
6. Feet (D) should not be installed when mounting in window.

### INSTRUCTIONS FOR FLOOR OR TABLE USE:





Simple assembly is required to use this fan on a table or floor.

1. Locate 2 slots on the base of fan (see Figure 2).
2. Push fan foot into slot to lock in place (see Figure 3).
3. Repeat this action on the other foot.
4. Turn the fan right-side up (see Figure 4).

### INSTALLATION GUIDE

**For 23.25 inches (60cm) to 29.75 inches (75.6cm):** Use up to 6.5 inches (15cm) of either side, pull out extender panel.

    **For 29.75 inches (75.6cm) to 35.75 inches (89.5cm):** Use up to 6.5 inches (15cm) of both sides, pull out extender panels.

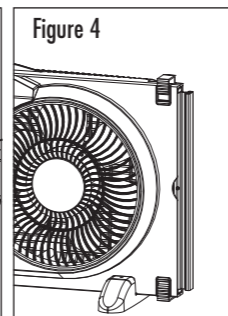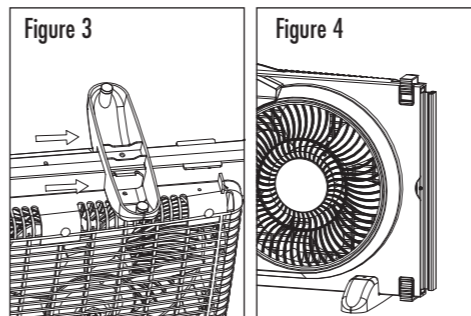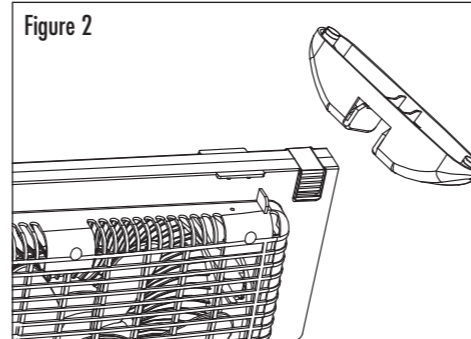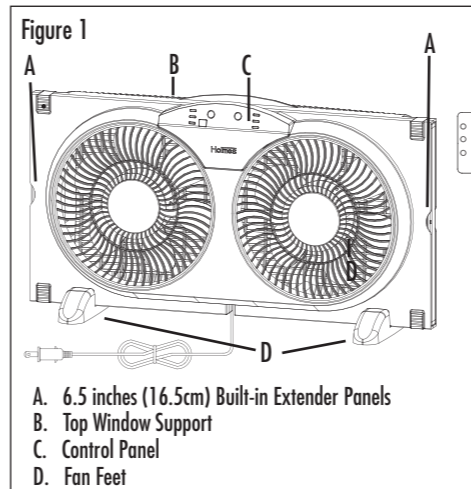

## OPERATING INSTRUCTIONS

**WARNING: BE SURE THE FAN IS SECURELY INSTALLED IN YOUR WINDOW AT ALL TIMES. DO NOT LEAN OR PUSH ON THE FAN WHILE IT IS IN THE WINDOW.**

### OPERATING INSTRUCTION (SEE FIGURE 5)

1. Set the fan in the window ensuring the control panel is facing inward.
2. Plug the fan into a 120V AC electrical outlet.
3. To turn the fan ON, press the Speed / Power Button (A) located on the control panel or the Power Button on the remote control. The fan will start running on the highest setting (HIGH).
4. Press the Speed / Power Button (A) on the control panel or the Speed Button located on the remote to move through the speed settings in order: HIGH MEDIUM LOW
5. To set the AIRFLOW direction, press the Airflow Button (C) on the control panel to select EXHAUST (out), INTAKE (in), or EXCHANGE (one blade blows air in and one blade blows air out).
6. To turn the fan OFF using the remote control, press the Power Button. To turn the fan OFF using the control panel, press the Speed / Power Button (A) to toggle through the three speeds. When the fan is on the lowest speed (LOW) press the Speed / Power button (A).

**NOTE: TO SILENCE CONFIRMATION BEEPS, PRESS THE MUTE BUTTON ON THE REMOTE CONTROL.**

### REMOTE CONTROL (SEE FIGURE 6)

**NOTE: REMOVE THE PROTECTIVE STICKER FROM THE REMOTE CONTROL BATTERY BEFORE OPERATION.**

This unit includes one lithium button cell battery, CR2025/3V. Remove battery before discarding the remote.

### Battery Replacement

Button cell batteries should be disposed of properly, including keeping it away from children. Even used button cell batteries may cause injury.

1. Locate the battery compartment on the bottom back of the remote control handset. Push tab and pull battery tray.

2. Remove the old battery.
3. Place the new battery into the battery tray.
4. Slide battery tray into the battery compartment of the remote control handset.

### NOTES:

1. Remove the battery from the remote control when it is not being used for an extended period of time.
2. Remove used battery promptly.
3. Do not discard used batteries into household trash containers. Contact your local government for disposal or recycling practices in your area.

