

Parts List


XGZ002 | 120CM

Caution: After unpacking, check the quantity of all parts against this instruction manual.

1 Top panel

1200 × 300 × 20MM

 
Qty: 1

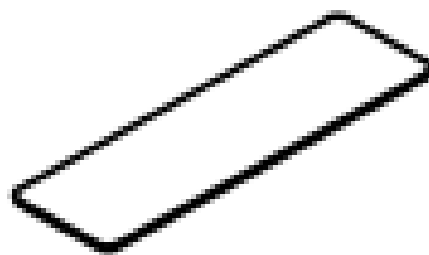

2 Side frame

740 × 290 × 53MM

 
Qty: 2

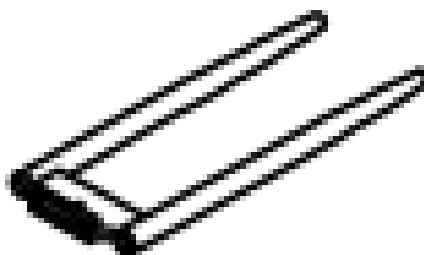

3 Intermediate panel

960 × 75 × 20MM

 Qty: 1

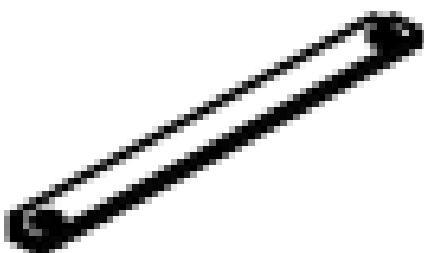


Hardware List

A Hex socket screw

M6 × 35MM

 
Qty: 4

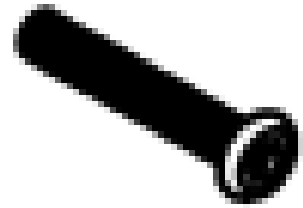

B Washer

M6 × 13MM

 
Qty: 4

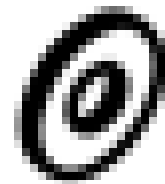

D Connector

M6 × 60MM

 
Qty: 2

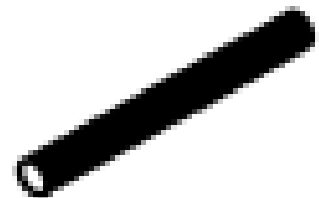

E Crescent washer

M8 × 14 × 27 × 6MM

 Qty: 2

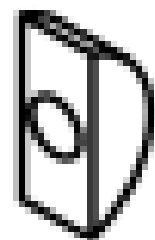


Hardware List

F Hex nut

M6 × 10MM

 Qty: 2

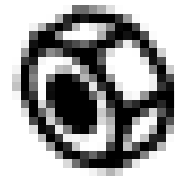

H Wood dowel

Ø8 × 30MM

Qty: 2



I Flat-head rapid-thread screw

M6 × 50MM

 
Qty: 3



J Adjustable foot

M6 × 15MM

Qty: 4

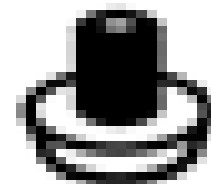


Hardware & Tools

C Hex key (tool)

M4 × 100 × 40MM

 Qty: 1

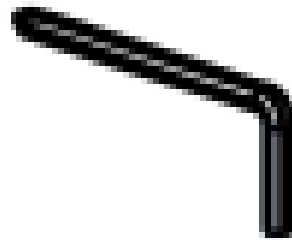

G Open-end wrench (tool)

M10

Qty: 1



K Anti-tipping hardware

 
Qty: 1



Step 1

Install connector D into side frame (2), as shown.


Repeat for both side frames. Hardware: D × 2 total.

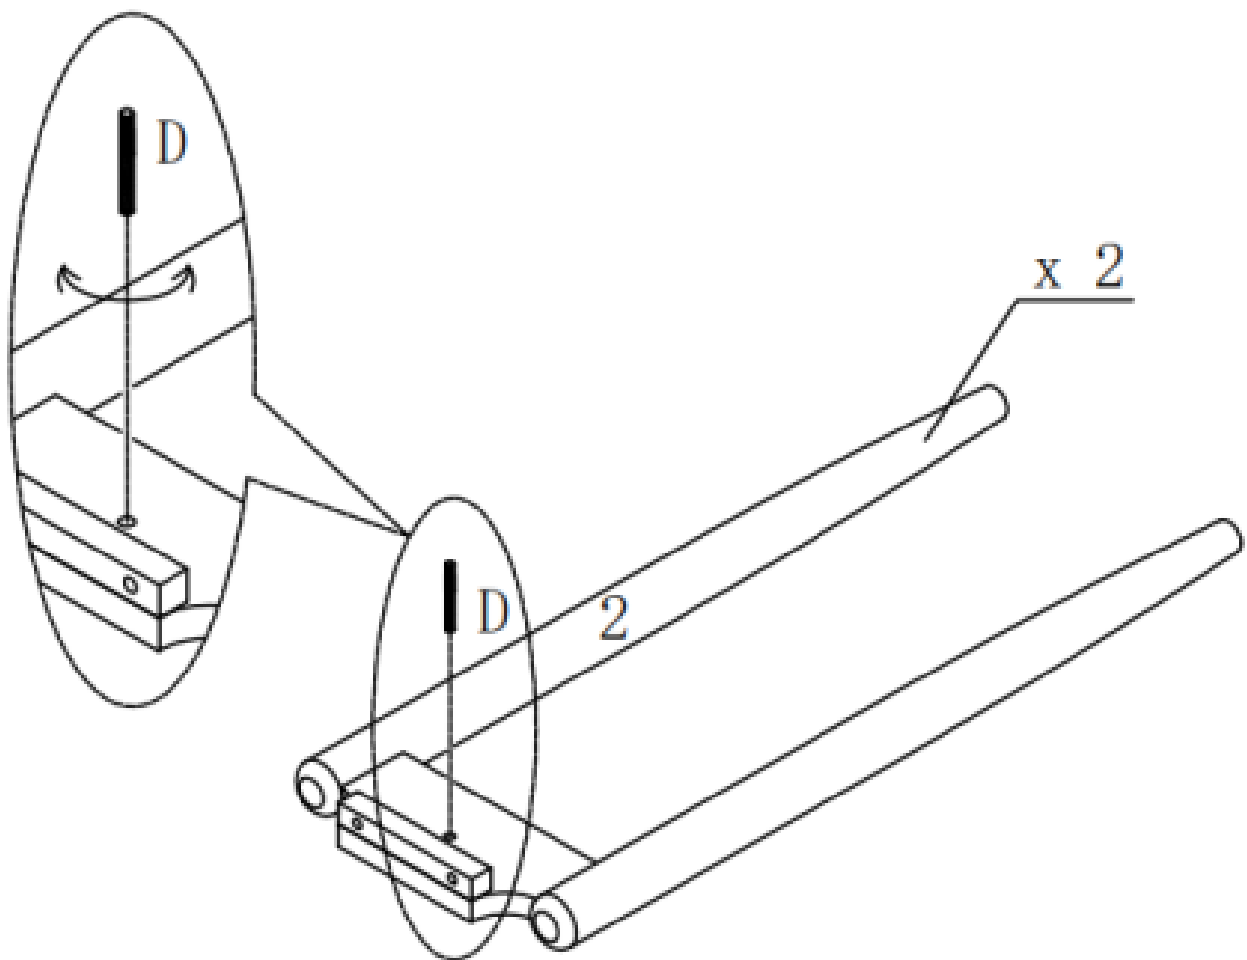

Step 2

Join intermediate panel (3) to the side frames (2), as shown.

 Hardware: E × 2, F × 2 Tool: G × 1

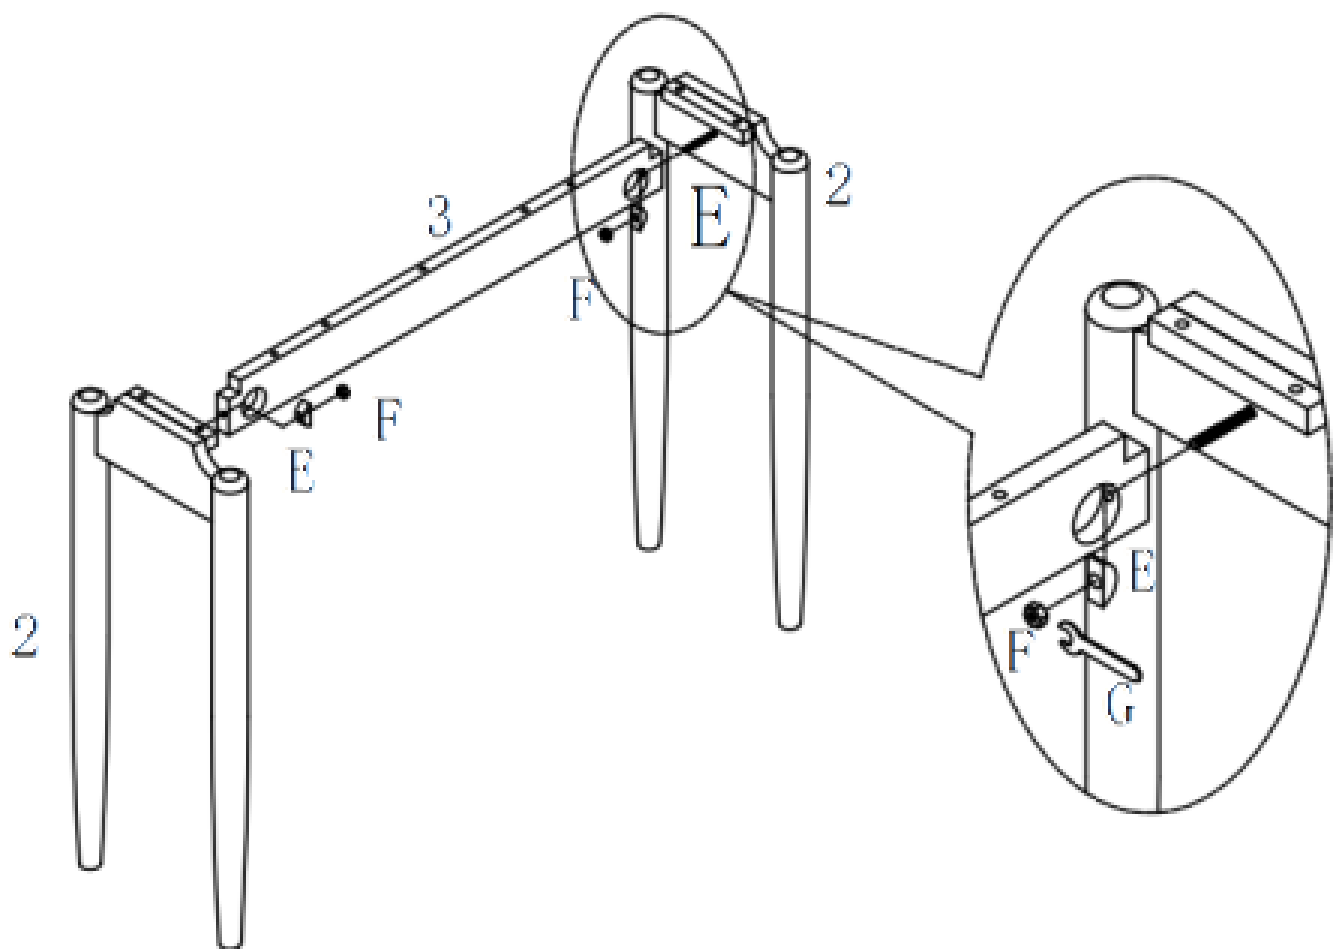


Step 3

Attach the frame to top panel (1) and install feet J, as shown.

Hardware: A $\times$ 4, B $\times$ 4, H $\times$ 2, I $\times$ 3, J $\times$ 4

 Tool: C $\times$ 1

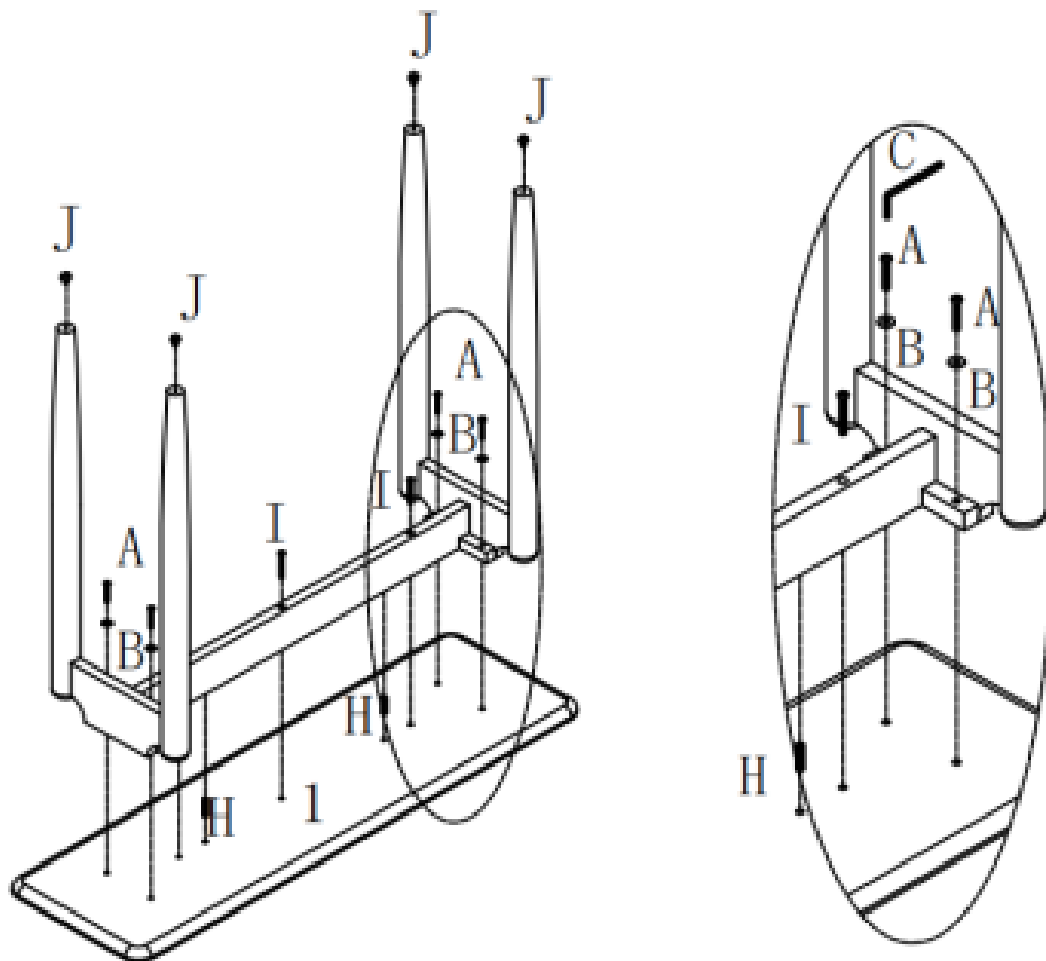

Step 4

Note: The optional anti-tipping device K can be installed after assembly.

