


 
 
 
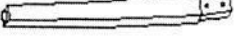




CARE AND MAINTENANCE

Do not clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.
The use of steam or water-based cleaners may cause excessive shrinking or staining.


NOTICE

Please make sure that you have all parts indicated before you begin assembly of this item.
This item should be assembled on a soft surface to prevent scratching the finish during assembly.
This item may require periodic tightening.

Part List and Hardware List

ITEM	DESCRIPTION	QUANTITY	PICTURE	QUANTITY
A	SEAT			1X
B	Front leg-1			1X
C	Front leg-2			1X
D	Back leg-1			1X
E	Back leg-2			1X
H1	Allen bolt L			8X
H2	Spring washer			8X
H3	Flat washer			8X
H4	Allen key			1X

Product Dimensions: 22.44" W x 24.60" D x 37.00" H

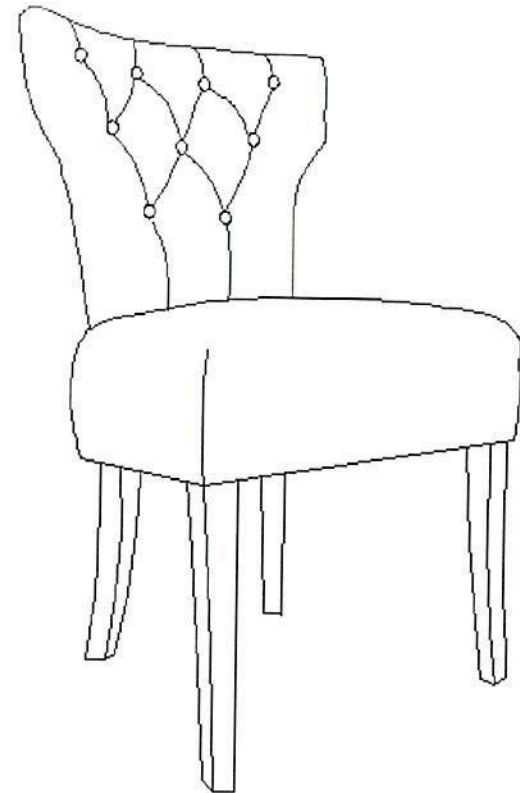

REPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

