




 

 
 



 

 

 
 
 


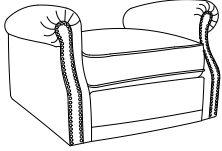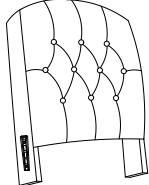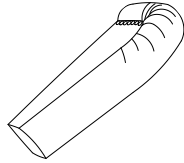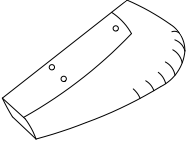

A  Seat Frame x1	B  Back Frame x1	C  Left Wing x1
D  Right Wing x1	E  Front Leg x2	F  Back Leg x2

HARDWARE


①  Bolt M8*50mm x8	②  Bolt M8*30mm x2	③  Bolt M6*30mm x4
④  Spring Washer x10	⑤  Flat Washer 18mm x2	⑥  Flat Washer 22mm x8
⑦ M8  Allen Key 5# x1	⑧ M6  Allen Key 4# x1	⑨  Metal Brackets x2

SPARE


①  Bolt M8*50mm x1	②  Bolt M8*30mm x1	③  Bolt M6*30mm x1
④  Spring Washer x2	⑤  Flat Washer 18mm x1	⑥ M8*22mm  Flat Washer 22mm x1

Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.


STEP 1

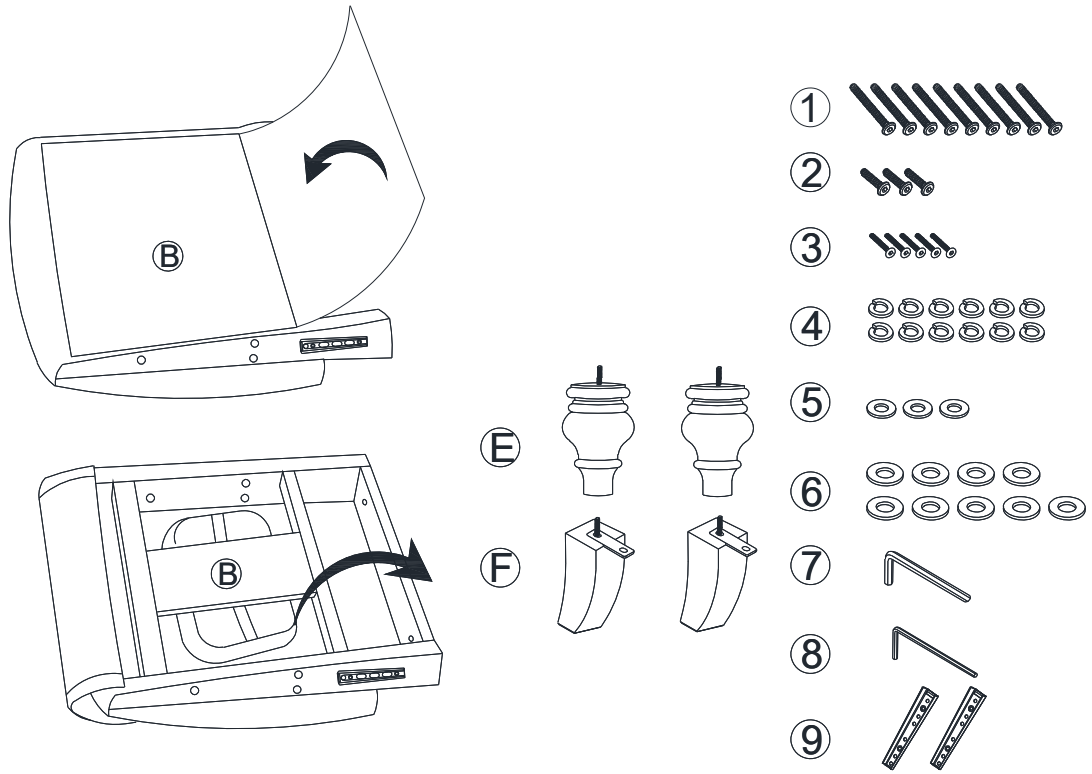

STEP 2

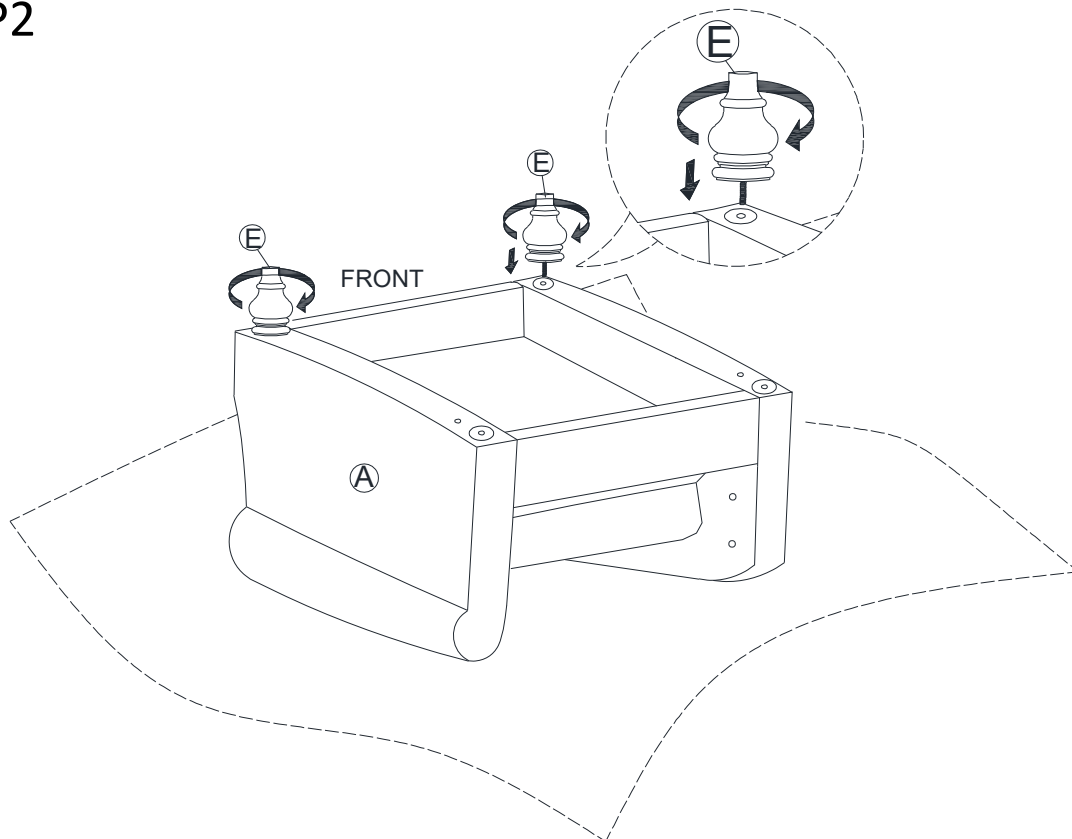


STEP 3

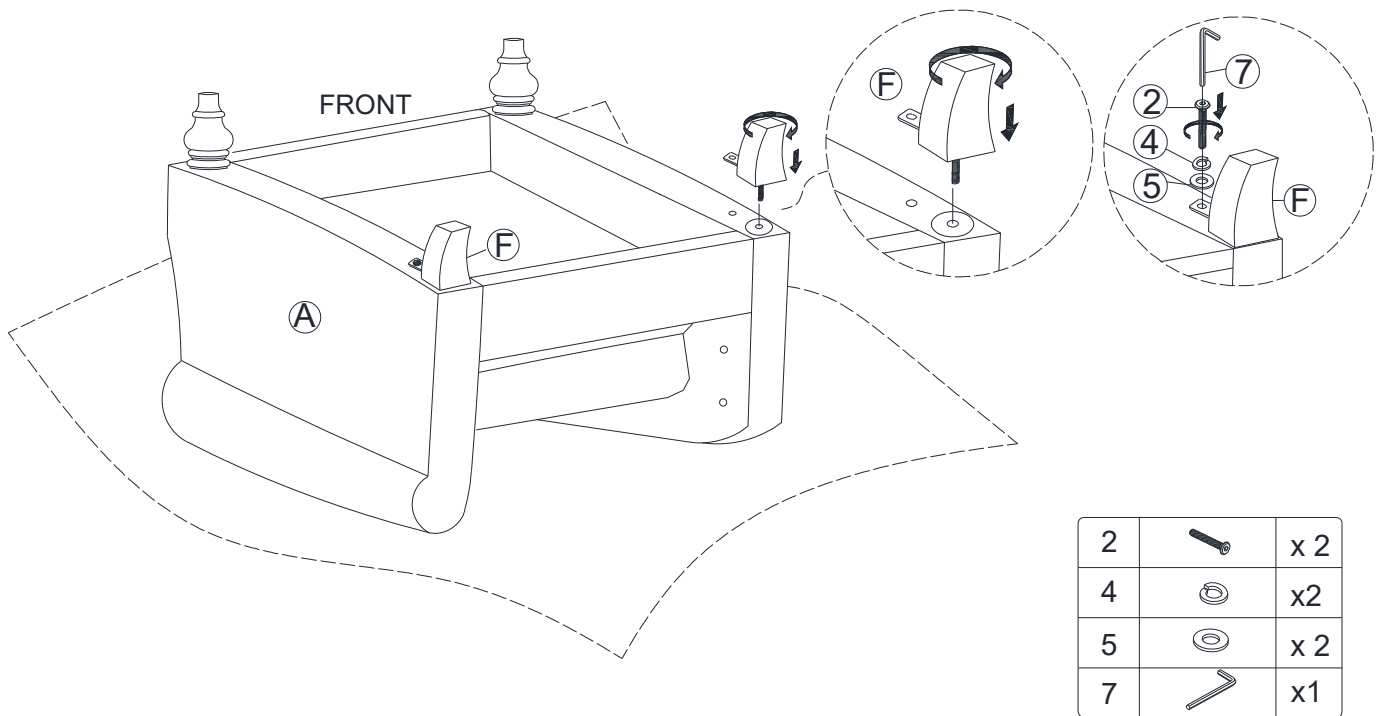




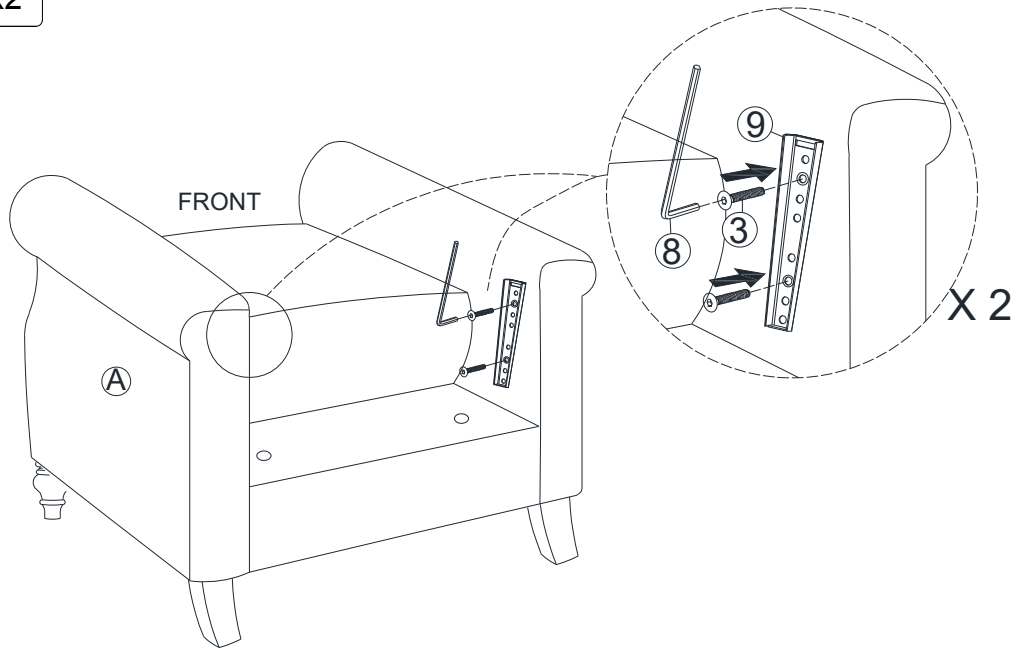
Be sure the wood leg with metal piece-C is aligned tightly, and the hole of the metal piece is matching the hole of the arm bottom.

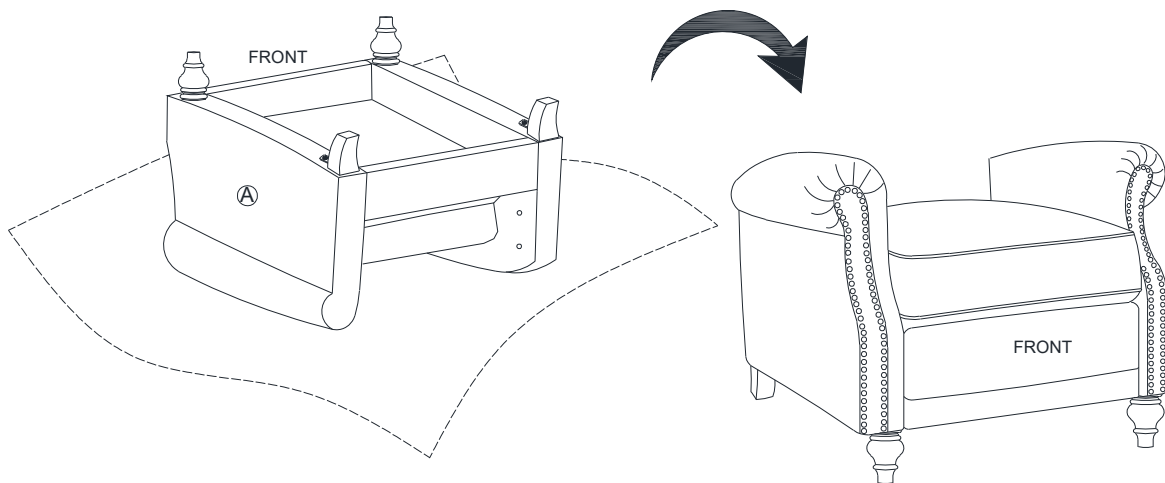STEP 4




STEP 5

3		x 4
8		x1
9		x2




Be sure the bolt (3) goes through the correct hole in the metal brackets (9).

STEP 6

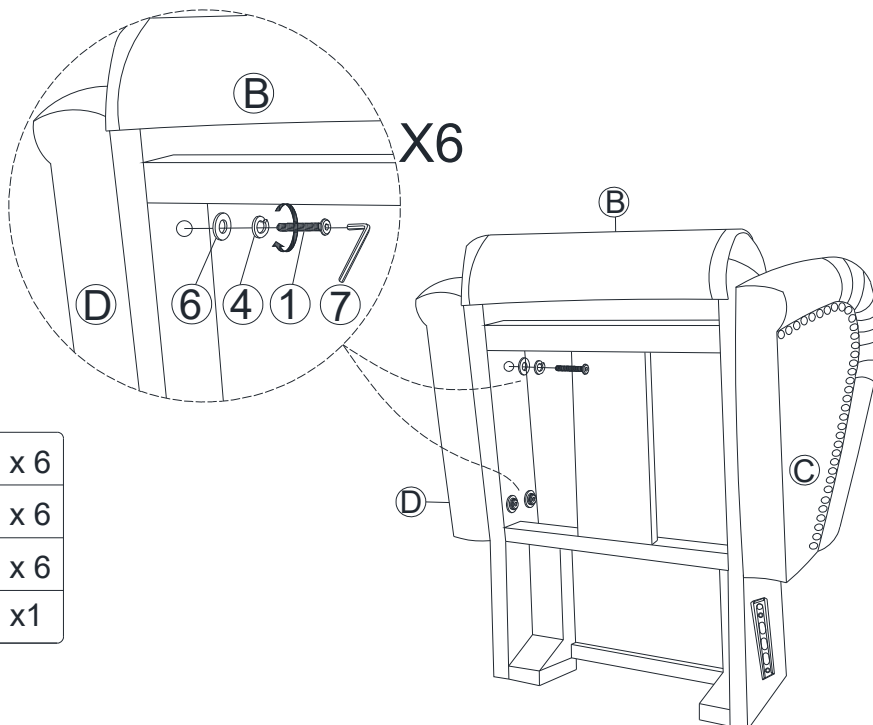


1		x 6
4		x 6
6		x 6
7		x1

STEP 7

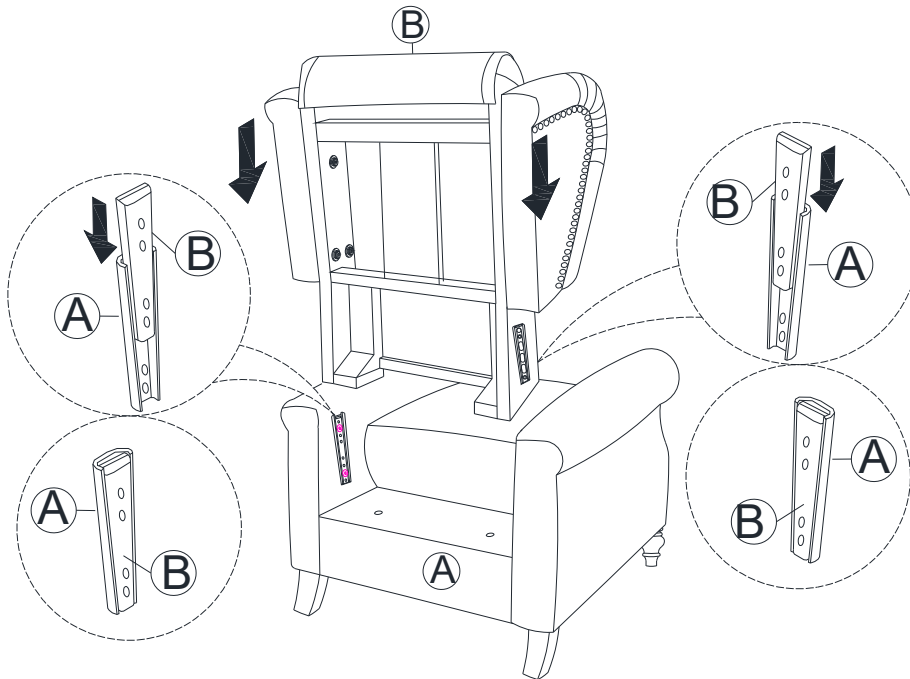


STEP 8

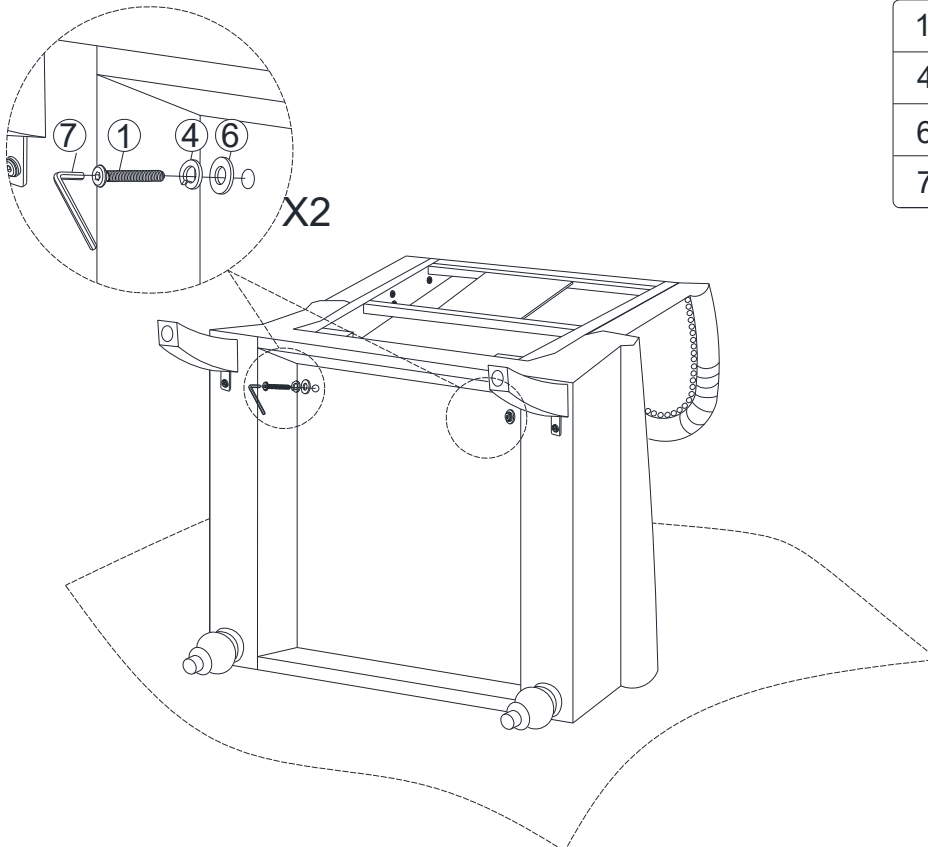


1		x 2
4		x 2
6		x 2
7		x 1

STEP 9

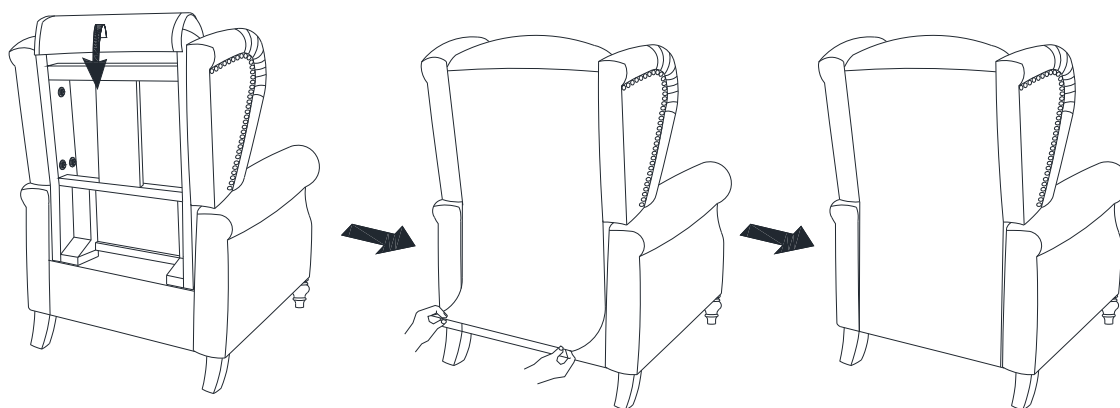

STEP 10

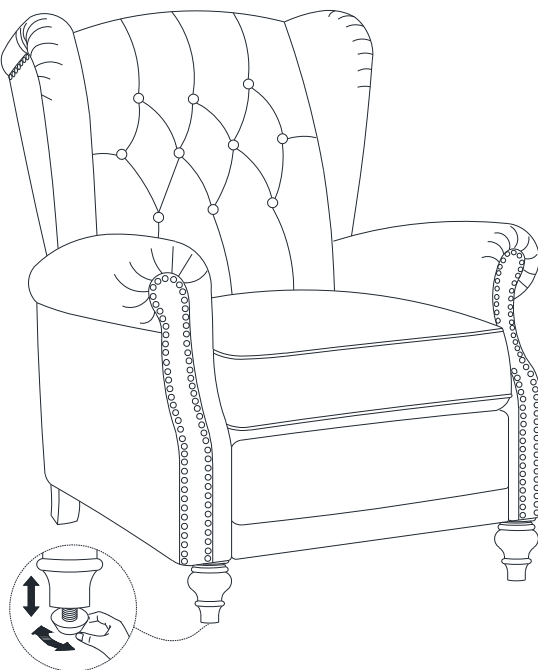

Attention:

After installation, adjust the adjustable leveler to keep the Chair balanced.

MAINTAINANCE AND WARNING



- Keep furniture away from heat.
- Do not clean furniture with harsh cleansers or polish. Do not use detergents, Solvents, abrasives, spray packs or leather cleaner. Use non-color mild soap with warm water clean spills(Mix 1:10 soap to water)
- Do not place furniture under direct sunlight, material will possibly fade over time.
- Do not use on site dry Cleaning machine.
- Children should not climb or jump on the furniture.
- Do not write on furniture without a padded barrier to protect the surface.
- Not for commercial use, For residential use only.
- The maximum load is **330 LBS**.

WARRANTY

We strive to offer high-quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed. We provide 30 days warranty starting from the time you receive the item. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive replacement parts by purchasing them with our company if they are available.

Are you having difficulty with assembly? Missing parts? Please send email with your order No to customerservice@hulalahome.com

For return, please check the return policy with the retailer or market place you bought from.

Appreciate your purchasing from us. Pop up your life by our furniture piece!