

CARE OF YOUR Electric Recliner

Do not discard any of the packaging until you have checked the product.

Outlined below are General Care Instructions that will help prolong the look and life of your sofa by preventing wear and damage.

PLEASE NOTE: The Fabric on this product is Flame Retardant treated and therefore should be Specialist Upholstery cleaned only

CLEAN REGULARLY:

 
- ✚ Remove dust by pre-brushing with a soft brush
- ✚ Gently Vacuum all areas

SUNLIGHT AND HEAT

- ✚ Direct sunlight or heat can cause fabrics to deteriorate or fade. Protect them by situating your furniture out of the way of prolonged direct sunlight or by drawing curtains and blinds when applicable.
- ✚ Avoid placing furniture too close to fires or radiators.
- ✚ Reduce potential damage by moving items around or changing position so that the same piece or area is not always exposed.


SAFETY WARNINGS

- ✚ **ENTRAPMENT WARNING: KEEP HANDS CLEAR WHEN ADJUSTING THE RATCHET MECHANISM TO AVOID FINGER ENTRAPMENT: DO NOT ALLOW CHILDREN TO ADJUST THE MECHANISM.**
- ✚ Never allow children to jump on the Sofa.
- ✚ Do not allow domestic pets to climb on the sofa or chew or claw it; oils and greases from animals will cause deterioration in the appearance of the fabric.
- ✚ Sharp objects such as buckles, toys and jewellery can easily snag on the fabric and produce tears and pulls in the fabric.
- ✚ Hot objects such as the heat from cups and mugs can permanently disfigure upholstery.

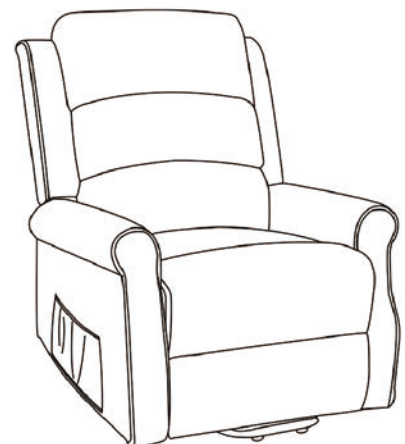

INSTRUCTIONS FOR FIXING LEGS TO Electric Recliner

 Parts List:

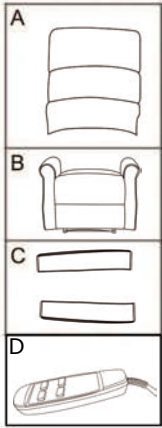


Back X 1



Power plug X 1

 Seat X 1



Adapter X 1

Ear X 2

Controller X 1



(1) Unpack Sofa and check the above items are present.



(2) Place the sofa face down on a clean, flat surface.

(3) Put the back on the seat with the bolt. put two ears on the back with the bolt.

(4) The motor adaptor wires are simply fixed on the rear rail at the bottom of the seat. make sure that the cables of the remote control will be placed backward of the relax chair to that these can't pinched or damaged during the lifting function.

 
FABRIC CONTENT:

MAIN FABRIC 100% POLYESTER

OTHER FABRIC (VISIBLE):

NON-WOVEN FABRIC 100% POLYESTER

LIFTING FUNCTION CONTROL BOAED

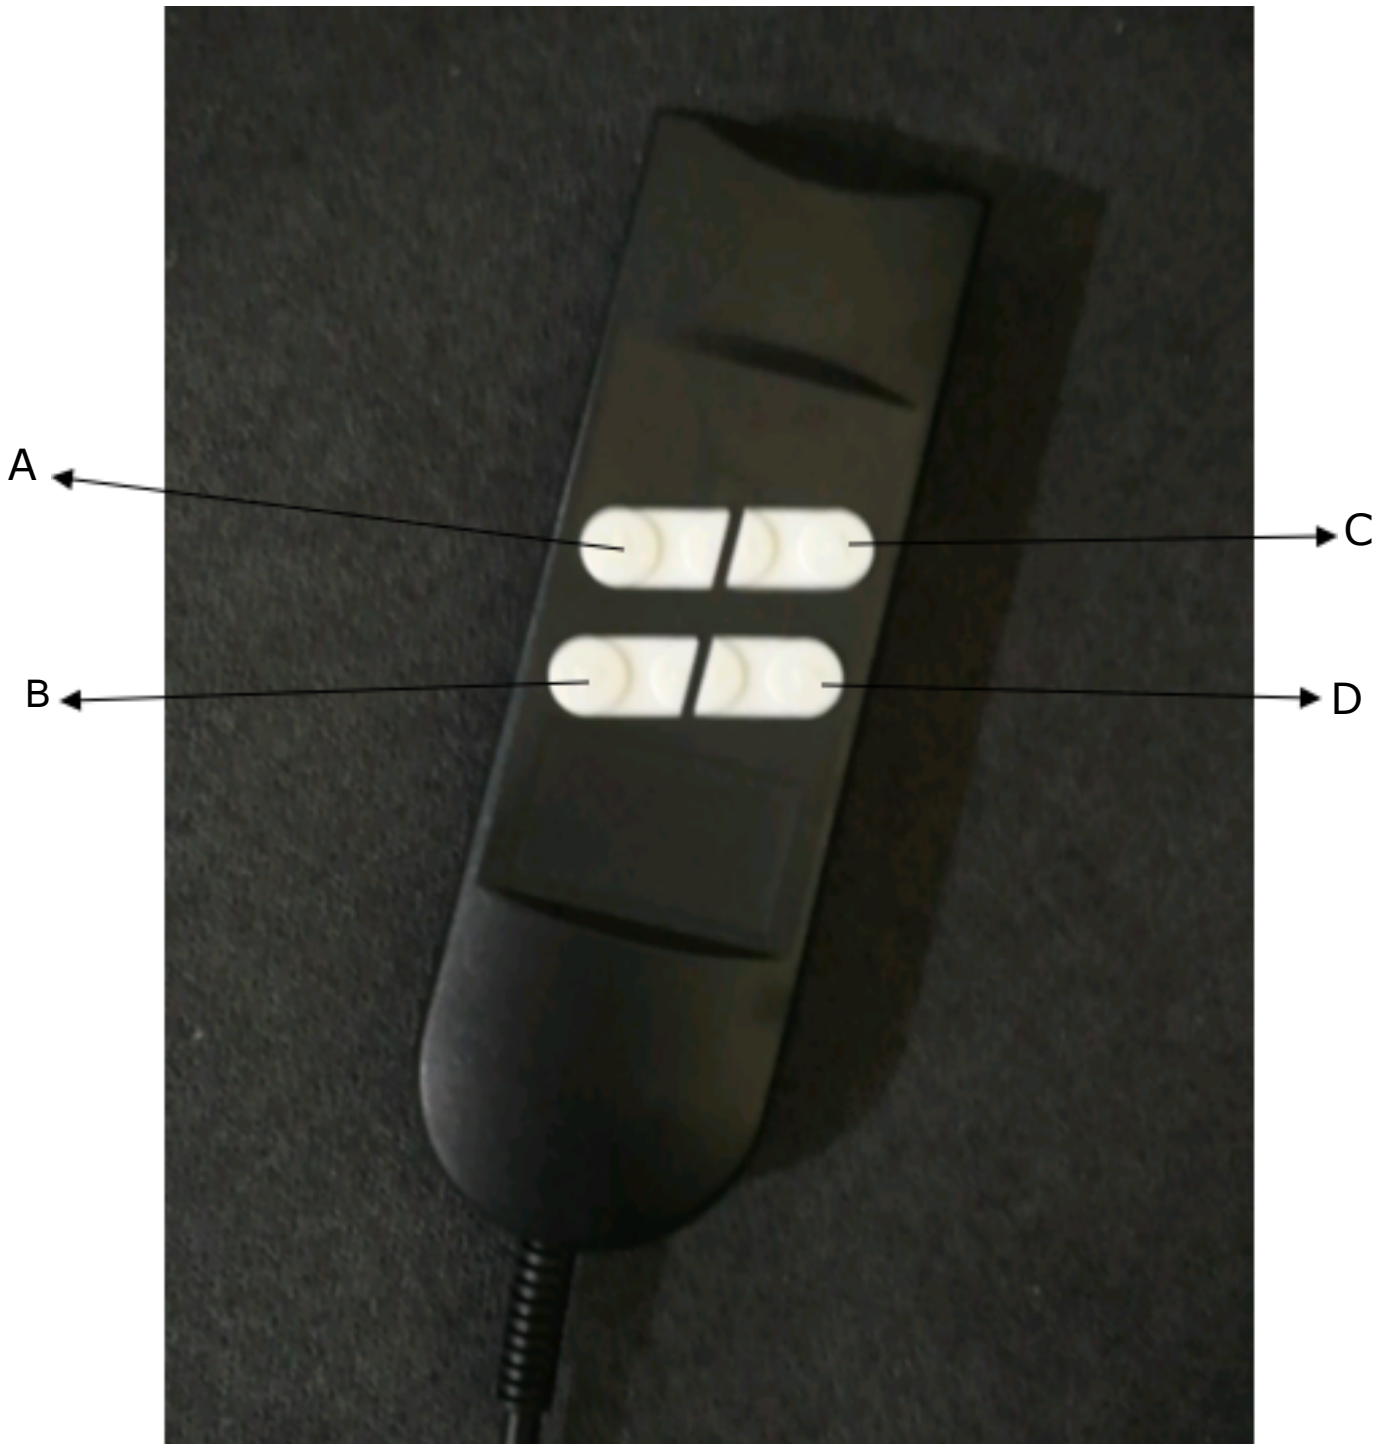

1. Press the botton A to recline backrest to a comfortable position
2. Press the botton B to retract backrest to sitting position
3. Press the botton C to lift the footrest (open the footrest)
4. Press the botton D to retract the footrest,when the footrest is full retracted,keep press the botton D will make the chair Rise to lifting position
5. If the chair is in lifting position,press button C will lower down the chair to seating position.keeping press button C,the footrest will be lifted up.