



ASSEMBLY INSTRUCTIONS FOR PARSONS CONSOLE (PSN-400)


WHAT'S INCLUDED

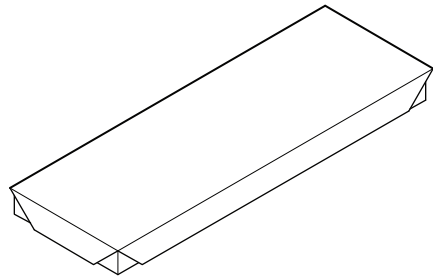

TOP

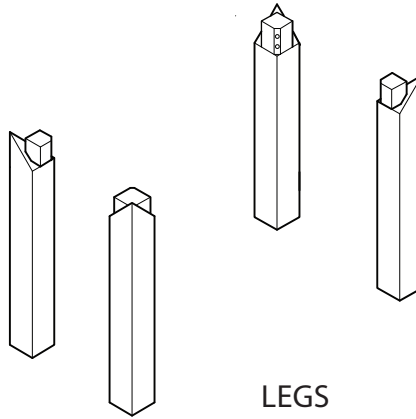

LEGS

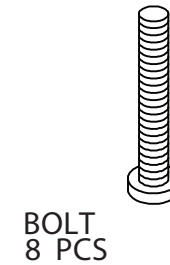

BOLT
8 PCS



ALLEN KEY
1PC

- 1 - Unpack all parts carefully
- Turn console top upside down gently on to a soft surface.
- Line up the legs to the corresponding holes on the angled blocks at the inside apron corner, as shown.
- Using 2 bolts each, attach each leg, tightening bolts with supplied allen key.

- 2 - Repeat , attaching all four legs securely.
- Lift, and turn table onto its feet, being careful not to tilt or lean table on its edges.

