 


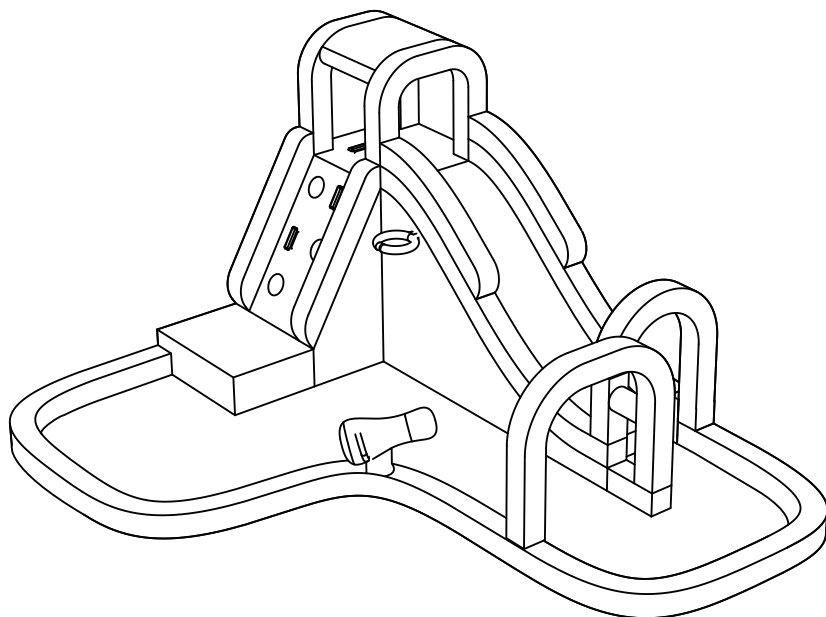

User Manual Inflatable Water Slide Without Blower AMM005197_B601_WO_US

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

MADE IN CHINA

AKEYDIY - A Key to Unlock Your DIY Potential

AKEYDIY was founded in 2020 with a strong commitment to nurturing children's hands-on abilities and encouraging them to explore, discover, and experience different worlds through active and imaginative play. The founder, George Akey, is a young man who is not only a father of two children but also deeply passionate about DIY. He firmly believes that every child has immense creative potential, and with the right opportunities and tools, everyone can unlock their DIY potential.

The inspiration for George's first product came from children's dreams of creating their own costumes. However, at that time, the quality of heat press machines available on the market varied greatly, and the prices were discouraging. Determined to fulfill kids' dreams, George Akey conducted extensive research on heat transfer technology, continuously improving and perfecting it. After months of effort, he finally manufactured a durable and user-friendly machine.

This machine became like a key, unlocking infinite creative potential for DIY enthusiasts. The brand slogan, "A Key to Unlock Your DIY Potential," embodies the mission and goal of AKEYDIY. It symbolizes the brand's commitment to providing high-quality tools, equipment, and entertainment products that inspire individuals to unleash their creativity, helping them realize their DIY potential and build their dream projects.

Over time, the AKEYDIY brand gradually grew and expanded. In addition to the heat press machine, they introduced various products such as bounce houses and water slides, aimed at helping families create more joyful moments. AKEYDIY is dedicated to providing opportunities for people to bring their creative ideas to life, allowing each individual to find enjoyment and a sense of accomplishment in the DIY process.

Customer support

 
If you need help regarding product issues, after-sales service, or other relevant problems, please contact us via email: support@akeydiy.net, and provide the following information:

- Order ID
- Problem Description



Inflatable Water Slide

User manual
Ages: 3-8 years

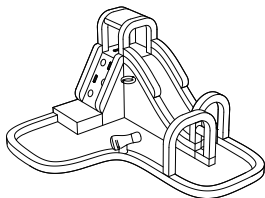


167.3"L x 133.8"W x 80.7"H
Approximate Size Inflated

⚠ WARNING: FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.

Do not use extension cords with this product. Outdoor use only.
Read all instructions before assembling this inflatable device. Keep instructions for future use.

⚠ WARNING: USERS MUST BE CAREFUL A BOUNCY ORIENTATION WITH REGARD TO THE SUN. The sliding surface should not be located facing the sun as it can dazzle children when using the bouncy.

 PART LIST

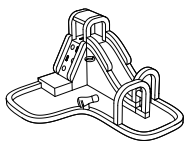


A) 1 Inflatable Water Slide



B) 1 Carrying Bag



 C) 6 Bouncer Stakes



D) 14 Repair Patches



E) 1 Inflatable Ball



F) 1 Inflatable Ball Pump



G) 1 Six-color Beach Ball



H) 1 Set Of Water Tube



I) 1 Crocodile Water Sprayer



J) 1 Wrist Squir Toy



K) 10 Water Balloons



L) 1 Water Frisbee



M) 1 foot pump

⚠ SAFETY WARNINGS: SET UP

ADULT SUPERVISION AND SETUP REQUIRED. This product should be inflated or deflated only by a competent adult. Follow all instructions provided.

 
WARNING! Falls onto hard surfaces can result in head or other serious injuries.

Never place on concrete, asphalt, wood, packed earth, or other hard surfaces.

Carpet over hard floors may not prevent injury.

- ⚠ **WARNING! Only for domestic use.** Intended for outdoor domestic family use only. Not for use in public areas or as a rental.
- Product is heavy. Use caution when lifting.
- Product should never be dragged across concrete, pavement or other rough surfaces.
- **WARNING!** Keep away from fire. Keep fabric clear of all flame and ignition sources.
- Do not set up in windy or rainy conditions: sudden gusts of wind may lift the product off the ground.
- Product can be installed in any orientation in relation to the sun, since there are no metal components or surfaces that can absorb excessive solar radiation.
- Set-up in outdoor location only that meets the following criteria:
 - Place on level ground and firm grass or soil to allow proper use of stakes.
 - Placing on slanted or uneven surfaces may cause the product to tip.
 - Stakes should be placed at an angle for better anchorage, should be driven under the ground to prevent tripping.
 - Minimum clearance zones: Place at least 2m away from any other objects.
 - Objects to be avoided include but are not limited to fences, buildings, trees, overhead branches, laundry lines, electrical wires, walls, or bodies or sources of water.
 - Make sure the area around the product is secure by adding safety barriers, if necessary, to keep young children and pets from gaining access.
 - Electrical cord must not be passed under the air filled devices (inflatable Bouncer with Slide) and interfere with its operation.
- Do not use the product if wind speed exceeds 30km/h.
- Do not consume food, drink and gum on this product.


MINIMUM CLEARANCE ZONES

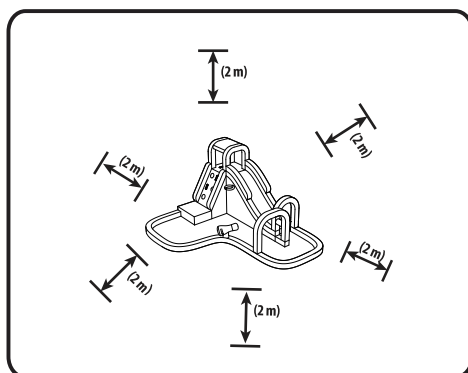

MINIMUM CLEARANCE ZONES

Make sure that there is a 2m obstacle-free zone around the product, including a fence, garage, house, overhanging branches, laundry lines or electrical wires.

 BOUNCER PLACEMENT

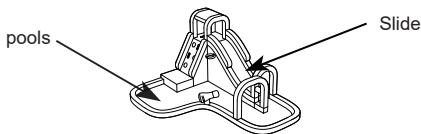

Designate a flat, level surface that allows for 2m of minimum clearance around the Bouncer.

NOTE: Do not place the Bouncer with slide on a hard surface like asphalt, concrete or packed earth as both serious bodily injury and damage to the Bounce could result.

ASSEMBLY AREAS

- Make sure the assembly area is flat and level and is free of rocks, sharp objects or other obstructions.
- Do not set up the Bounce on a slope or inline.
- Do not set up the Bounce on hard-packed earth, asphalt, decking or any hard surface as doing so may result in physical injury and/or damage to the Bouncer.
- Once the Bounce inflated or filled with water, do not attempt to drag it to another location.
- Check your local county or city regulations for requirements on securing the pool.
- Secure the pool from unauthorized use.

SAFETY WARNINGS: Failure to follow these instructions could result in serious injury or death.



Maximum number of children: 4



years Age



Total weight limit on slide and pool: 308lbs.



Maximum individual height: 5 Ft.(152 cm)



Adult supervision required. Do not leave children unattended.



No sharp objects.



No shoes, no glasses.



No flipping.



Do not slide head first.



No wrestling.



Individual weight limit: 77 lbs.



No hands or feet on net.



Do not use in windy conditions.



Do not leave out in rain.



Do not allow children to touch fan or electrical cord.



 
Must be anchored using stakes.

- Constant, competent adult supervision of children and other young users is required at all times.
- Keep the area around the product clean, and clear of objects, to prevent slips and falls.
- Do not allow children to play in the product until it is fully inflated.
- Do not allow children to play on if wet. Thoroughly dry before use.
- This is not an aquatic toy. It is not to be used in water.
- Instruct children on proper use of this product.
- Children should not wear loose or baggy clothing, scarves, hoods or clothing with drawstrings or long cords while playing on this product.
- Children must remove helmets, headgear, shoes and glasses, as well as any sharp objects from their pockets, as they may puncture the bouncing surface.
- Toys and other objects should never be allowed inside the bouncer.
- Instruct children not to attach items to the product that are not specifically designed for use with the equipment, such as but not limited to, jump ropes, clothesline, pet leashes, cables and chains as they may cause a strangulation hazard.
- Keep pets away from product.
- Children should bounce away from others, and stay away from openings and side walls.
- Children should not jump onto or off the product.
- Total weight of children must not exceed 308 lbs. (140 kg) No more than 4 children should play on the Bouncer at the same time.
- Do not allow children to play together who are unevenly matched in weight and height.
- Before and during use, check for air loss.
- Always check the product and all its anchorage points before and during use, and to re-secure as appropriate.
- Prior to deflating, remove all children.
- Always deflate product after use, and store indoors.
- To be used on soft ground only.
- Users must be discouraged from attempting any unauthorized modification.


SET UP

1

Remove Bouncer from its packaging

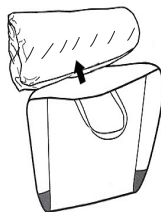


2

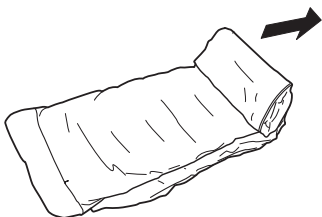 


Unroll and unfold the Bouncer in the center of the designated area.

 
3

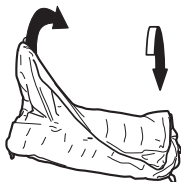

4


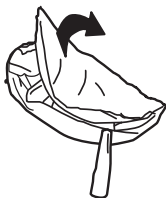 


5

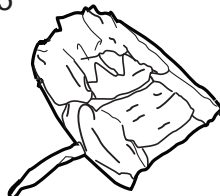 


6

  Tie and bind the short fabric tube with the rope before inserting air.

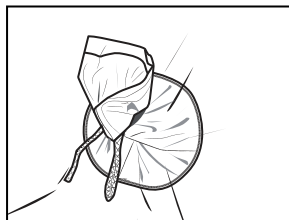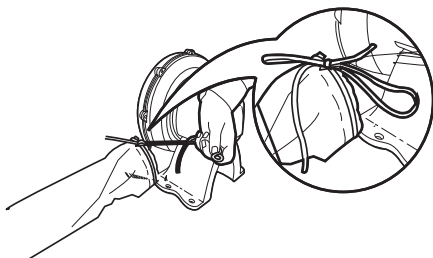


FASTEN

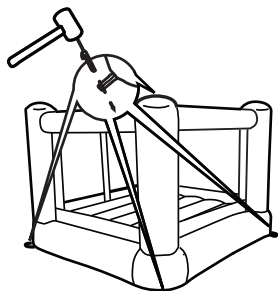 

Secure the Bouncer to the ground with the provided stakes. To prevent tripping, pull the stake loops all the way out, then drive stakes completely into the ground.


DEFLATION & STORAGE

 1

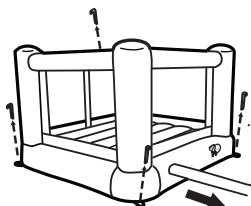

2

 Untie the drawstring from the Intake Tube and allow the Bouncer to fully deflate.

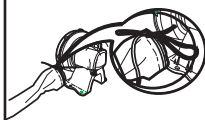

3

Fold over only

 
Note: Dry the bouncer slide completely before storing



4




5

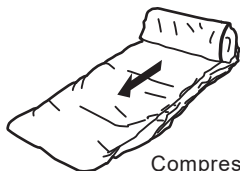

Compress air out
as you are rolling
up inflatable

 6

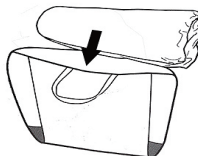

REPAIR PATCH INSTRUCTIONS

 


WARNING: Repair patches must be applied by adults only.

KEEP OUT OF REACH OF CHILDREN.

INSTRUCTION:

1. Deflate the item, clean the area and allow to dry thoroughly.
2. Cut a portion of the patch to the size needed and round the corners. (See Fig).
3. Remove the adhesive backing from the patch material, position the patch over the damaged area and smooth out any bubbles
4. Allow to sit for 30 minutes before re-inflating

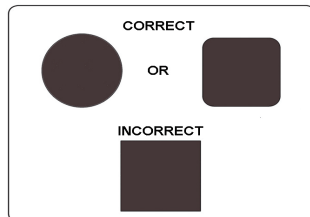

INSTRUCTIONS FOR BOUNCER MAINTENANCE

- As an outdoor product, the bouncer is subject to wear and deterioration. Inspect for signs of fabric failure; weak or torn surfaces must be repaired promptly.
- To keep the product clean: wipe the bouncer or blower using a dry cloth or a cloth dampened with a neutral, non-flammable, nontoxic cleaning and sanitizing solution or pure water.
- Product should never be stored wet. Allow to dry before rolling up.

DISPOSAL

- Disassemble and dispose of the equipment in such a manner that no hazardous conditions exist at the time the equipment is discarded.



'Let's care for the environment!'

The wheelie bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item.

Please keep this manual as it contains important information.