





Parts List

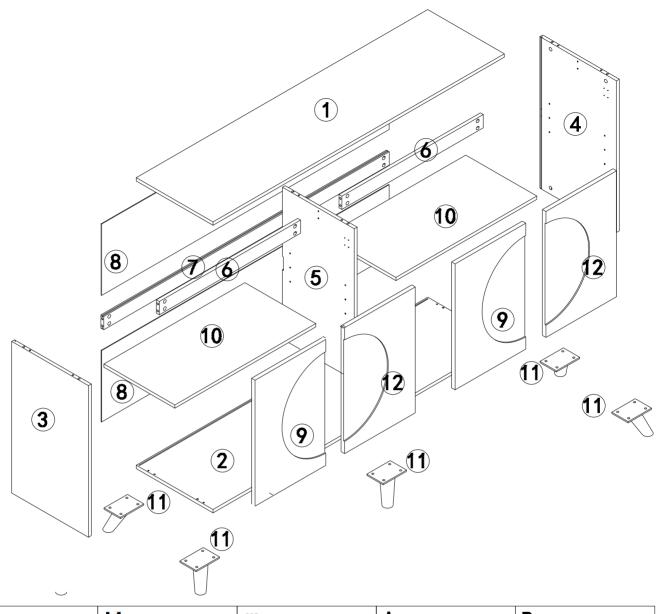



N.I.			w	A	D
N		М	W	A	В
	EMMAN	0	EDINATION		×#
	8pcs	8pcs	2 pcs	24pcs	24pcs
C		D	E	F	G
		Englyss.		Dipp	
	12pcs	72pcs	4pcs	8pcs	4pcs
H		I	J	K	L
	0				
	2pcs	8pcs	4pcs	8pcs	4pcs

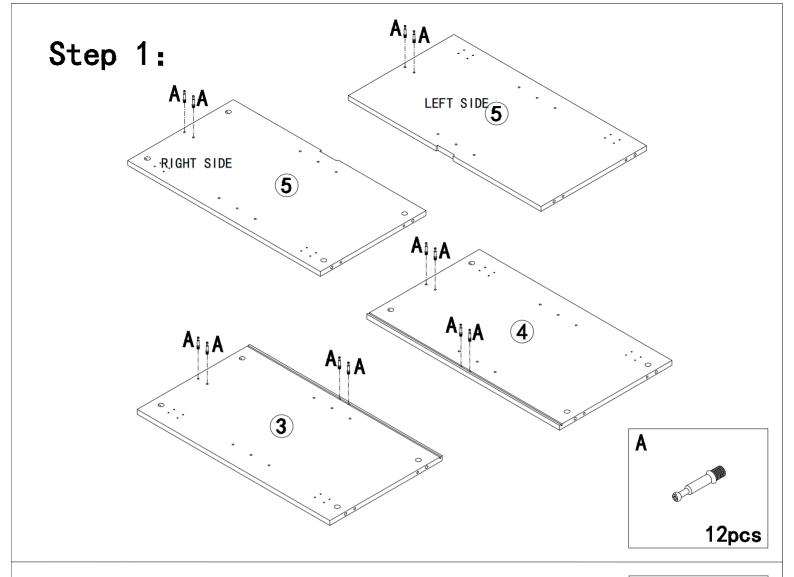


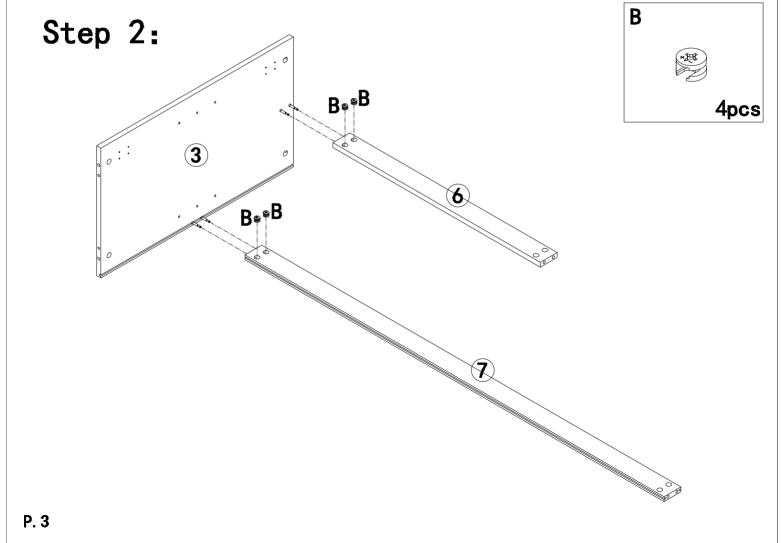


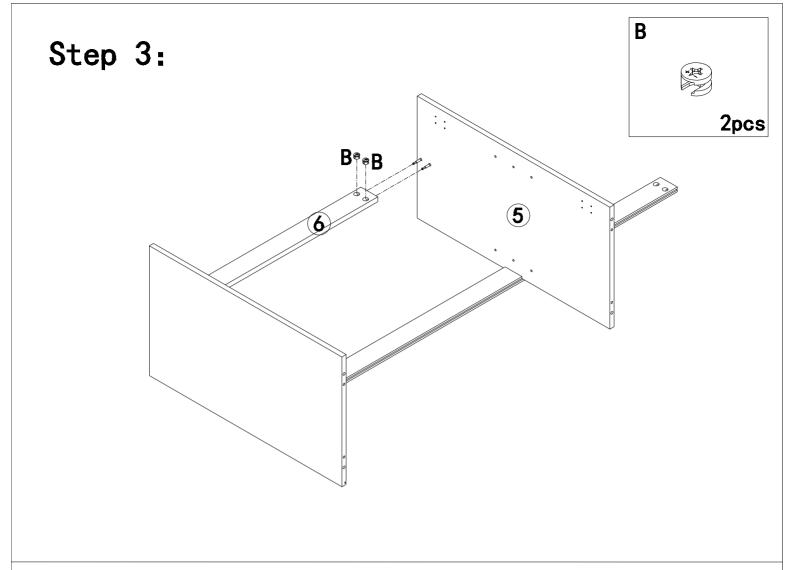


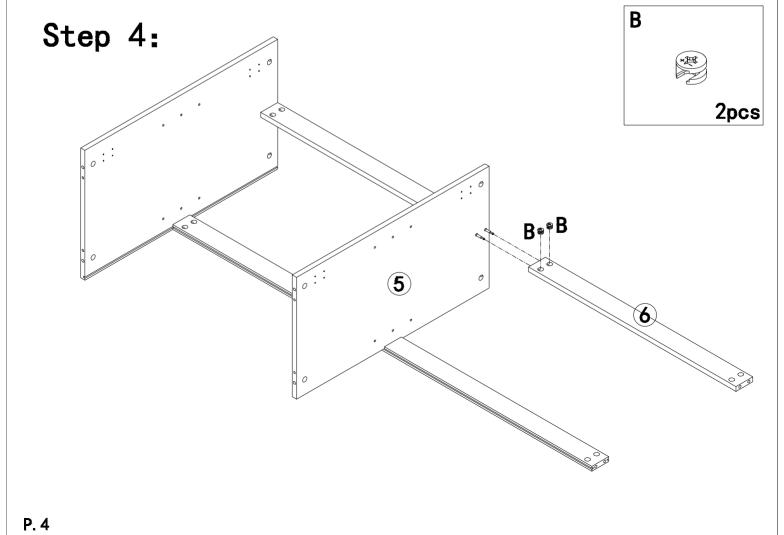


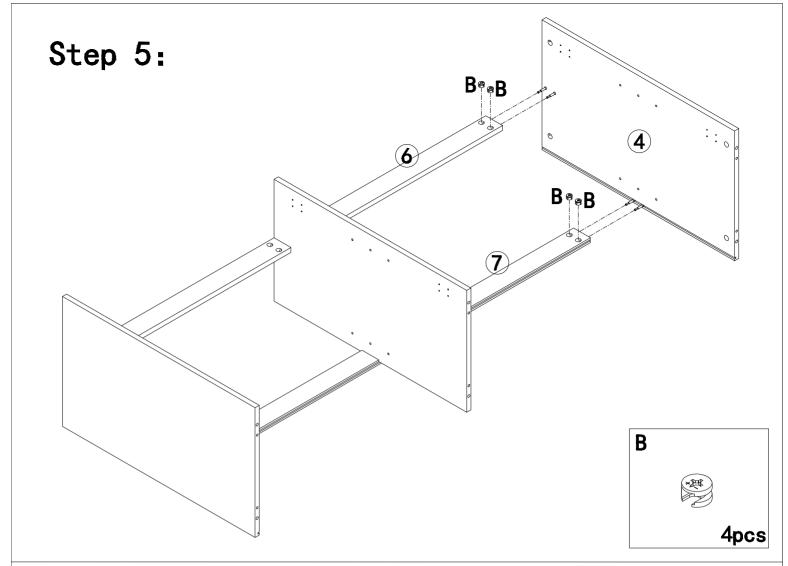


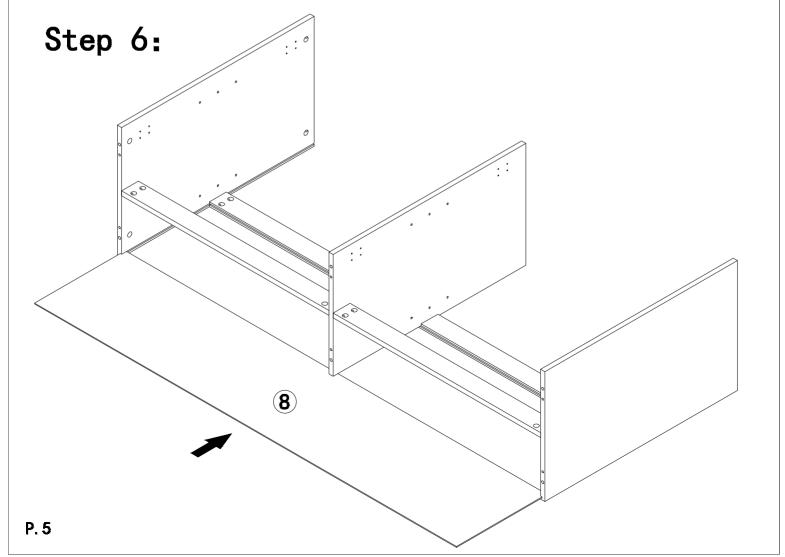


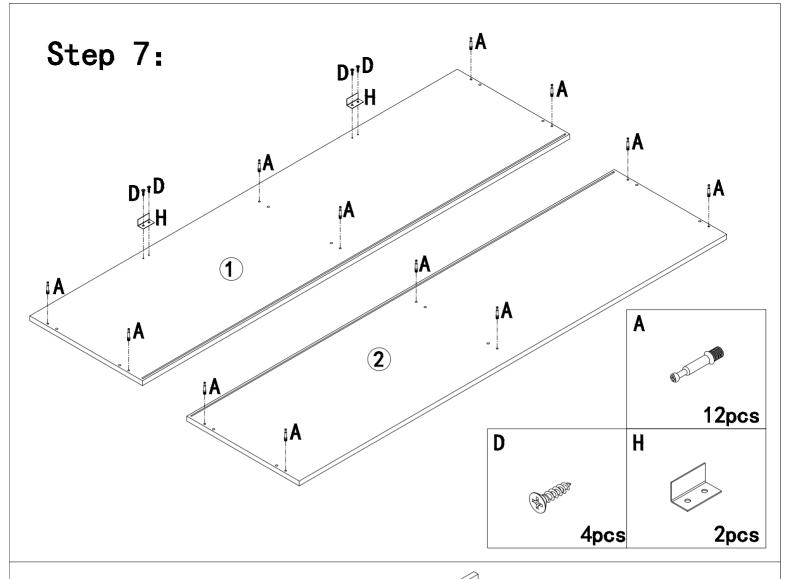


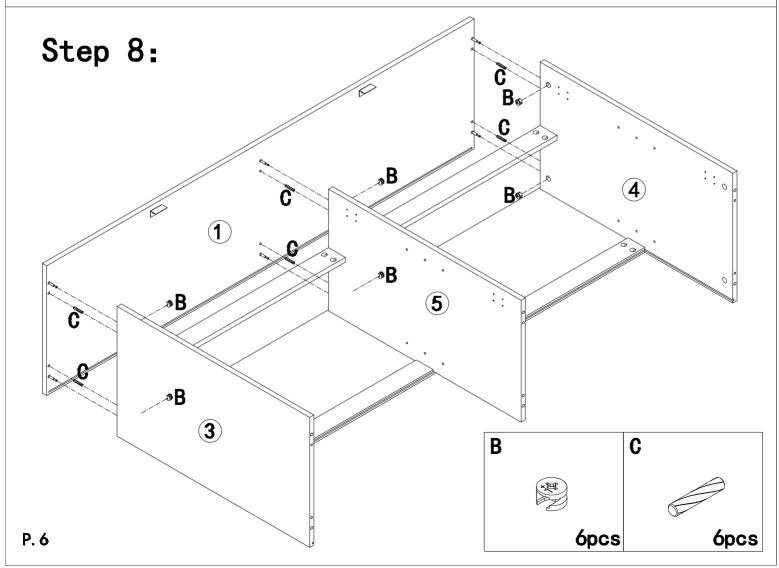


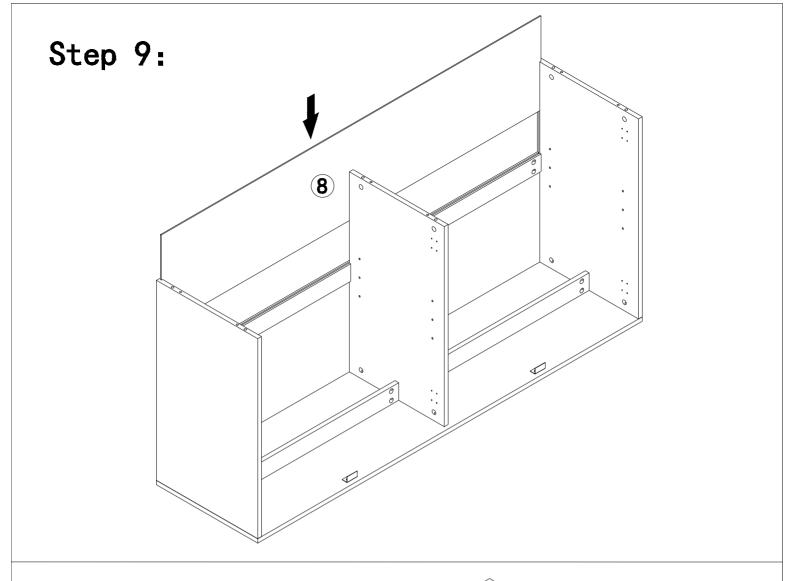


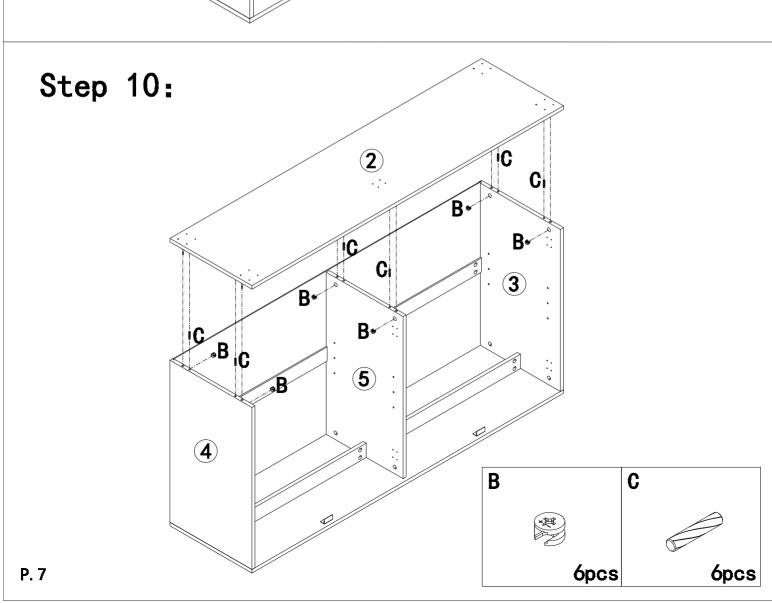


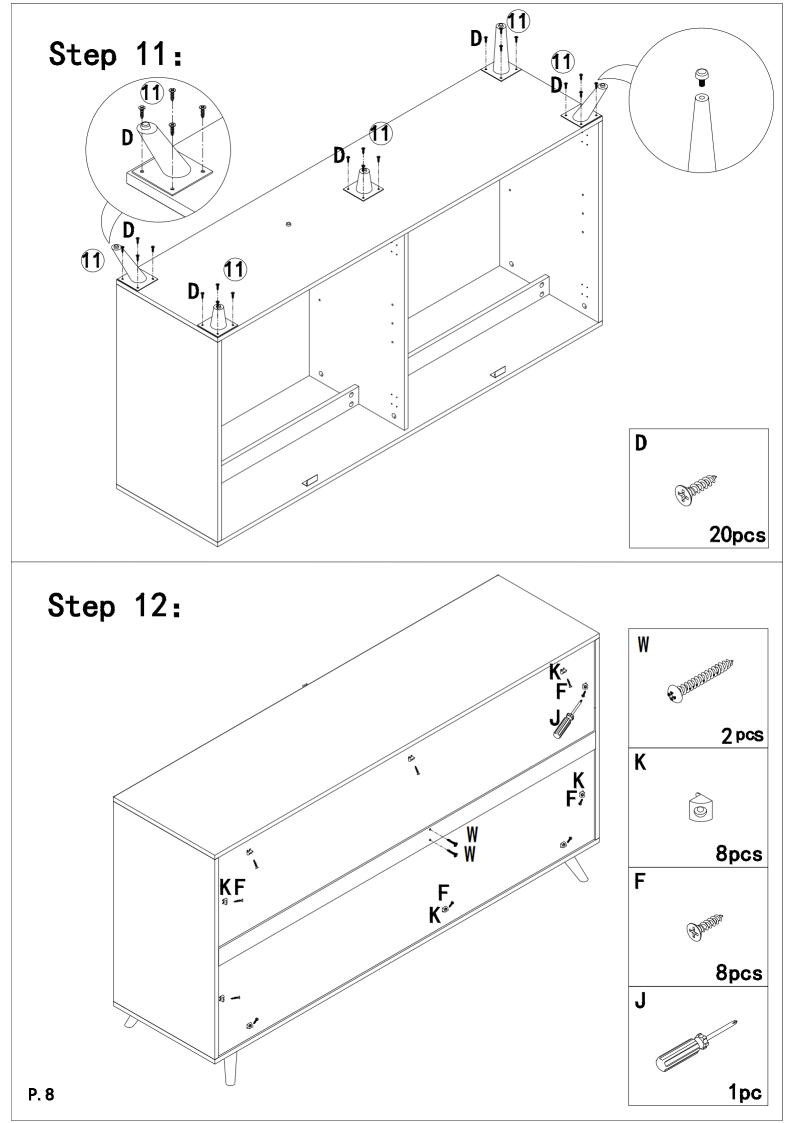


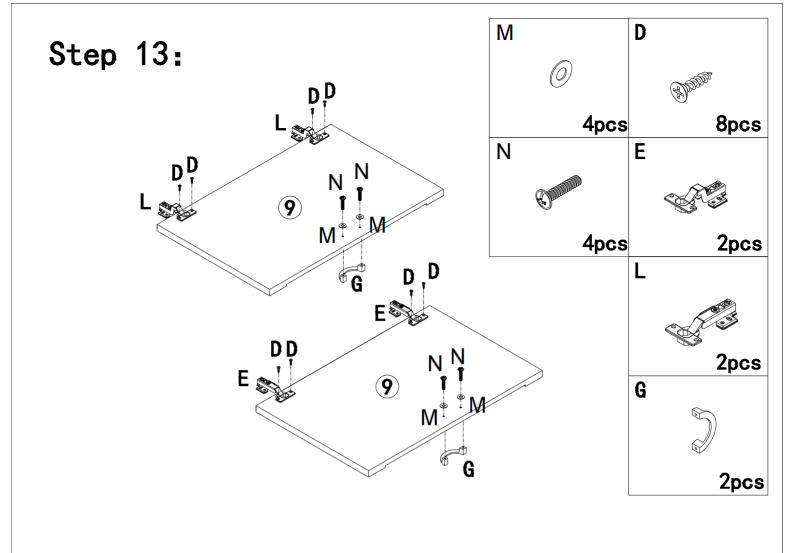


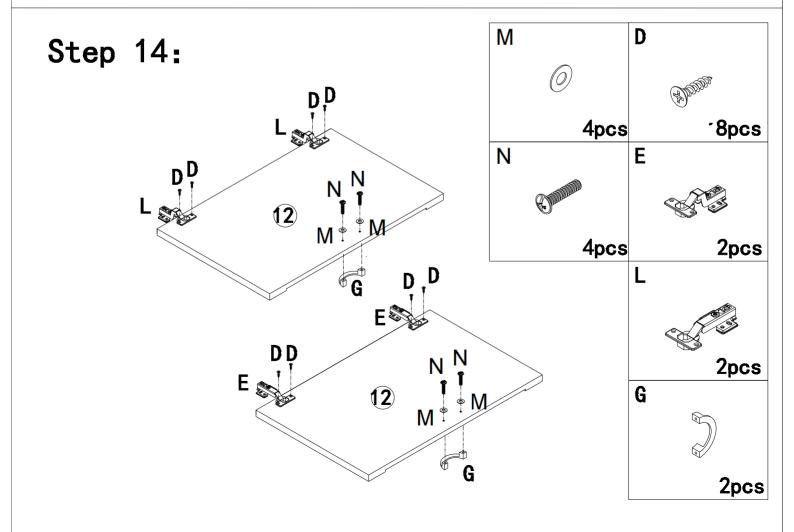

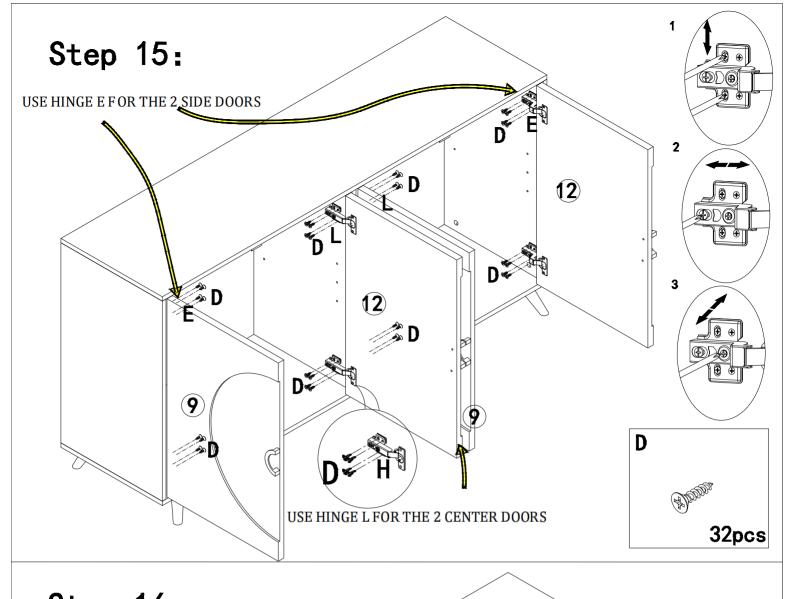

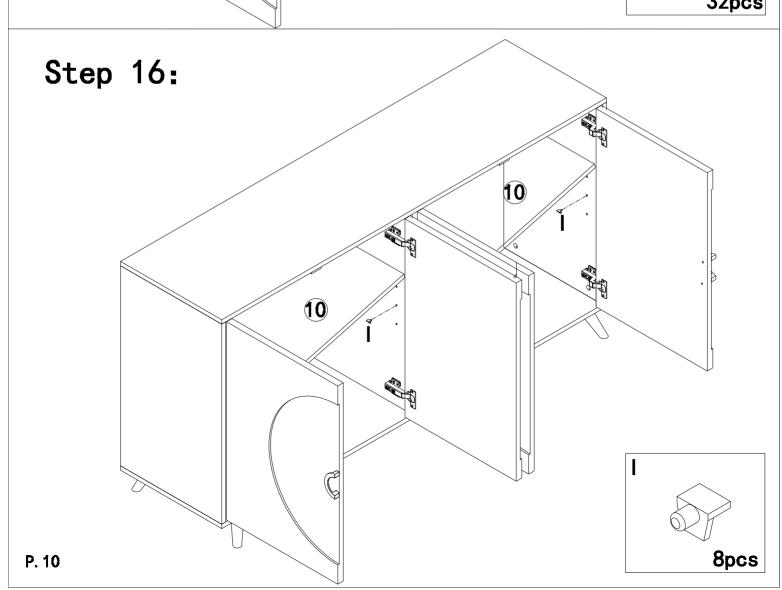


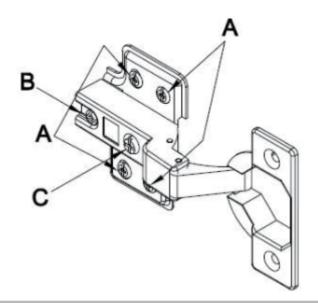

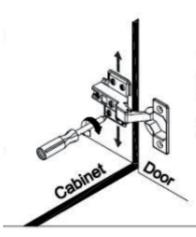


To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

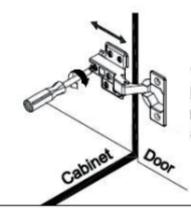

To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

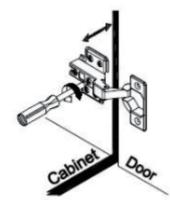

To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.