

Fingerprint lock operation instructions

When using for the first time, please use the spare key or mobile power supply (5V) to open the fingerprint and install the battery.

After fingerprint unlock, you need to open the drawer during the light, and lock it again when the light is off.

If the indicator blinks quickly after the device is unlocked, replace the battery.

• Fingerprint entry method (● blue, ● cyan, ● green)

1. Initial registration method: (Long press for 5 seconds → Multiple angle short press 5 times → Multiple angle short press 5 times → Successful)

Long press the fingerprint scanner for 5 seconds, wait for the **cyan** light to stay on, then release your finger; Place the finger that needs to be registered on the fingerprint reader and press it repeatedly from multiple angles for 5 times (when pressing, the **cyan** light will turn off once), and the **green** light will light up; The back **blue** light stays on, then use the same finger to place it on the fingerprint reader and repeatedly press it at multiple angles for 5 times (when pressing, the **blue** light goes out once is considered one time); The **green** light is on, indicating successful registration.

2. Subsequent registration steps: (Long press with registered fingerprint for 5 seconds → Short press from multiple angles for 5 times → Successful)

Press and hold the registered fingerprint for 10 seconds, wait for the **cyan** light to light up, and then release your finger; Place the finger that needs to be registered on the fingerprint reader and press it repeatedly from multiple angles for 5 times (when pressing, the **cyan** light will turn off once); The **green** light is on, indicating successful registration.

Note: Except for the initial registration method, all fingerprints are registered using this method.

• Password unlocking (● green, ● purple, ● blue)

1. You need to register your fingerprint first before using a password to unlock. The factory password is "333".

2. The number of times the fingerprint is touched represents the password number. When pressed, the light goes out once, 0 is not pressed, and 1-9 times represents the number 1-9. The first digit is not supported as 0, and the password is a 3-digit password.

3	3	3
hundreds place	tens place	ones place

 (Initial password)

3. Password unlocking steps

Press and hold the fingerprint device with an unregistered finger for more than 10 seconds, wait for the **purple** light to start flashing, and immediately release the finger; (The number of times the fingerprint is touched represents the password number, and when pressed, the light goes out once is considered one time)

● The **green** light is on, enter the number in the hundred digits of the password; Wait after the input is completed

● **Blue** light, enter the ten digit number on the password; Wait after the input is completed

● **purple** light, enter the number on each digit of the password; Wait after the input is completed

● If the **green** light stays on for 2 seconds, the lock will be unlocked successfully. If the green light goes off, the lock will be unlocked again.

• Change password (it is recommended not to change, if changed, this is the only password, please remember)

Long press the fingerprint reader with the registered fingerprint for more than 15 seconds, and immediately release the finger when the **purple** light is on;

● The **green** light is on, enter the number in the hundred digits of the password; Wait after the input is completed

● **Blue** light, enter the ten digit number on the password; Wait after the input is completed

● **purple** light, enter the number on each digit of the password; Wait after the input is completed

○ The light is off and the password has been successfully changed.

• Clear fingerprint password:

After opening the drawer, long press the setting key for more than 5 seconds, the red light is on, and then the green light is on, and the factory Settings are restored. At this time, any fingerprint can be unlocked, and the initial password 333 is restored.

D4PL1 Fingerprint drawer


Instruction manual



Please read the instructions carefully before use and keep them properly

Product introduction


Please read this manual carefully before use and keep it properly.

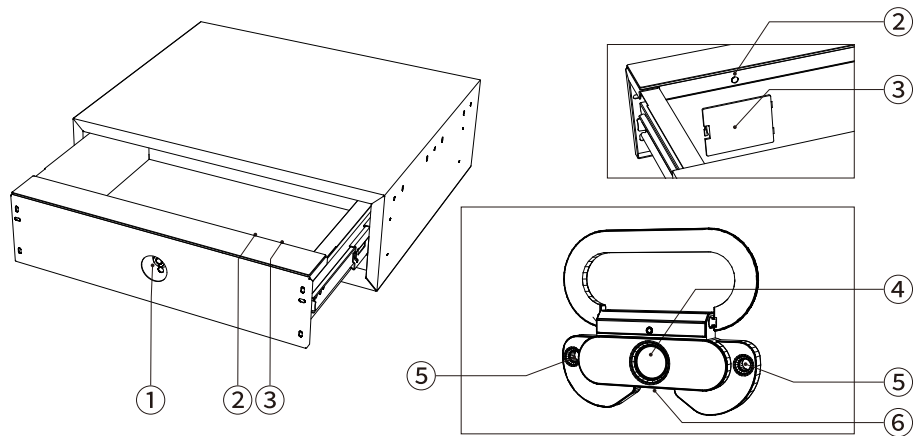

The first time you open the drawer, you need a key or a portable power supply
If the red light blinks quickly during normal use, replace the battery in time
Note the pros and cons when connecting the fingerprint lock

Number	Name	Instructions
①	Spare keyhole	In case of emergency, mechanical unlocking, it is recommended that the key be hidden. Remove the fingerprint device when using the keyhole after installation. (* Don't put the keys in the drawer *)
②	Settings key	This button is used to set fingerprints or restore factory Settings. (* Note that long press the setting key for more than 5 seconds to restore system initialization)
③	Battery box	Place the power battery. (Note that the positive and negative directions.)
④	Fingerprint scanner	Up to 50 fingerprints. If the red light blinks quickly during normal use, replace the battery in time
⑤	Mounting screw hole	Install a fingerprint reader. To use the keyhole, remove the fingerprint device first.
⑥	Standby power port	Type-C port (* no charging function), can use 5V ordinary mobile power supply.

Parts list

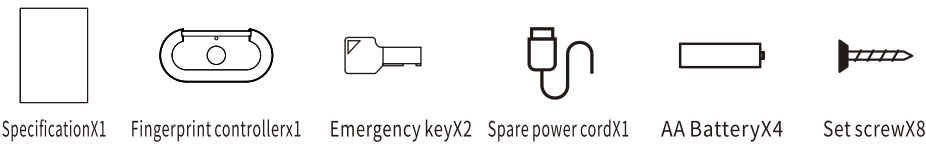

Installation instructions

△ Installation notice:

- Before installation, ensure that the cabinet space of the corresponding size is confirmed.
- Please don't put the spare key in the drawer

Installation procedure

- Install the battery: Use a spare key or mobile power supply (5V), open the battery in front of the pin and install the battery.
- Separate the box: Open the box drawer and remove the inner drawer and put it aside. (Press and hold the middle part of the slide on both sides, move the slide slide down on the left side and up on the right side to remove the drawer) (At this time, be careful not to damage the lock and electrical parts of the inner drawer, and do not move the lock buckle and other parts)
- Install the outer box: put the box into the suitable position of the cabinet, measure the position of the drawer from the left and right sides of the box shell to the outer screw, lock the outer box.
- Insert the drawer: completely pull out the slide rail, and gently push the inner drawing attention to the slide rail bead slot, and push and pull repeatedly (the process cannot be too hard) to complete the drawer installation.
- Panel holes: Measure the center of the panel and drill a hole with a diameter of 16mm 4.5mm above the center point. (Drawing surface needs 18mm plate)
- Install the panel: Paste double-sided tape on the back of the panel, close the drawer (the key is placed outside the drawer), adjust the position of the panel and paste the panel, unlock the drawer with the key, and fix the screw holes on both sides of the extraction surface from the inside out to lock the drawer panel.
- Install the fingerprint device: pull out the device cable near the keyhole, connect the device cable behind the fingerprint device, pay attention to the reverse and reverse, press the fingerprint test drawer to unlock and open normally, and then fix it on the extraction surface with screws. The installation is complete.

If you need a key to open the lock, remove the fingerprint device first.

