
# **Assembly Instructions**

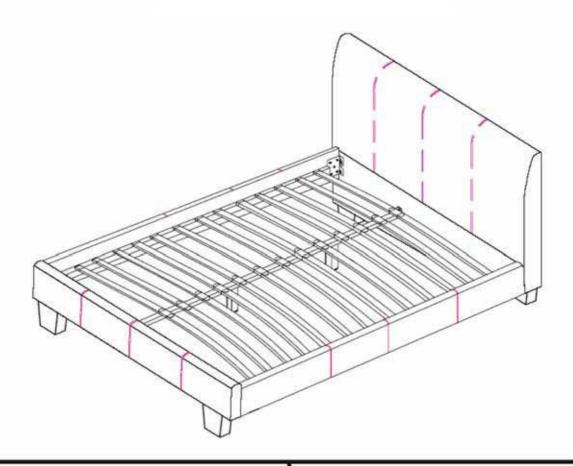

### ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY OOOO DIFFICULT

#### Tools Required for Assembly:

Allen Wrench






2 PERSONS RECOMMENDED

## **ASSEMBLY & CARE ADVICE**

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


#### BASIC ASSEMBLY TECHNIQUES

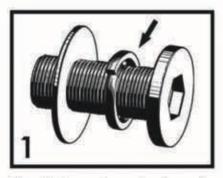


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.




Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

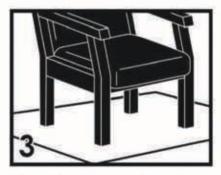


Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

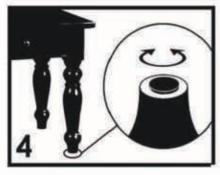

Some furniture comes with height adjusetment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

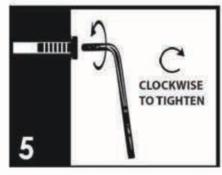

Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

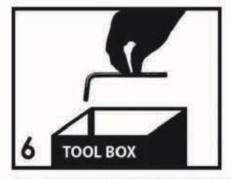


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



ALL RIGHTS RESERVED

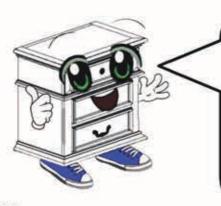


Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

MD

#### **Parts List**

 

#1 x 1 pc Headboard



**Hardware List** 

 
#A x 8 pcs Bolt 5/16"x1"



#2 x 2 pcs Side Rail



#B x 6 pcs Bolt 5/16"x1-1/2"



#3 x 1 pc Footboard



#C x 8 pcs Bolt 5/16"x4"



#4 x 1 pc Support Rail



#D x 22 pcs Lock Washer



#5 x 4 pcs HB/FB Foot



#E x 22 pcs Flat Washer



#6 x 26 pcs Slat



 
#F x 13 pcs Center Connector




#7×2pcs Φ1/4" Support Leg-250×30×20mm



#G x 26 pcs End Cap



#H x 1 pc Allen Wrench

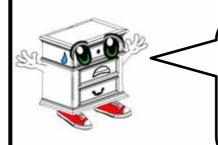


Due to the size and/or weight of this product, it is highly recommended that the assembly should be done near the area of its intended location. Make sure you have enough space to move around during the assembly. ALWAYS have at least two people to help with transporting and assembling the product to avoid any potential injury and/or damage.




- I. Align the two HB/FB feet (#5) with the pre-drilled holes underneath the headboard (#1).
- II. Prepare 4 bolt assemblies by inserting FIRST the lock washer (#D) onto the bolt (#C) and then the flat washer (#E) onto the SAME bolt (#C), in that order.
- III. Insert the bolt assemblies through the holes of the two HB/FB feet (#5) and secure those bolts using the Allen wrench (#H) to lock them with the headboard (#1).
- IV. Repeat the process above to assemble the remaining two HB/FB feet (#5) onto the footboard (#3).

#C x 8 pcs #D x 8 pcs #E x 8 pcs

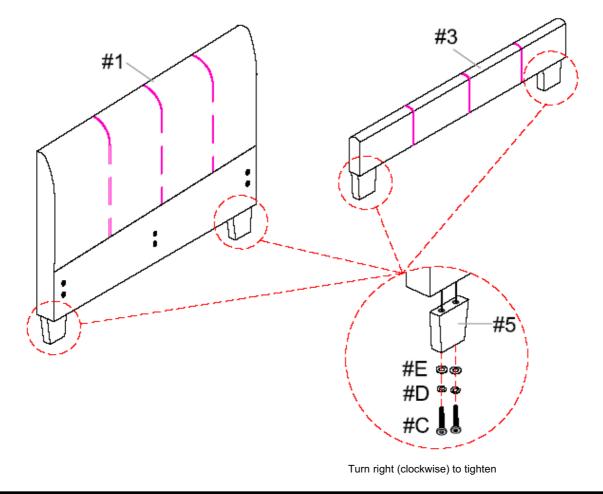




- I. Align the 2 support rail legs (#7) with the pre-drilled holes of the support rail (#4).
- II. Prepare 2 bolt assemblies by inserting FIRST the lock washer (#D) onto the bolt (#B) and then the flat washer (#E) onto the SAME bolt (#B), in that order.
- III. Insert the bolt assemblies through the pre-drilled holes of the support rail (#4) using the Allen wrench (#H) to lock them with the 2 slat support legs (#7).

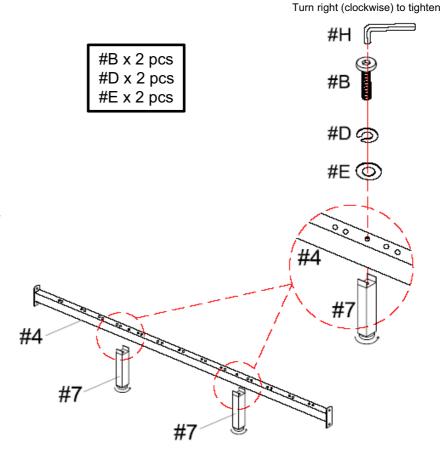


Adjust the levelers on the support rail legs (#7) according to the ground level on Step 4.

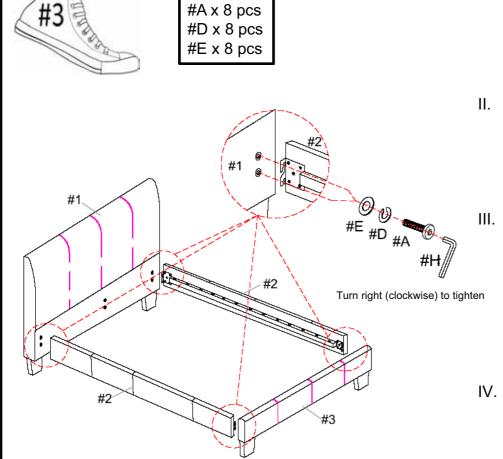

- I. Prepare 4 bolt assemblies by inserting FIRST the lock washer (#D) onto the bolt (#A) and then the flat washer (#E) onto the SAME bolt (#A), in that order.
  - Insert the bolt assemblies through the right and left side of the pre-drilled holes of the headboard (#1) using the Allen wrench (#H) but expose about ½" of the bolts' threads. Mount the brackets on the side rails (#2) onto the bolts (#A) on each side of the headboard (#1). Make sure all the washers are in the FRONT of the brackets. Use the Allen wrench (#H) to further tighten the bolts to secure the two parts together. Repeat the process above to assemble the other ends of the 2 side rails (#2) onto the footboard (#3).

Page 5 of 6

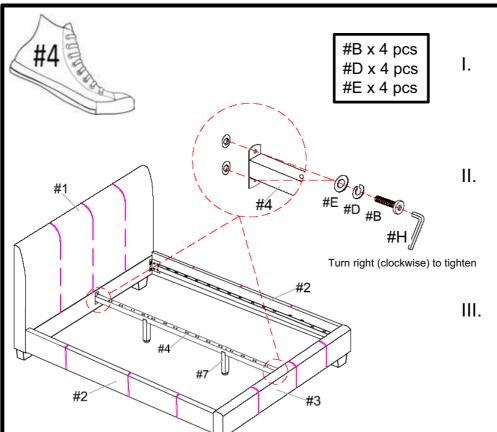

Adjust the levelers according to the ground level. To lower or to raise the support rail legs, turn the levelers clockwise or counterclockwise, respectively.

Align the assembled support rail (#4) with the pre-drilled holes on the center of the headboard (#1) and the footboard (#3). Prepare 4 bolt assemblies by inserting FIRST the lock washer (#D) onto the bolt (#B) and then the flat washer (#E) onto the SAME bolt (#B), in that order. Insert the bolt assemblies through the brackets of the support rail (#4) using the Allen wrench (#H) to lock them with the headboard (#1) and the footboard (#3).


#F x 13 pcs



Note: The correct position of the bed slats should be arcing UPWARD when placing on the rails.


I. Prepare a bed slat using two slats (#6), one center connector (#F) and two end caps (#G). See diagram for the correct sequence in connecting those parts.

- II. Align the end caps (#G) with the pre-drilled holes on each side of the side rails (#2) and press firmly down on both end caps (#G) to lock with the side rails (#2). Then press firmly down on the center connector (#F) to lock with the support rail (#4).
- III. Repeat the process above to assemble the remaining bed slats onto the side rails (#2) and the support rail (#4).
- IV. Make sure the bed is rested on a flat surface and does not feel loose or wobbly. If it does, double check that the bolts/screws are secured and properly tightened.

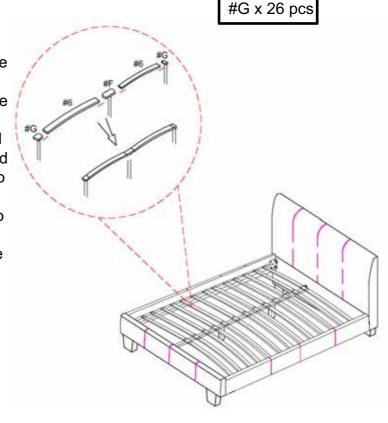

ASSEMBLY IS COMPLETED

# **Assembly Instructions**

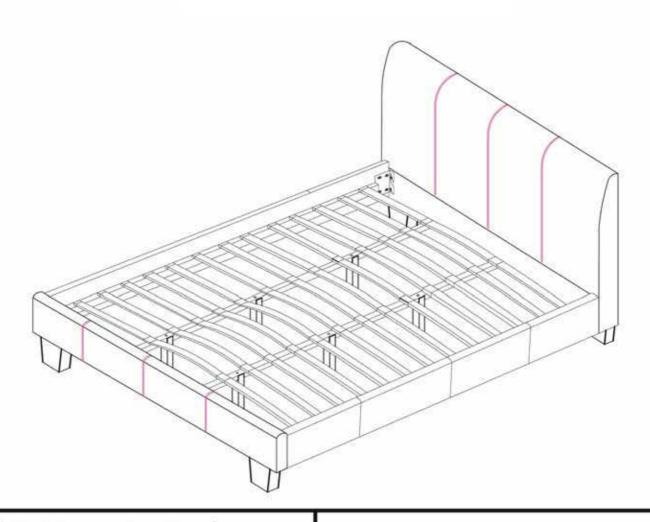

### ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY OOO O DIFFICULT

Tools Required For Assembly:

Allen Wrench






2 PERSONS RECOMMENDED

## **ASSEMBLY & CARE ADVICE**

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY.
PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


#### BASIC ASSEMBLY TECHNIQUES

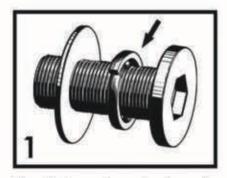


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.




Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

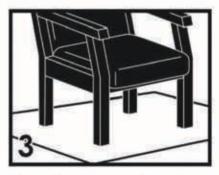


Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

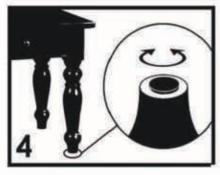

Some furniture comes with height adjusetment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

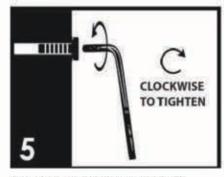

Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

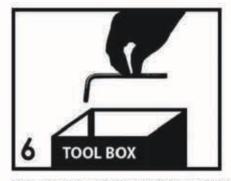


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.





ALL RIGHTS RESERVED

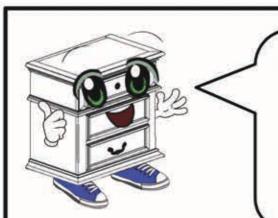


Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

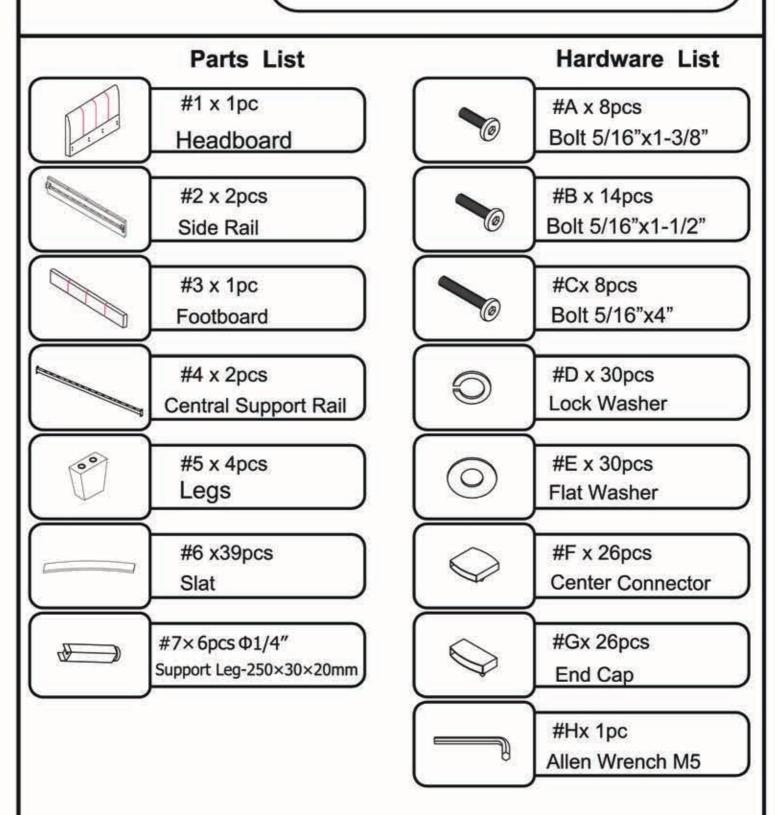


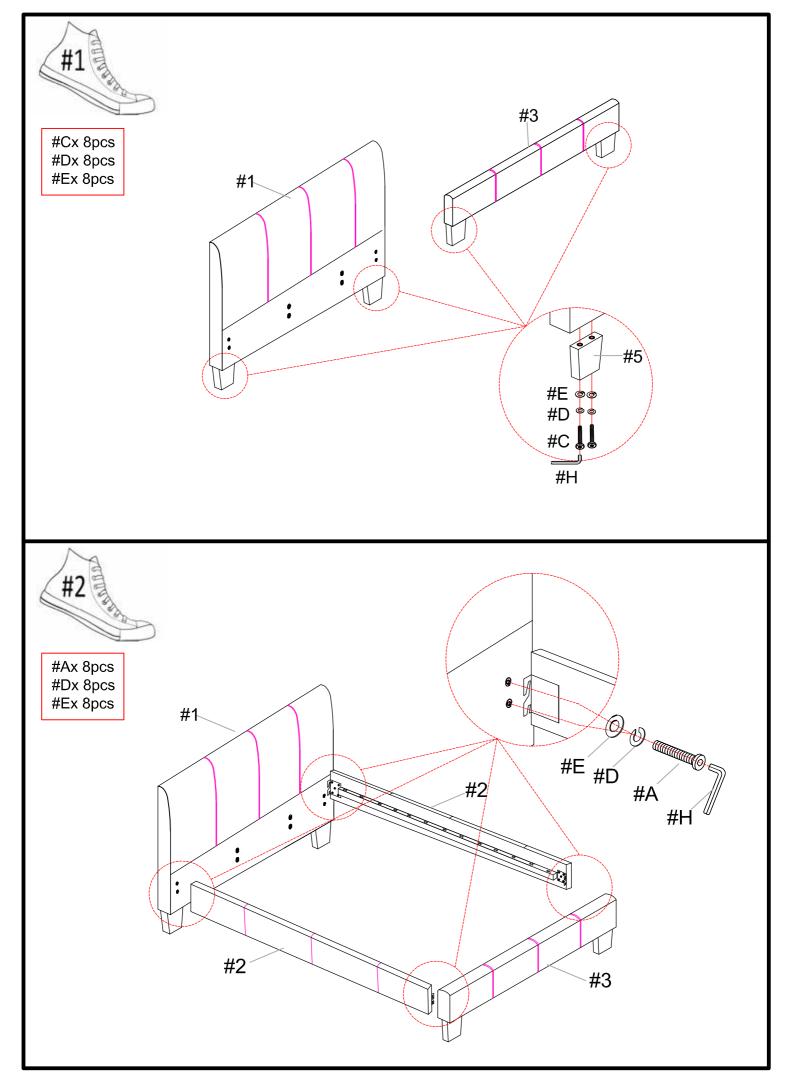

Page 4 of 6

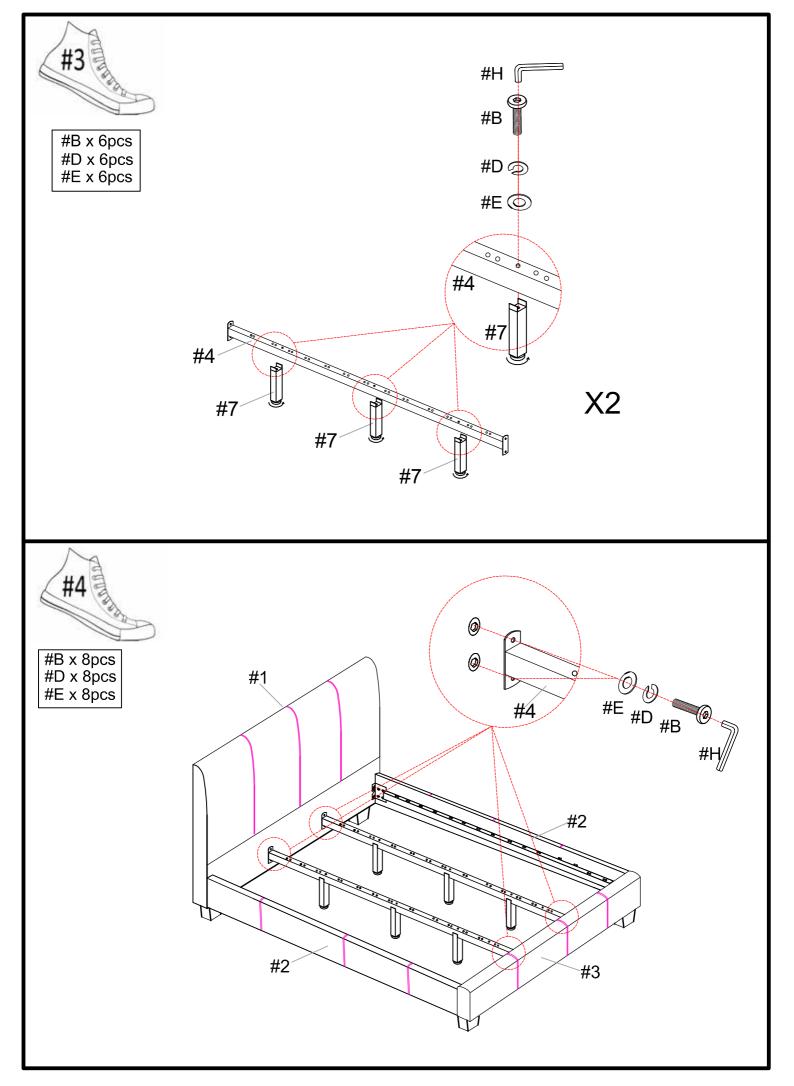

Page 5 of 6

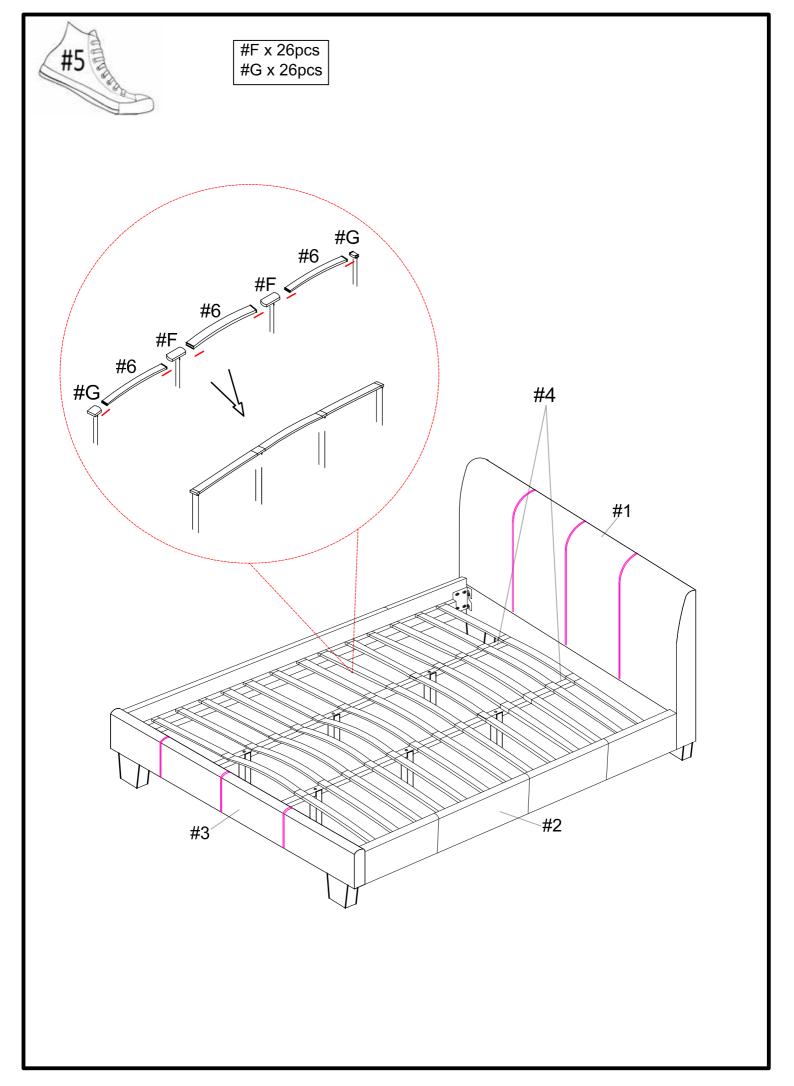

Page 6 of 6