


ASSEMBLY INSTRUCTION

Item No: B18S-1320

Description: DINING CHAIR

 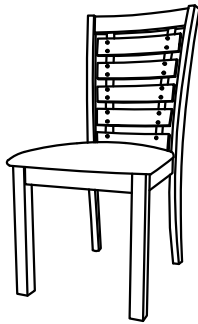




 


 

 
IMPORTANT NOTE :

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.
- Tighten screws periodically! With the use of this product bolts and screws may become loose over time!
- Do not attempt to modify parts!




PARTS FOR EACH CHAIR


NO.	PARTS LIST COMPONENT	QTY.
1	CHAIR BACK 	1 PCS
2	SEAT CUSHION WITH FRAME 	1 PCS
3	FRONT LEG 	2 PCS

NO.	HARDWARE LIST DESCRIPTION	QTY.
A	M4 x 100MM ALLEN KEY 	1 PCS
B	M6 x 35MM JCBC BOLT 	2 PCS
C	M6 x 60MM JCBC BOLT 	4 PCS
D	M6 x 80MM JCBC BOLT 	4 PCS
E	M6 x 13MM SPRING WASHER 	10 PCS
F	M6 x 19MM FLAT WASHER 	10 PCS


STEP 1

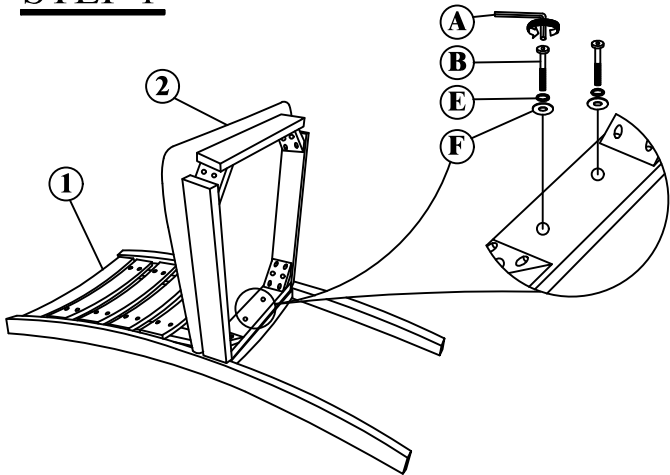

STEP 2

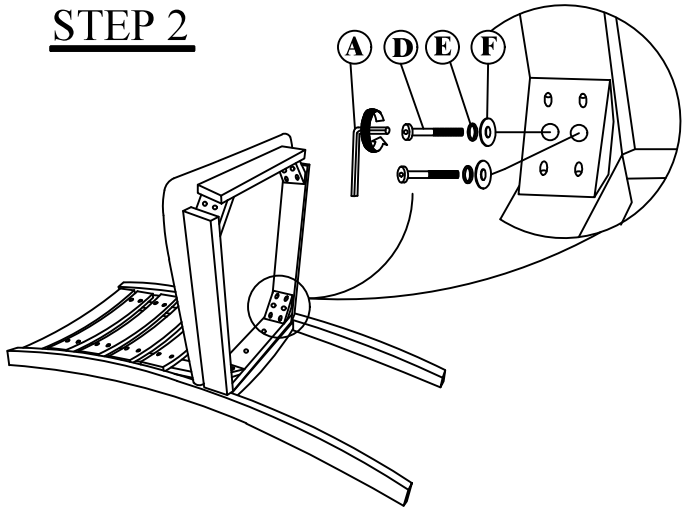

STEP 3

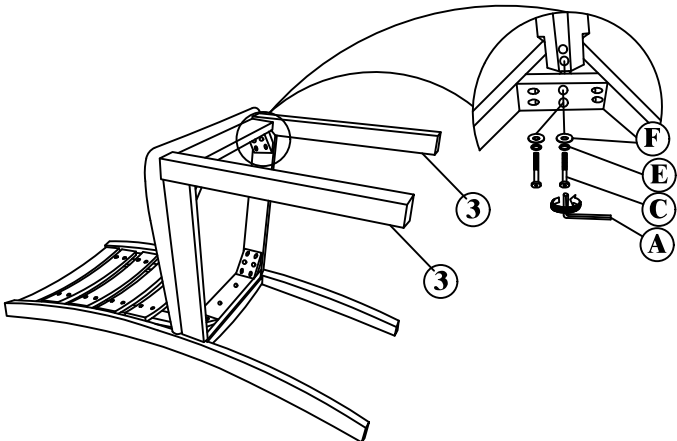

STEP 4

