 




INSTALLATION

Product Manual

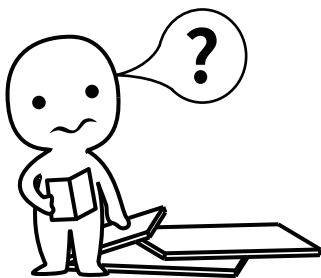


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

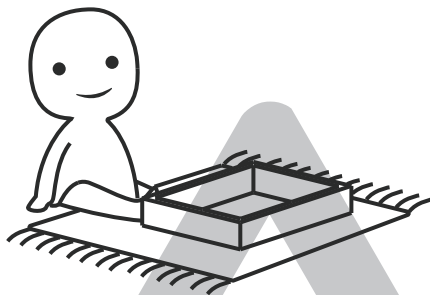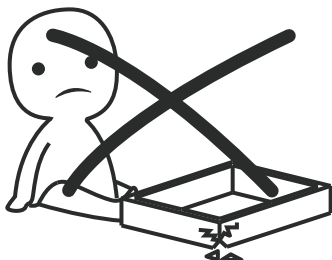



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer- could be a rug.

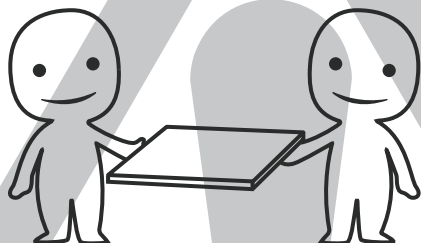

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

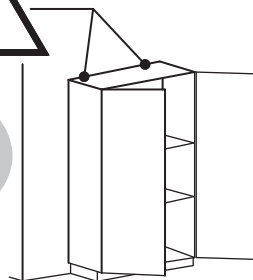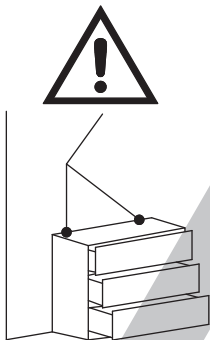

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

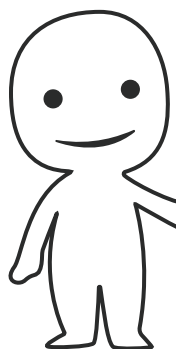


Please prepare the following tools

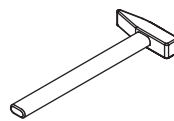   

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 80 Ø 15 x 10 mm	B x 80 Ø 6 x 35 mm	C x 52 Ø 6 x 30 mm	D x 80	E x 16 Ø 3.5 x 12 mm
F x 132 Ø 3.5 x 14 mm	G x 8	H x 3	J x 2	K x 2
L x 11	M x 44	N x 12 Ø 3 x 16 mm	P x 2	Q x 2
R x 16 Ø 3.5 x 25 mm	S x 22 Ø 4 x 16 mm	T x 2 Ø 3.5 x 35 mm	U x 24 Ø 5 x 40 mm	V x 44 Ø 4 x 14 mm
W x 8	X x 8	Y x 4	Z x 4 Ø 6 x 20 mm	

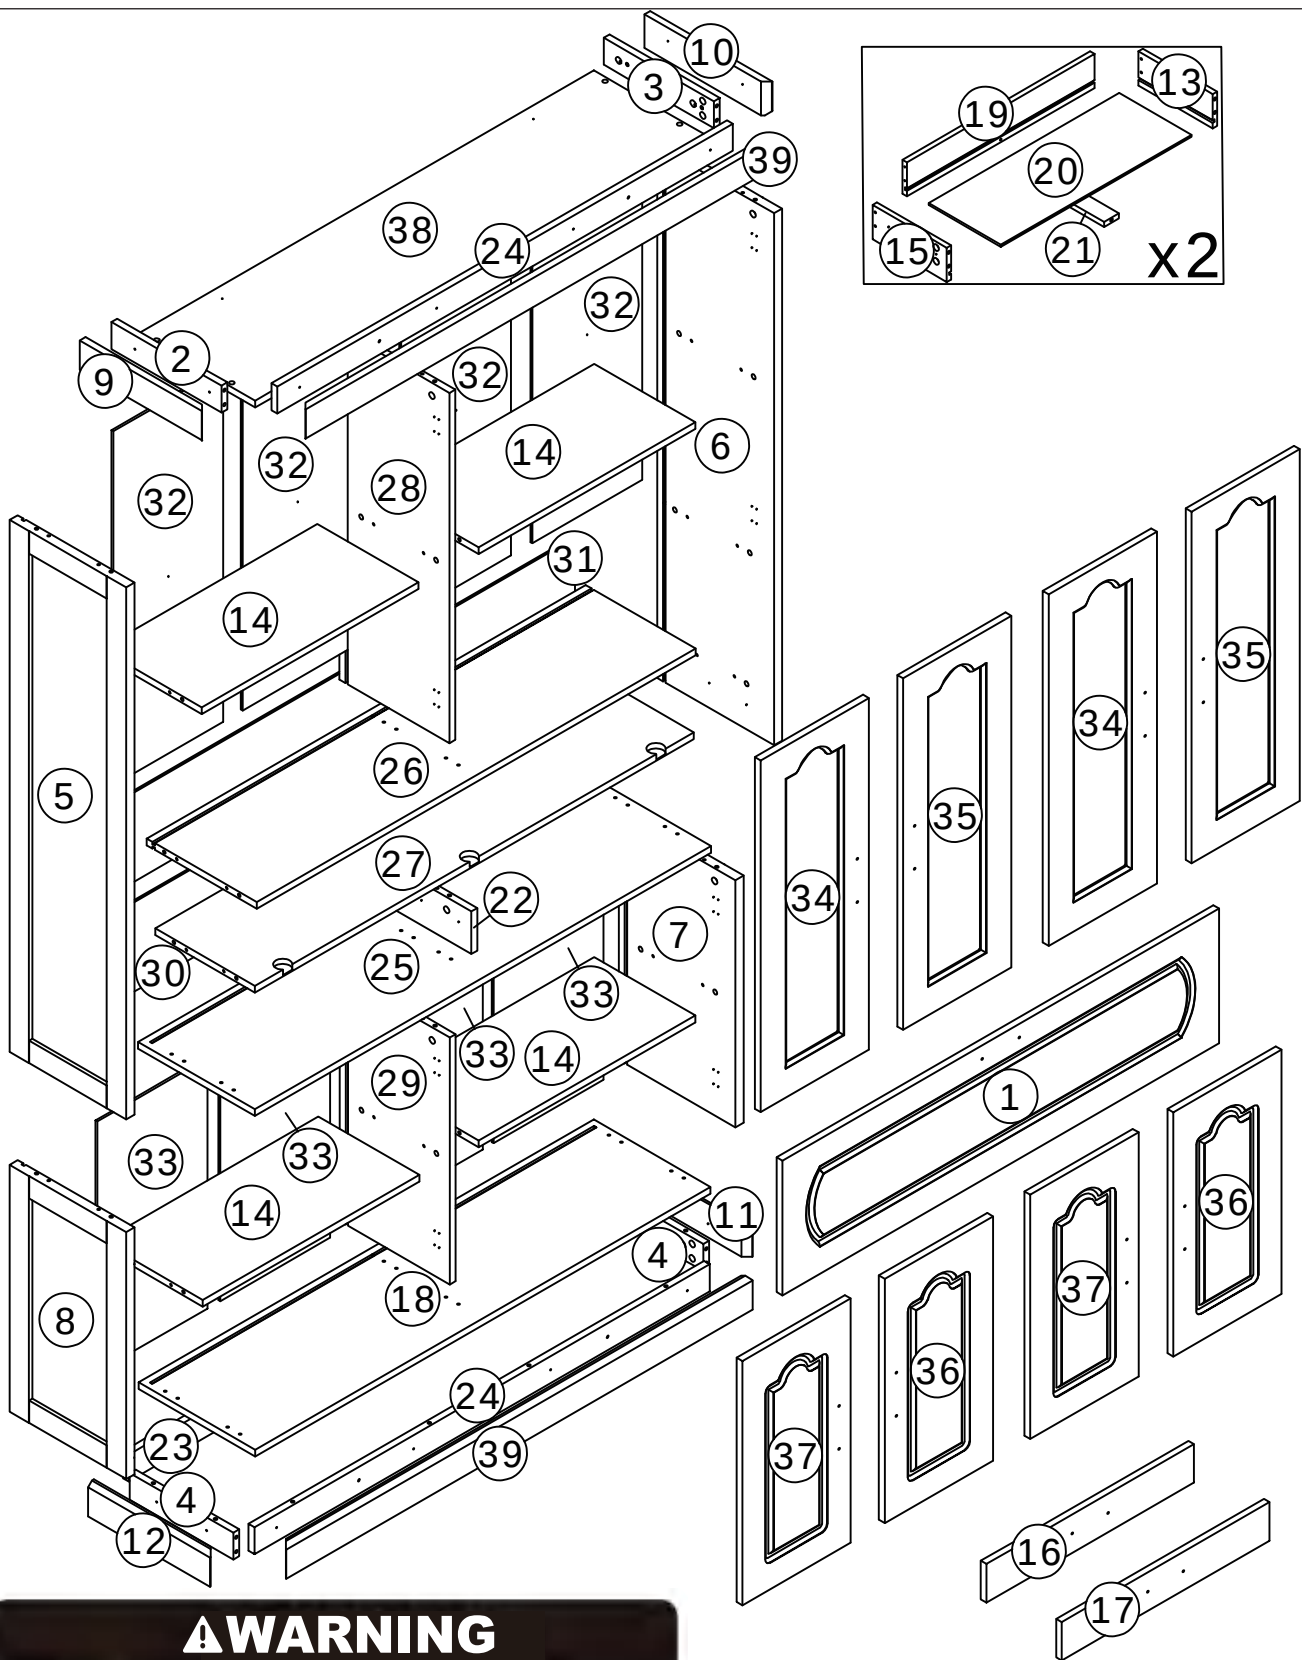 


⚠ WARNING




Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*

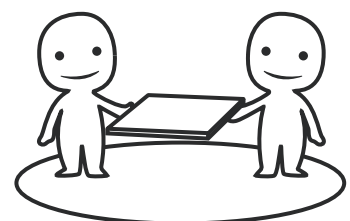


ASSEMBLED BY 2 ADULTS

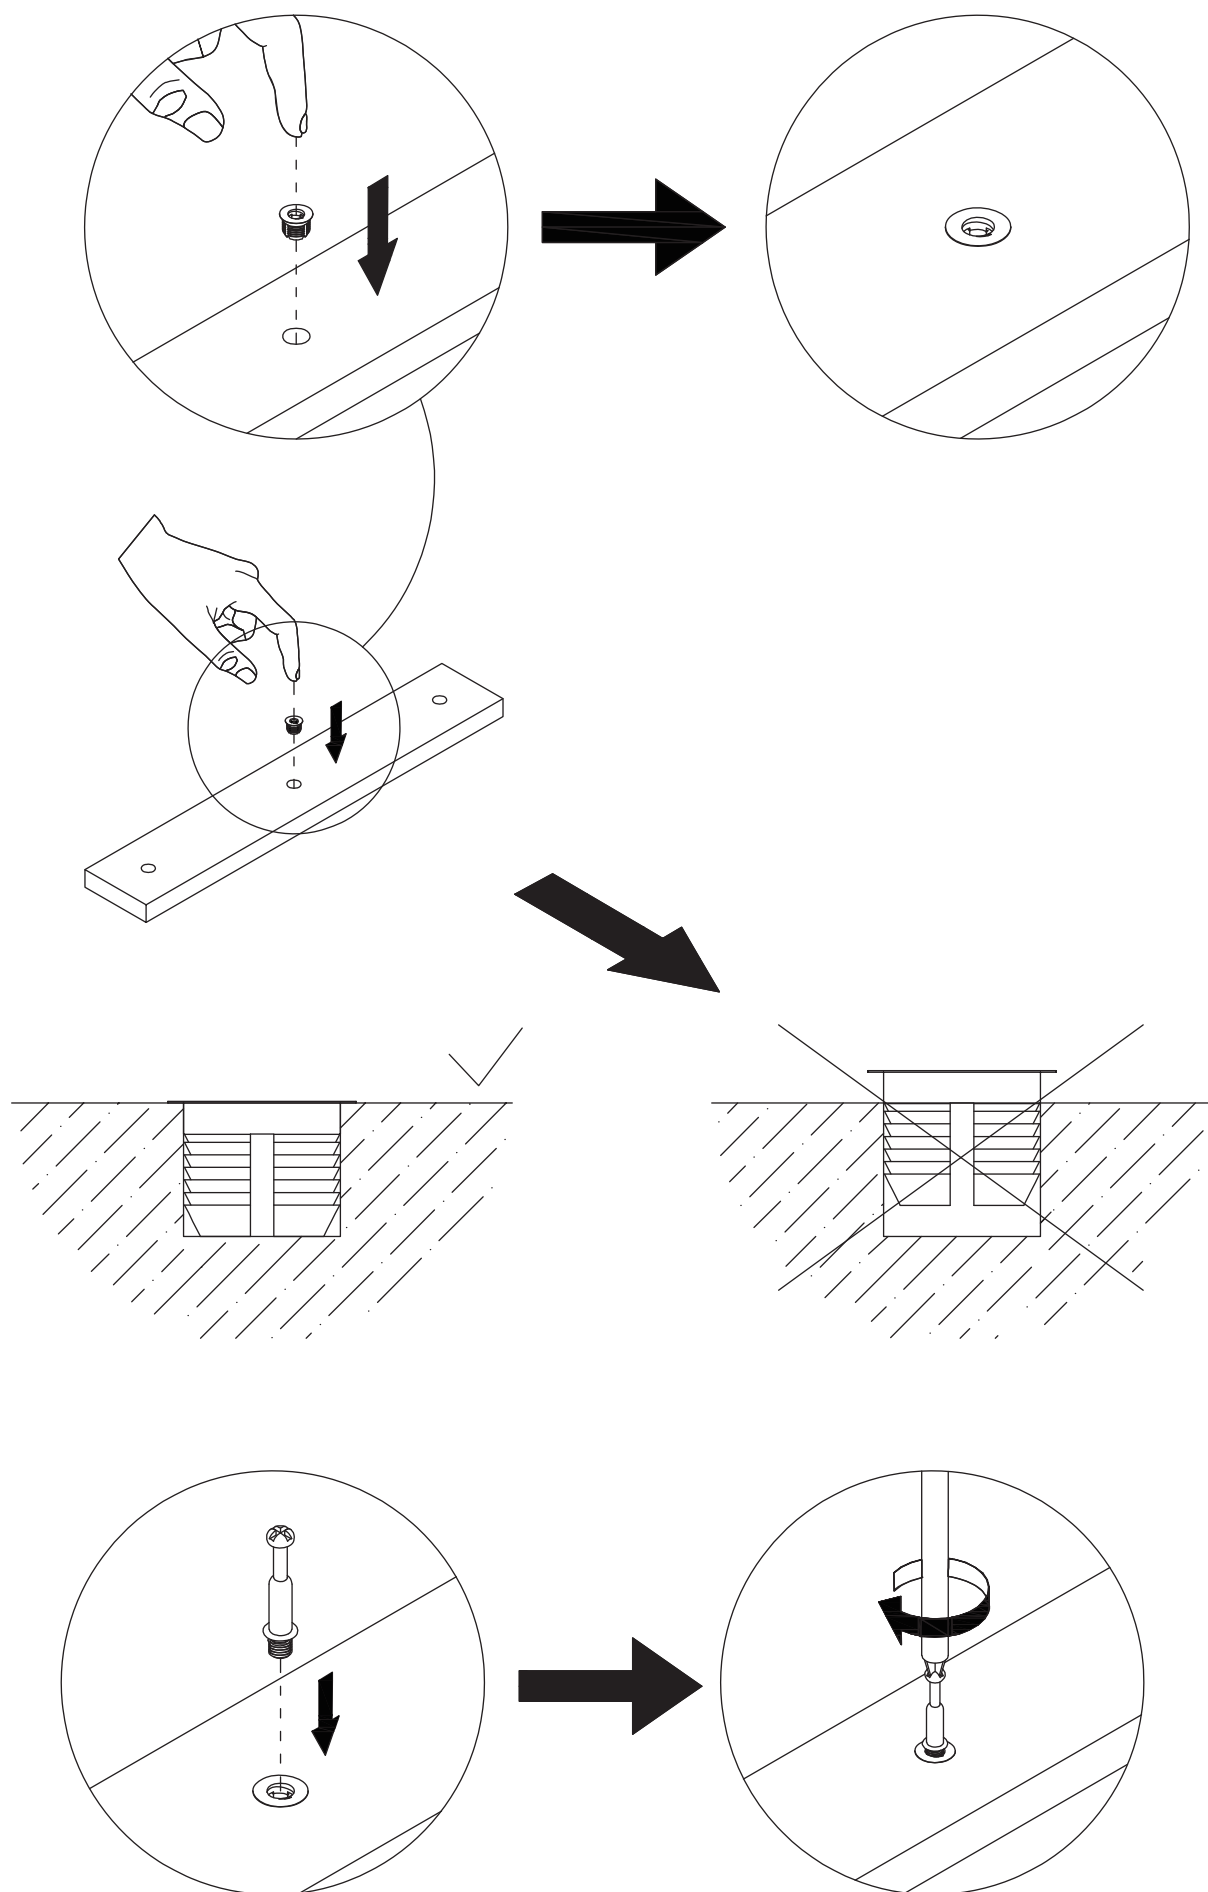 




**Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.**

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.





 
Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

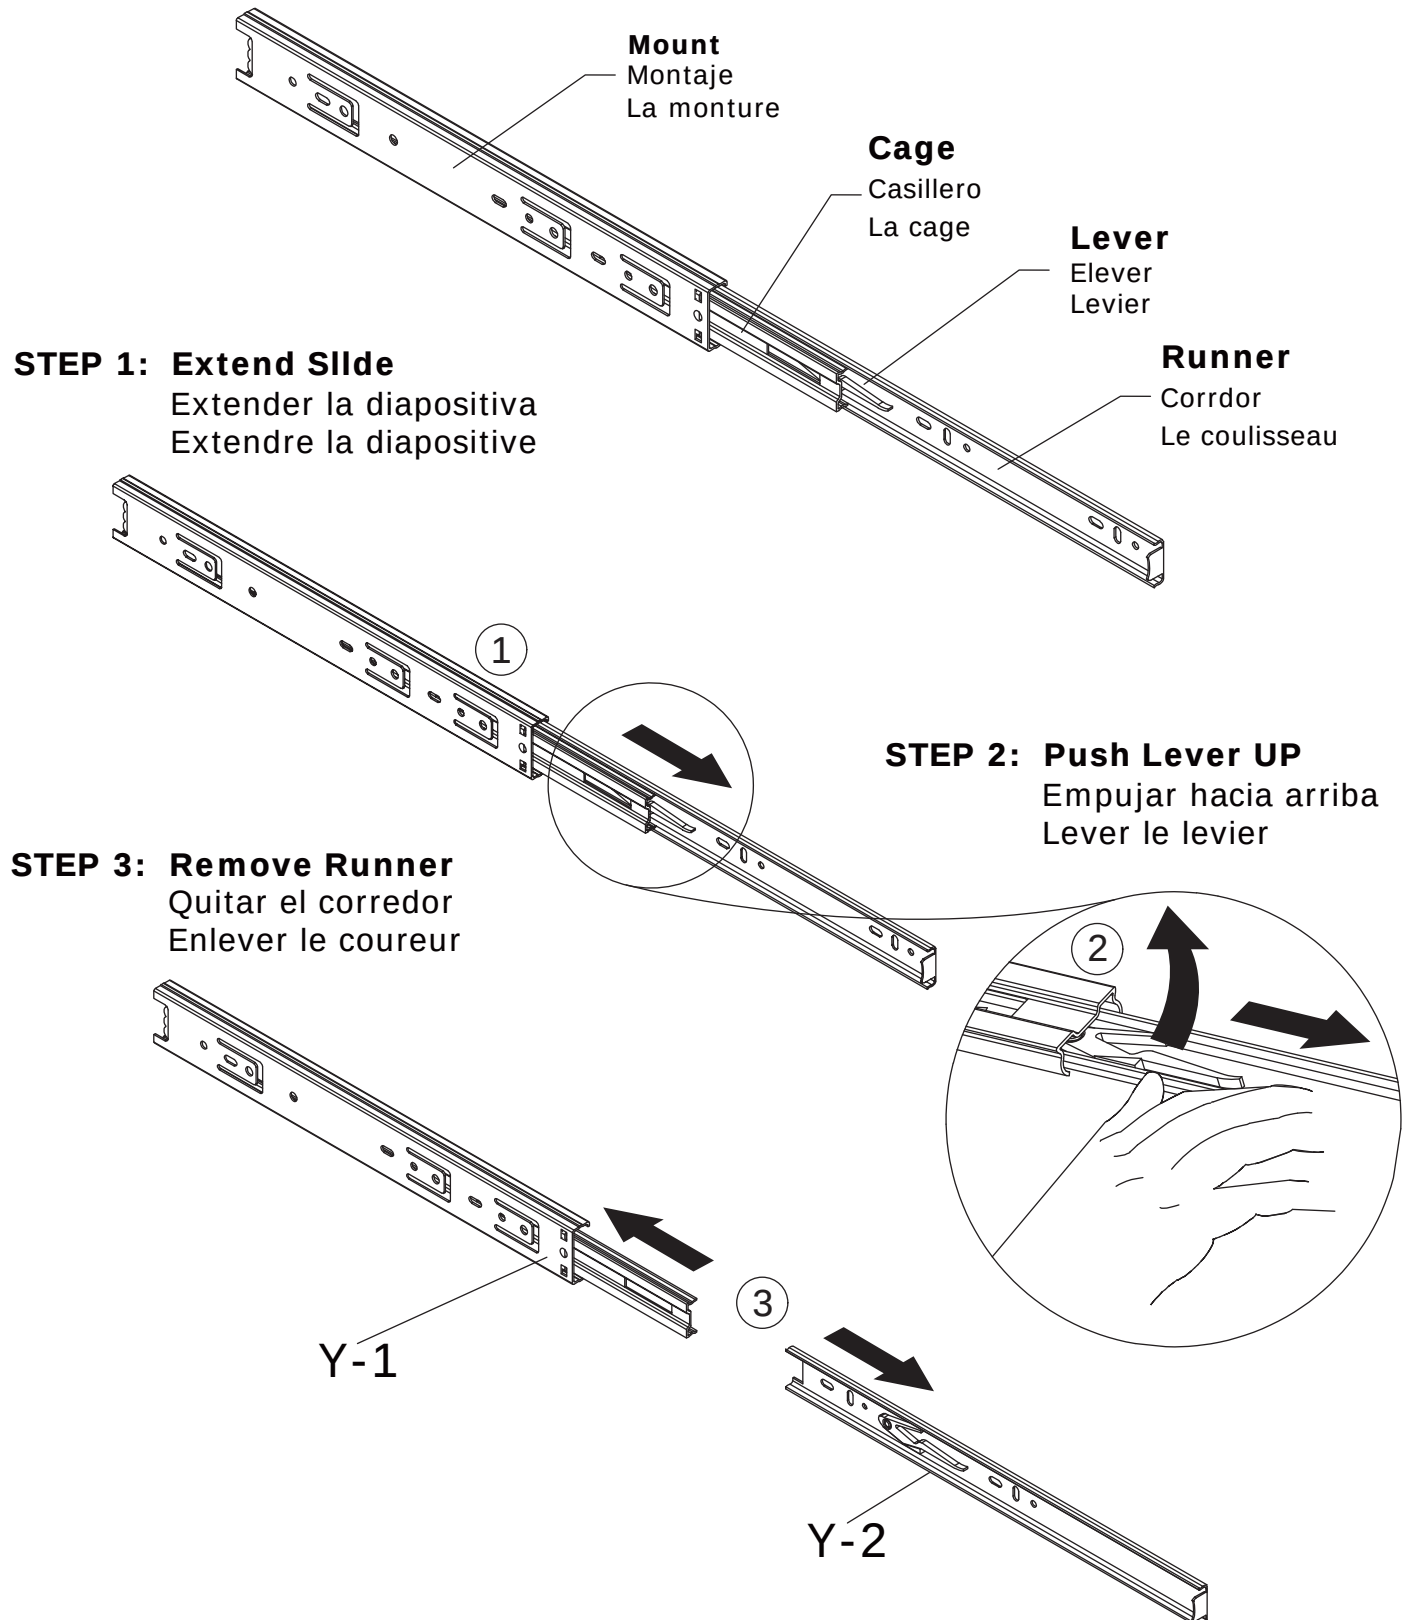

1

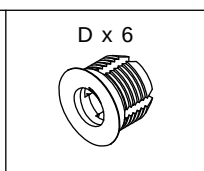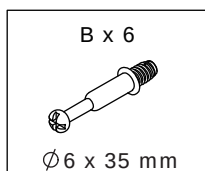   

     Insert plug (D) into Panels 7, 8 and 29, then screw self-tapping bolt (B) into Panels 7, 8 and 29.

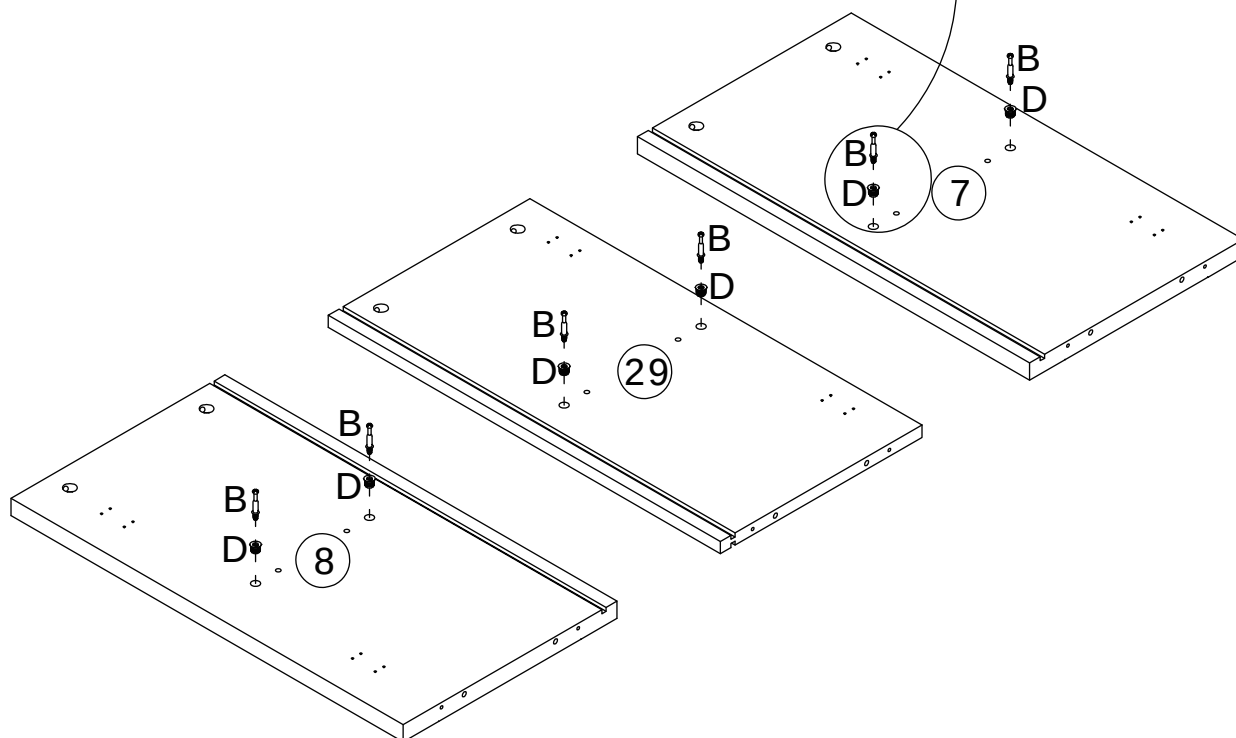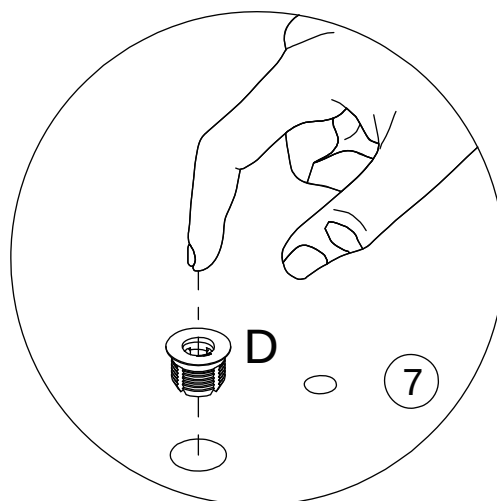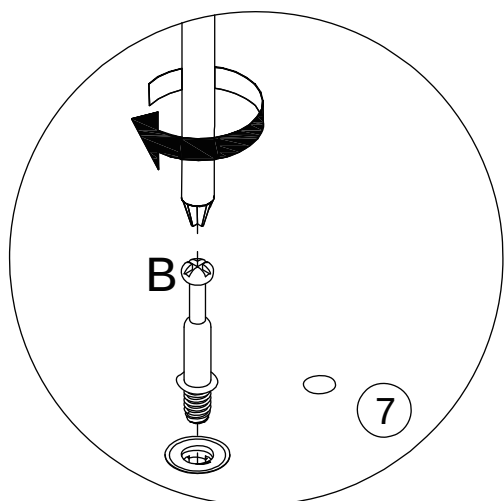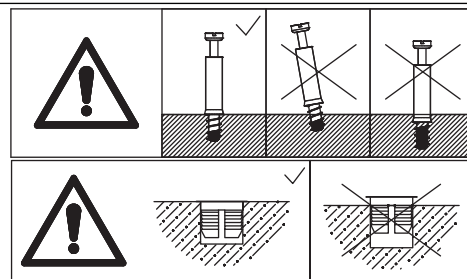


2

A x 2




Ø 15 x 10 mm


 
C x 2




Ø 6 x 30 mm

 

  
Connect Panel 14 to Panel 29 using dowel pin (C), then tighten by turning cam lock (A) clockwise.

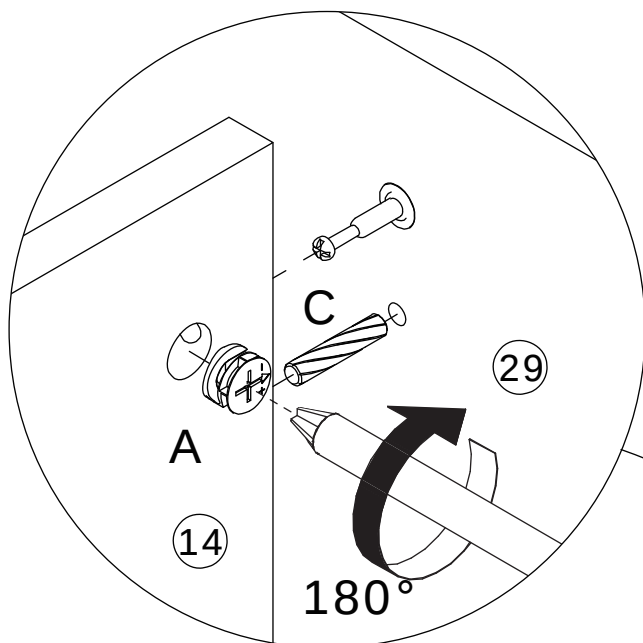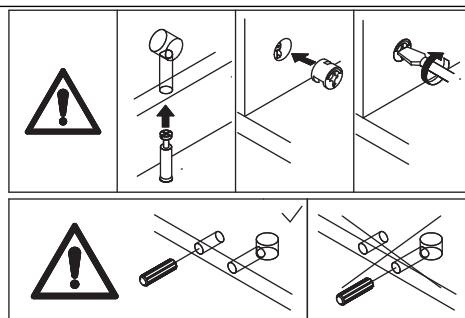

 
Pay attention to hole positions and panel directions.

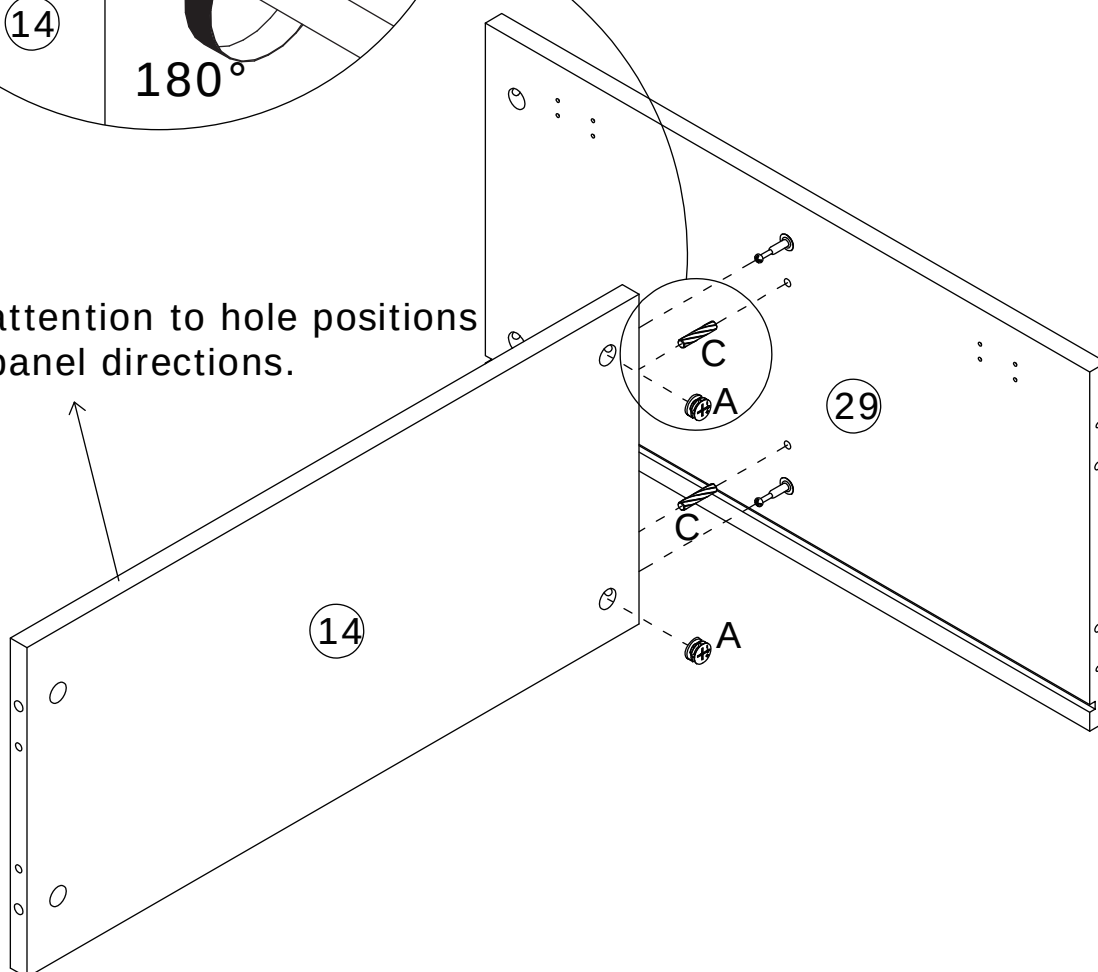

3

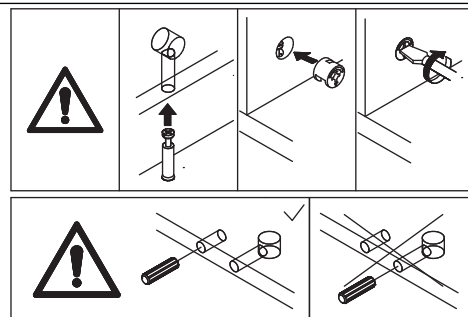 

 Connect Panel 8 to Panel 14 using dowel pin (C), then tighten by turning cam lock (A) clockwise.

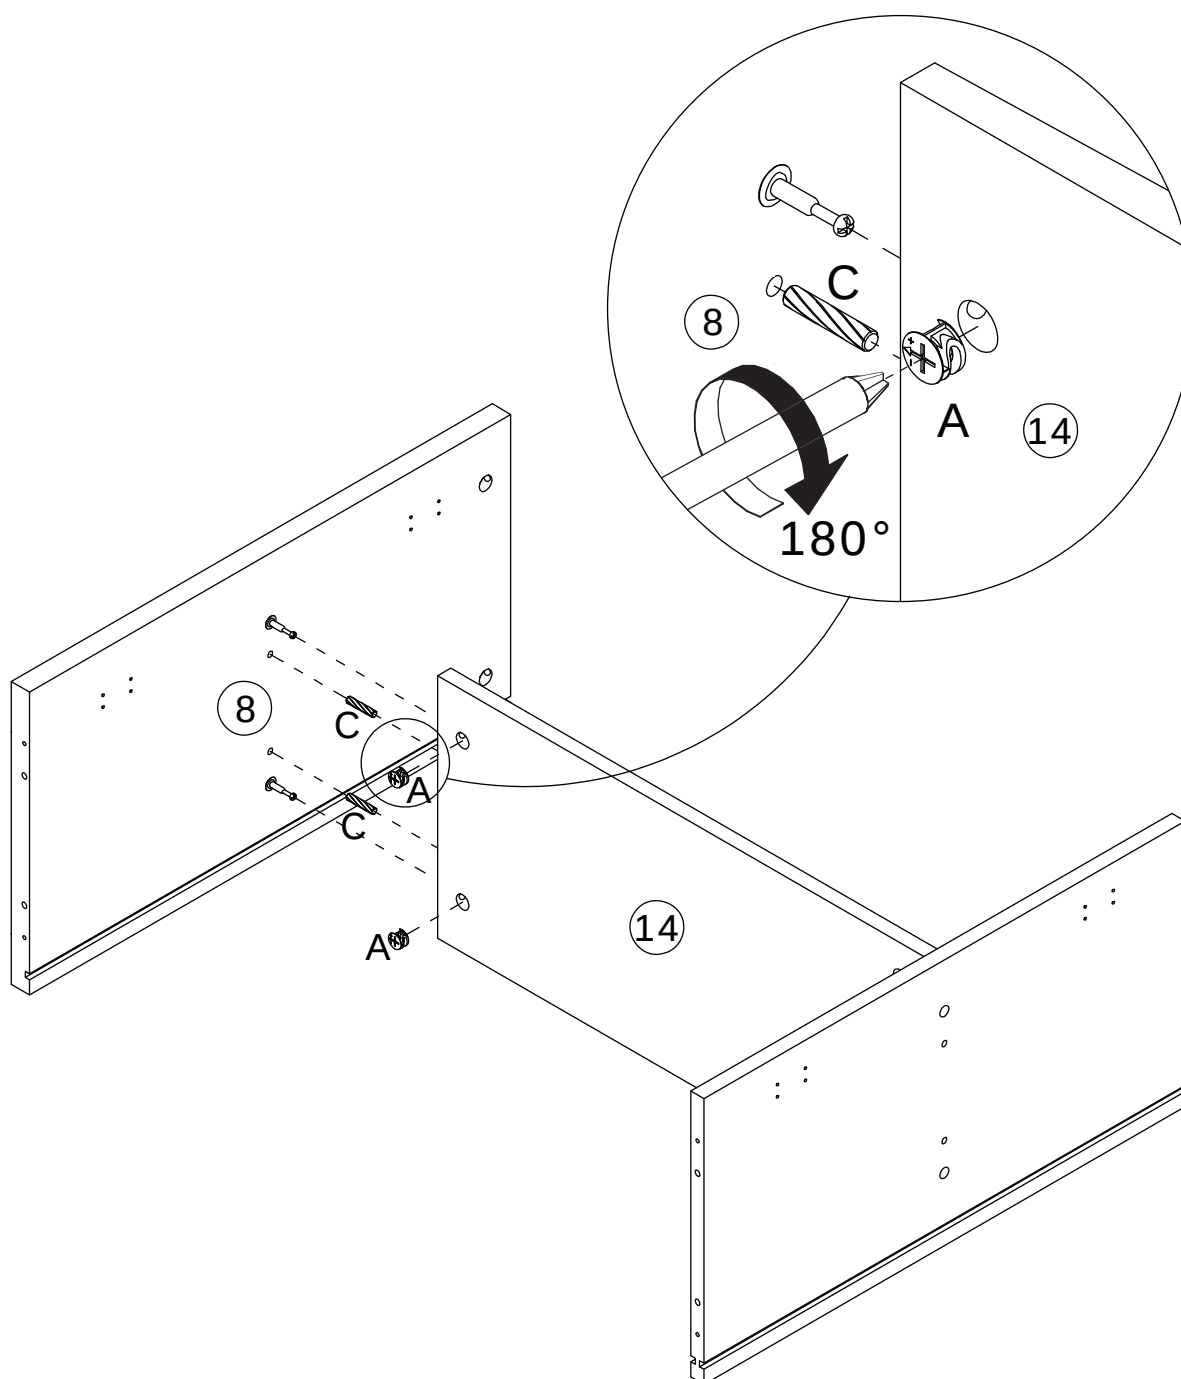



4

B x 6







Ø 6 x 35 mm

  
D x 6



    
Insert plug (D) into Panel 29, then screw self-tapping bolt (B) into Panel 29.

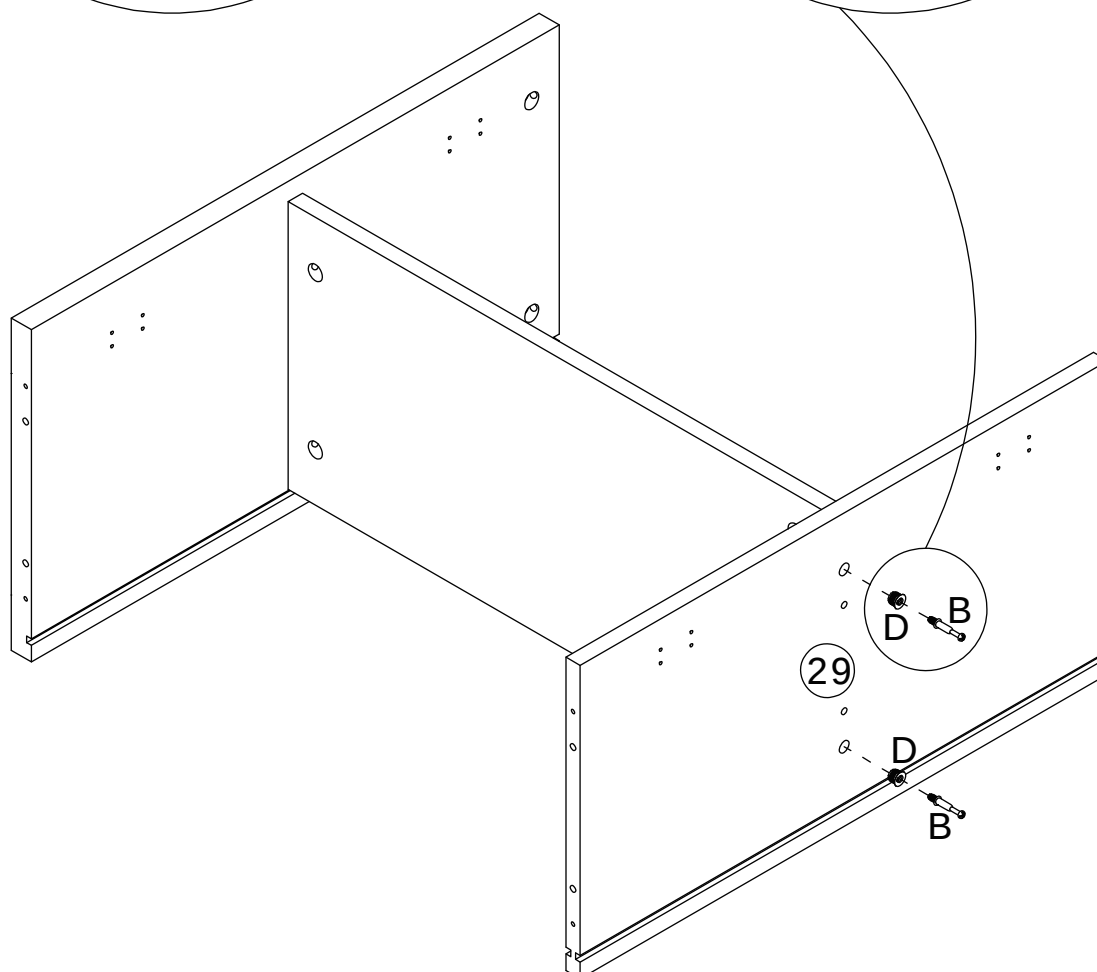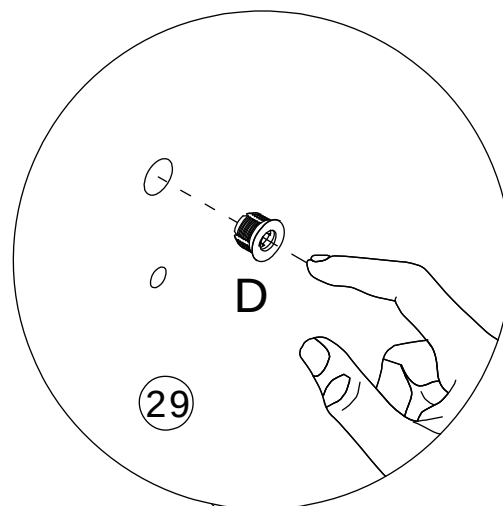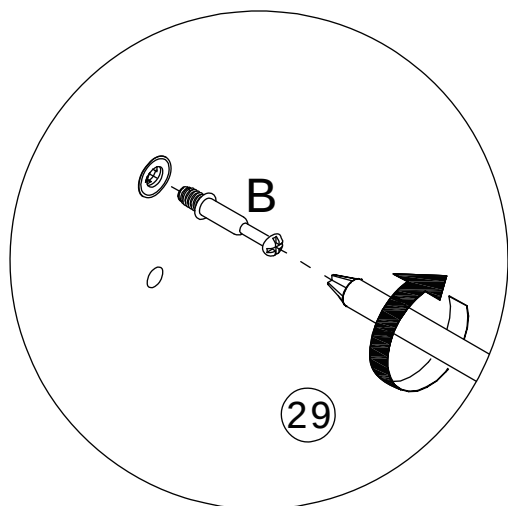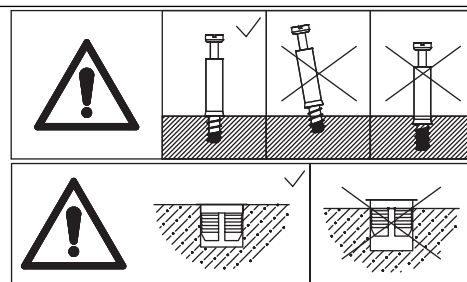

5

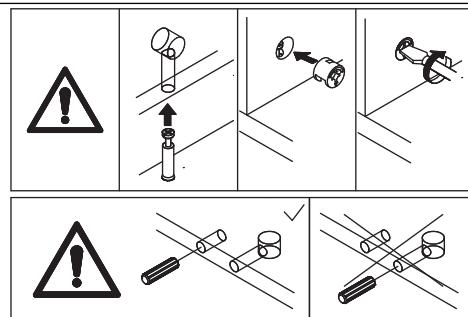 

 Connect Panel 14 to Panel 29 using dowel pin (C), then tighten by turning cam lock (A) clockwise.

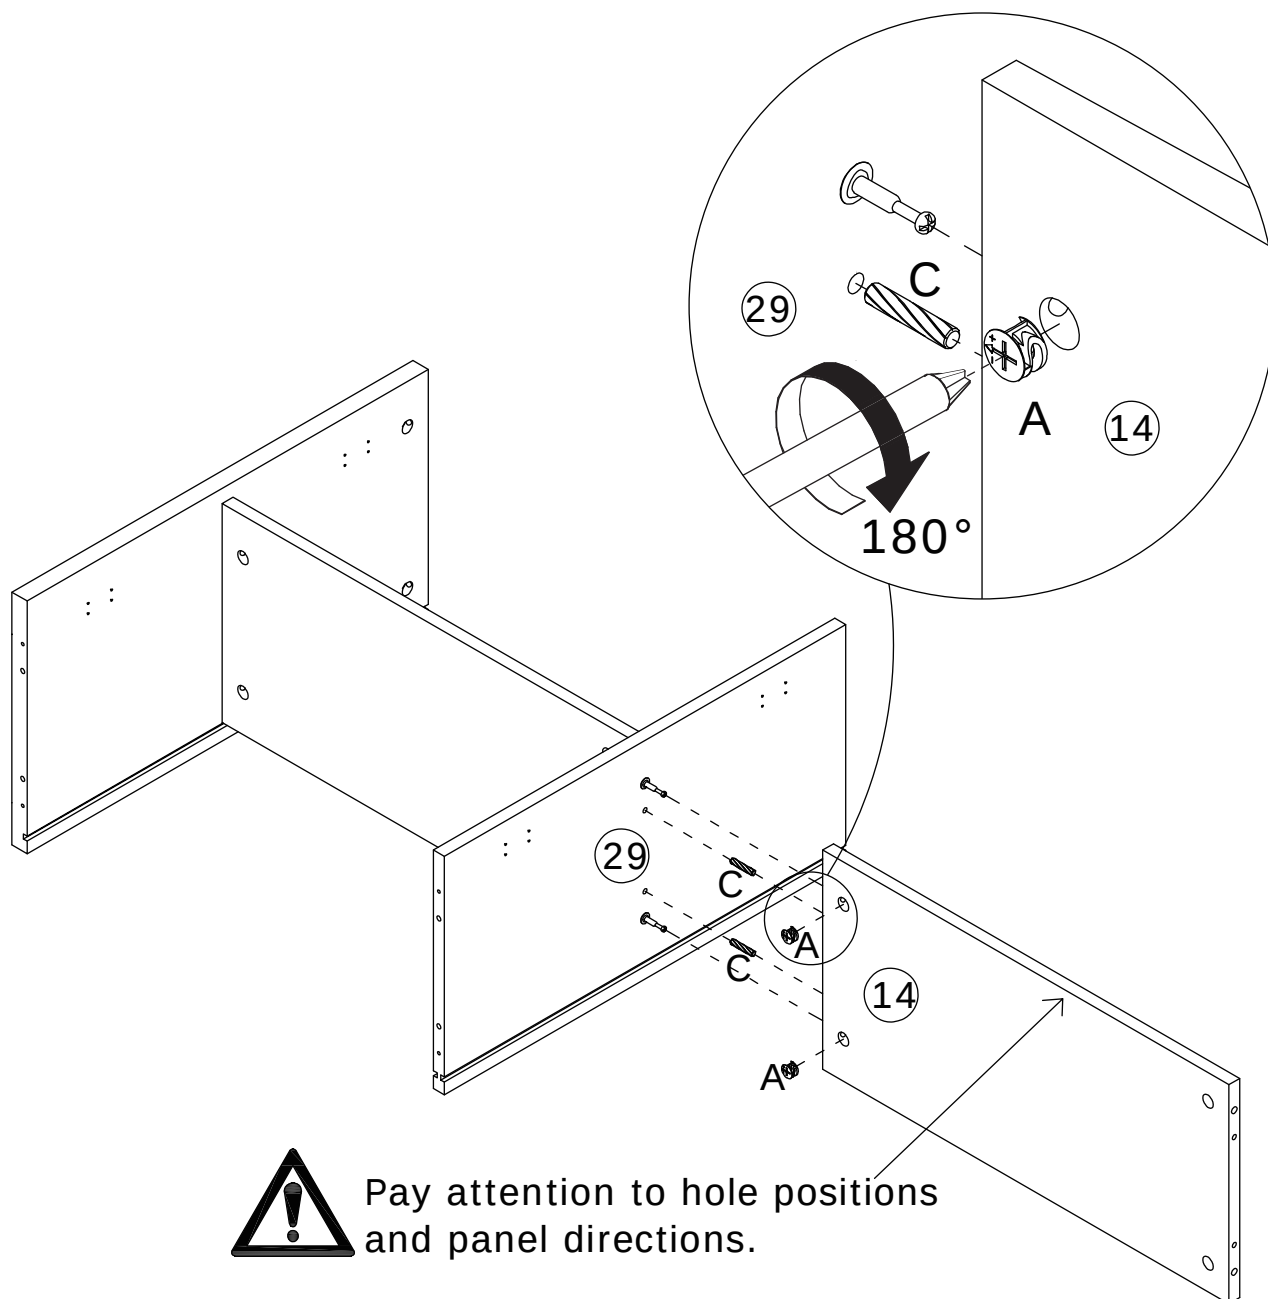

Pay attention to hole positions and panel directions.

6

A x 2

 


Ø 15 x 10 mm




C x 2






Ø 6 x 30 mm





 
 
 
Connect Panel 7 to Panel 14 using dowel pin (C), then tighten by turning cam lock (A) clockwise.

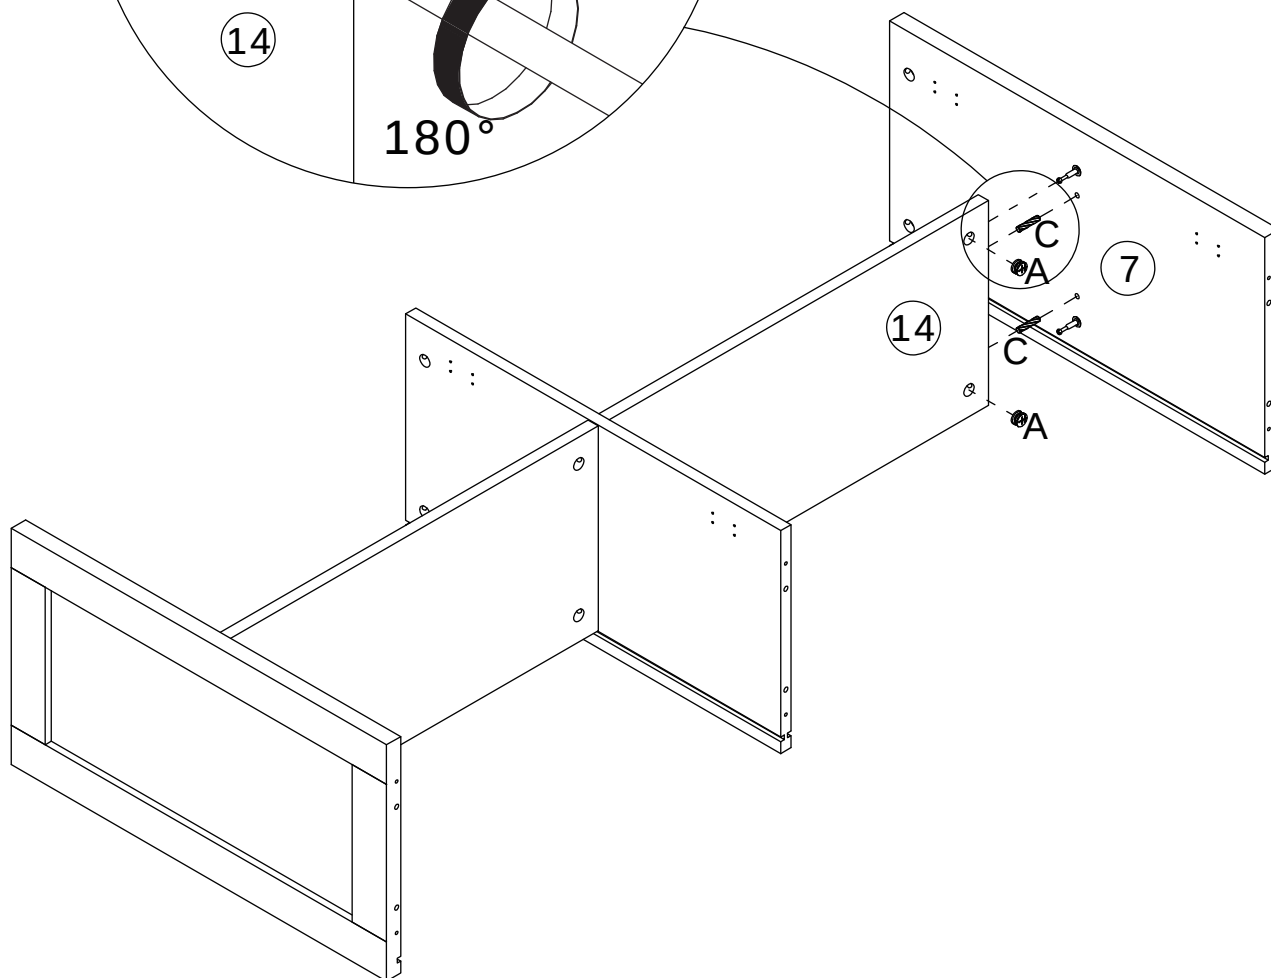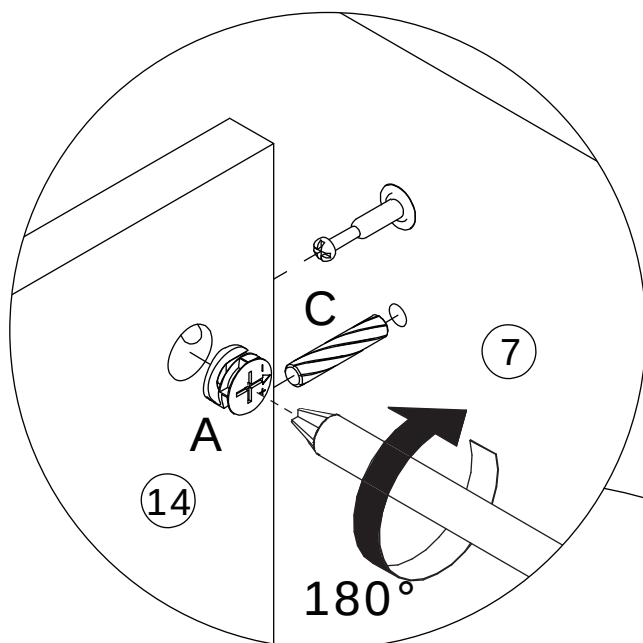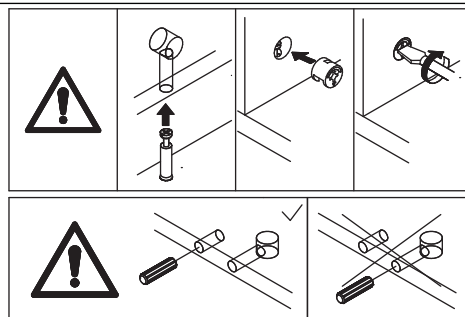


7

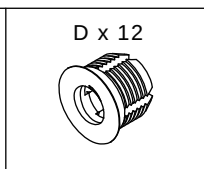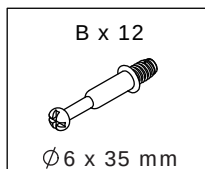   

     
Insert plug (D) into Panel 18, then screw self-tapping bolt (B) into Panel 18.

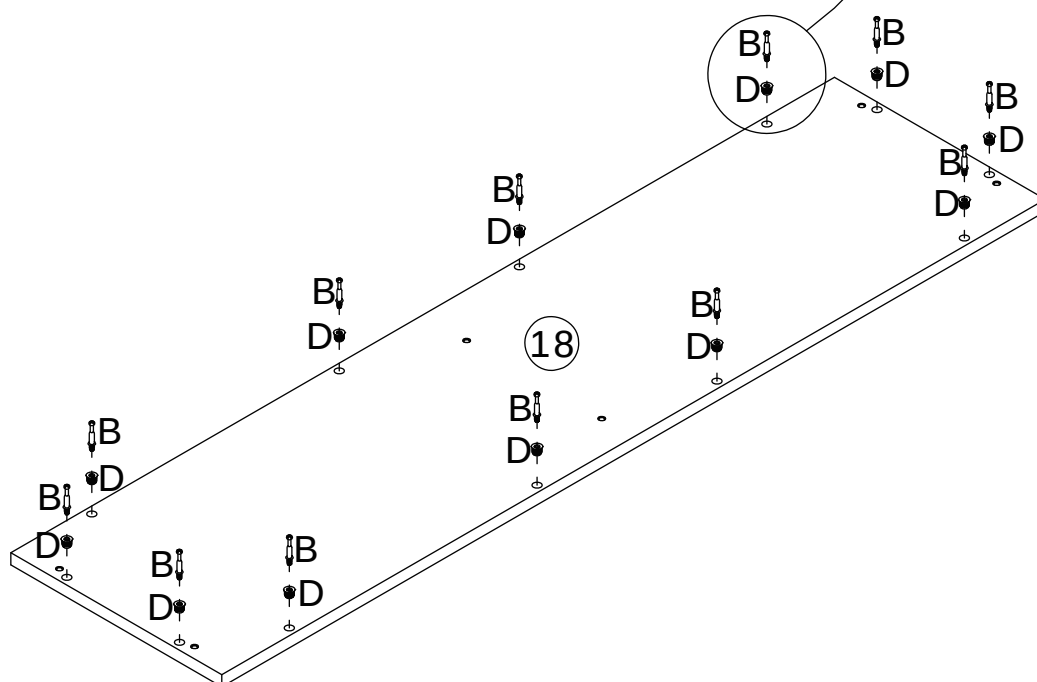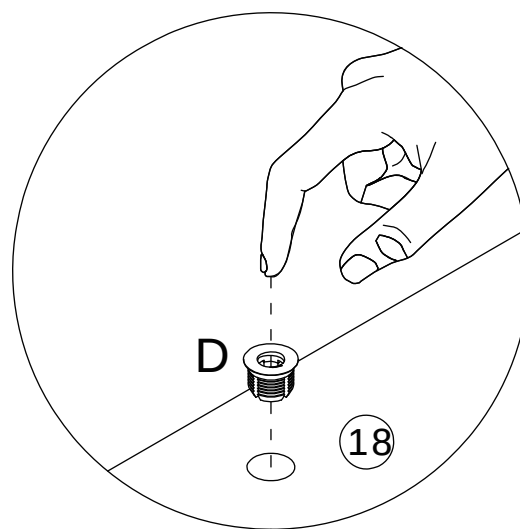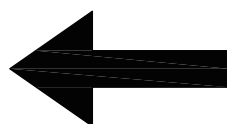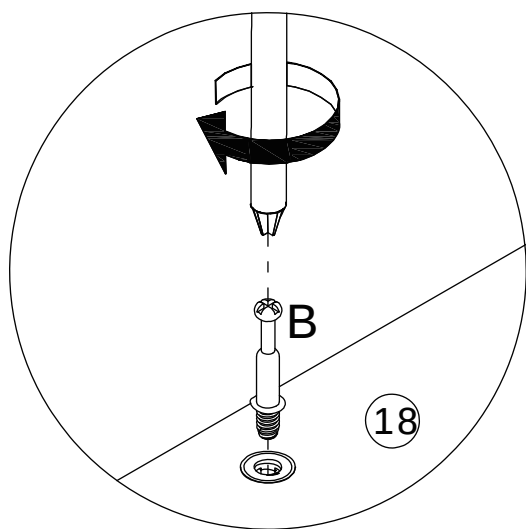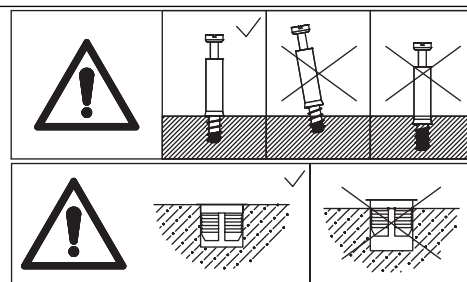

8

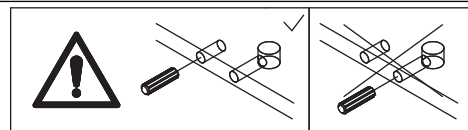 

 Connect Panel 18 to Panels 7, 8 and 29 using dowel pin (C), then secure them with screw (U).

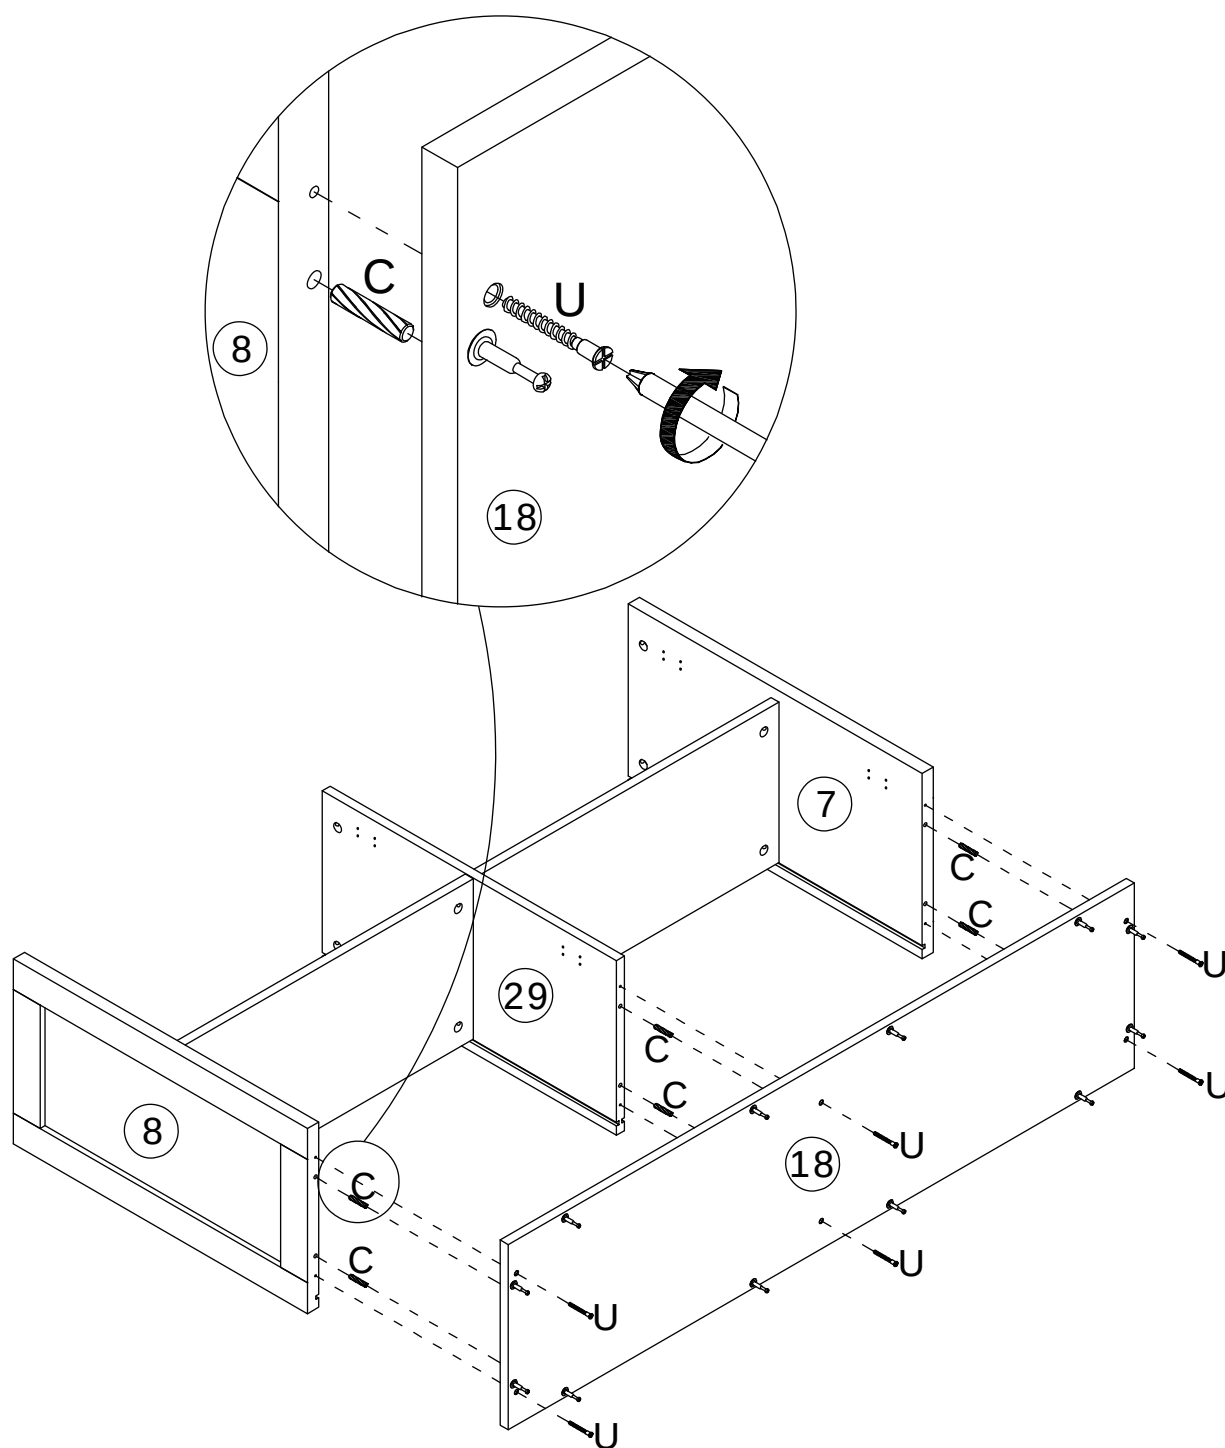



9

B x 12








Ø 6 x 35 mm

  
D x 12



     
Insert plug (D) into Panels 23 and 24, then screw self-tapping bolt (B) into Panels 23 and 24.

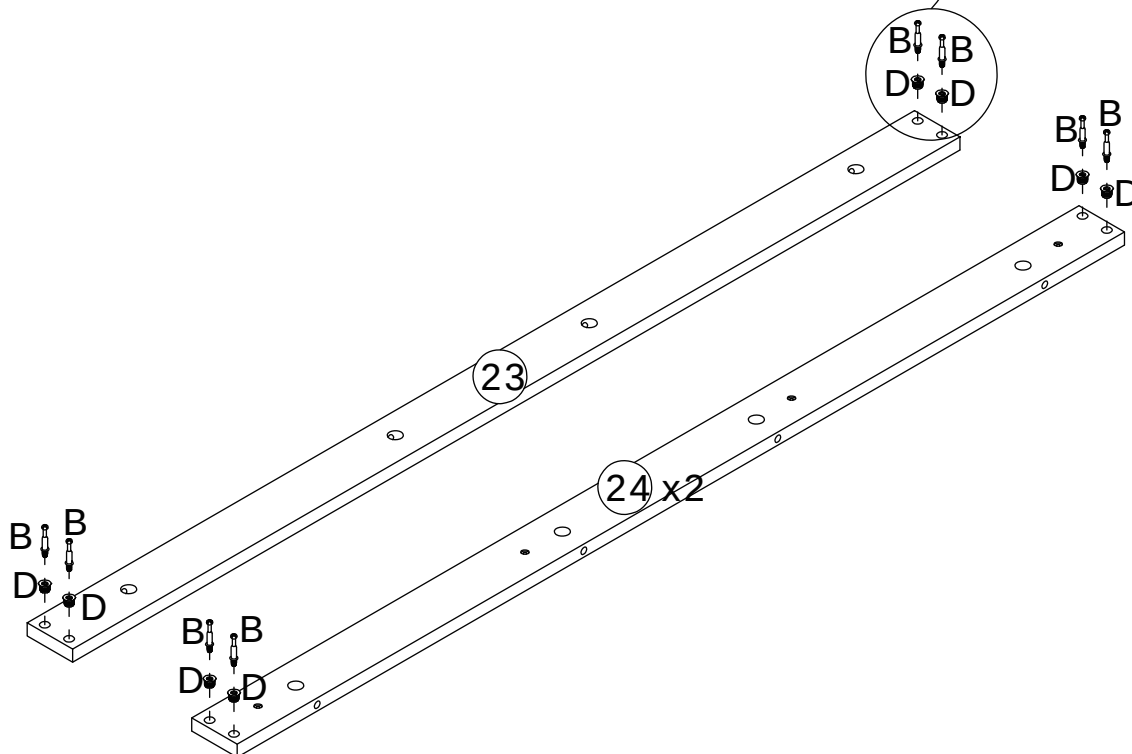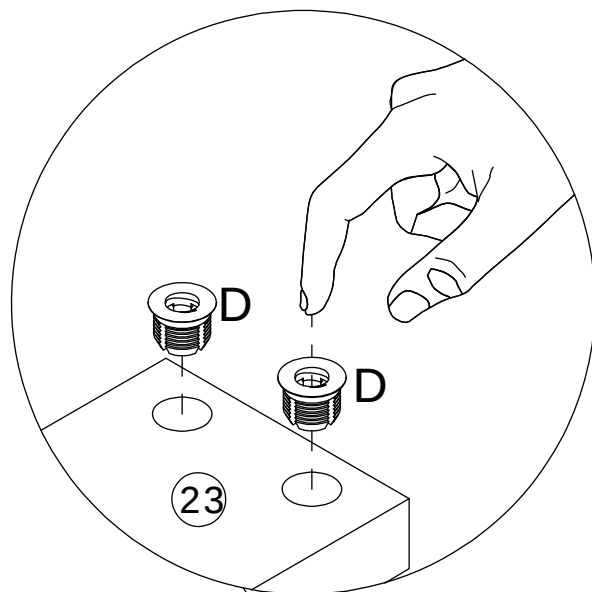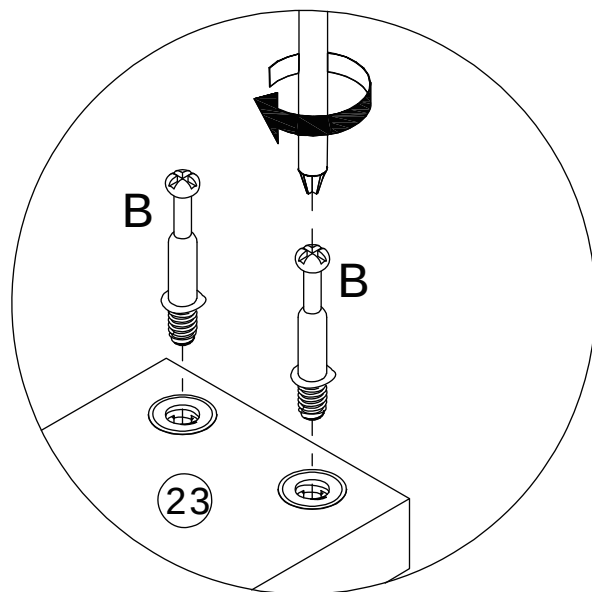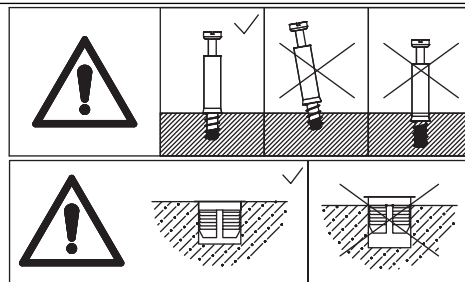




10

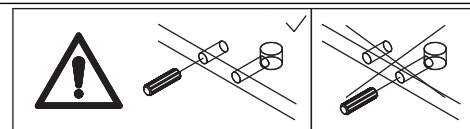 

 
Connect Panel 24 to Panel 39 using dowel pin (Z), then secure them with screw (R).

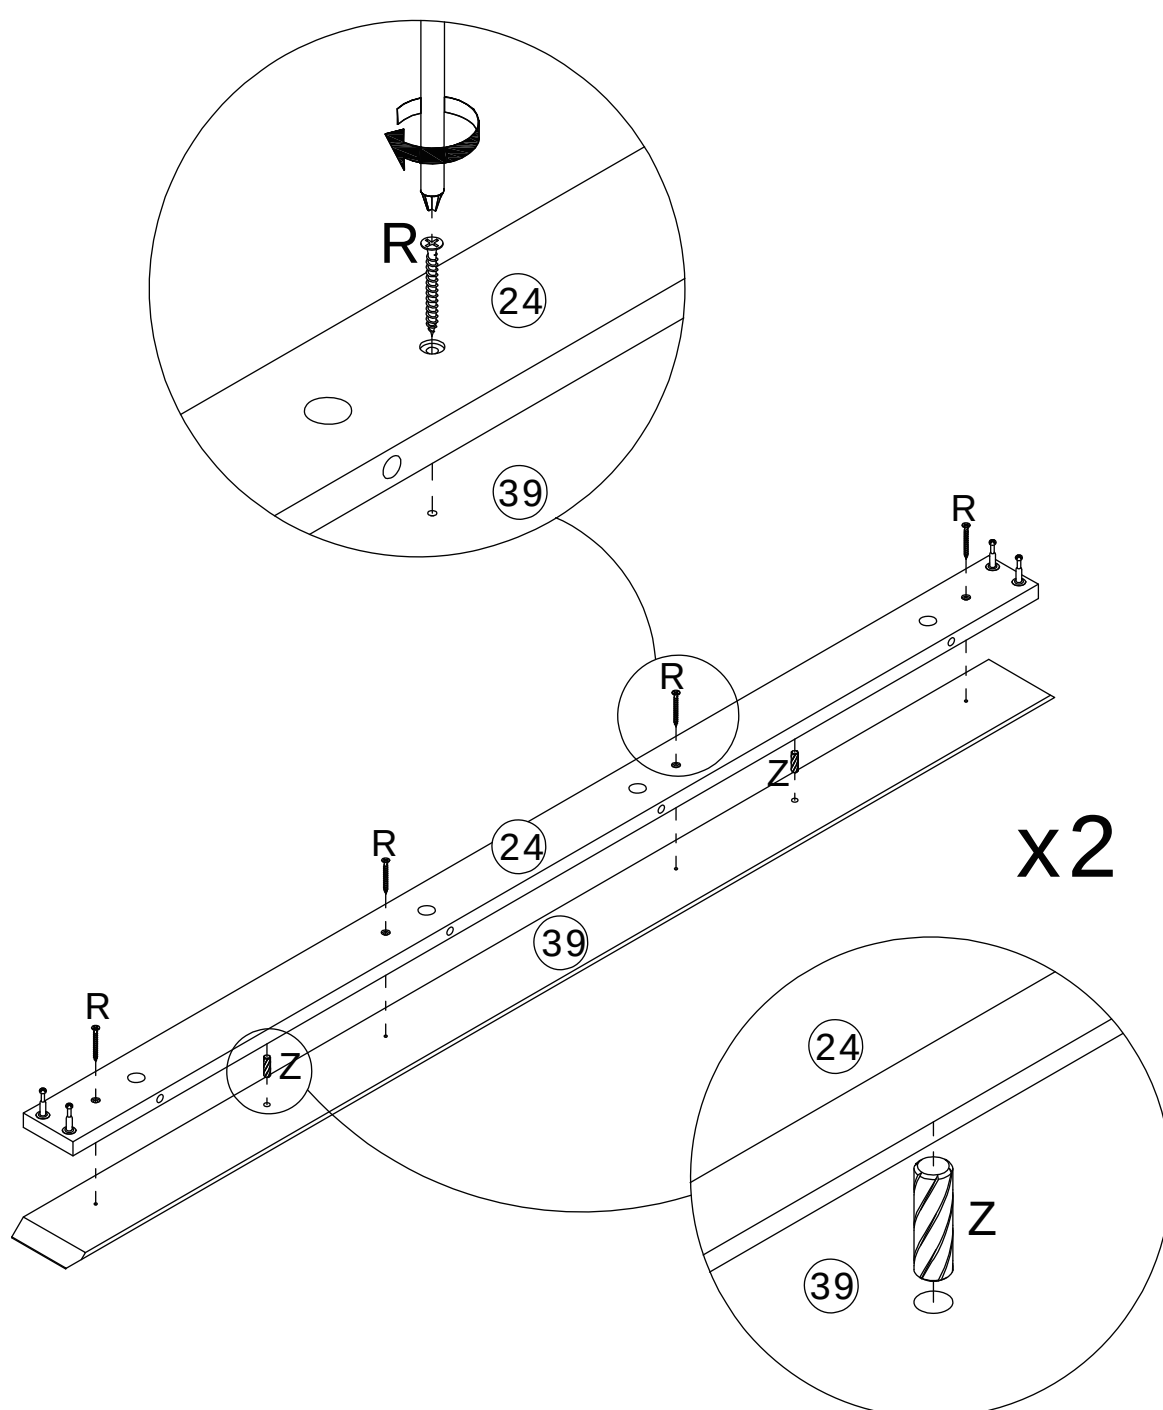



11

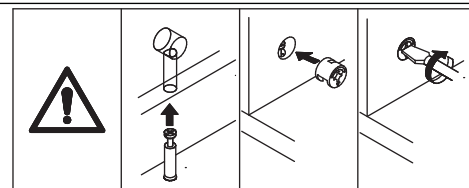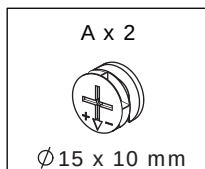   

 
Connect Panel 4 to Panels 23 and 24, then tighten by turning cam lock (A) clockwise.

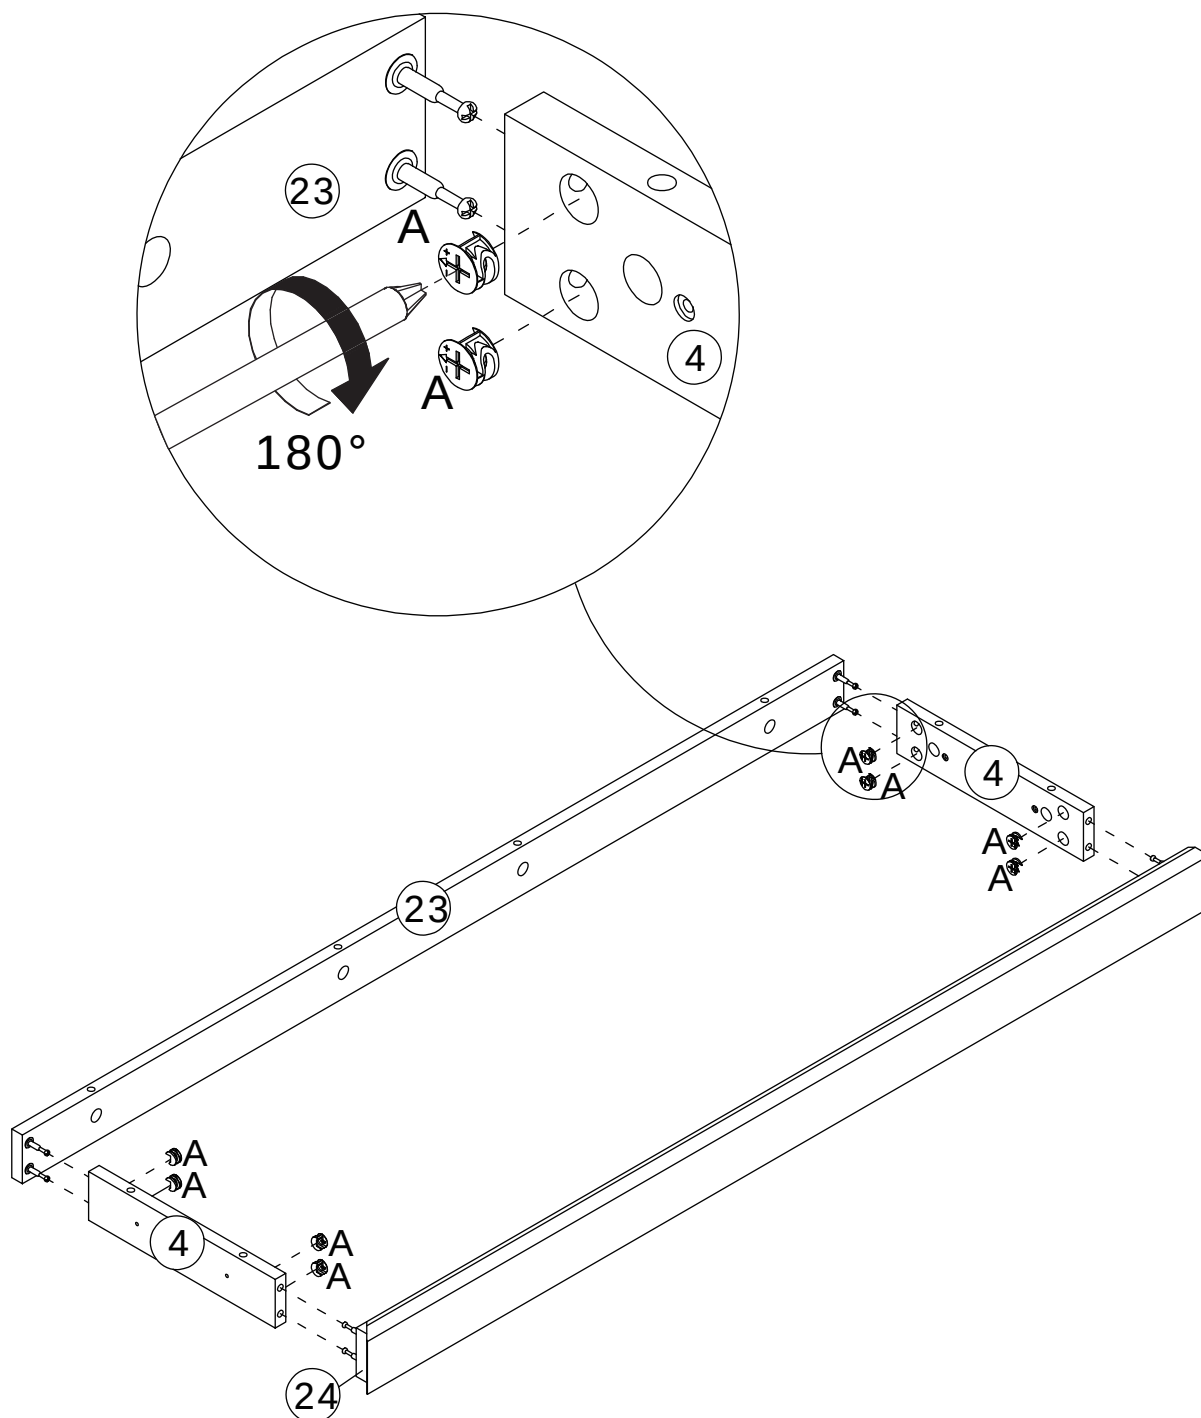




12

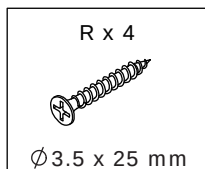  

 
Align Panels 11 and 12 to Panel 39 first, then secure them to Panel 4 using screw (R).

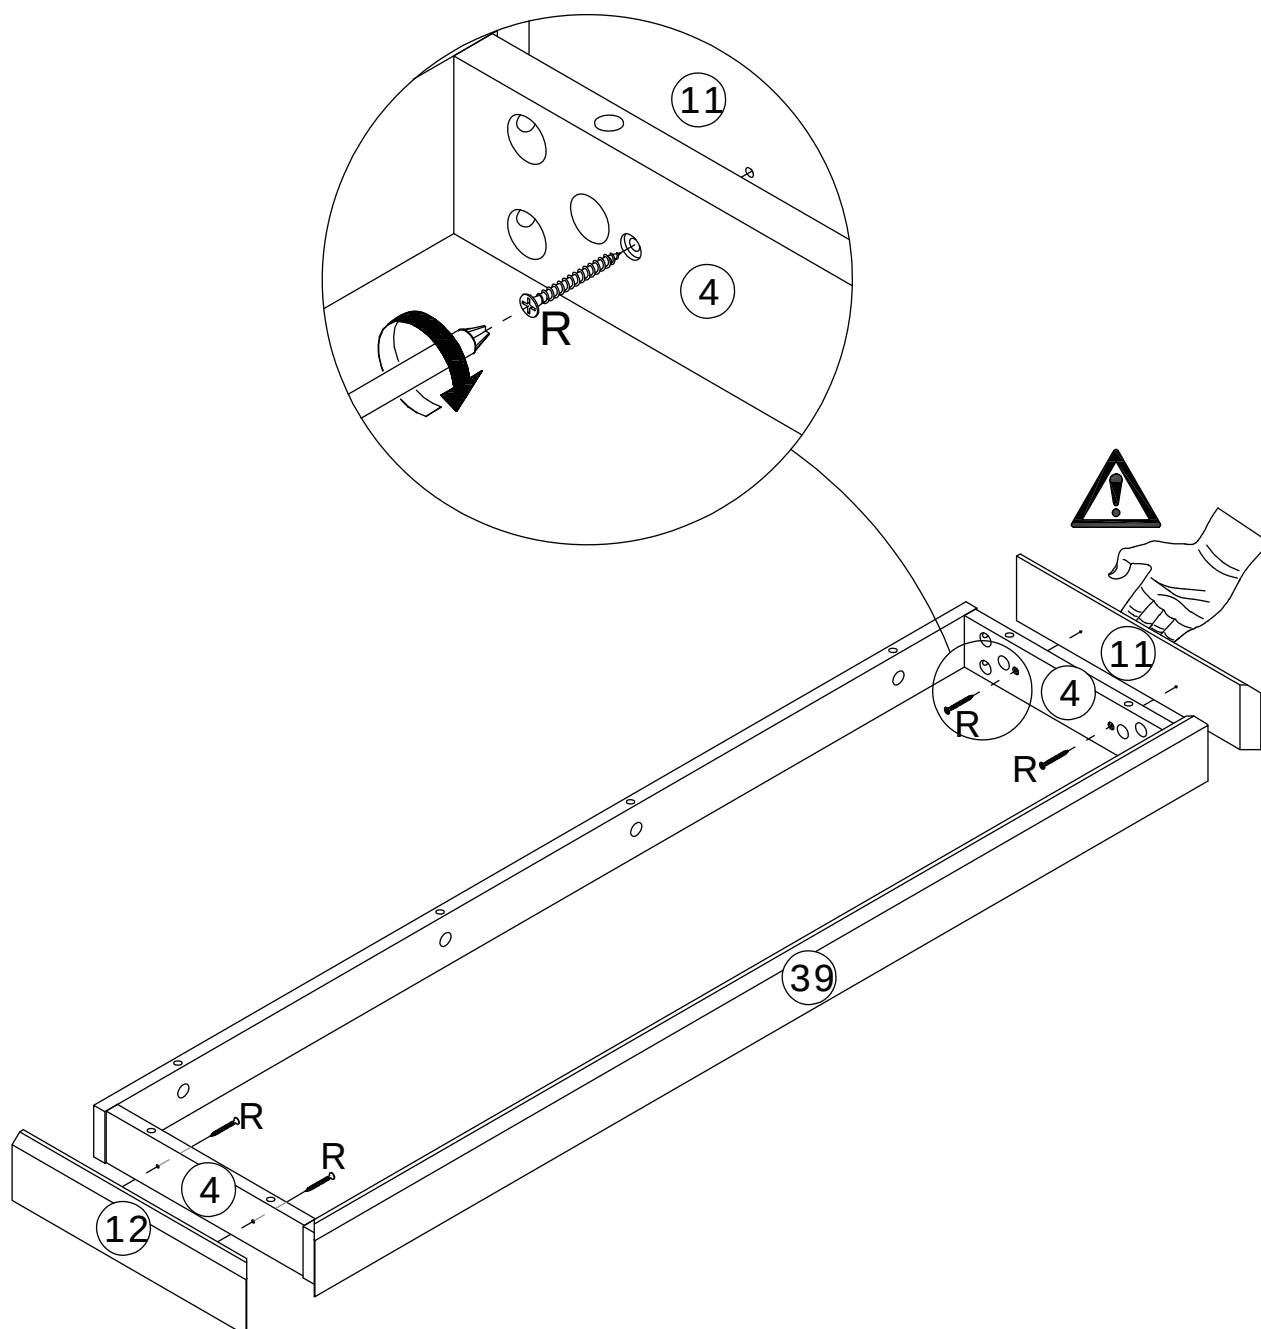

13

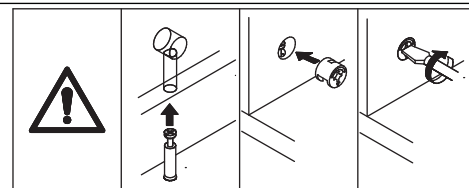  
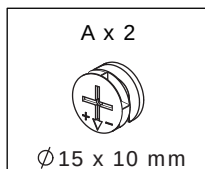 


 Connect Panels 4, 23 and 24 to Panel 18, then tighten by turning cam lock (A) clockwise.

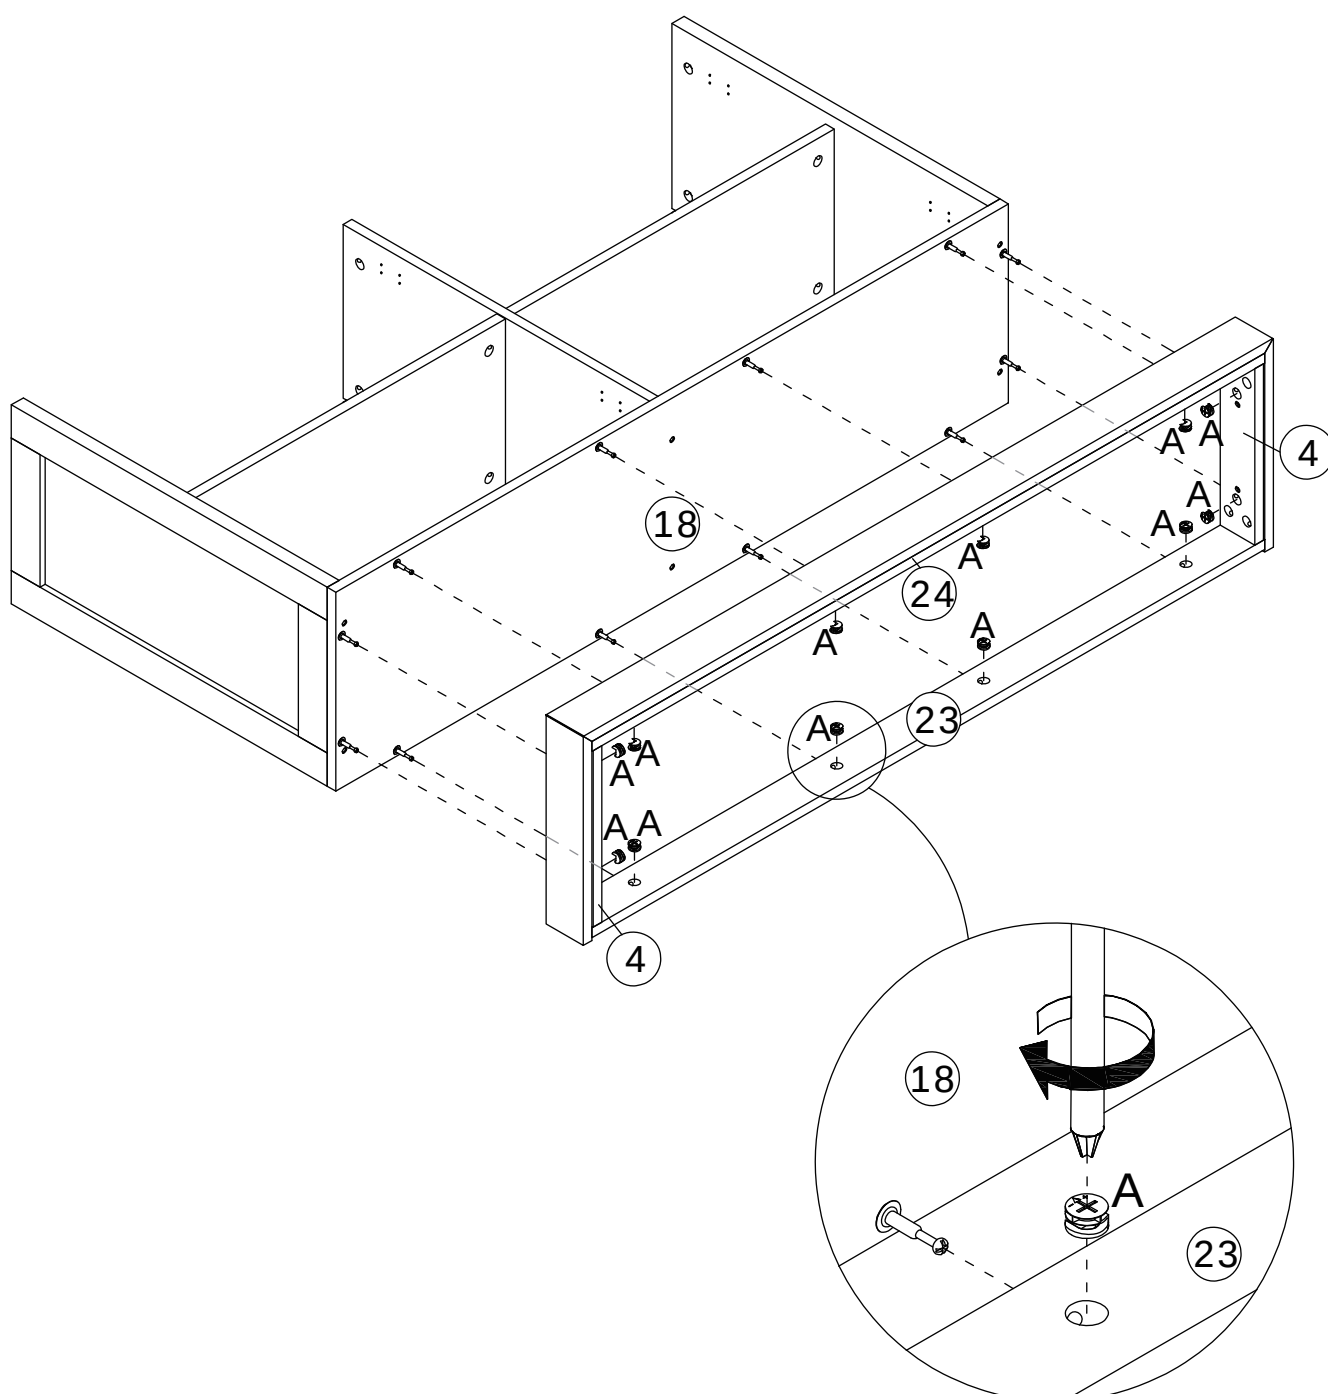

14

  Insert Panel 33 along the available slots.

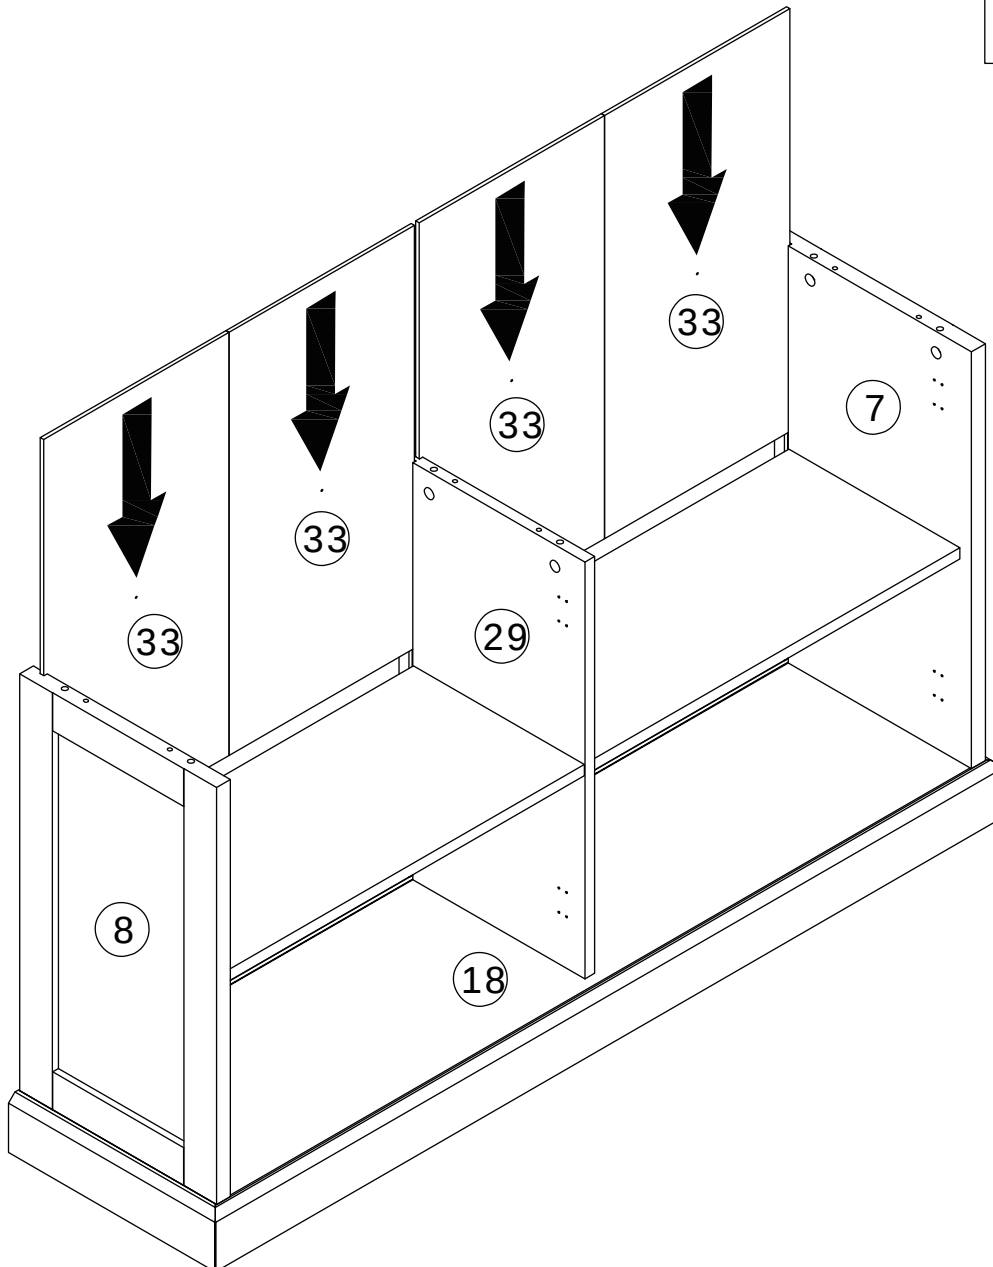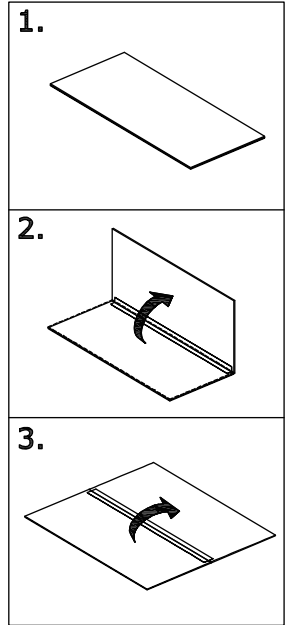



15

B x 14








Ø 6 x 35 mm

  
D x 14



     
Insert plug (D) into Panels 5, 6 and 28, then screw self-tapping bolt (B) into Panels 5, 6 and 28.

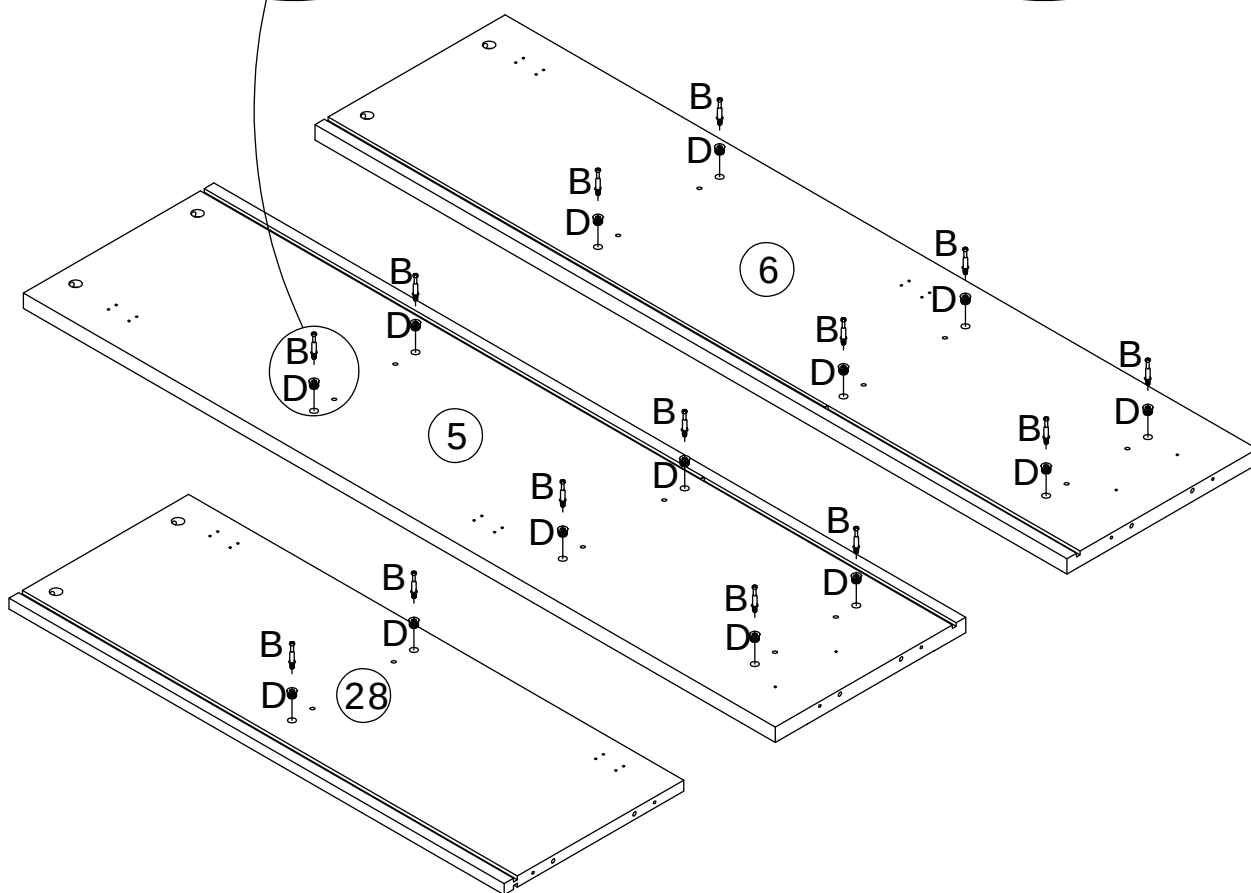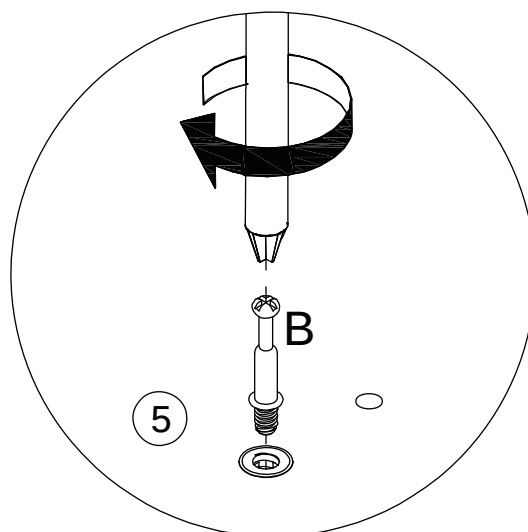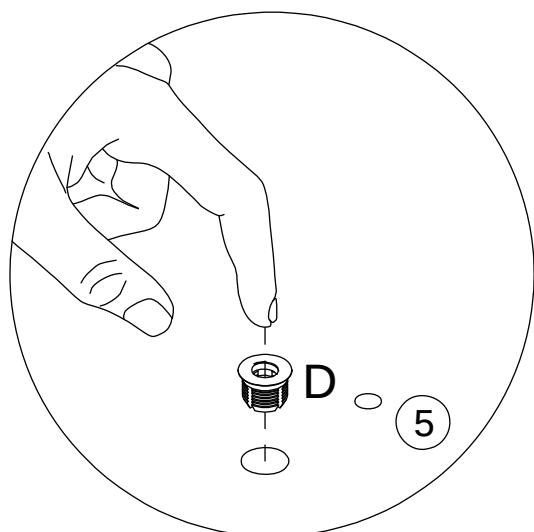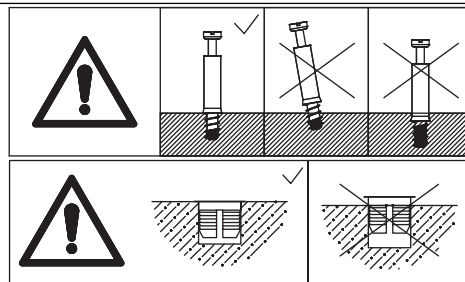



16

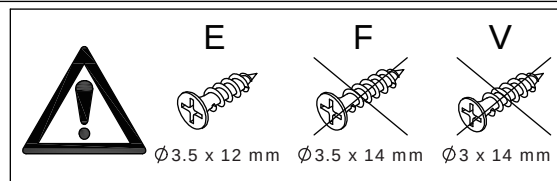 

 
Secure slide rail (Y-1) to Panels 5 and 6 using screw (E).

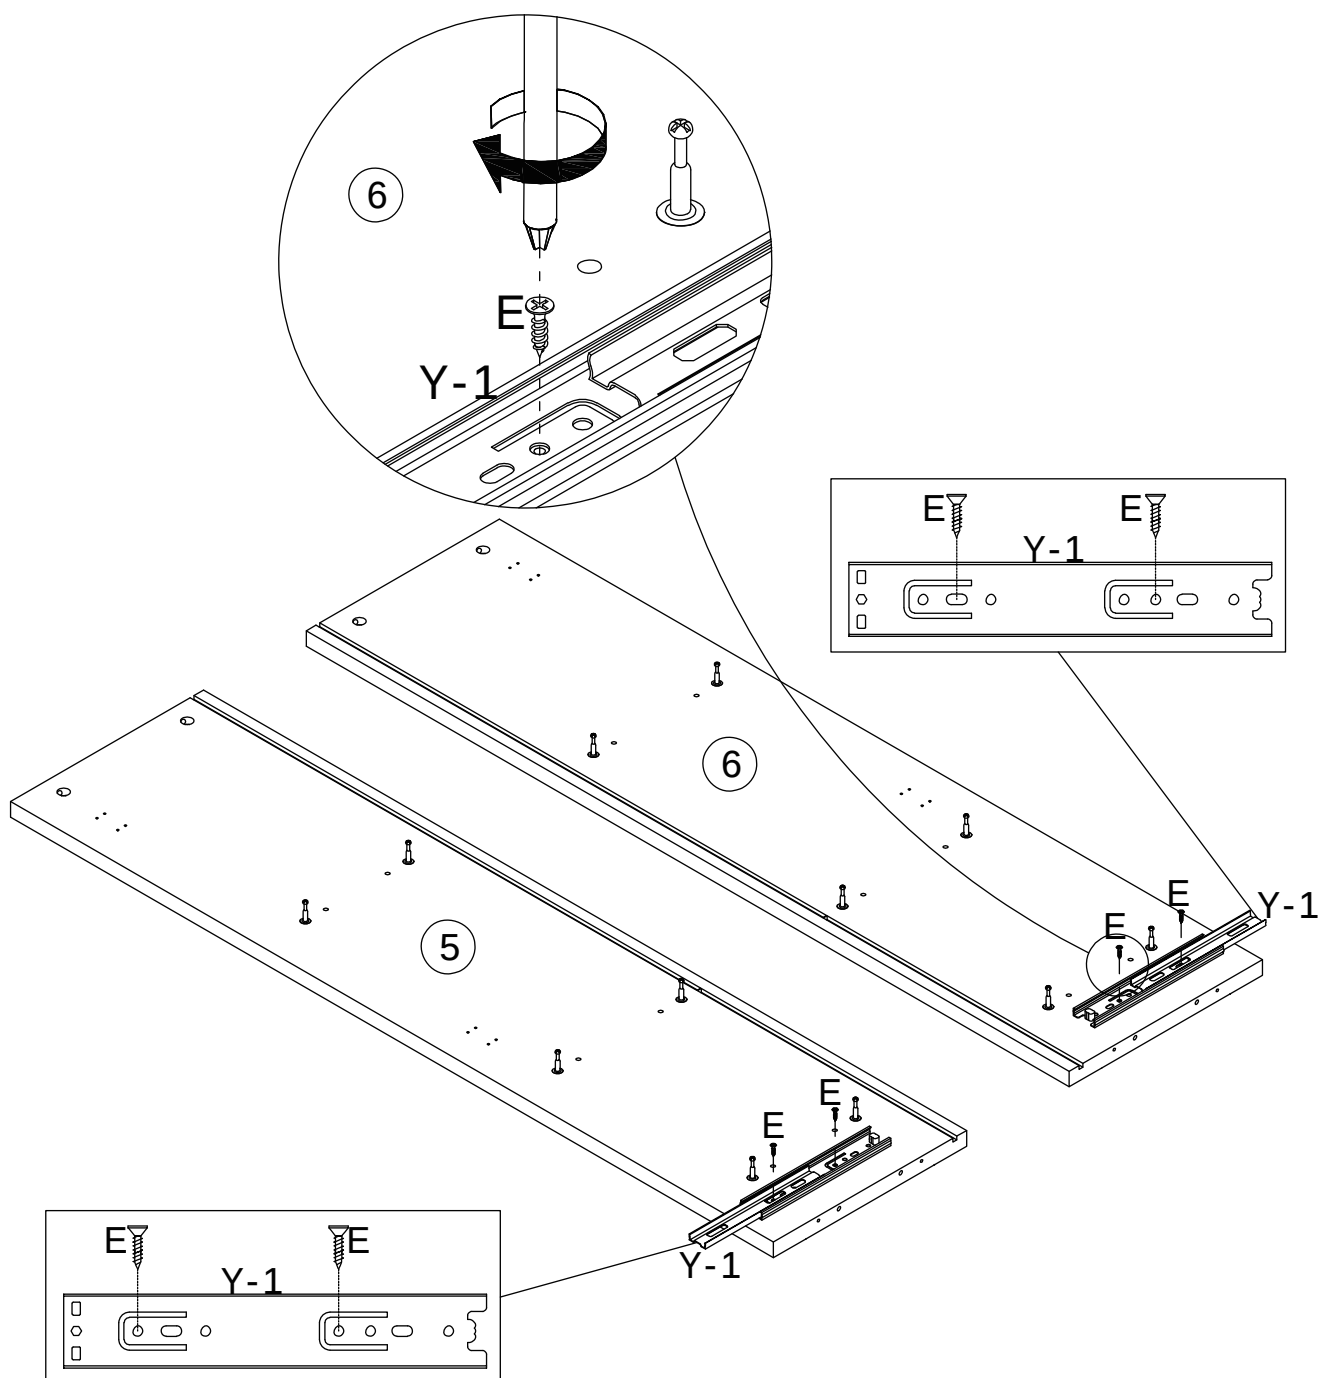


17

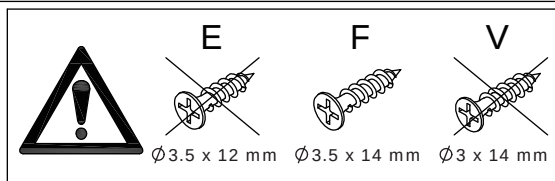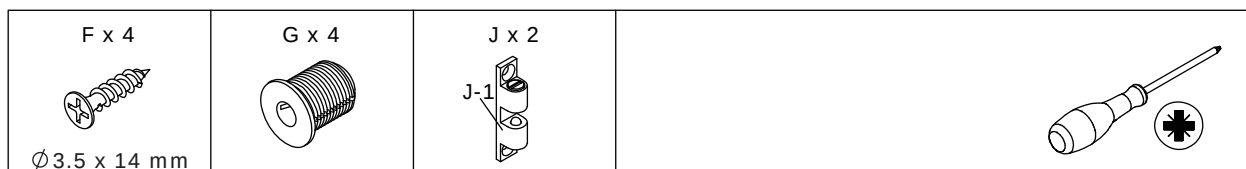  

 
Secure part (J-1) to Panel 26 using screw (F), then insert part (G) into Panel 26.

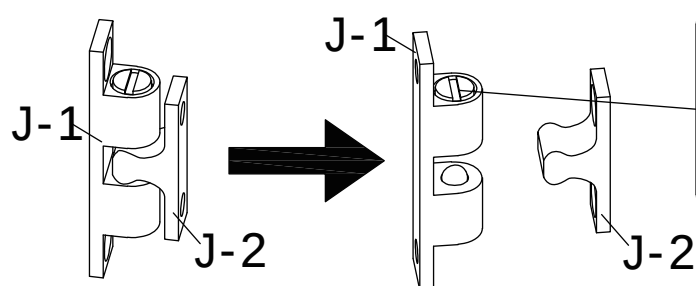

 
If part (J) is hard to open or close, try turning the adjusting knob.

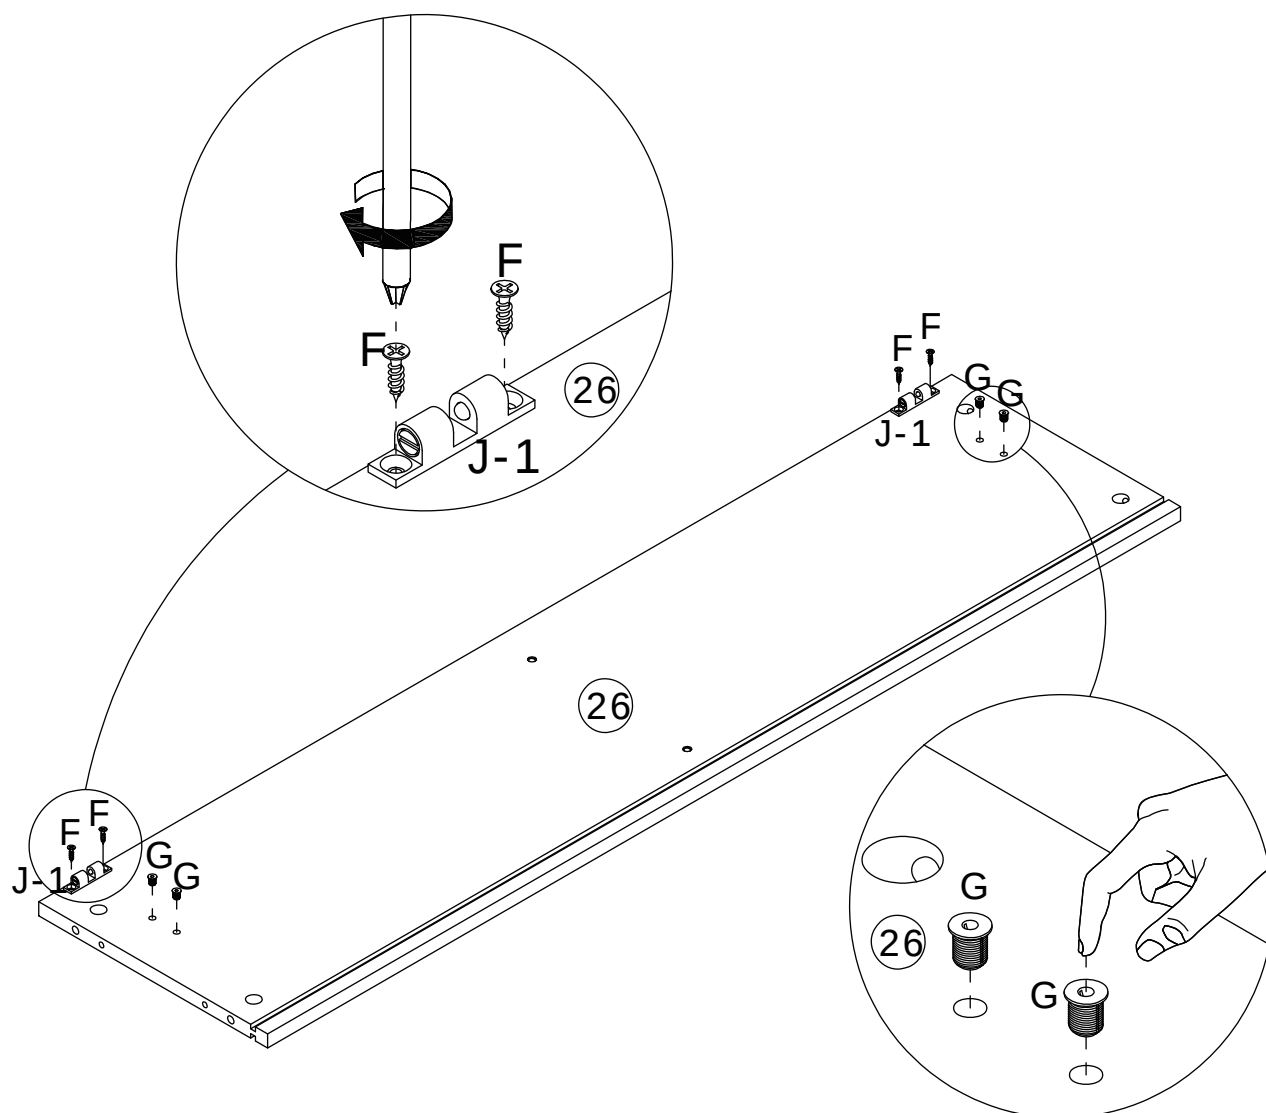



18

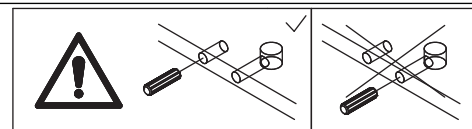 

 
Connect Panel 26 to Panel 28 using dowel pin (C), then secure them with screw (U).

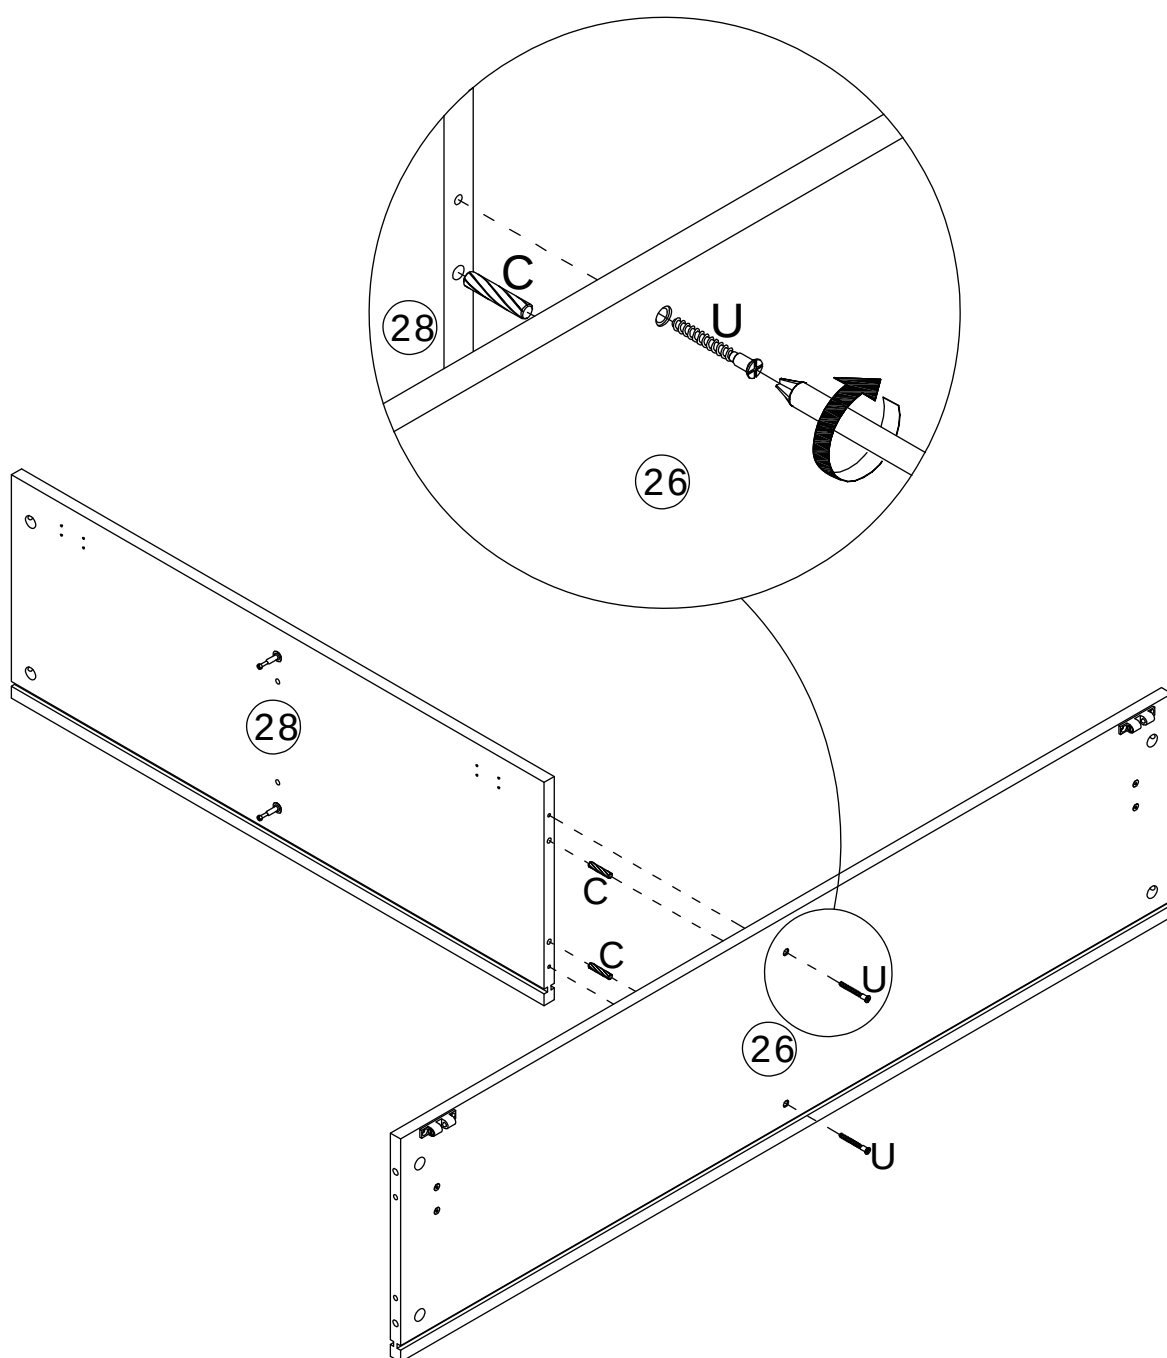



19

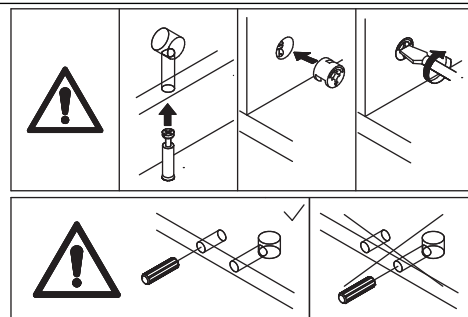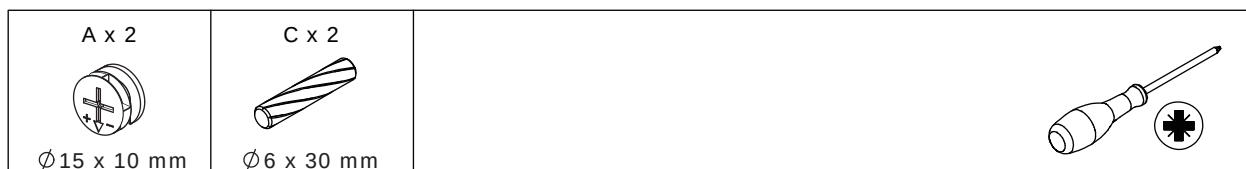  


 
Connect Panel 14 to Panel 28 using dowel pin (C), then tighten by turning cam lock (A) clockwise.

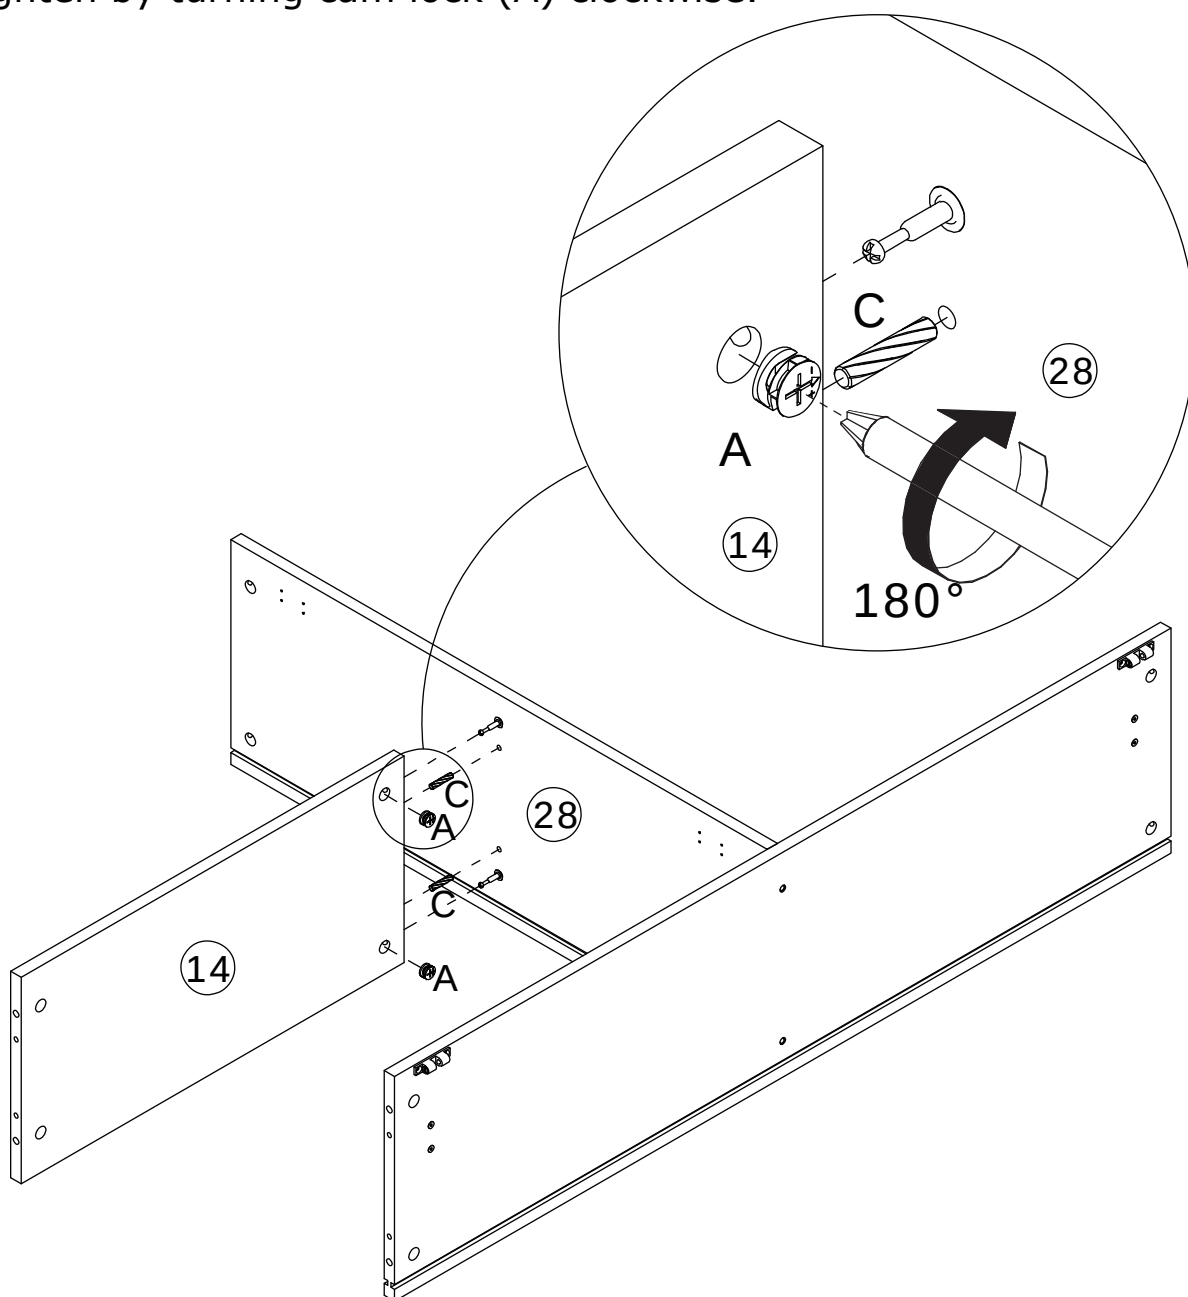

20

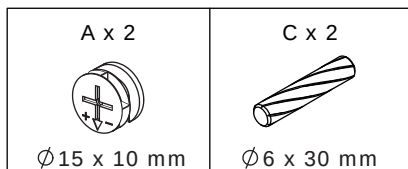  

 
 
Connect Panel 5 to Panels 14 and 26 using dowel pin (C), then tighten by turning cam lock (A) clockwise.

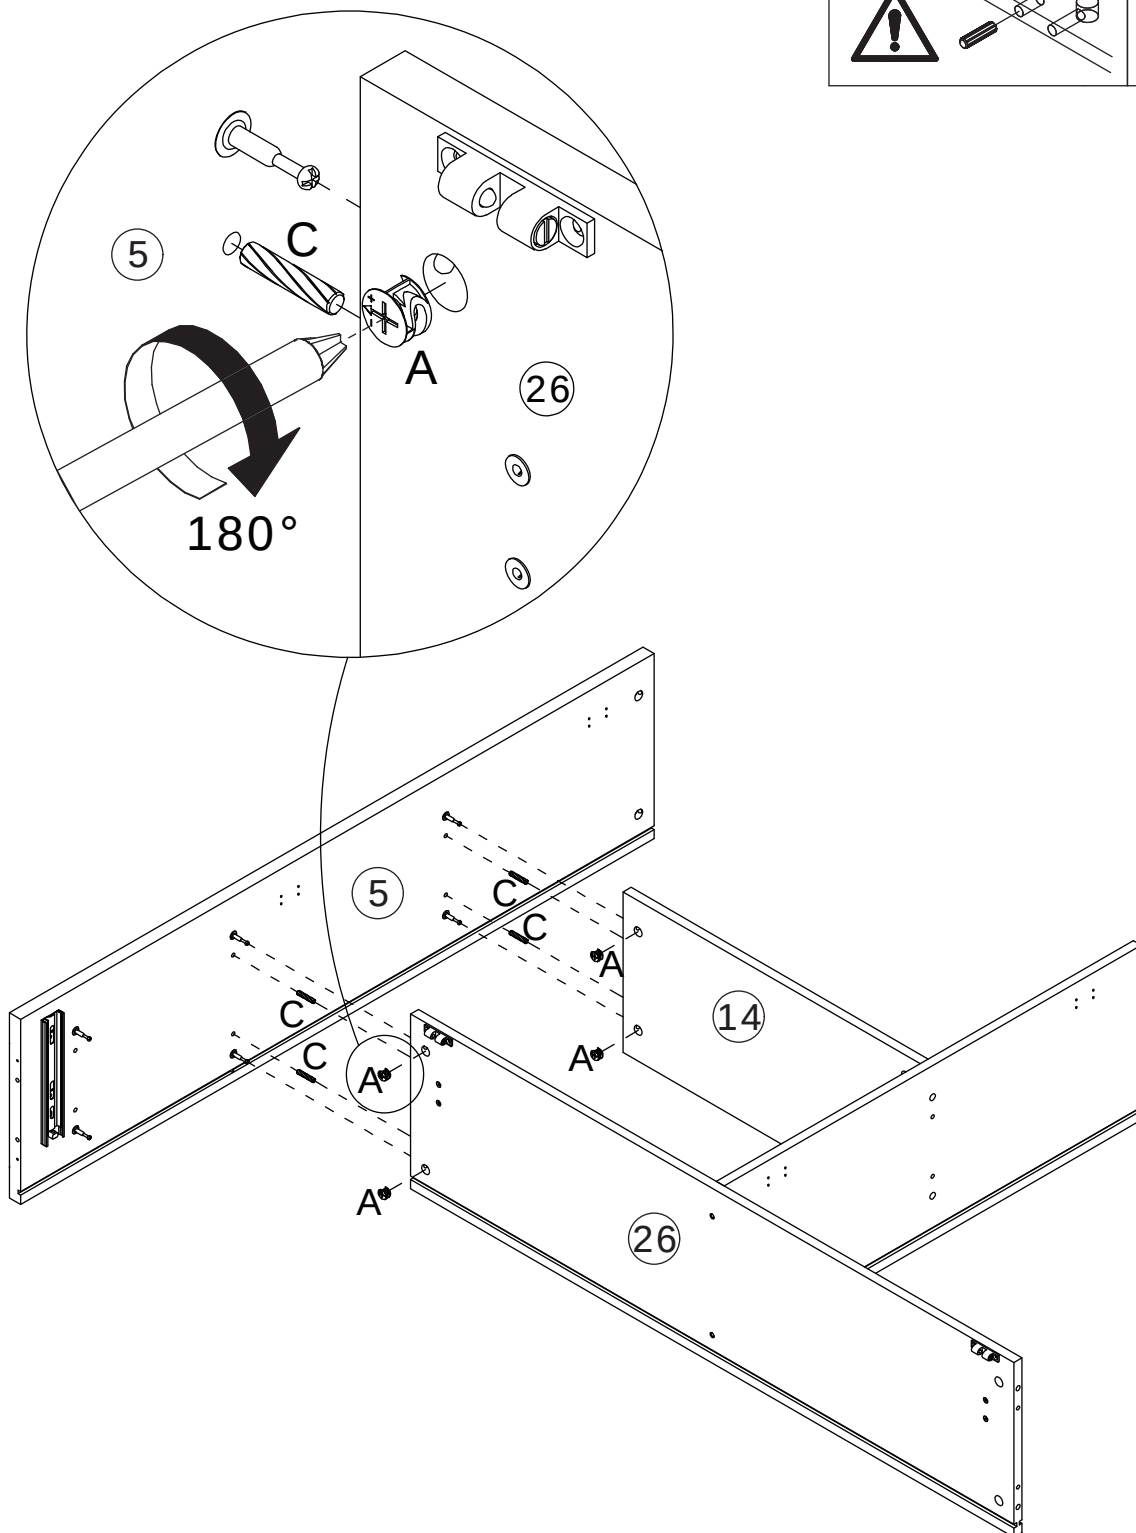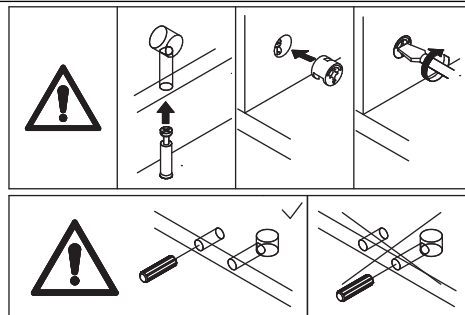

21



  Disassemble part (H), then secure part (H-1) to Panel 27 using screw (F).

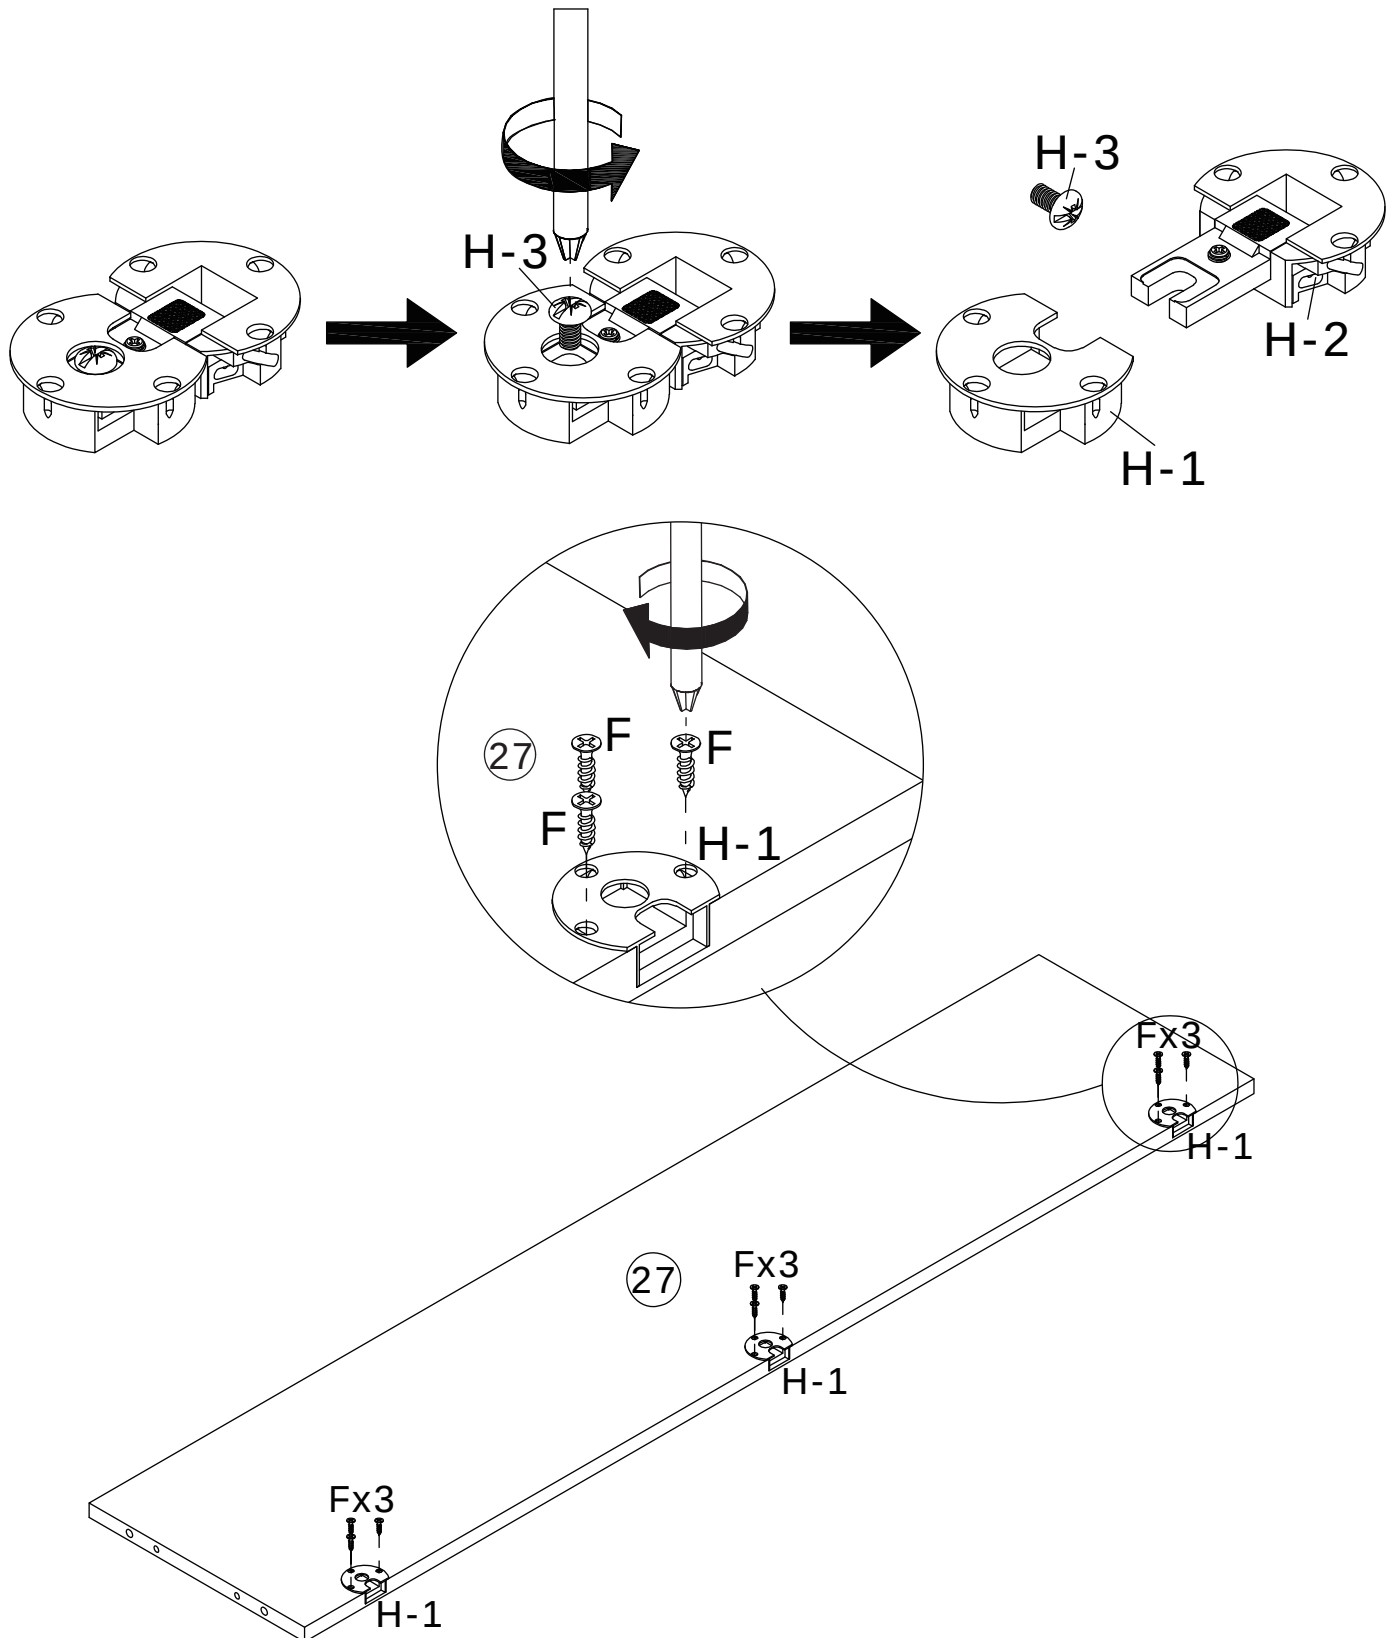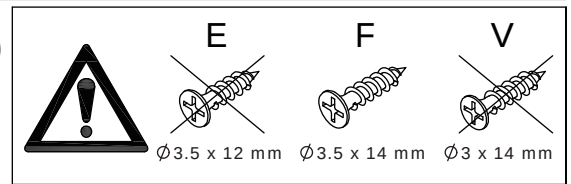



22

B x 2







Ø 6 x 35 mm

  D x 2



    Flip the panel to back, insert plug (D) into Panel 27, then screw self-tapping bolt (B) into Panel 27.

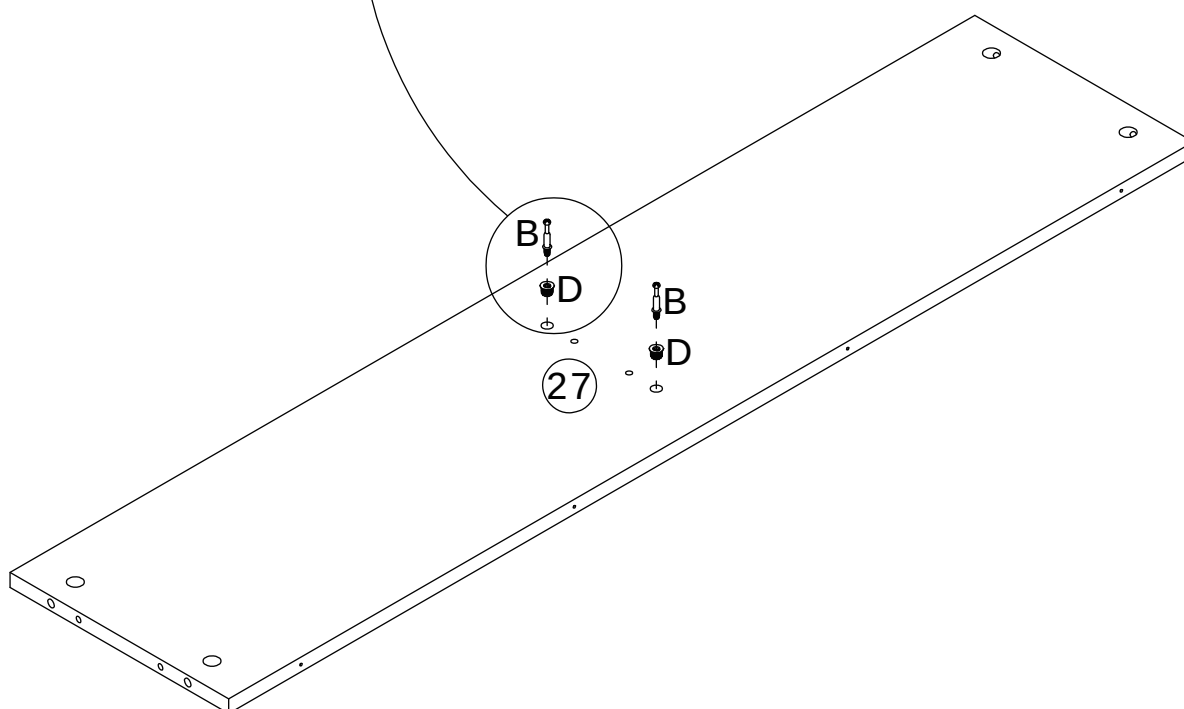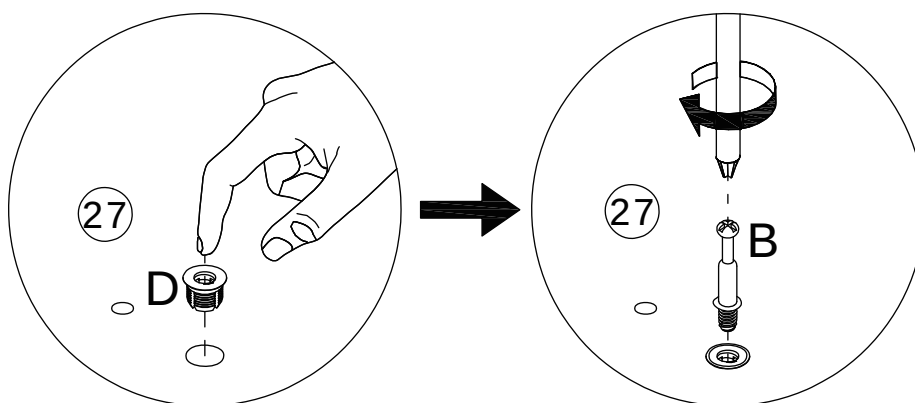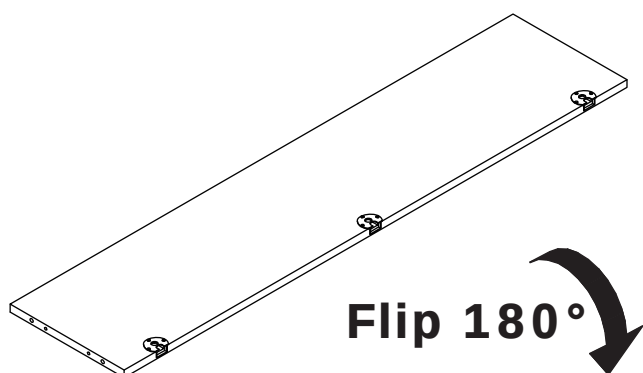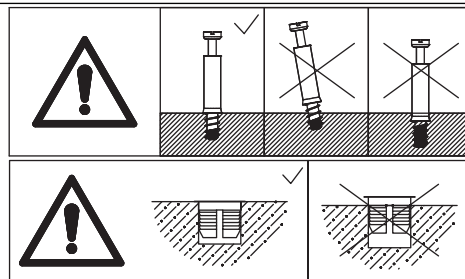





23

B x 2





Ø 6 x 35 mm

   
 
D x 2

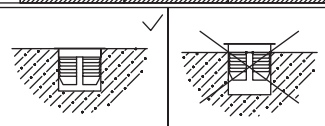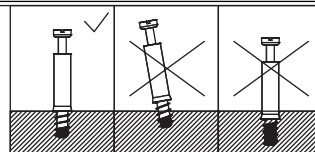


 
 
Insert plug (D) into Panel 28, then screw self-tapping bolt (B) into Panel 28.

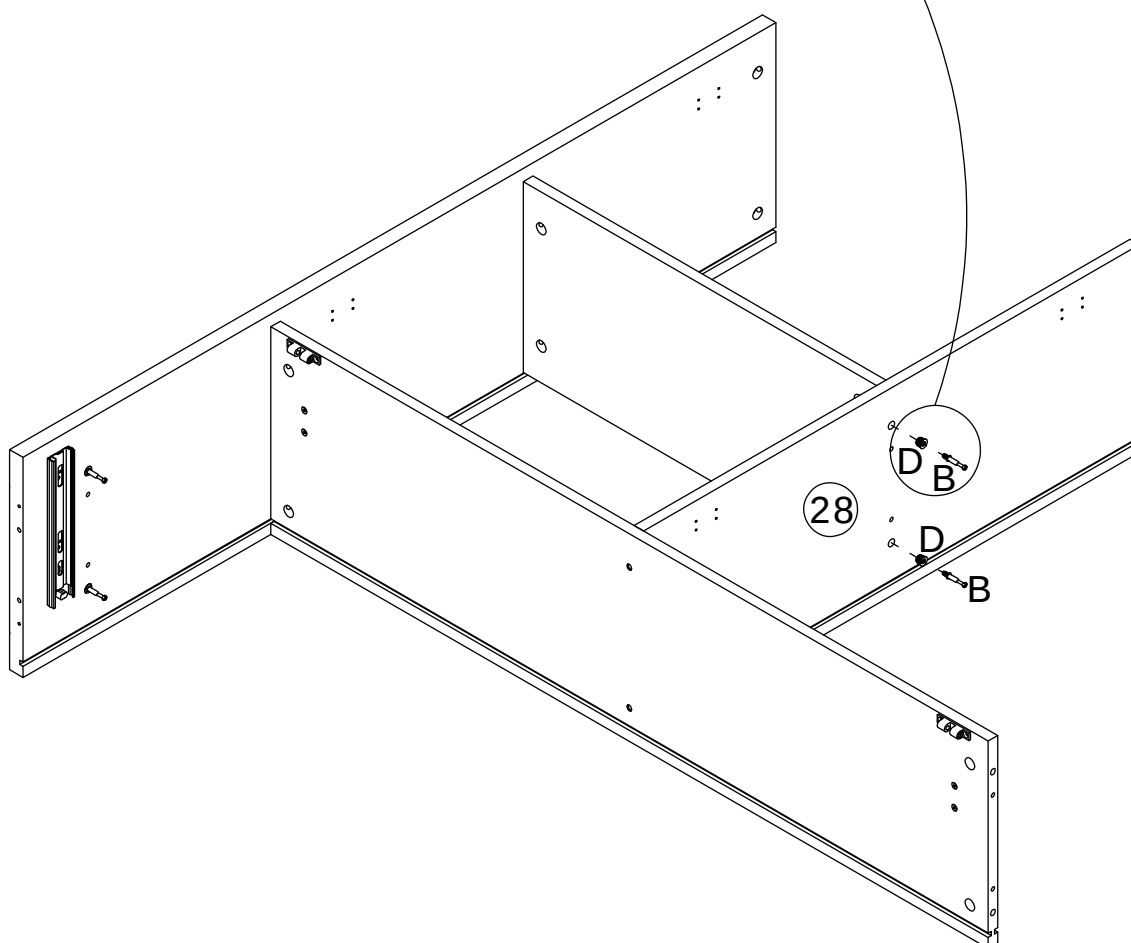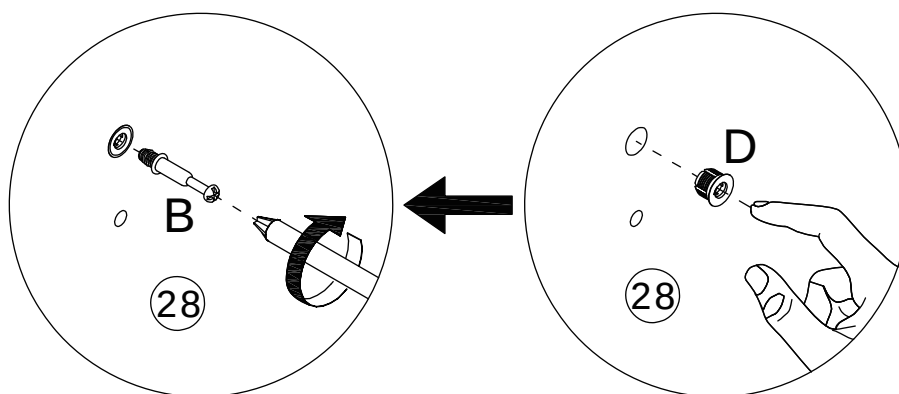



24

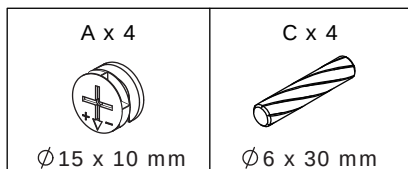  

 
 
 
Connect Panel 14 to Panel 28, Panel 27 to Panel 5 using dowel pin (C), then tighten by turning cam lock (A) clockwise.

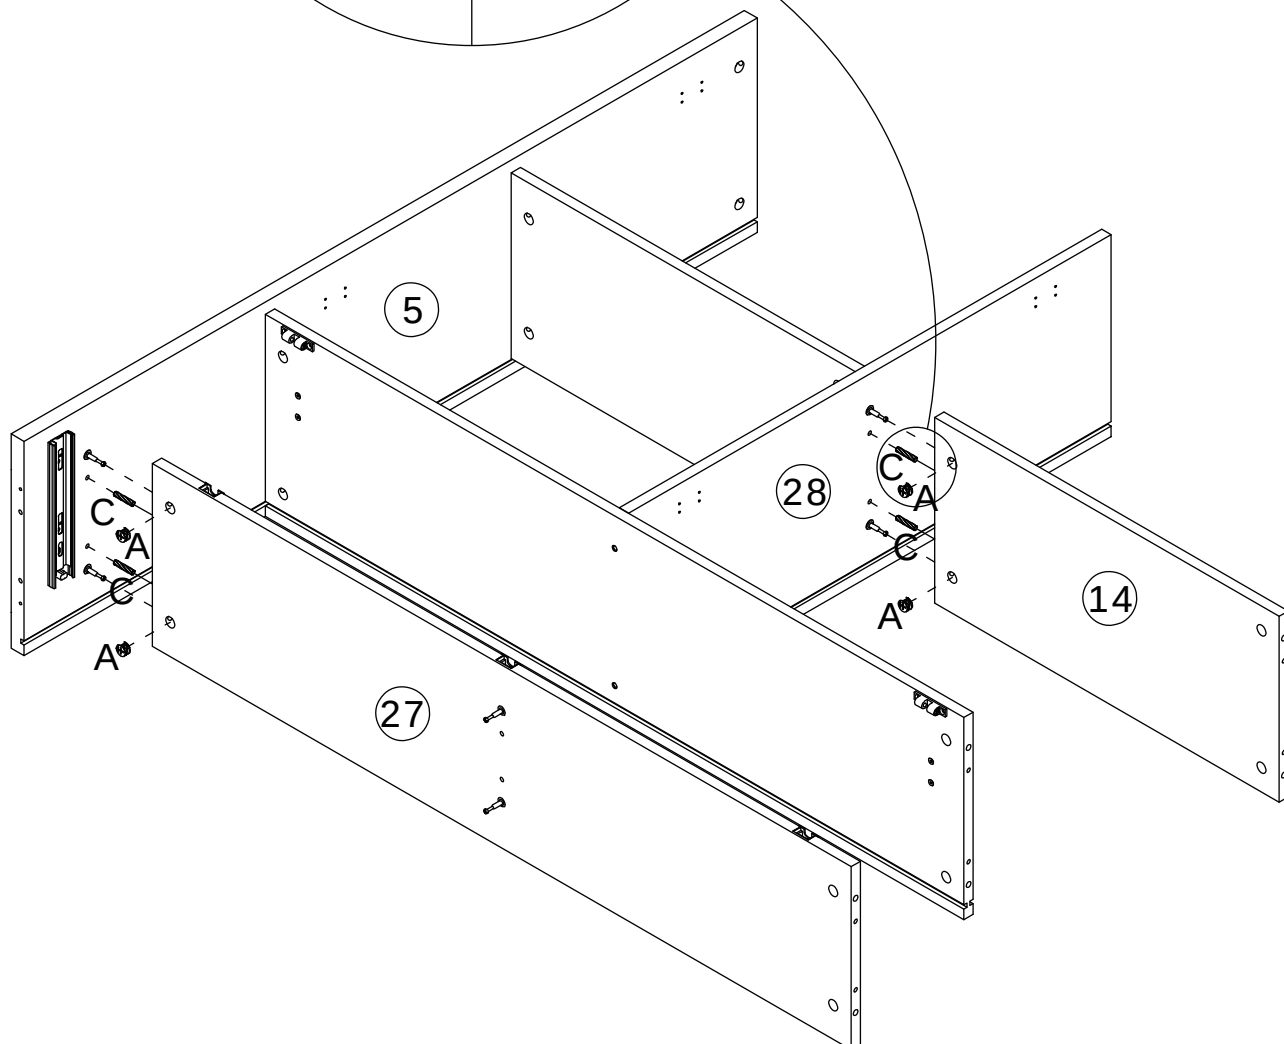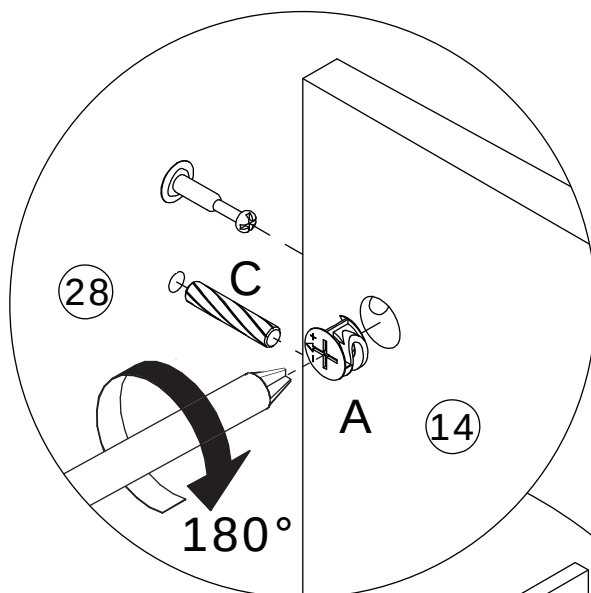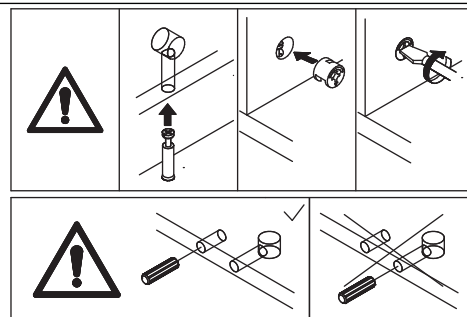

25

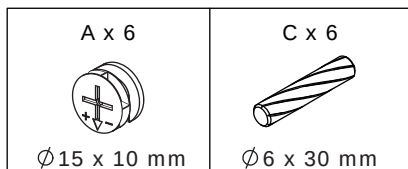  

   
Connect Panel 6 to Panels 14, 26 and 27 using dowel pin (C), then tighten by turning cam lock (A) clockwise.

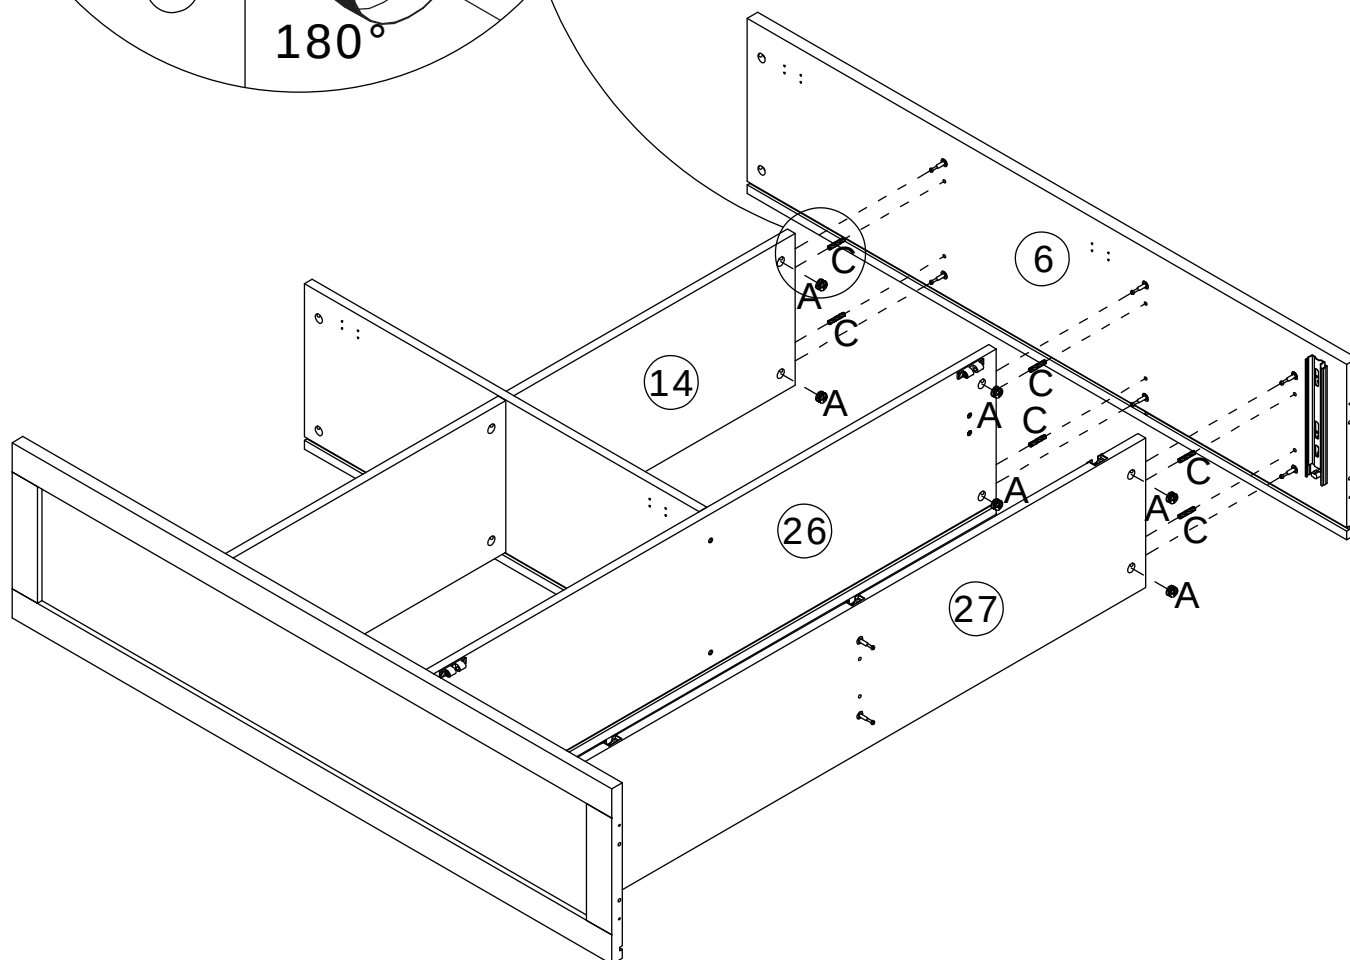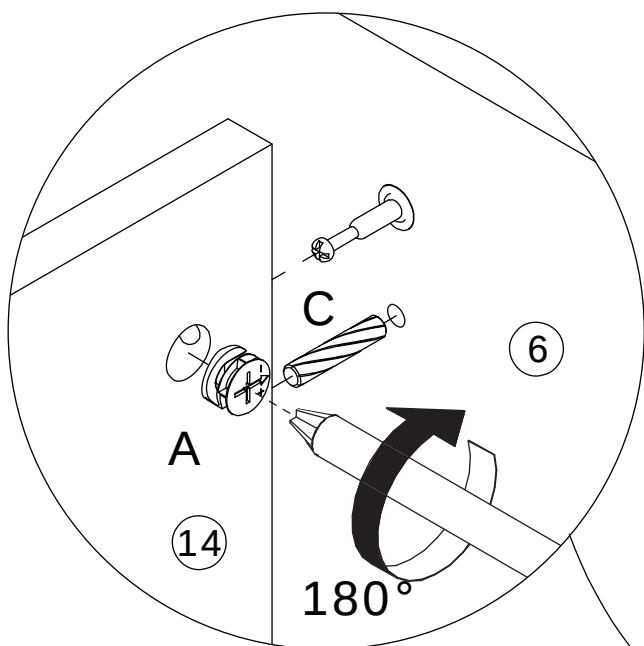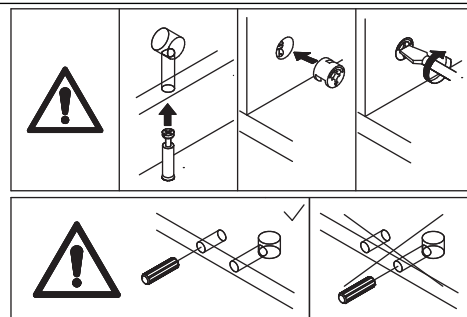


Insert Panels 30, 31 and 32 along the available slots.

Pay attention to the hole positions of Panels 30 and 31 and the panel orientation.


 
1.

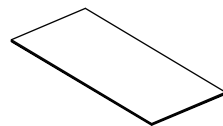

 2.

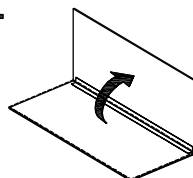


 
 
3.

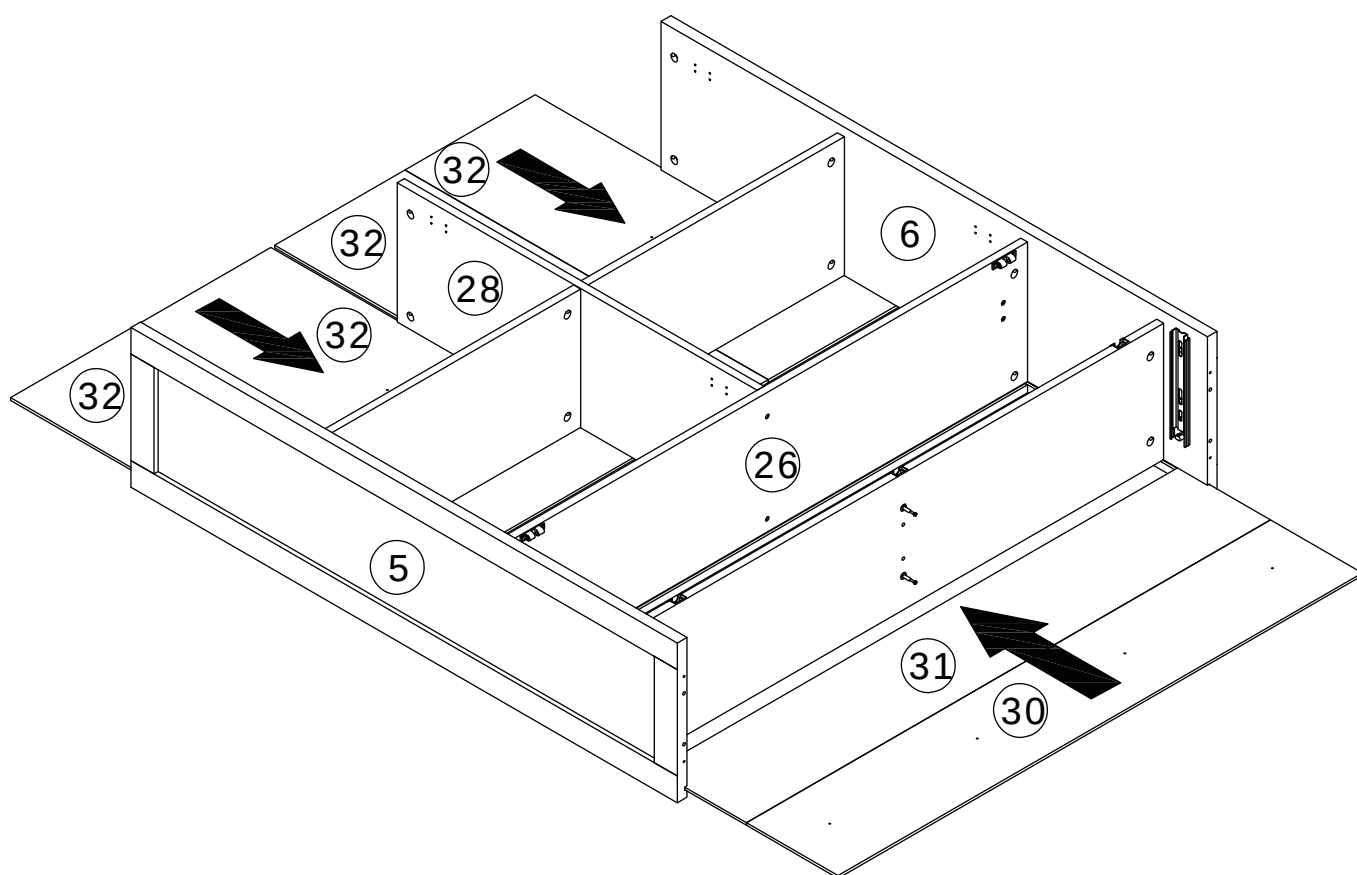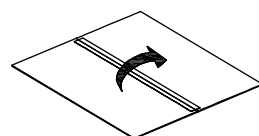



27



  
 
Secure slide rail (Y-1) to Panel 22 using screw (E).

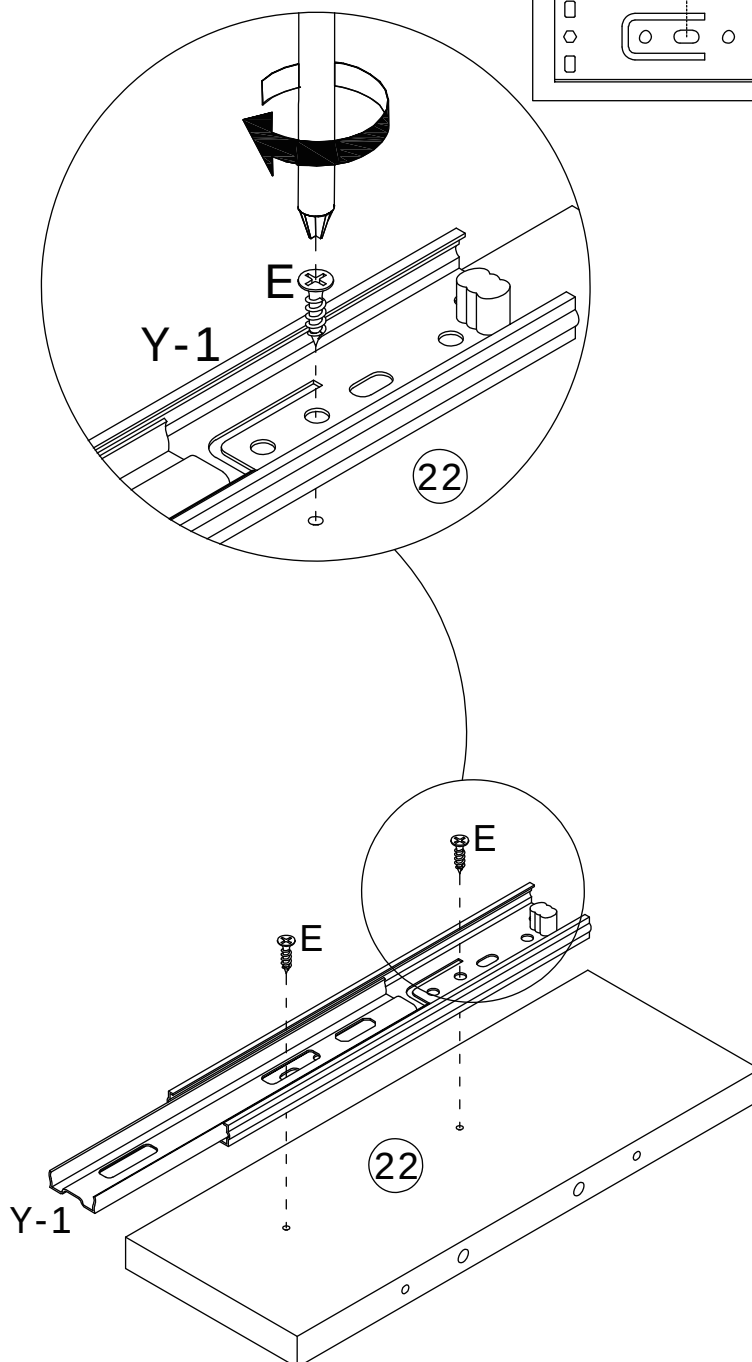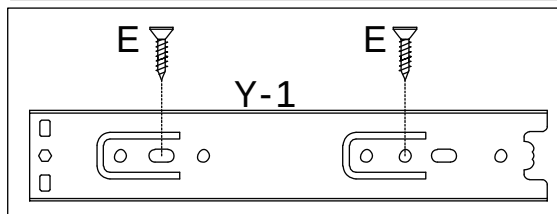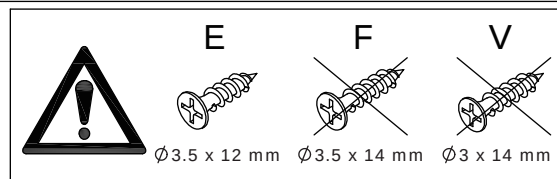



28

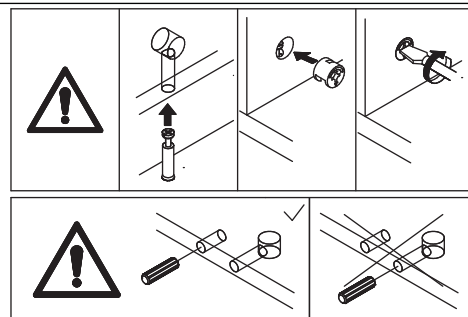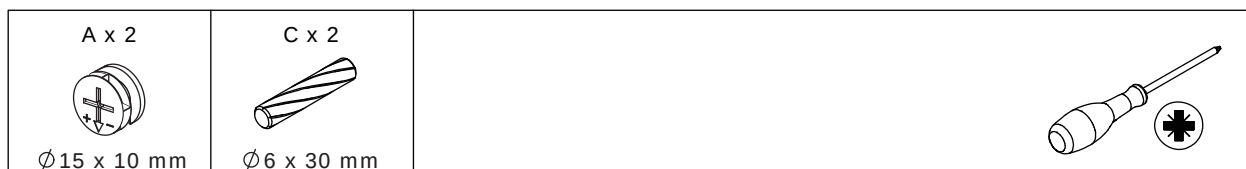  

  Connect Panel 22 to Panel 27 using dowel pin (C), then tighten by turning cam lock (A) clockwise.

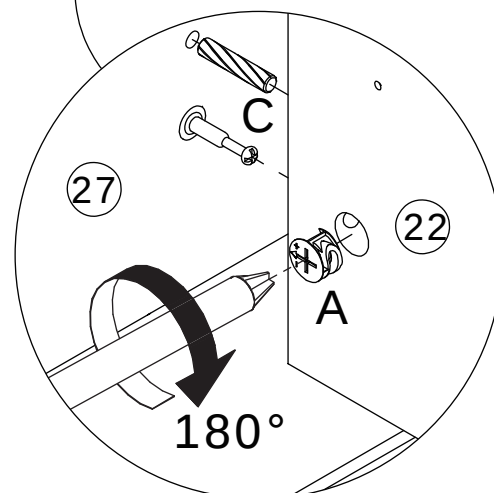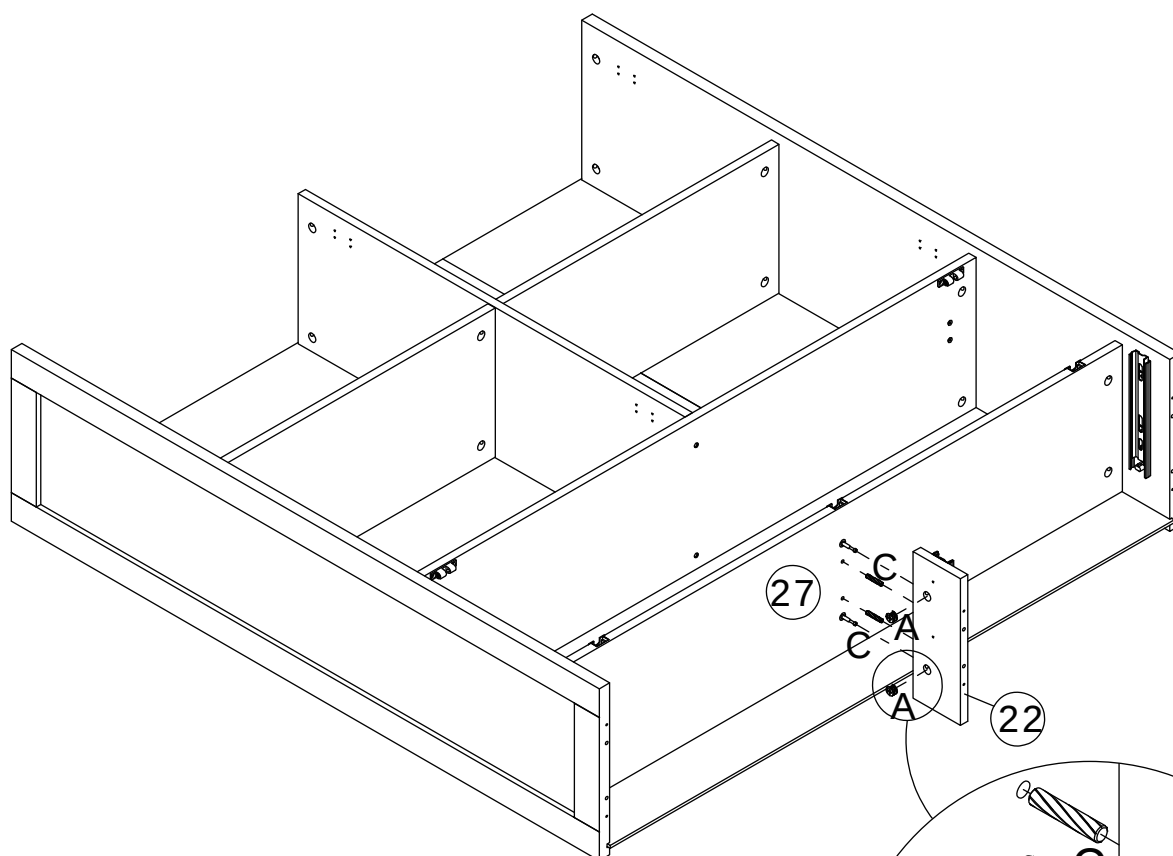


29


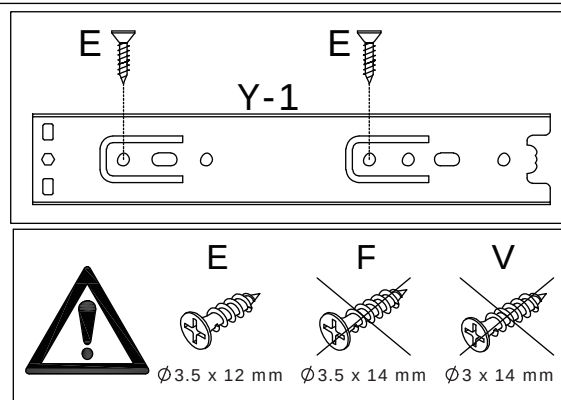 
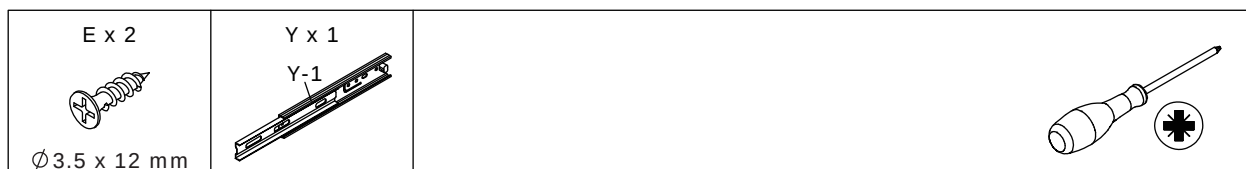 


Secure slide rail (Y-1) to Panel 22 using screw (E).


 
Note: To prevent the panel from cracking under stress, please support it with your hand during operation.

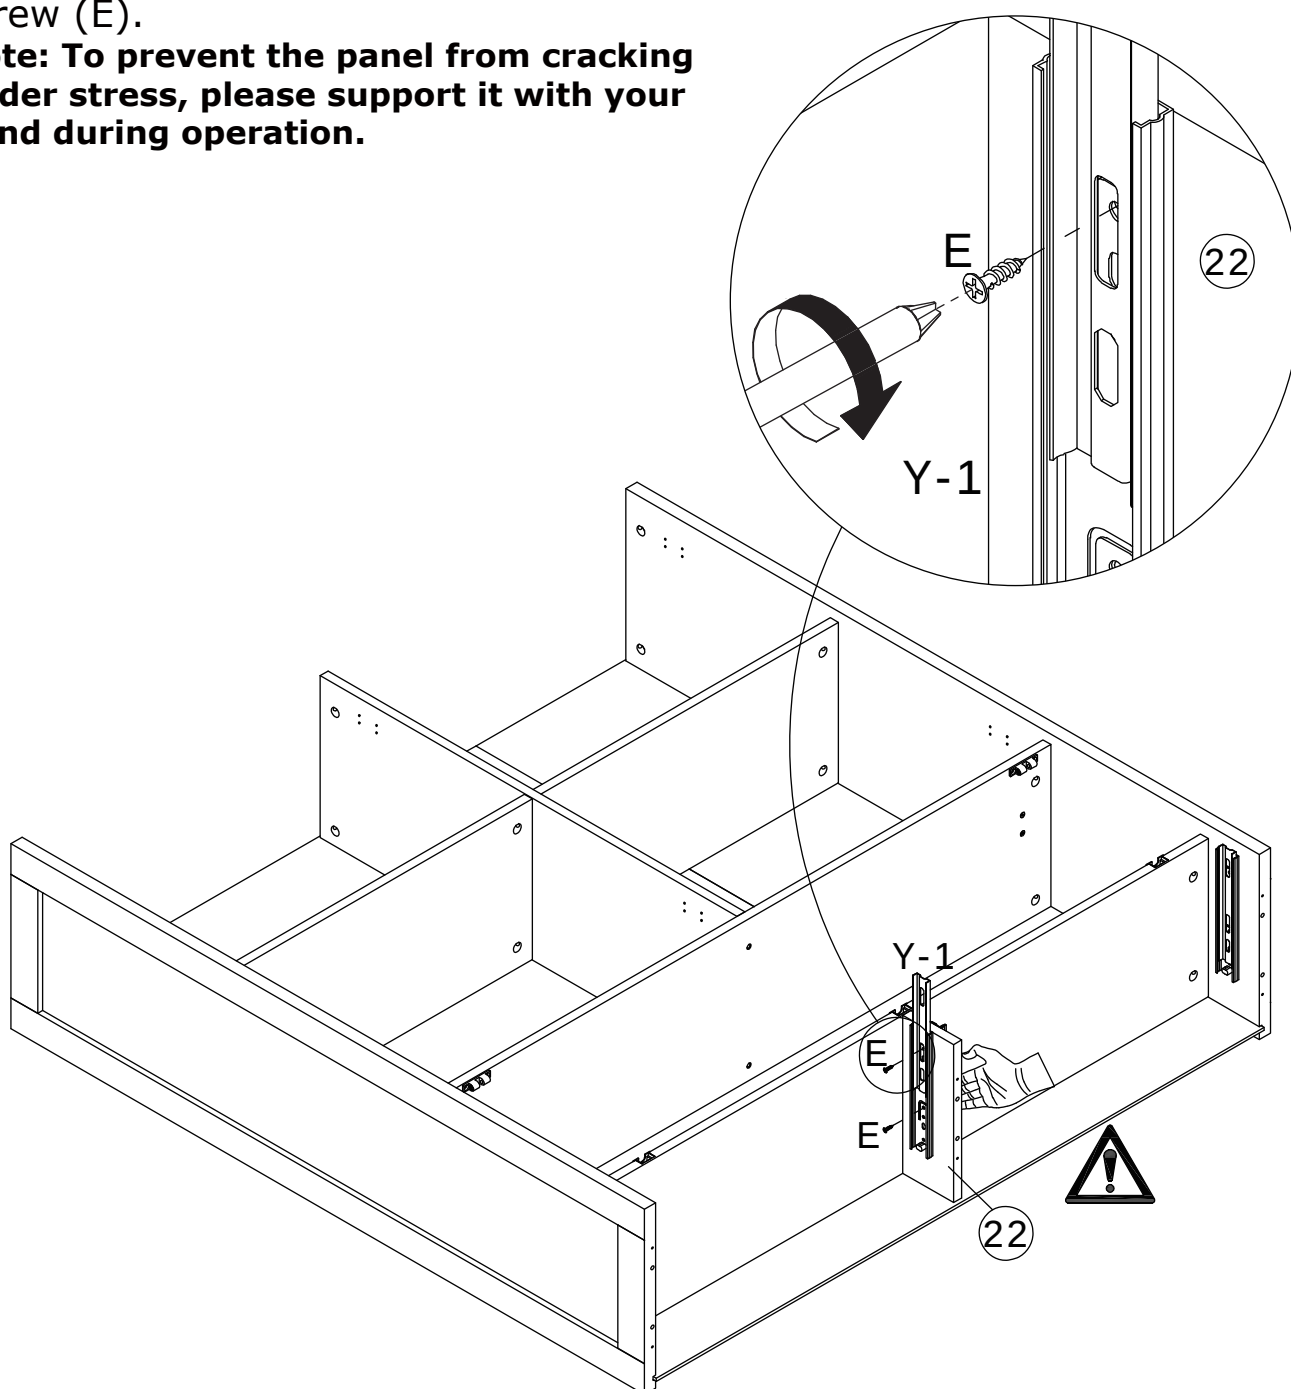


30

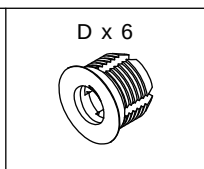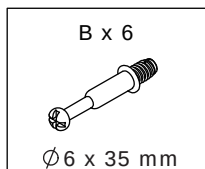   

  
Insert plug (D) into Panel 25, then screw self-tapping bolt (B) into Panel 25.

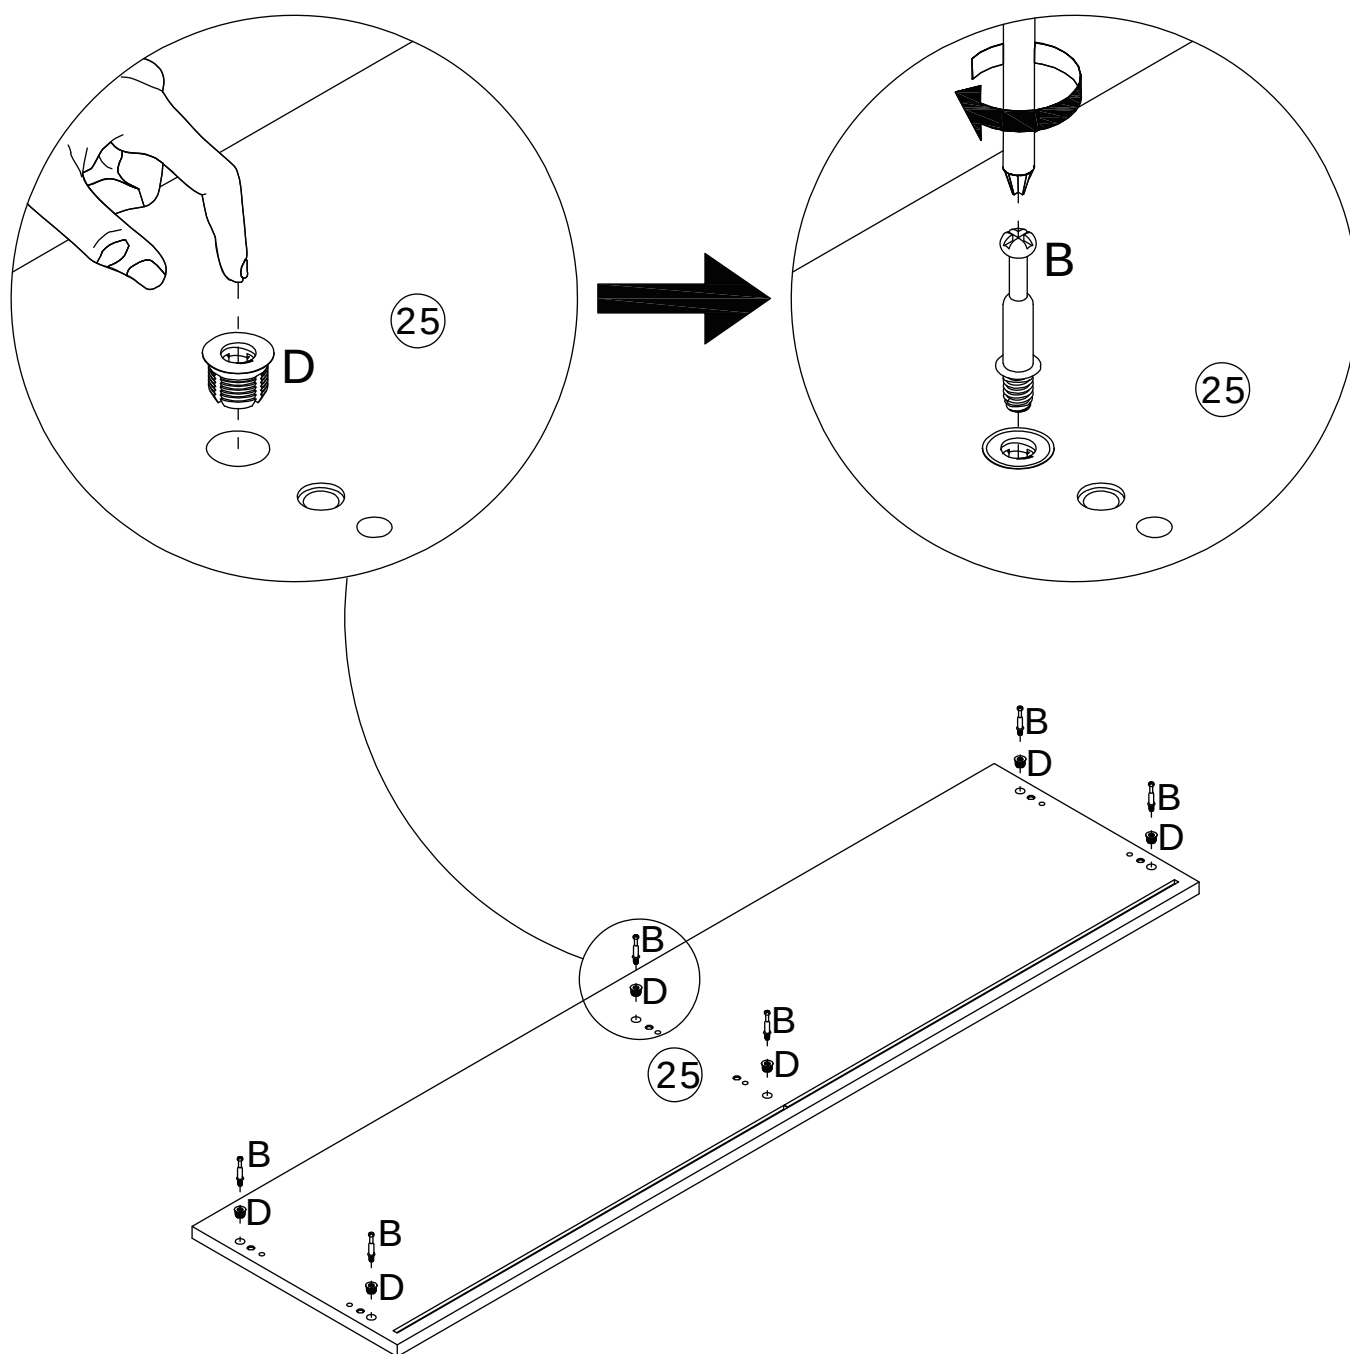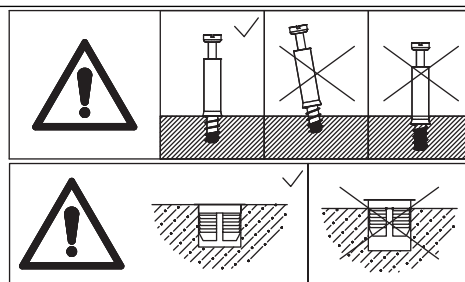



31

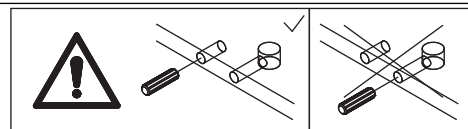 

 Connect Panel 25 to Panels 5, 6 and 22 using dowel pin (C), then secure them with screw (U).

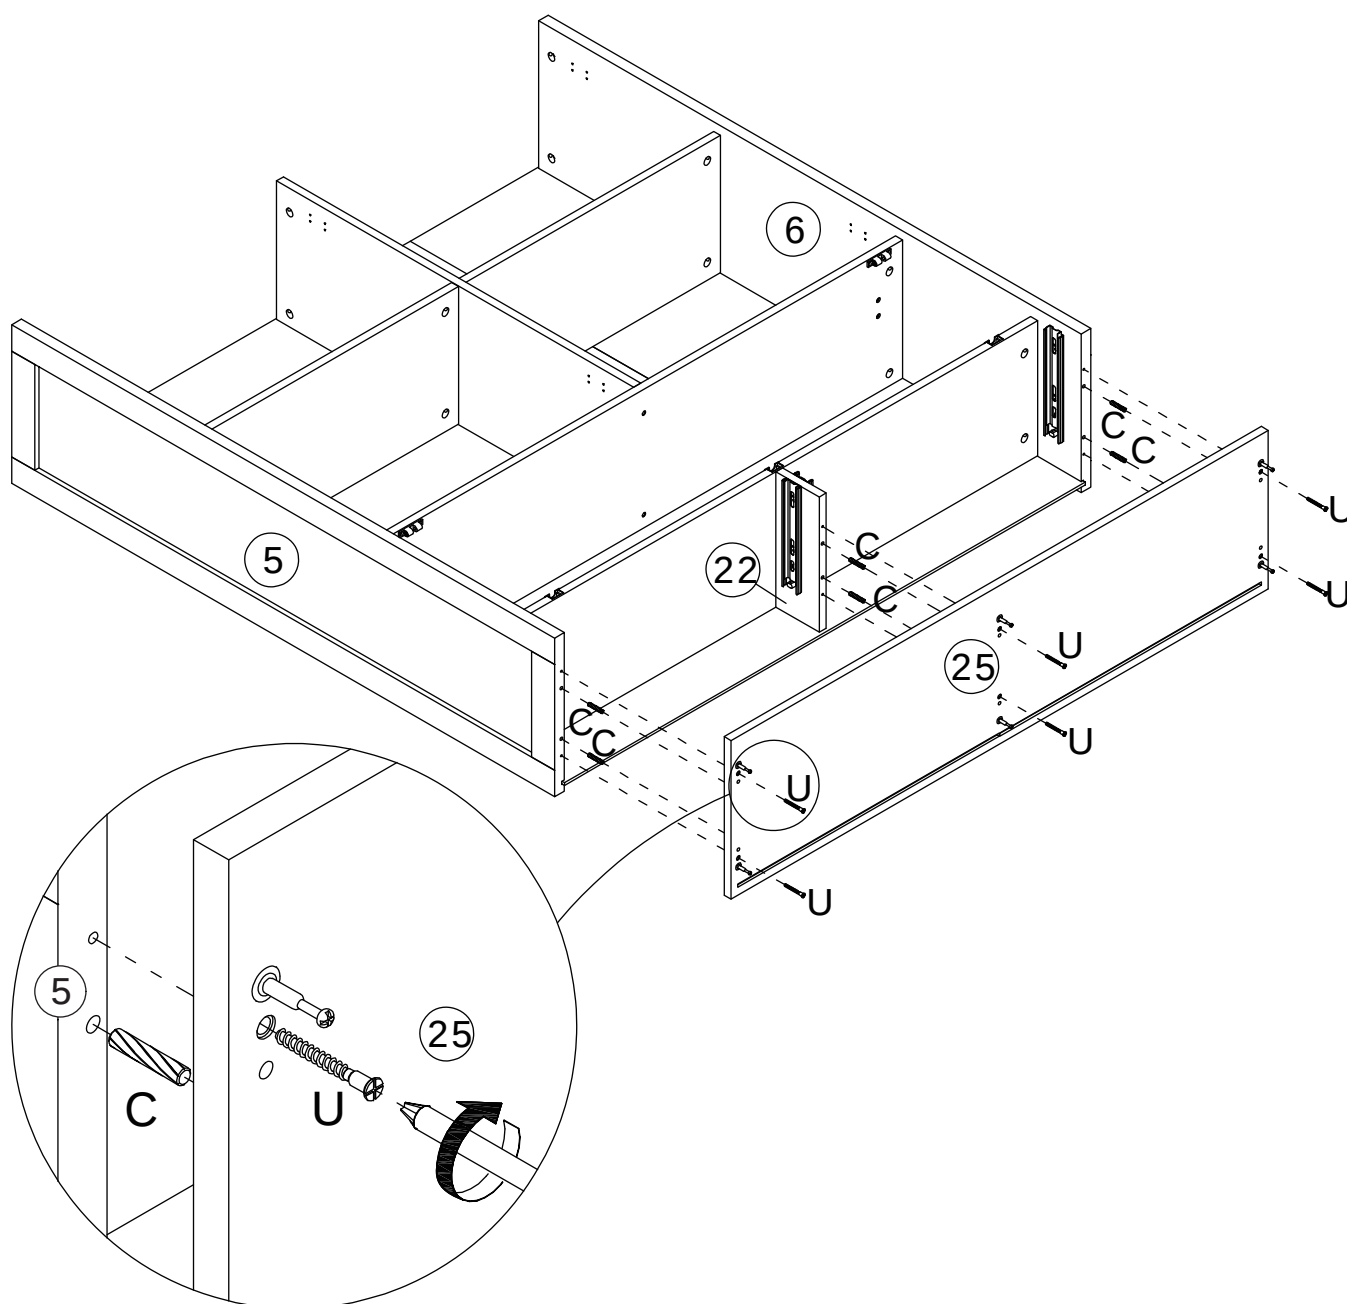


32



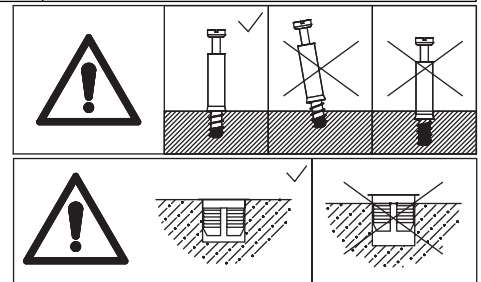 
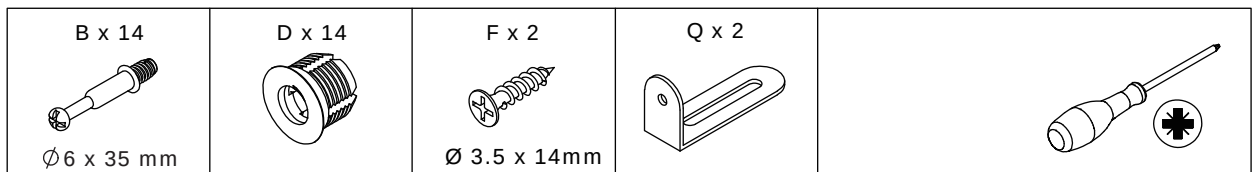 


Insert plug (D) into **both sides of** Panel 38, screw self-tapping bolt (B) into Panel 38.

 
Secure anti-tip bracket (Q) to Panel 38 using screw (F).

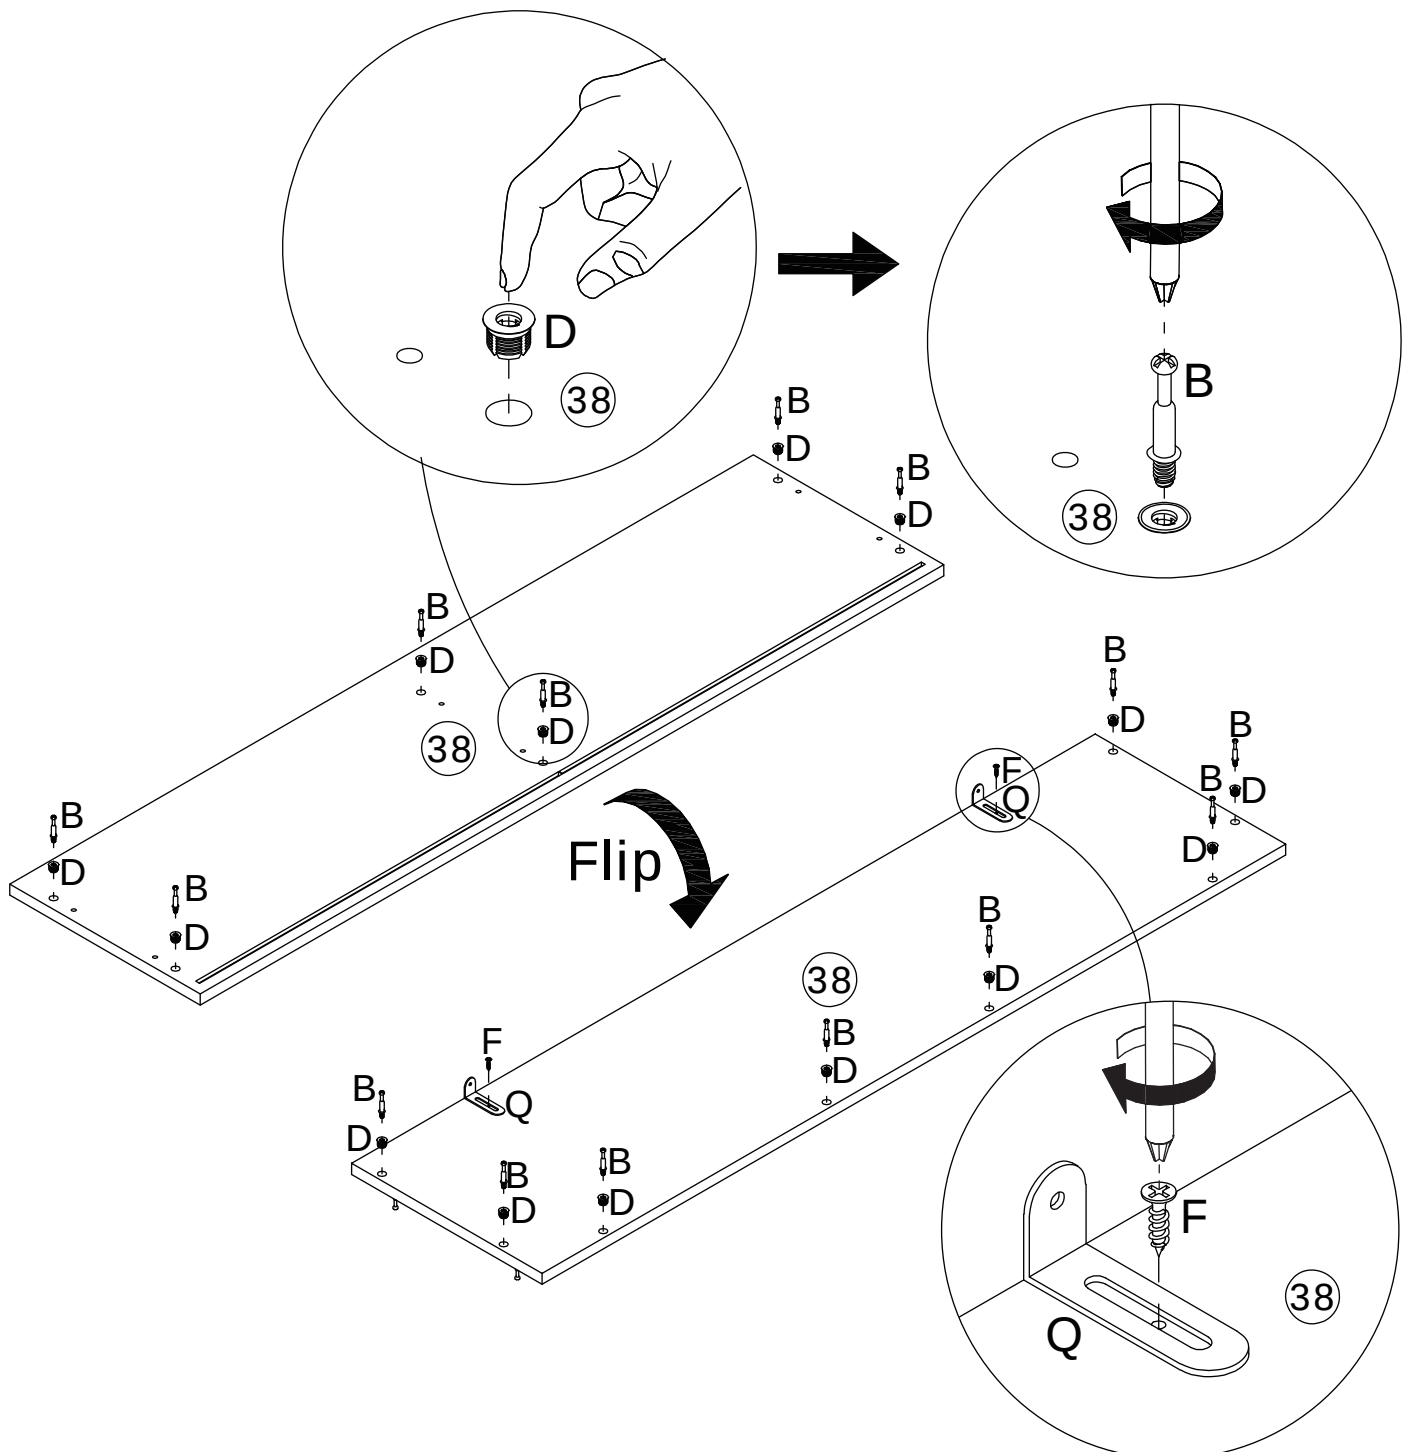



33

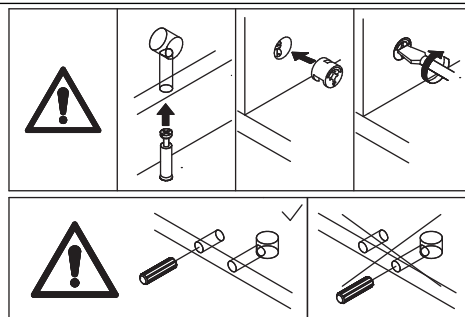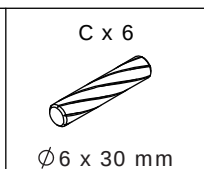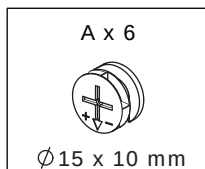    


 
Connect Panel 38 to Panels 5, 6 and 28 using dowel pin (C), then tighten by turning cam lock (A) clockwise.

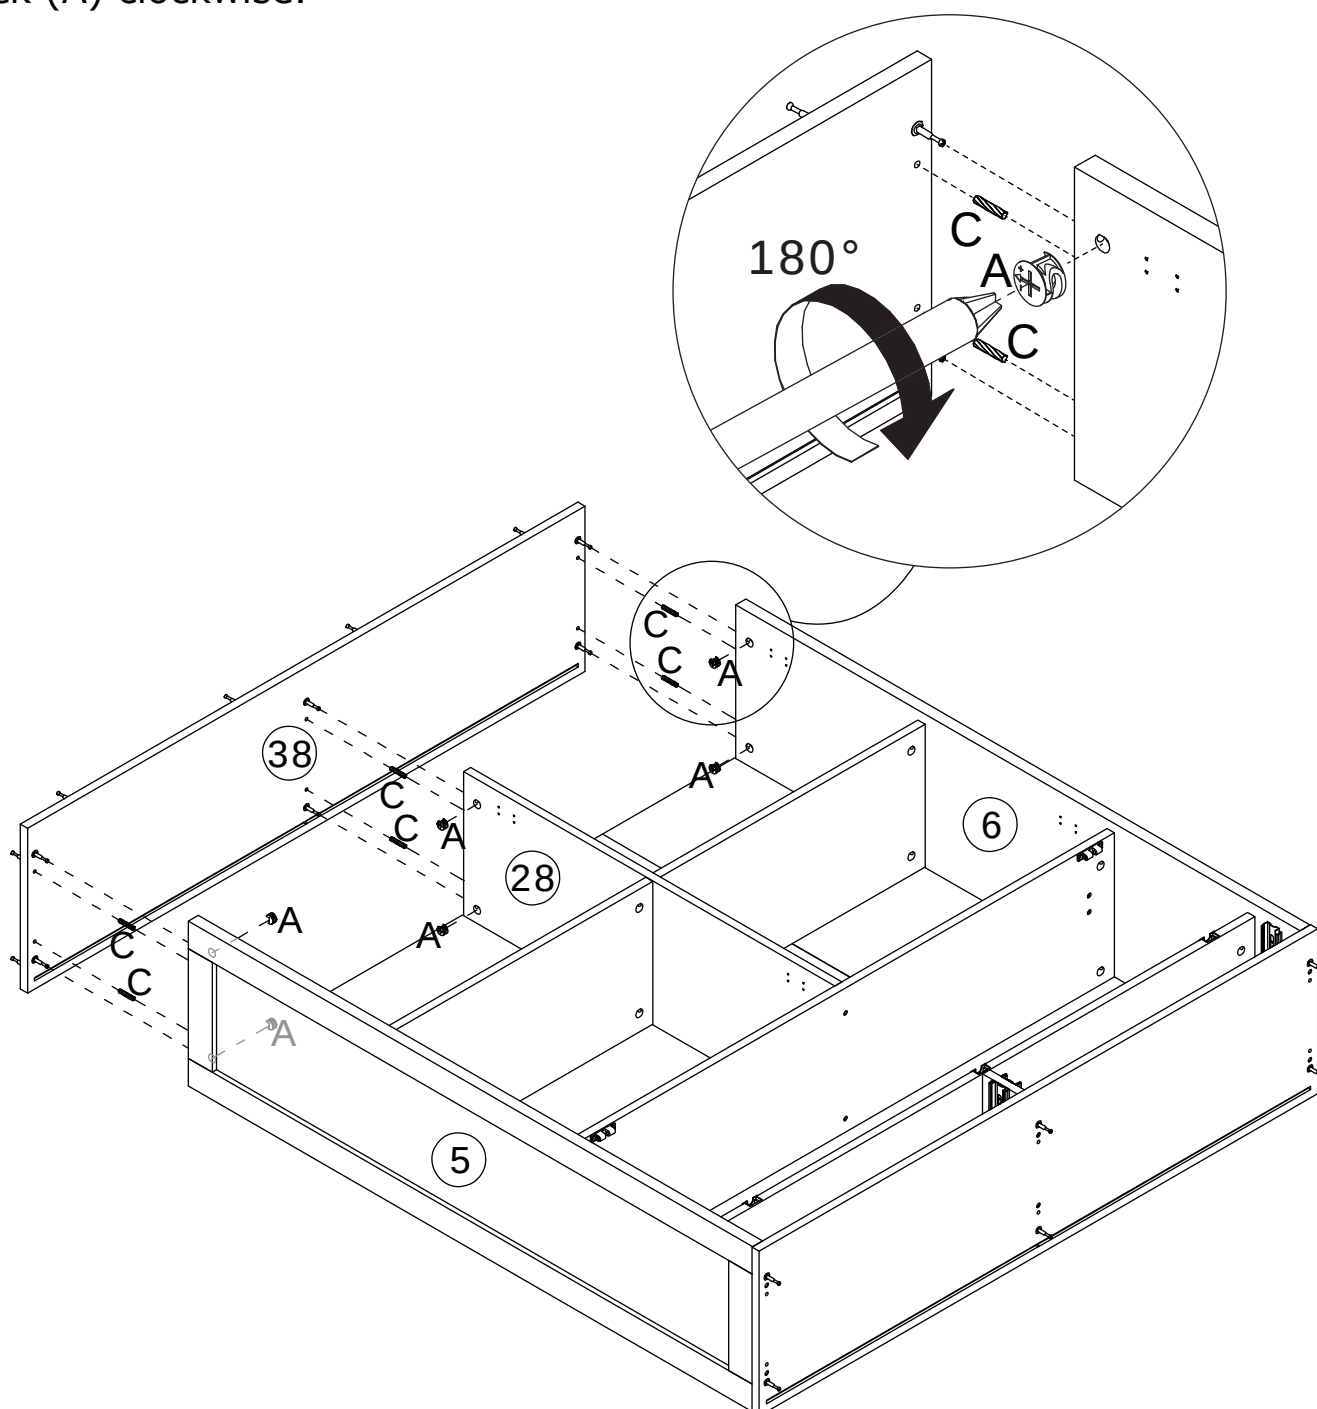



34

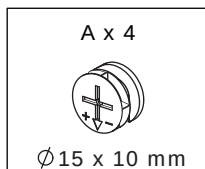  

  
Connect Panel 24 to Panels 2 and 3, then tighten by turning cam lock (A) clockwise.

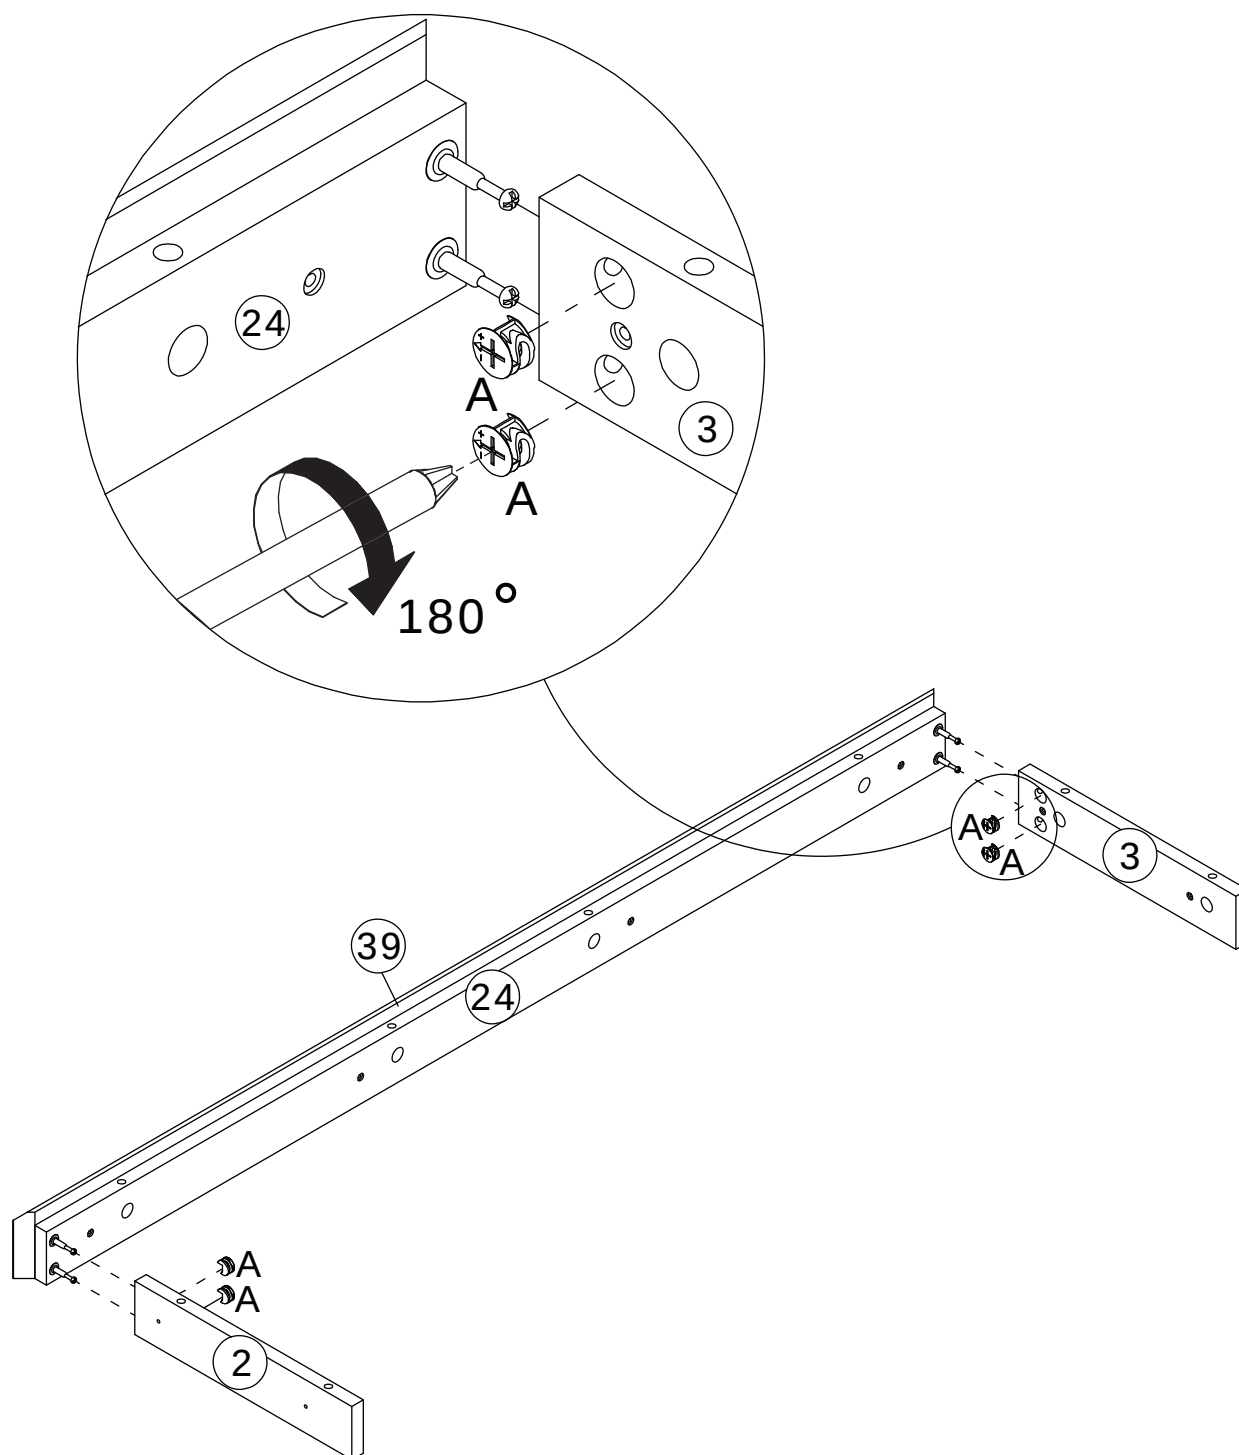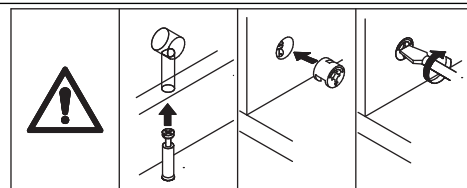



35

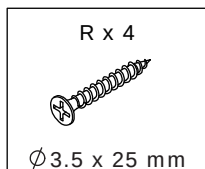  



 
Secure Panel 9 to Panel 2 using screw (R), and secure Panel 10 to Panel 3 using screw (R).

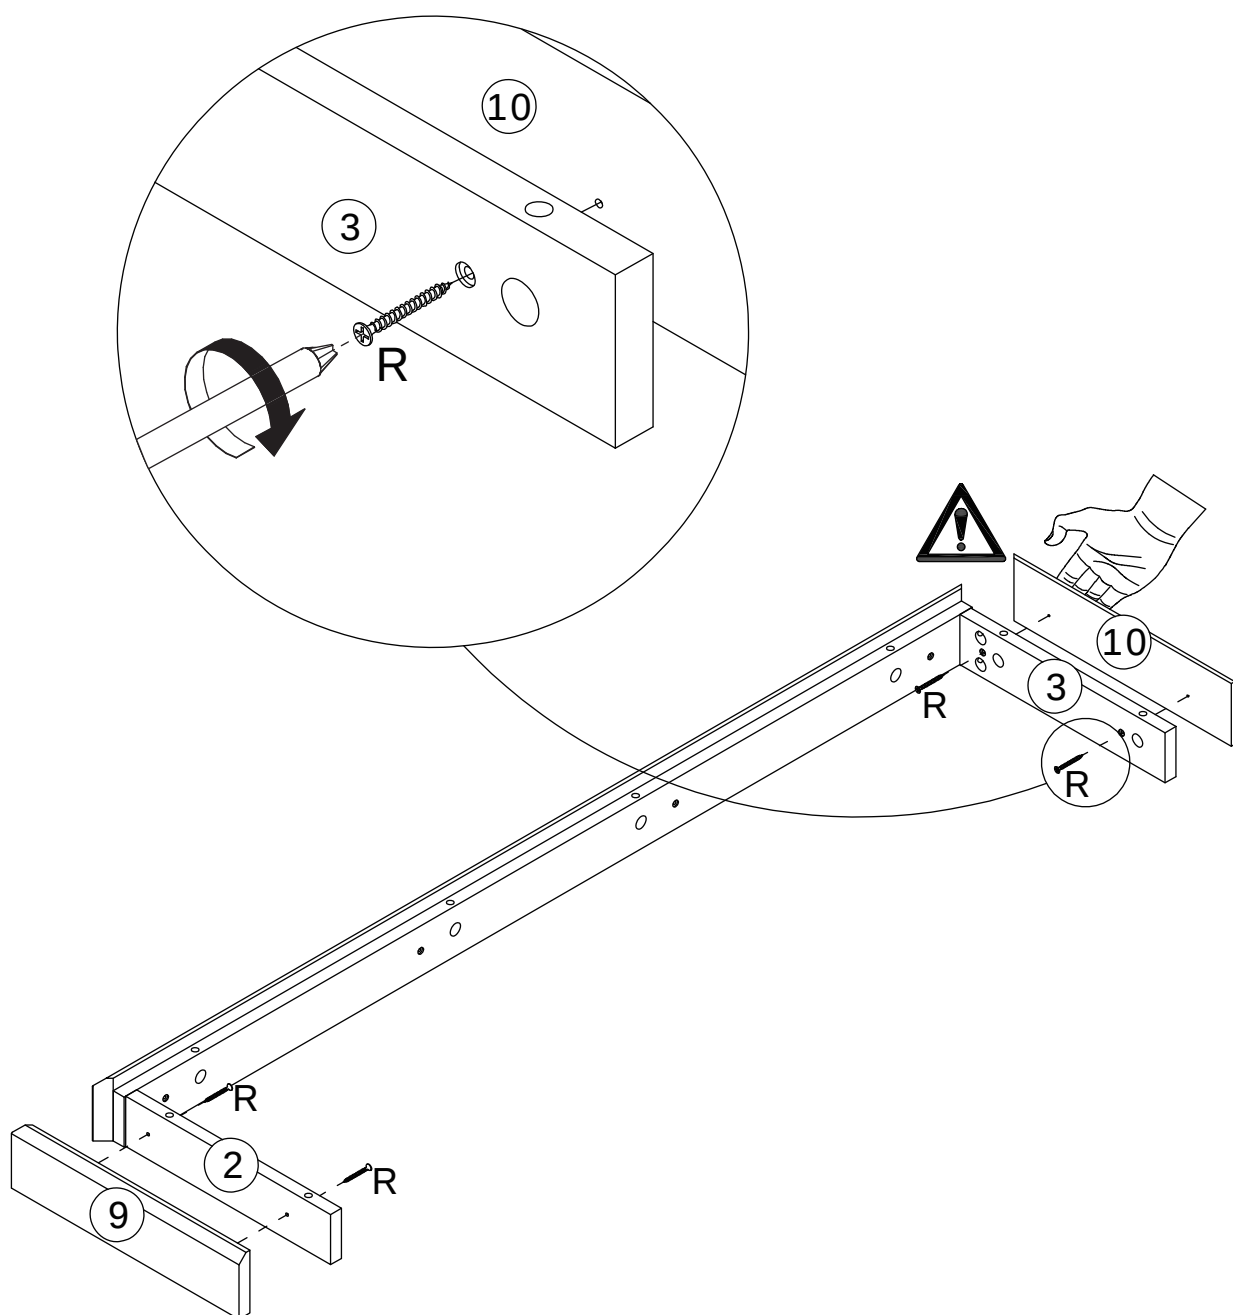



36

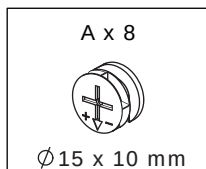  

   
Connect Panels 2, 3 and 24 to Panel 38, then tighten by turning cam lock (A) clockwise.

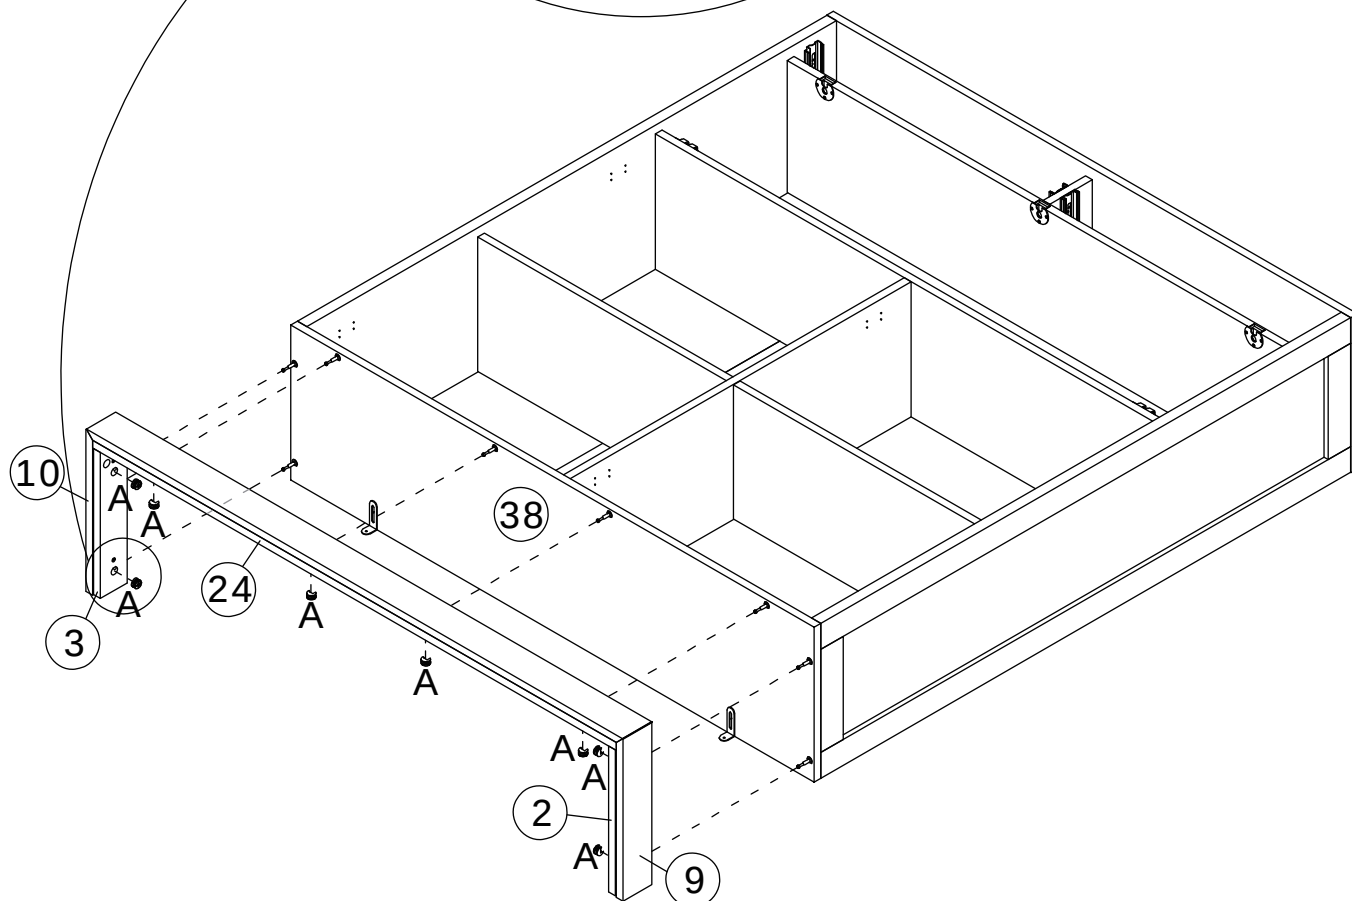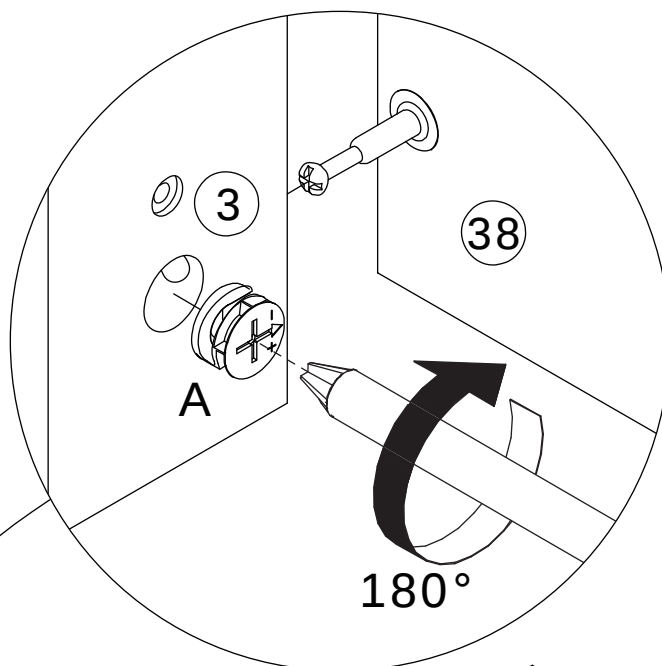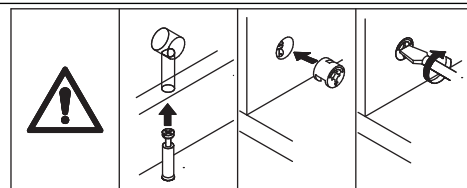

  
Press the protrusion on part (K-2) to freely pull the steel wire rope (K-1).

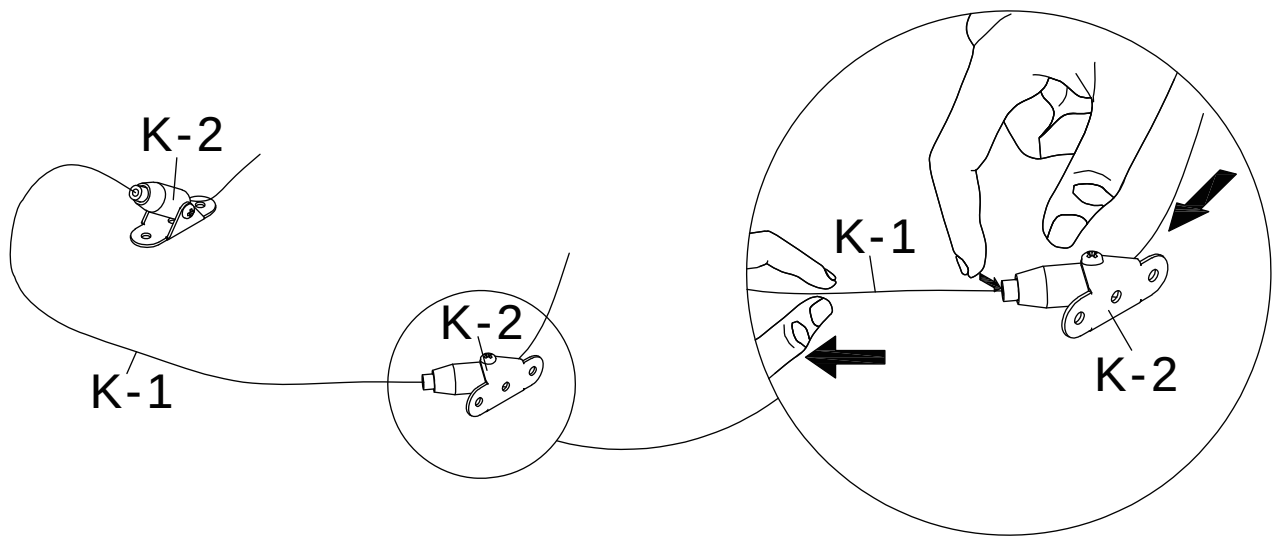

 
Drag part (K) to the state shown in the figure for easy installation.

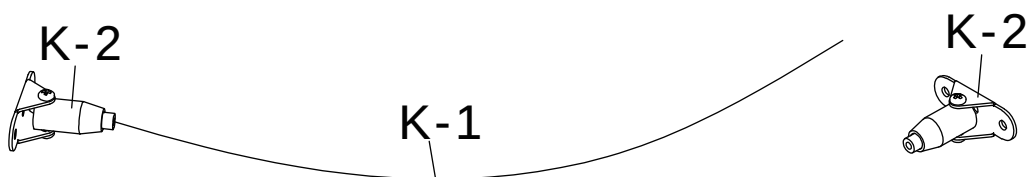





37

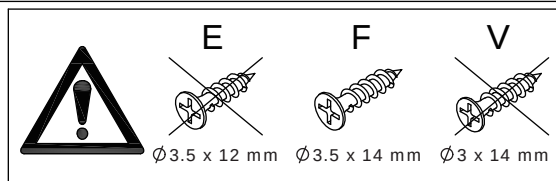 

 
Secure part (K-2) to Panel 26 using screw (F).

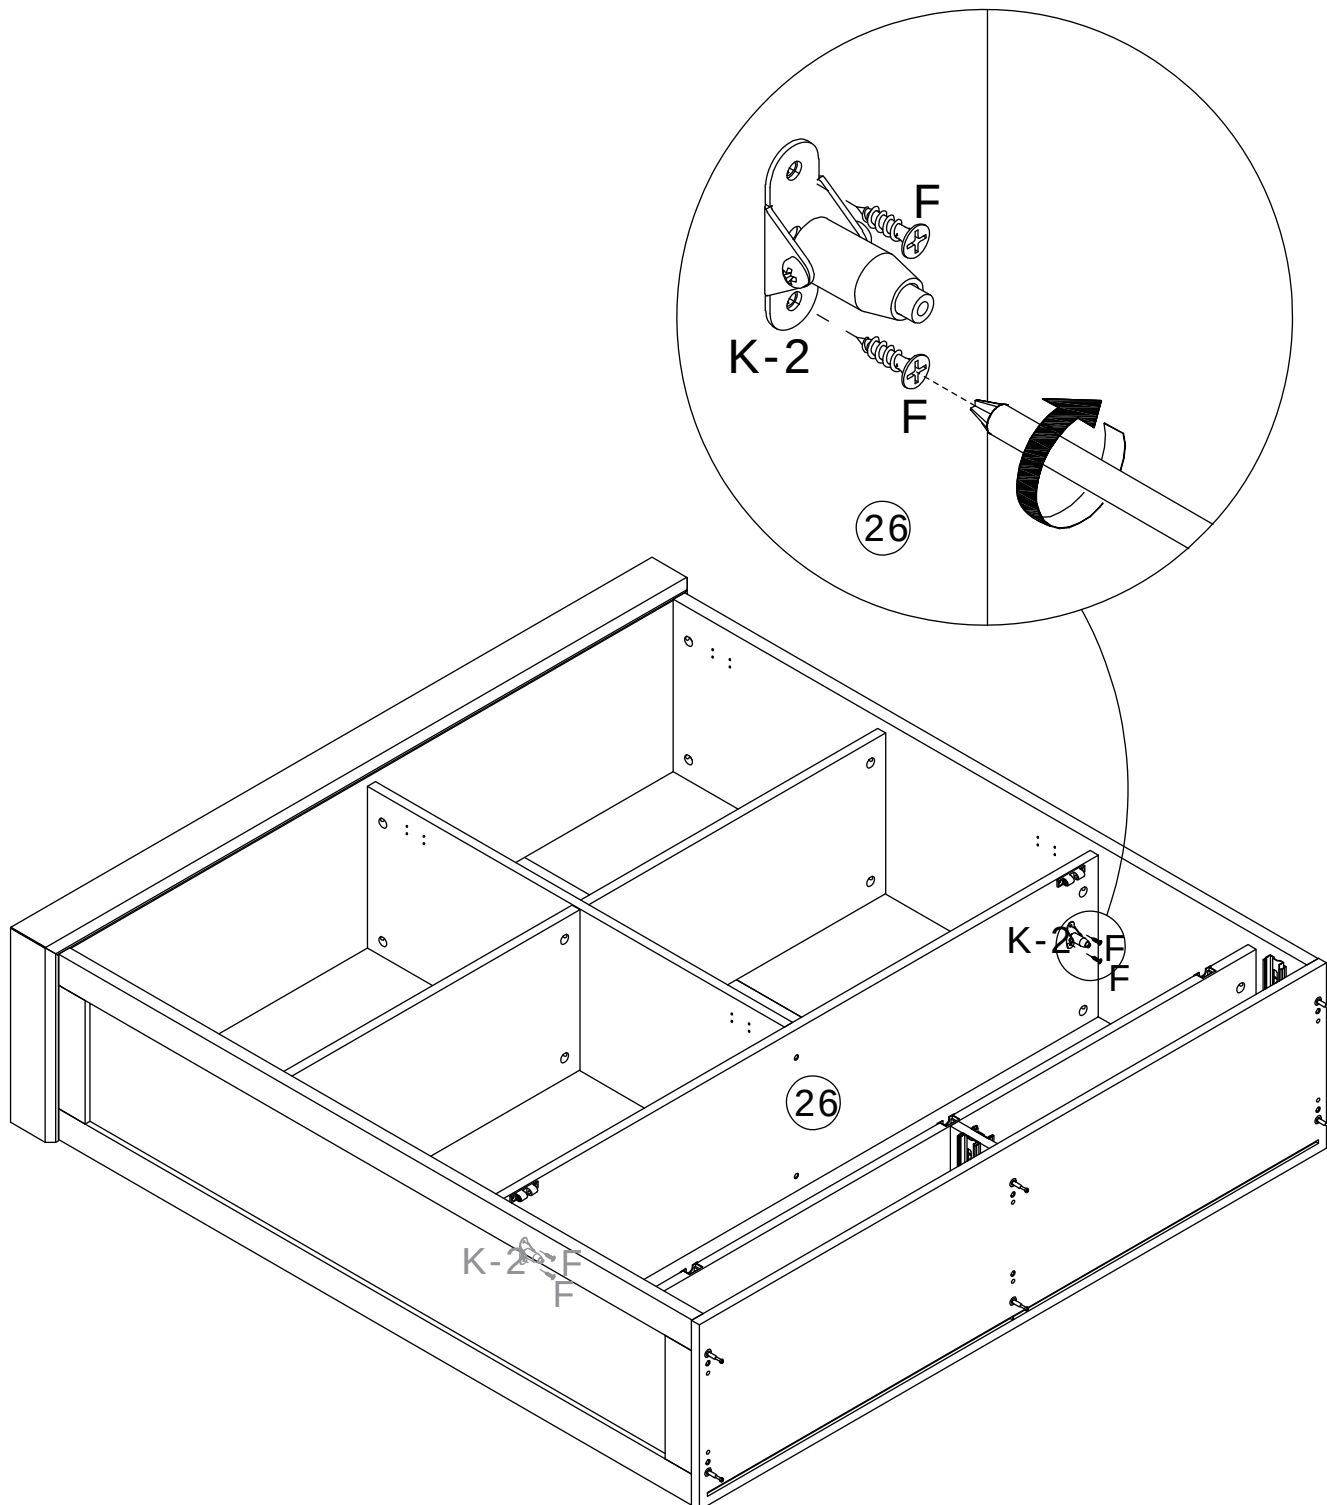

38

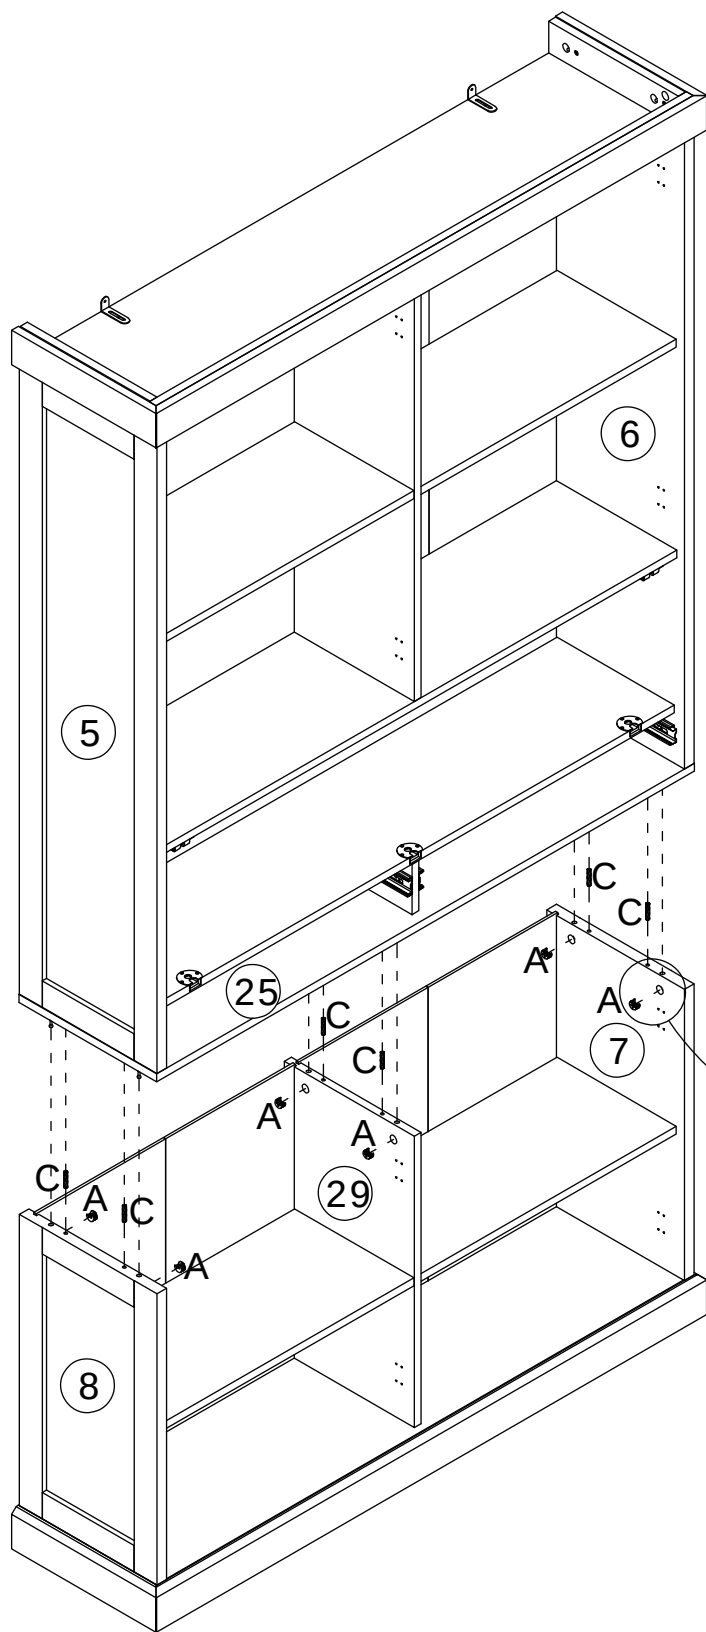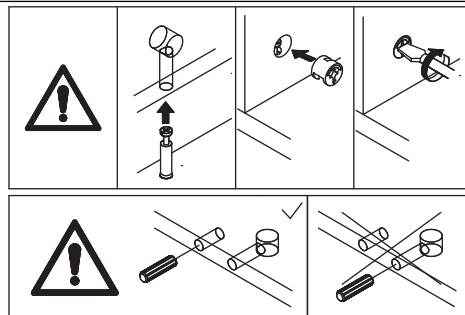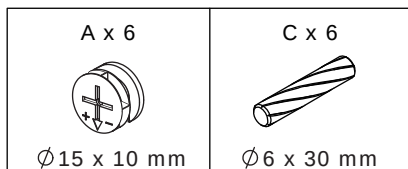    

 Connect Panel 25 to Panels 7, 8 and 29 using dowel pin (C), then tighten by turning cam lock (A) clockwise.

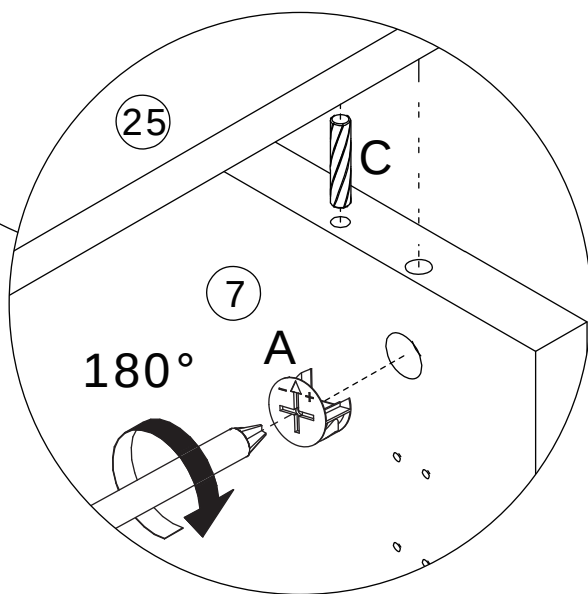


39


N x 12



 
Ø3 x 16 mm



 
Secure the back panels to the unit using screw (N).

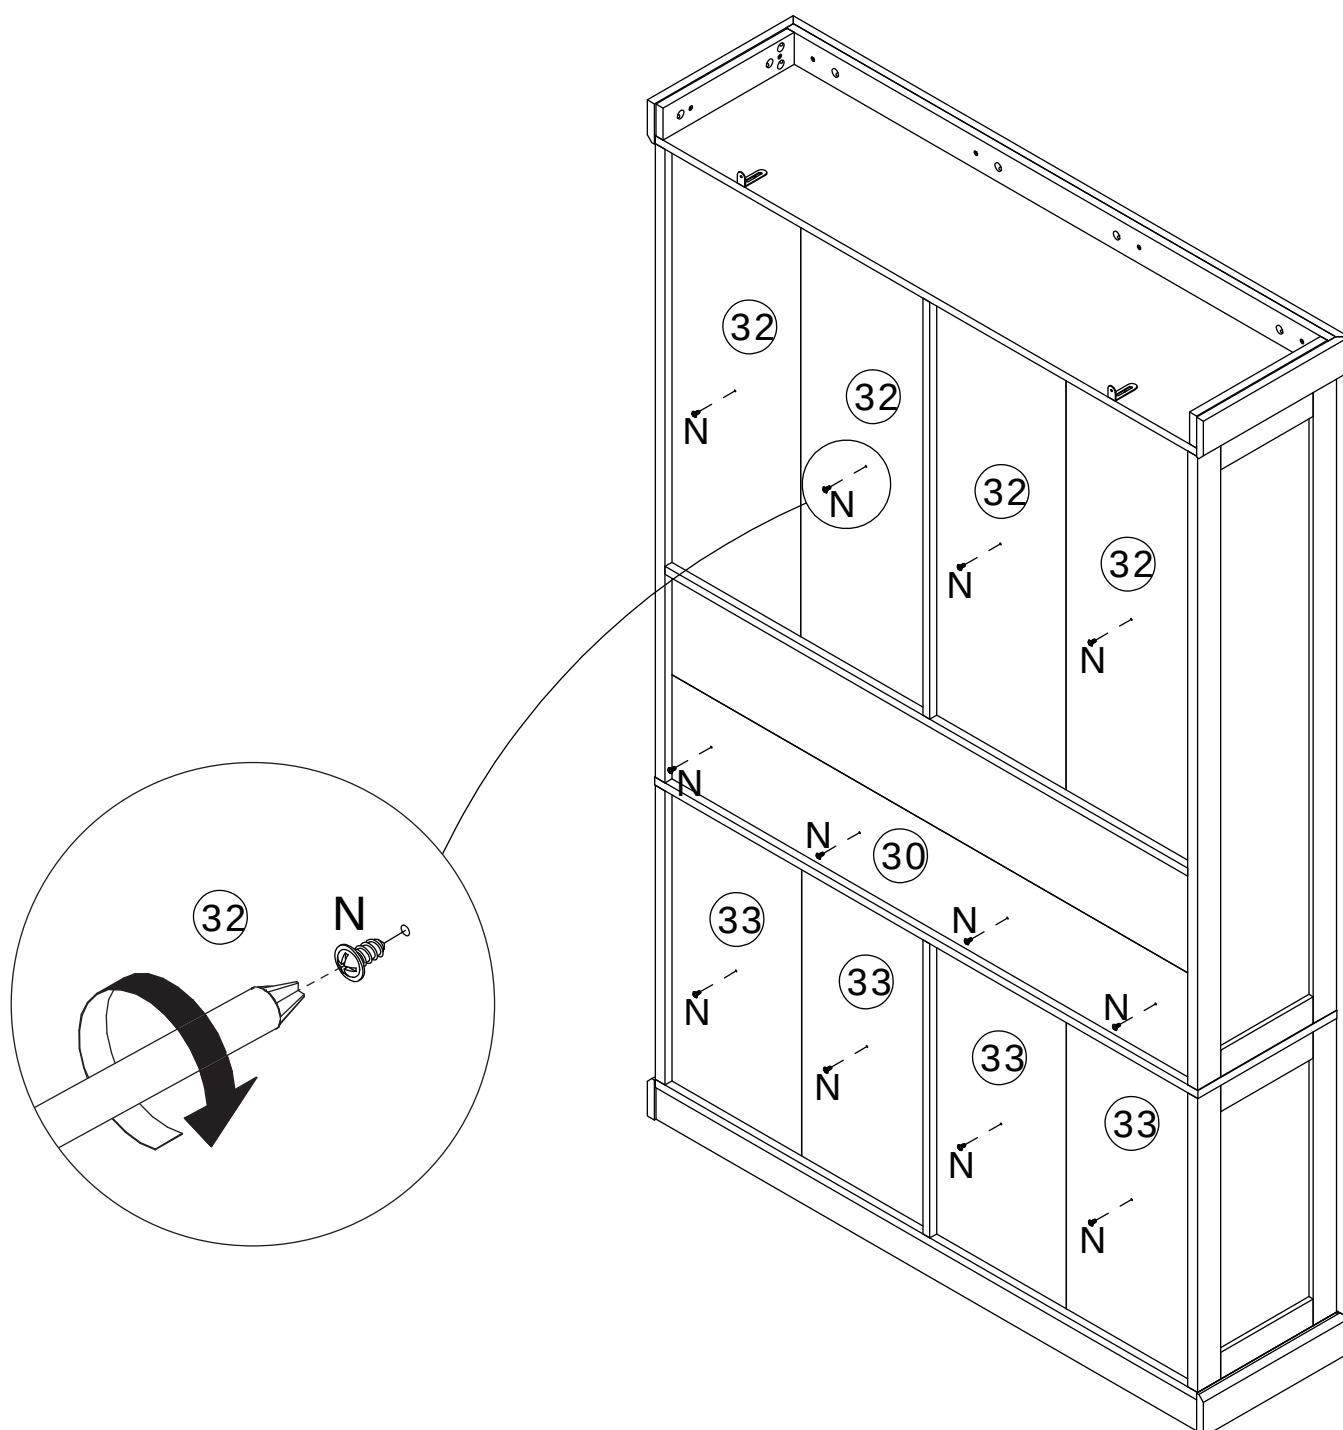

40

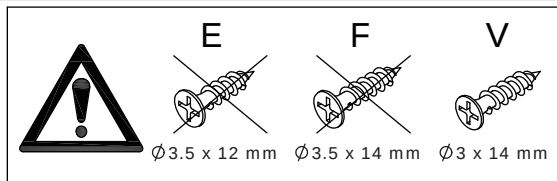 


 Insert clip (M) into the slots of the back panels and secure them using screw (V).

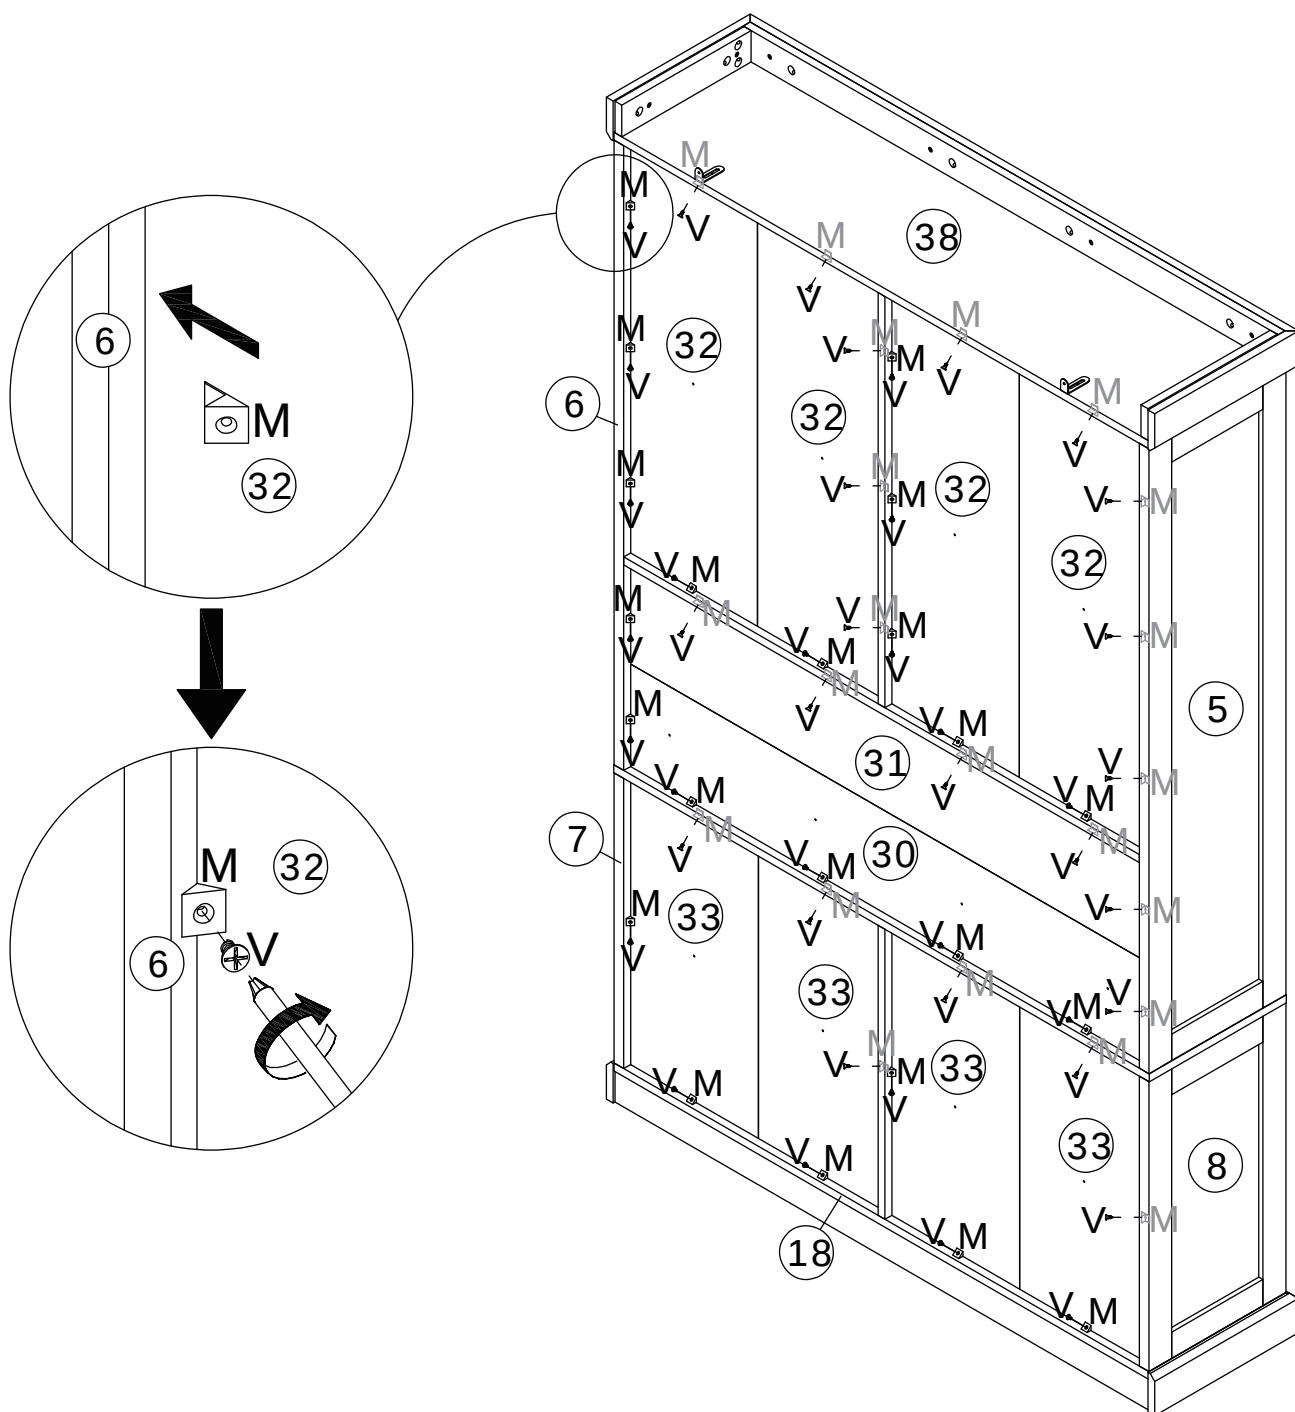

41

 
P x 2



T x 2




 Ø3.5 x 35 mm




Install the anti-tip device as shown.

 
WALL

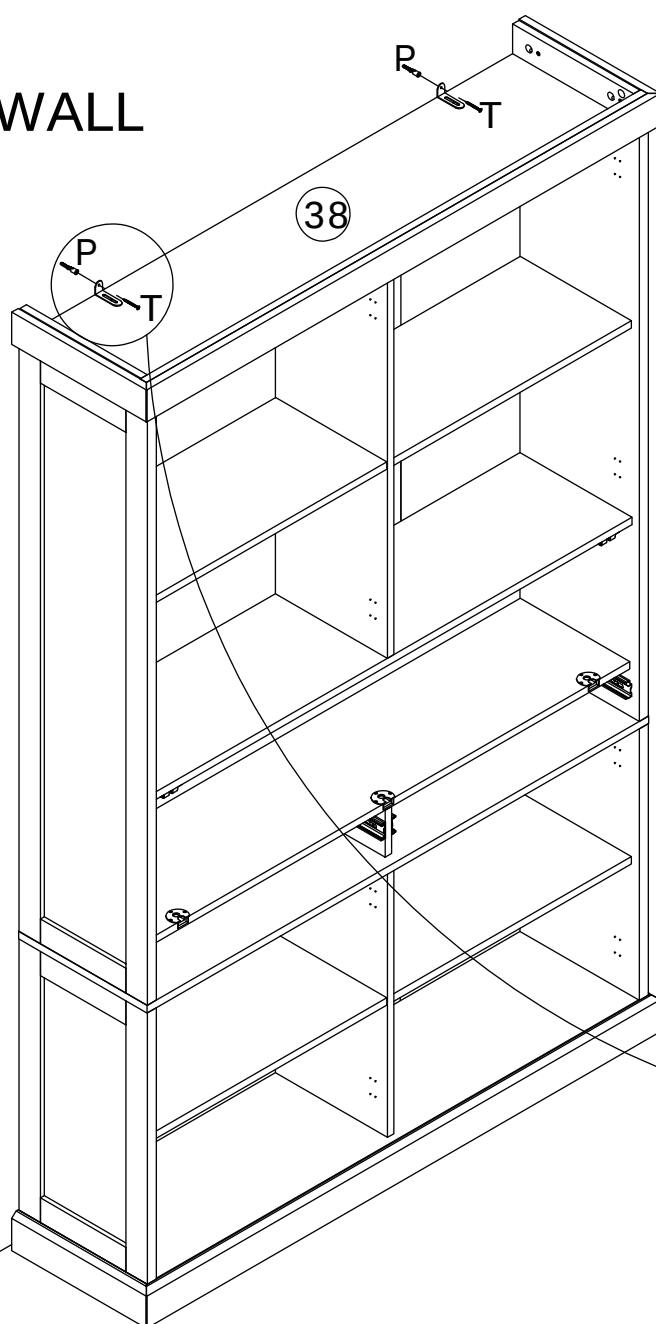

 
1.

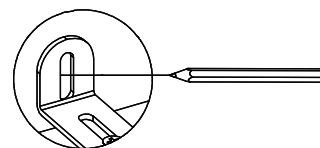


 
2.

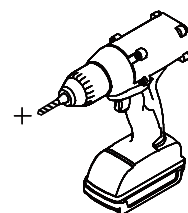

 3.

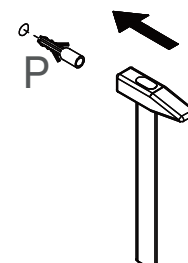

  4.

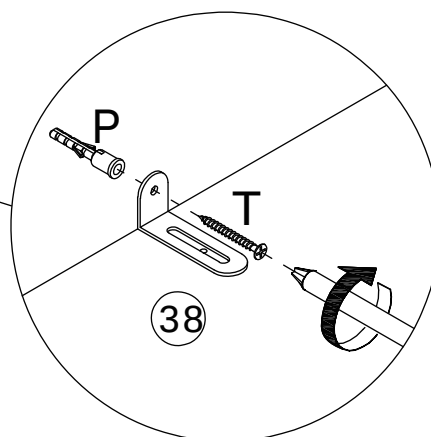
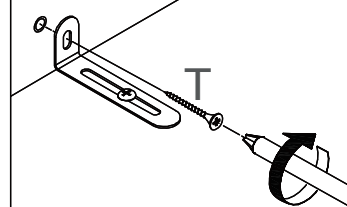






Pay attention to the difference between the middle part of the two types of door hinges.

Door hinges (X) are used for outer door panels.

  Door hinges (W) are used for inner door panels.

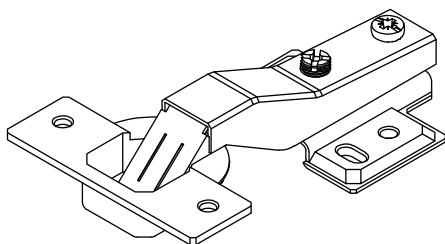



W

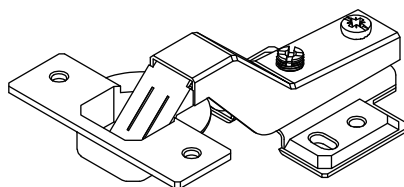  


X

  43

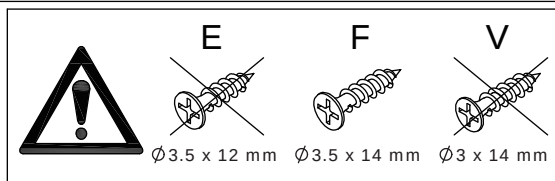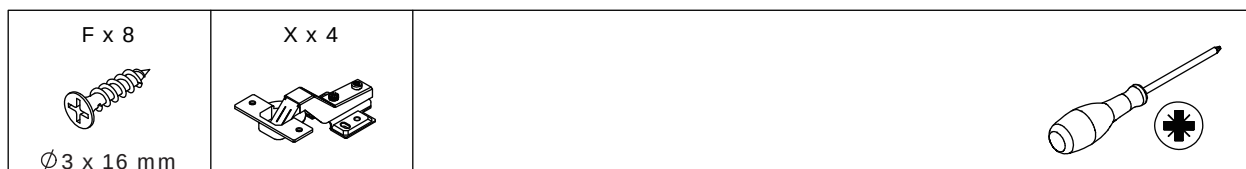

 Secure hinge (X) to Panels 34 and 35 using screw (F).

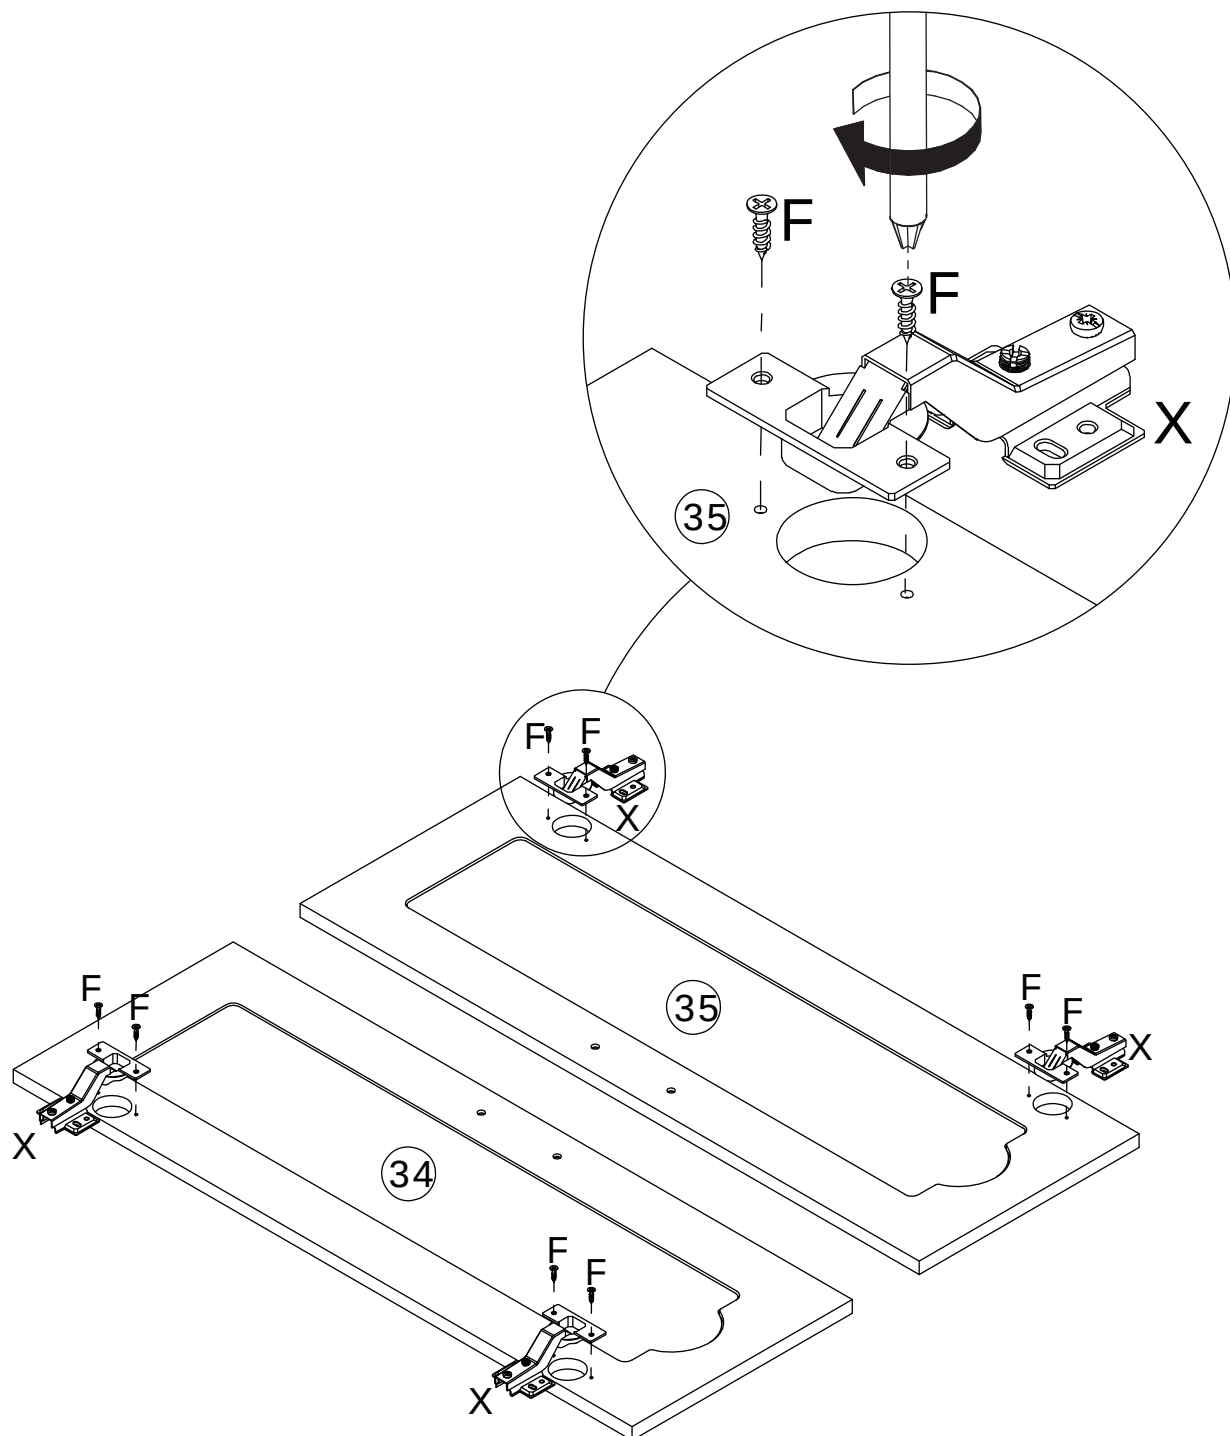


44

F x 16



 Ø3.5 x 14 mm



E



Ø3.5 x 12 mm

F



 
 
Ø3.5 x 14 mm

V




Ø3 x 14 mm

Connect Panel 34 to Panel 5, and Panel 35 to Panel 6 via the hinges using screw (F).

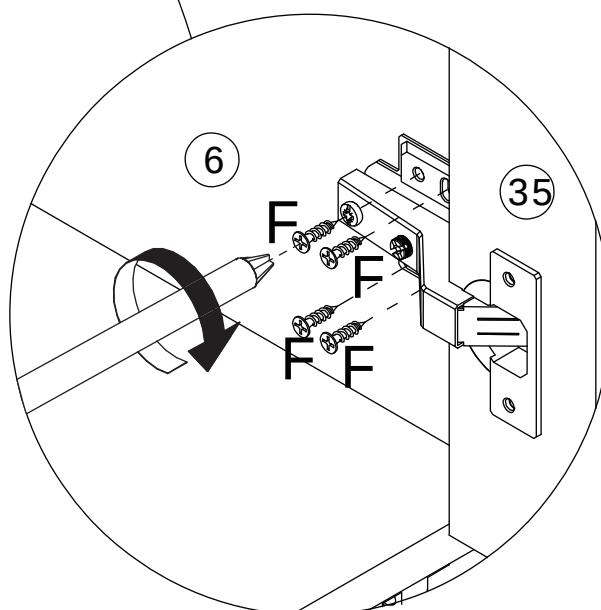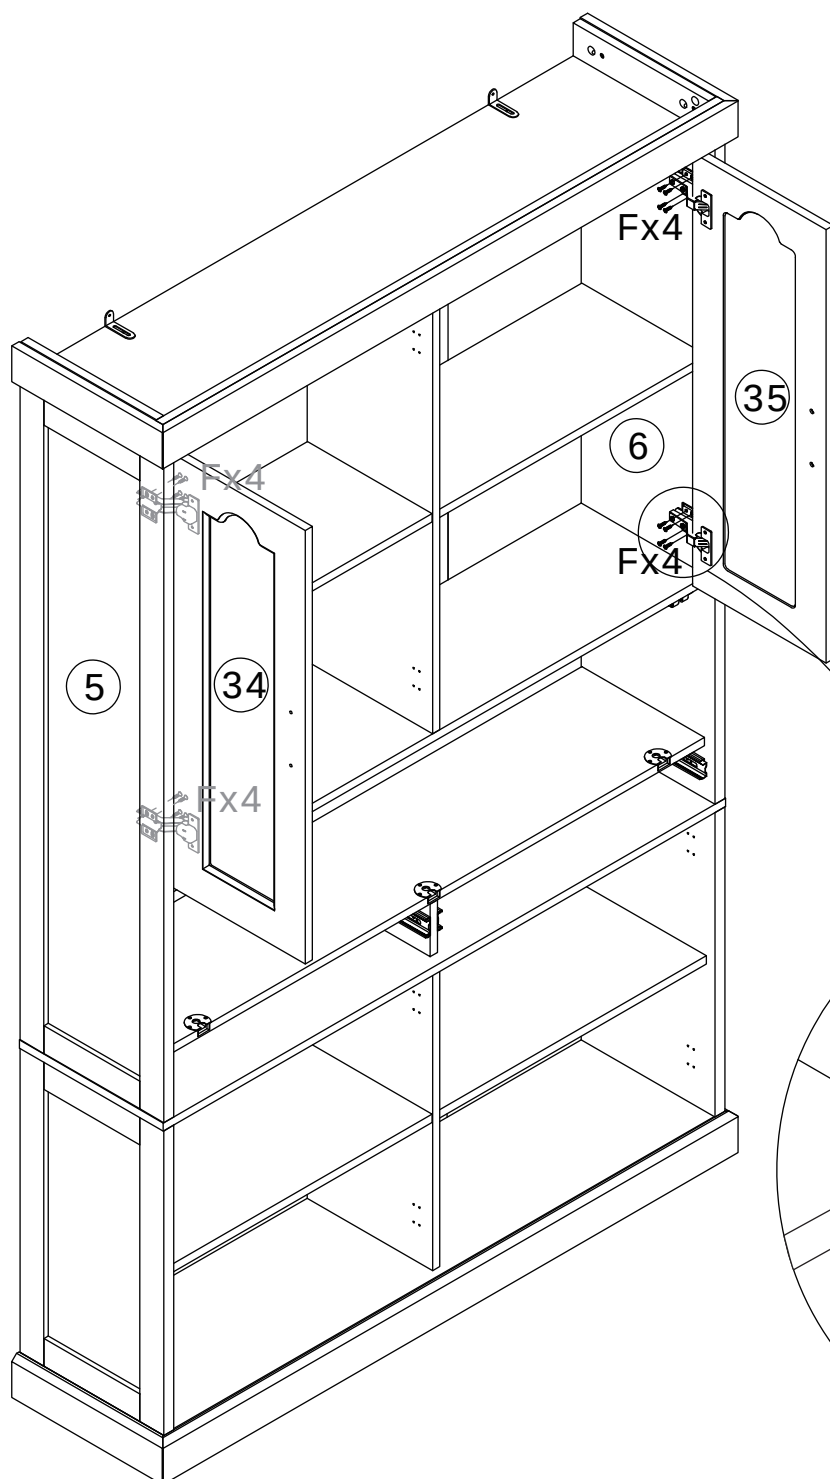


45

 
L x 2





S x 4

 


Ø4 x 16 mm

 

  
Secure handle (L) to Panels 34 and 35 using screw (S).

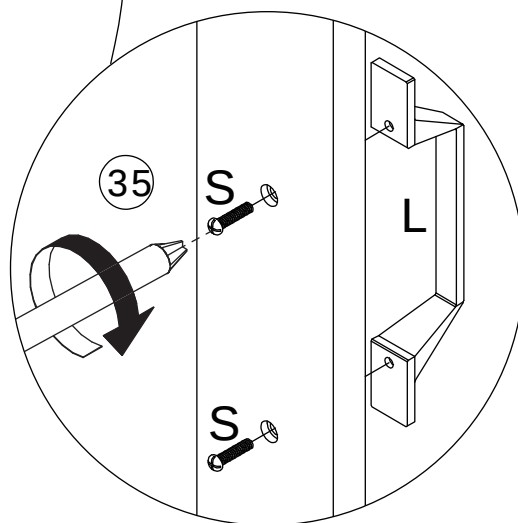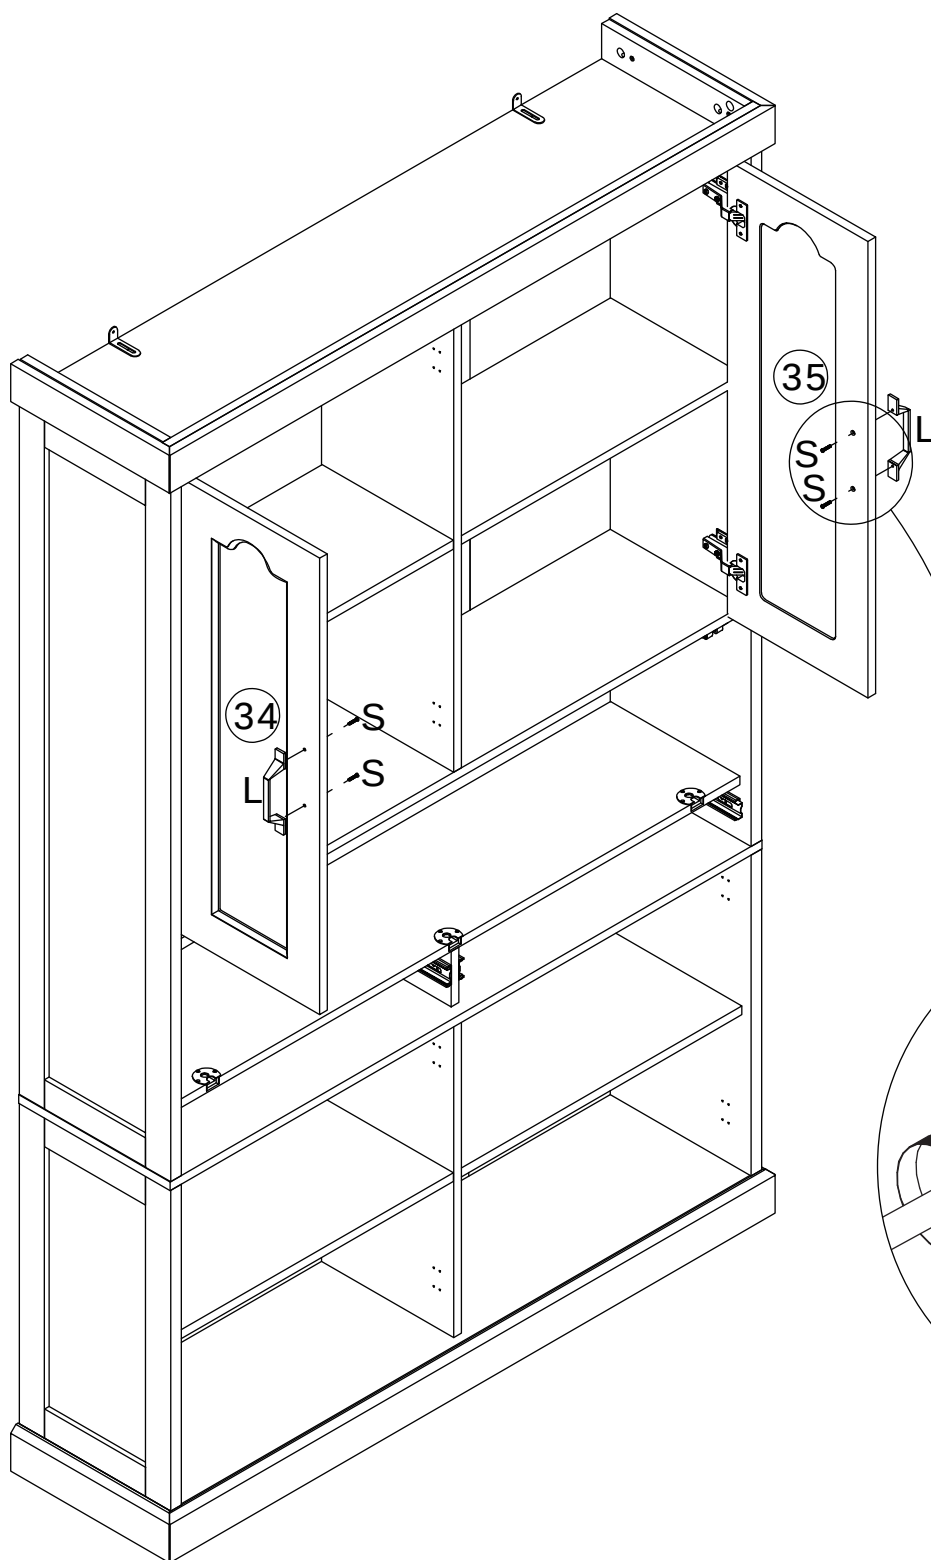




46

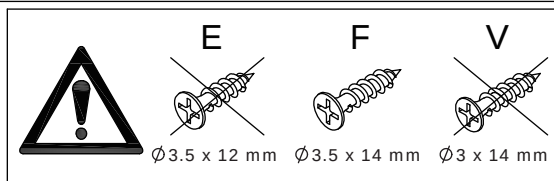 


 
Secure hinge (W) to Panels 34 and 35 using screw (F).

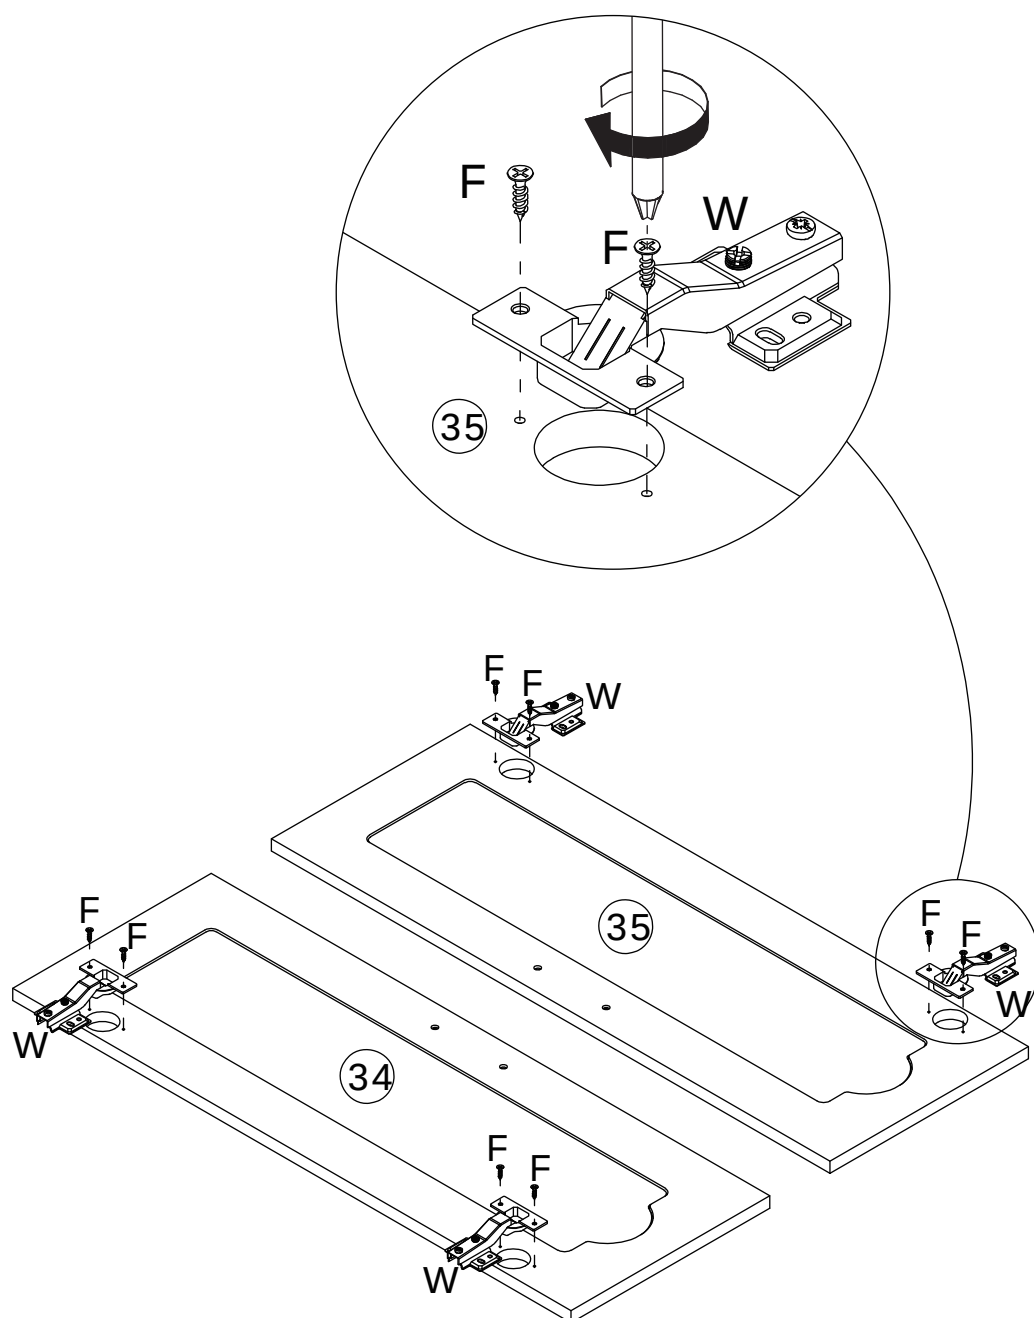

47

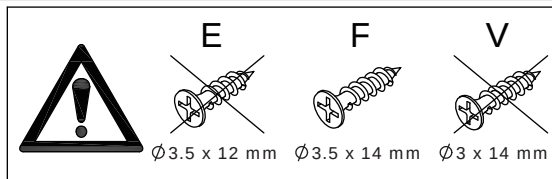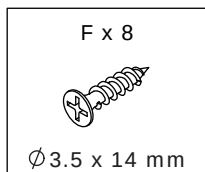   


  Connect Panel 35 to Panel 28 via the hinges using screw (F).

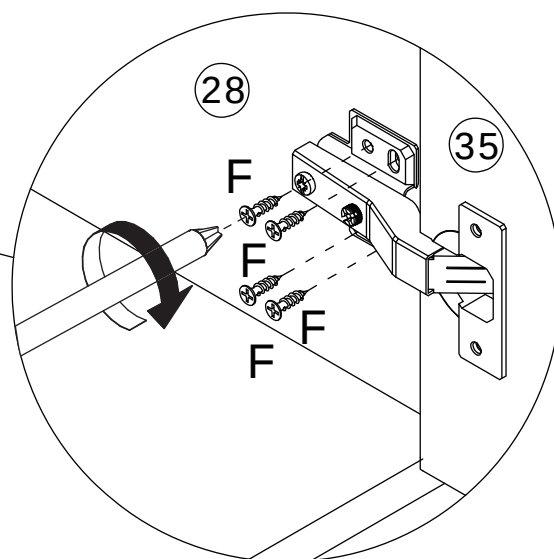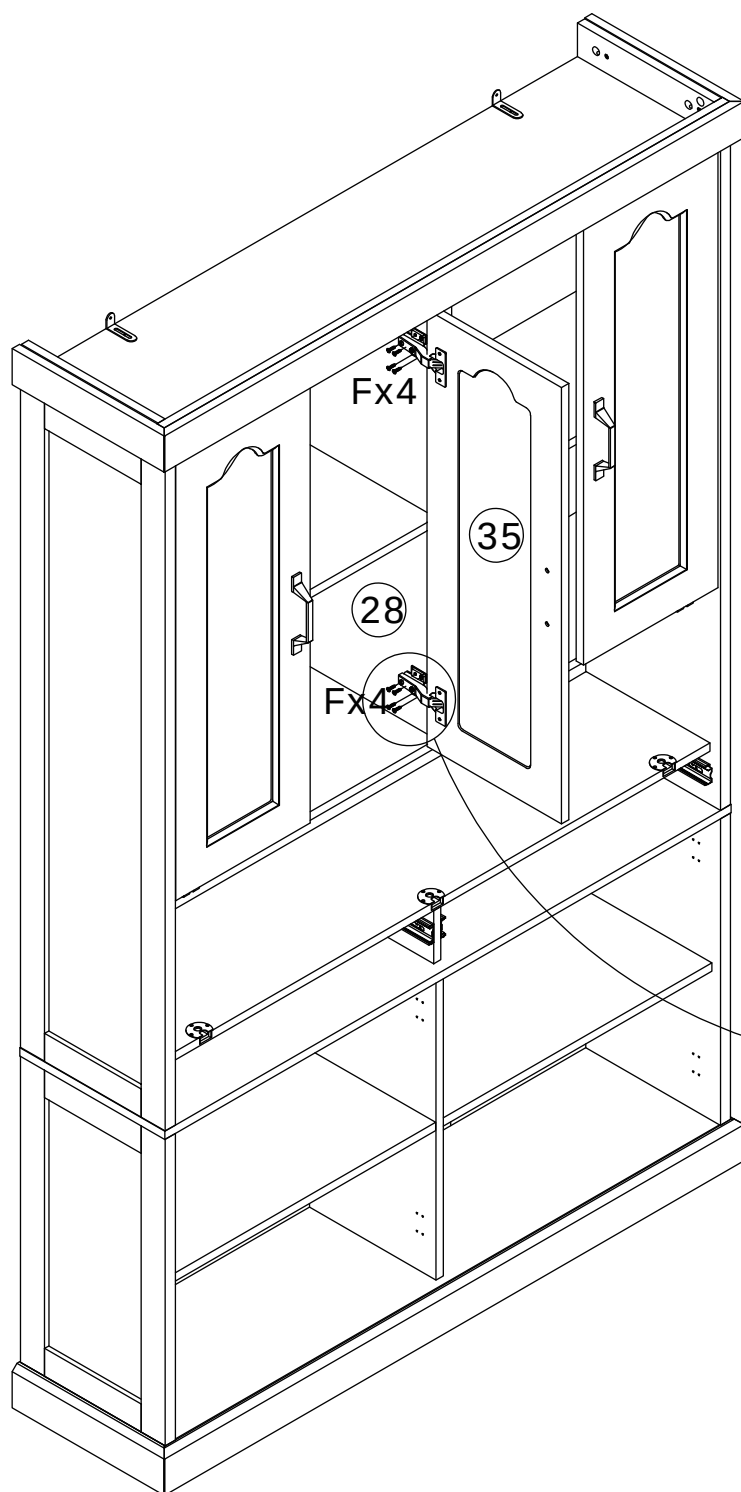

48

 
L x 1





S x 2



 Ø4 x 16 mm



  Secure handle (L) to Panel 35 using screw (S).

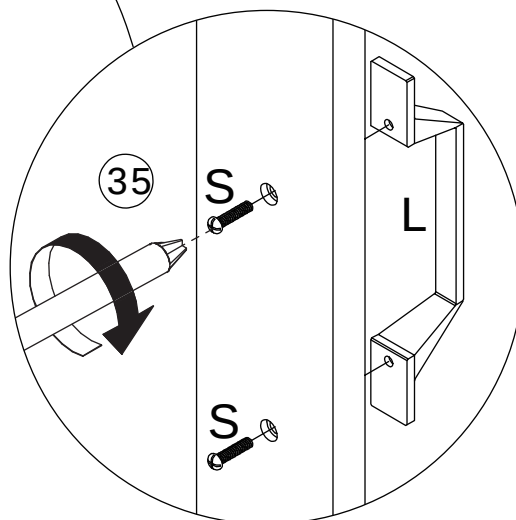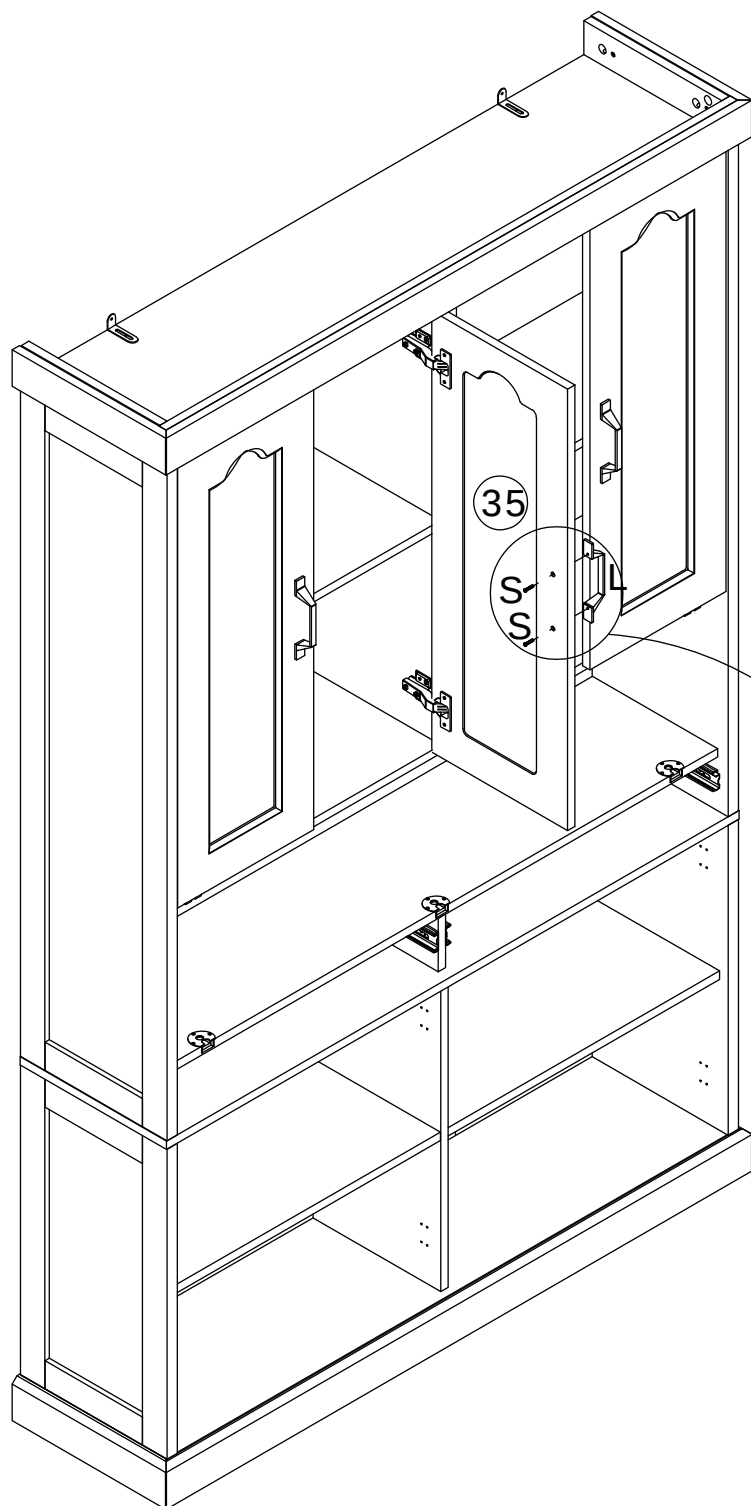


49

F x 8



 Ø 3.5 x 14 mm



E



Ø 3.5 x 12 mm

F

 
 


Ø 3.5 x 14 mm

V



Ø 3 x 14 mm

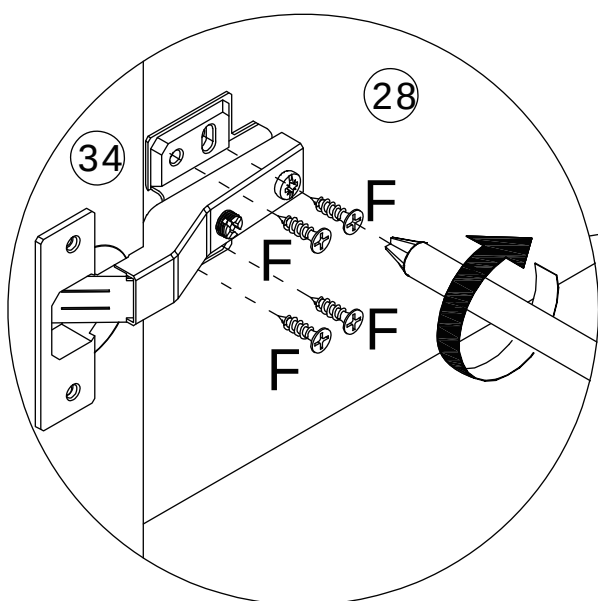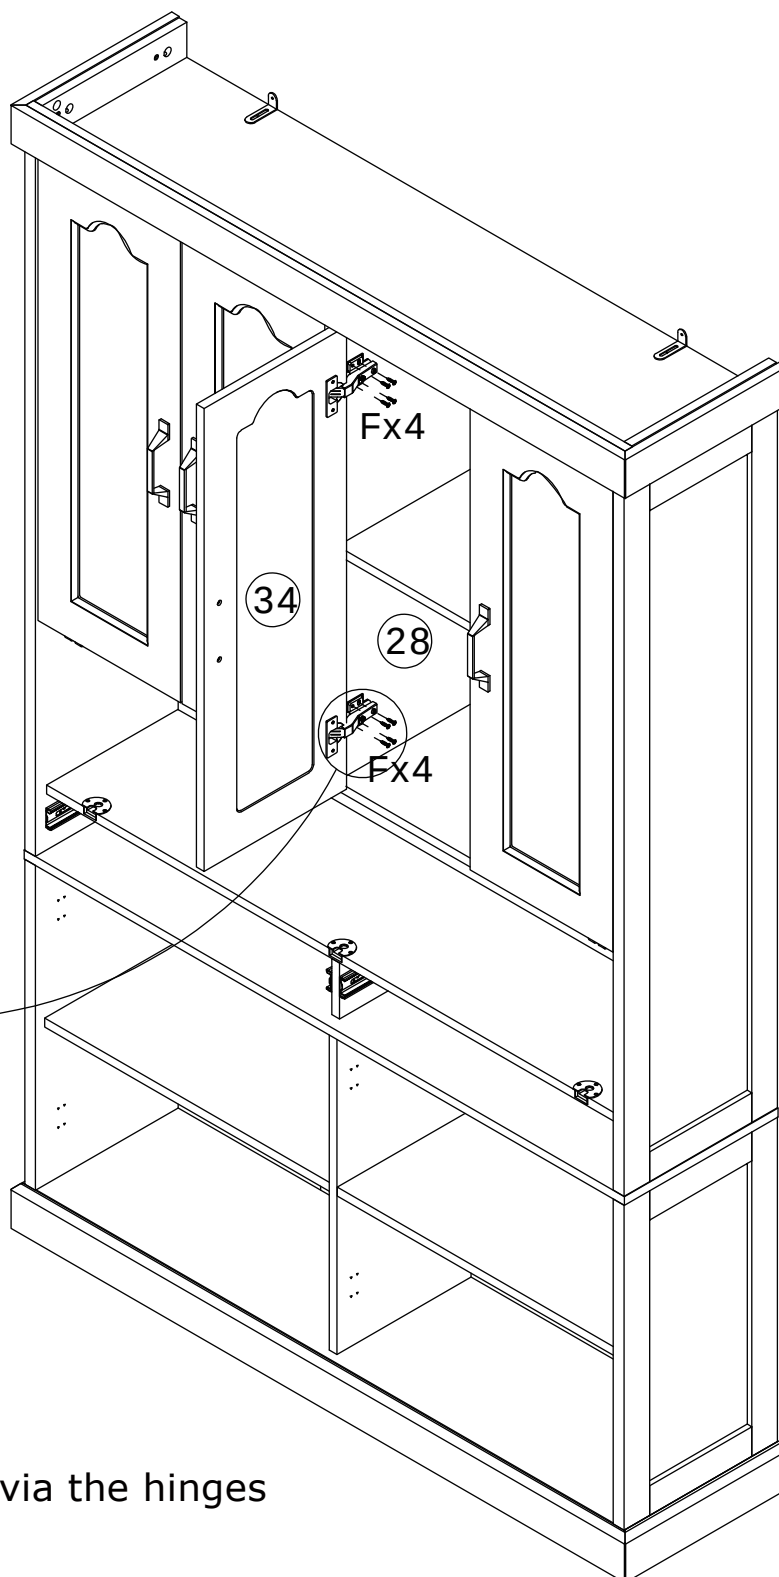


Connect Panel 34 to Panel 28 via the hinges using screw (F).


50



 
Secure handle (L) to Panel 34 using screw (S).

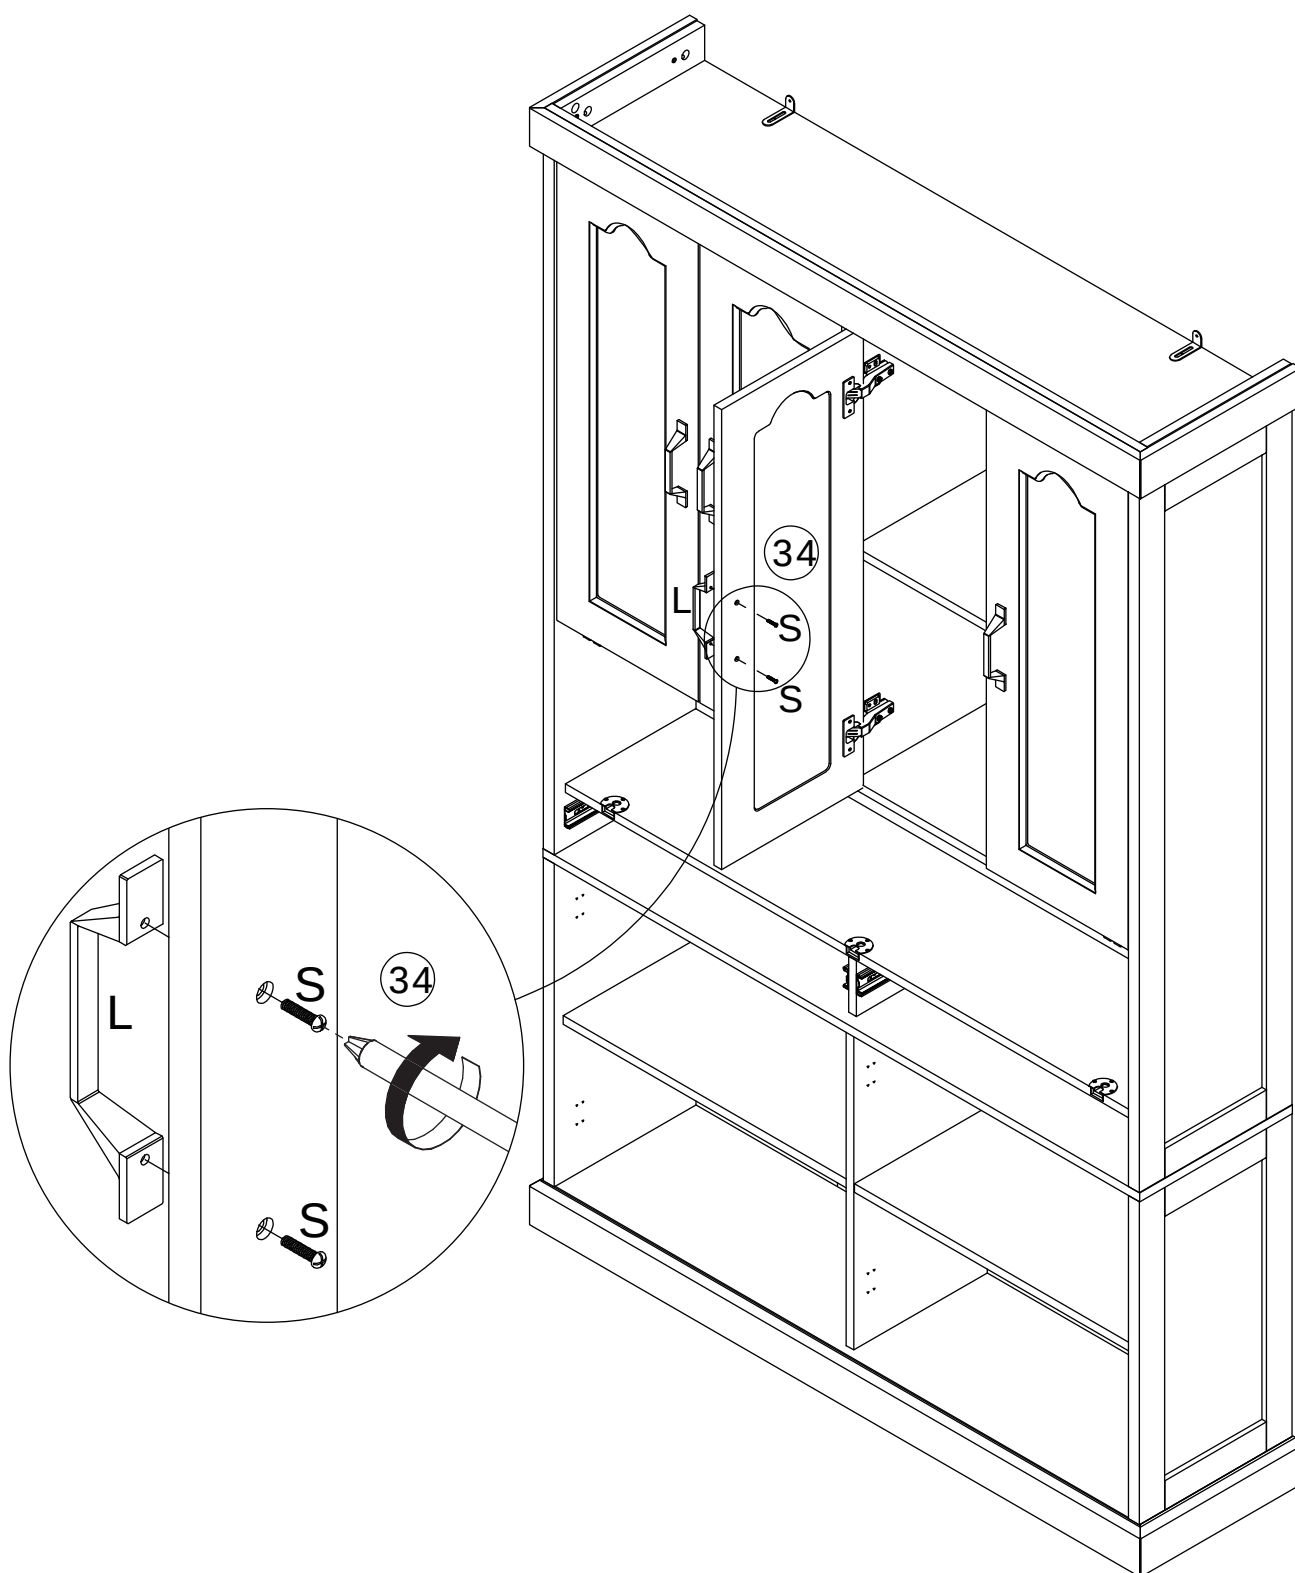




51

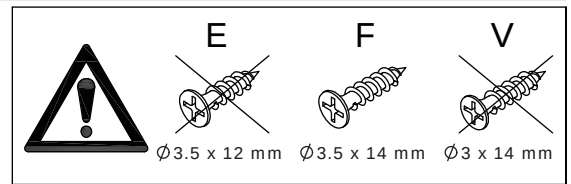 


 
Secure hinge (X) to Panels 36 and 37 using screw (F).

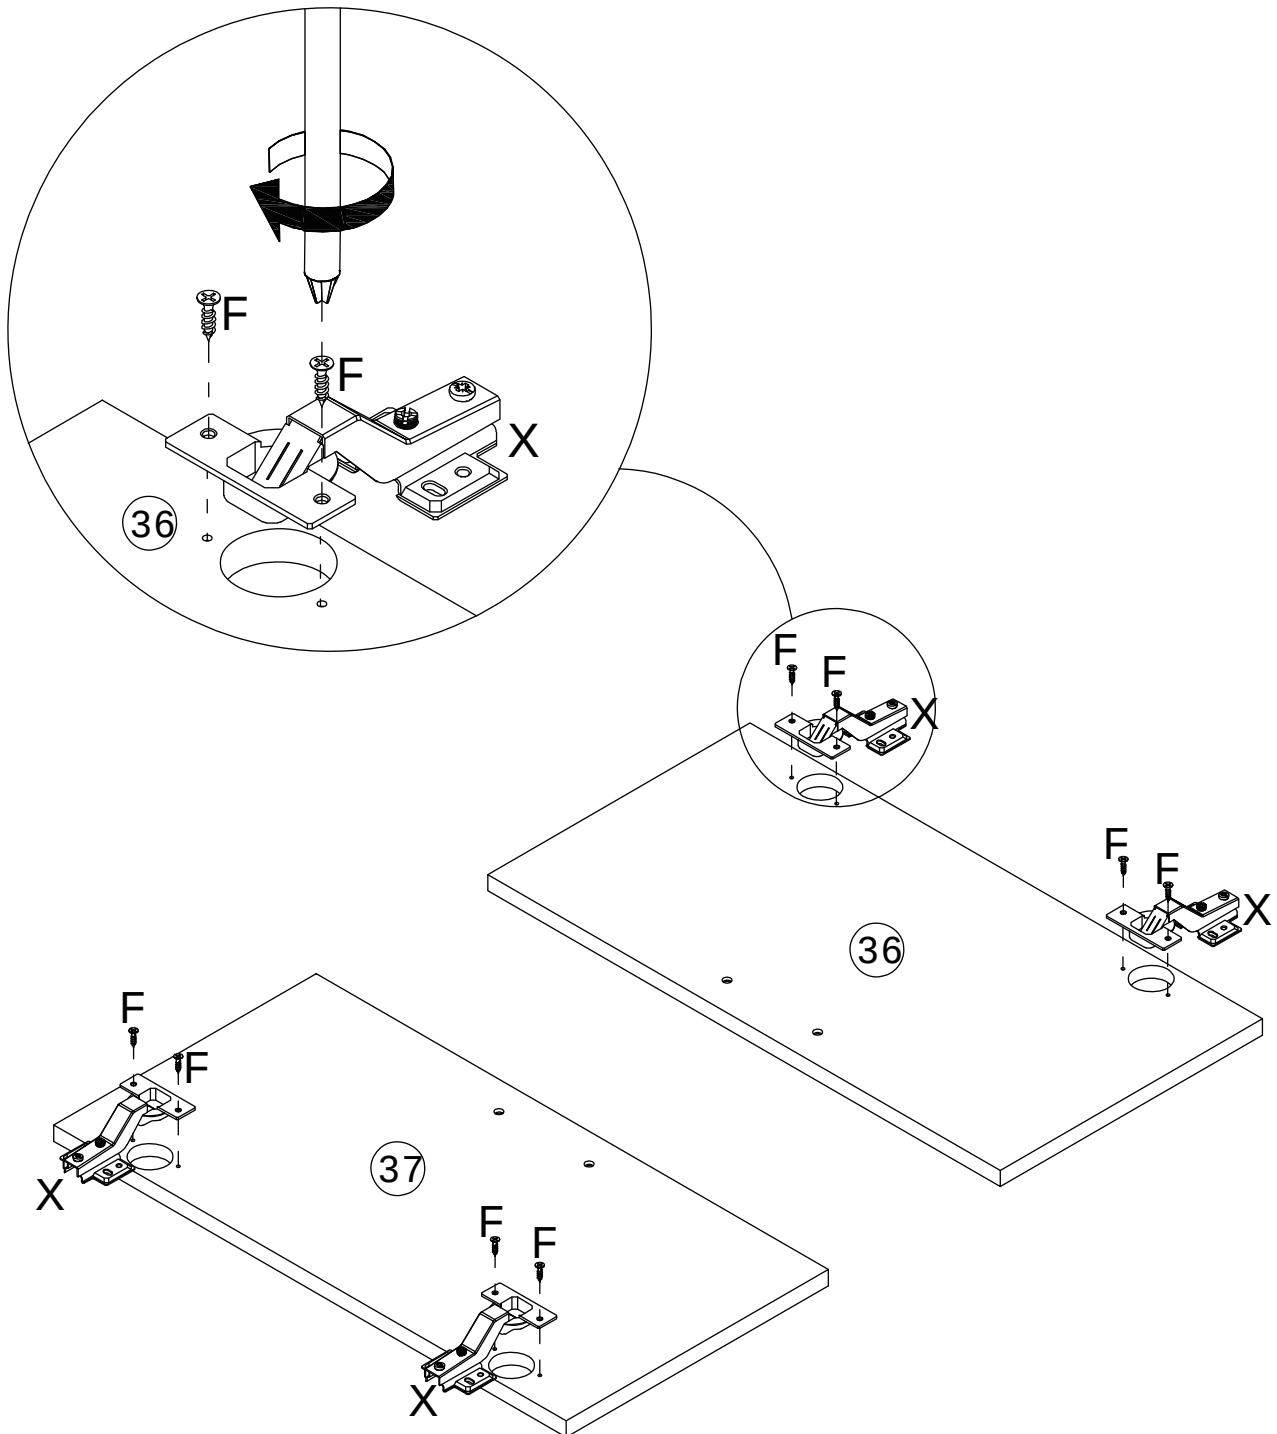

52

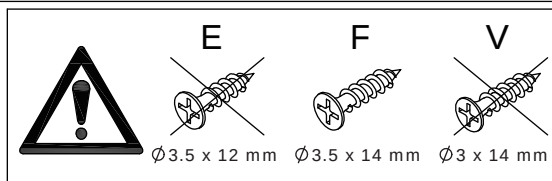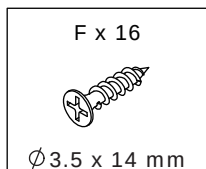   

  
Connect Panel 36 to Panel 7, and Panel 37 to Panel 8 via the hinges using screw (F).

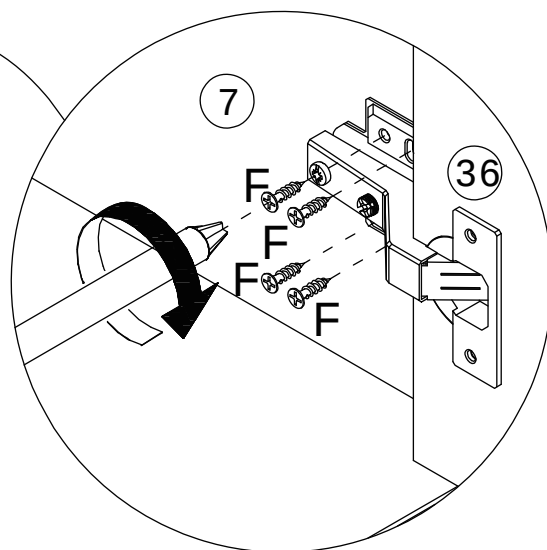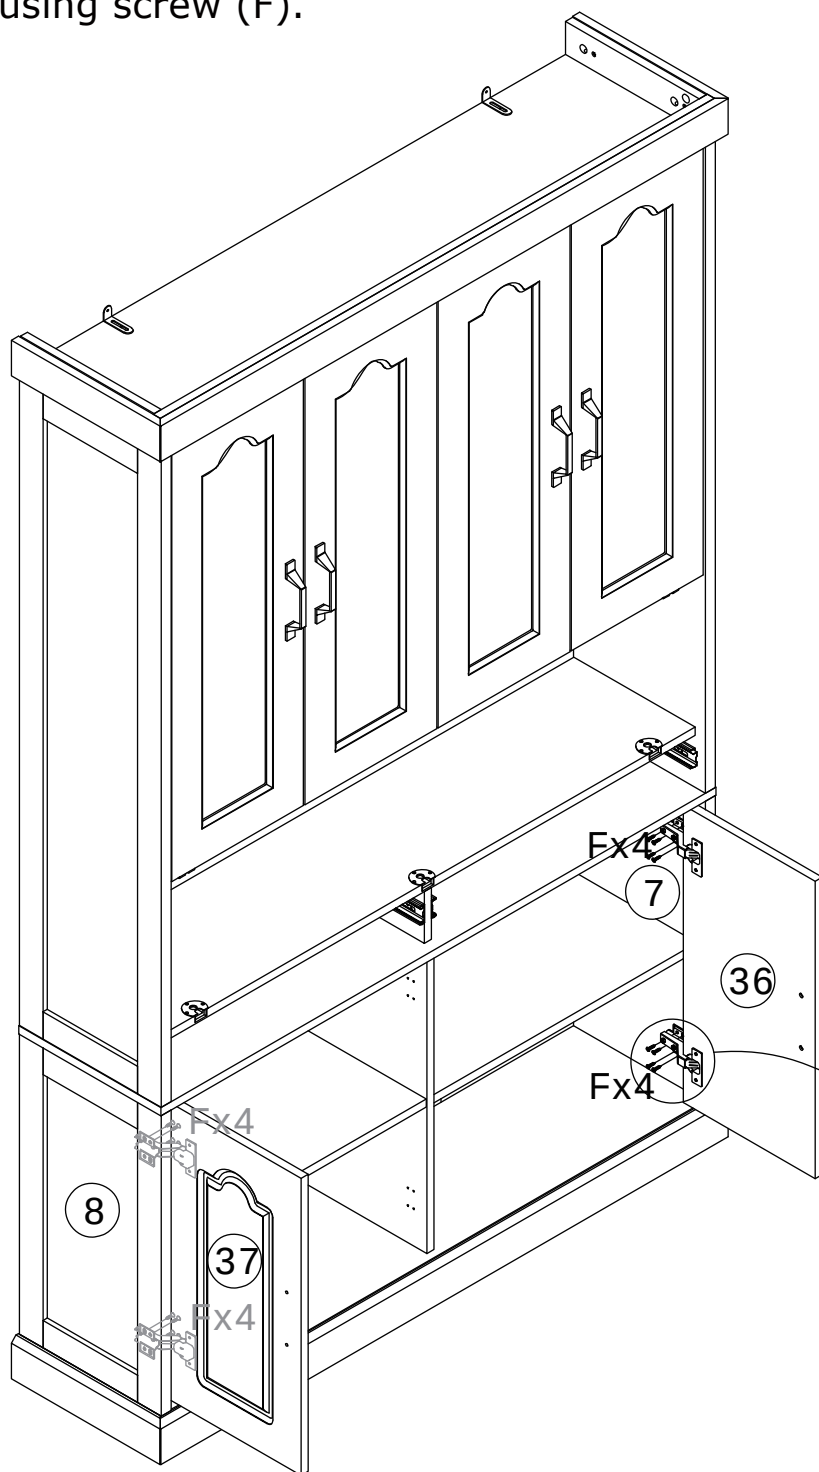


53



 
Secure handle (L) to Panels 36 and 37 using screw (S).

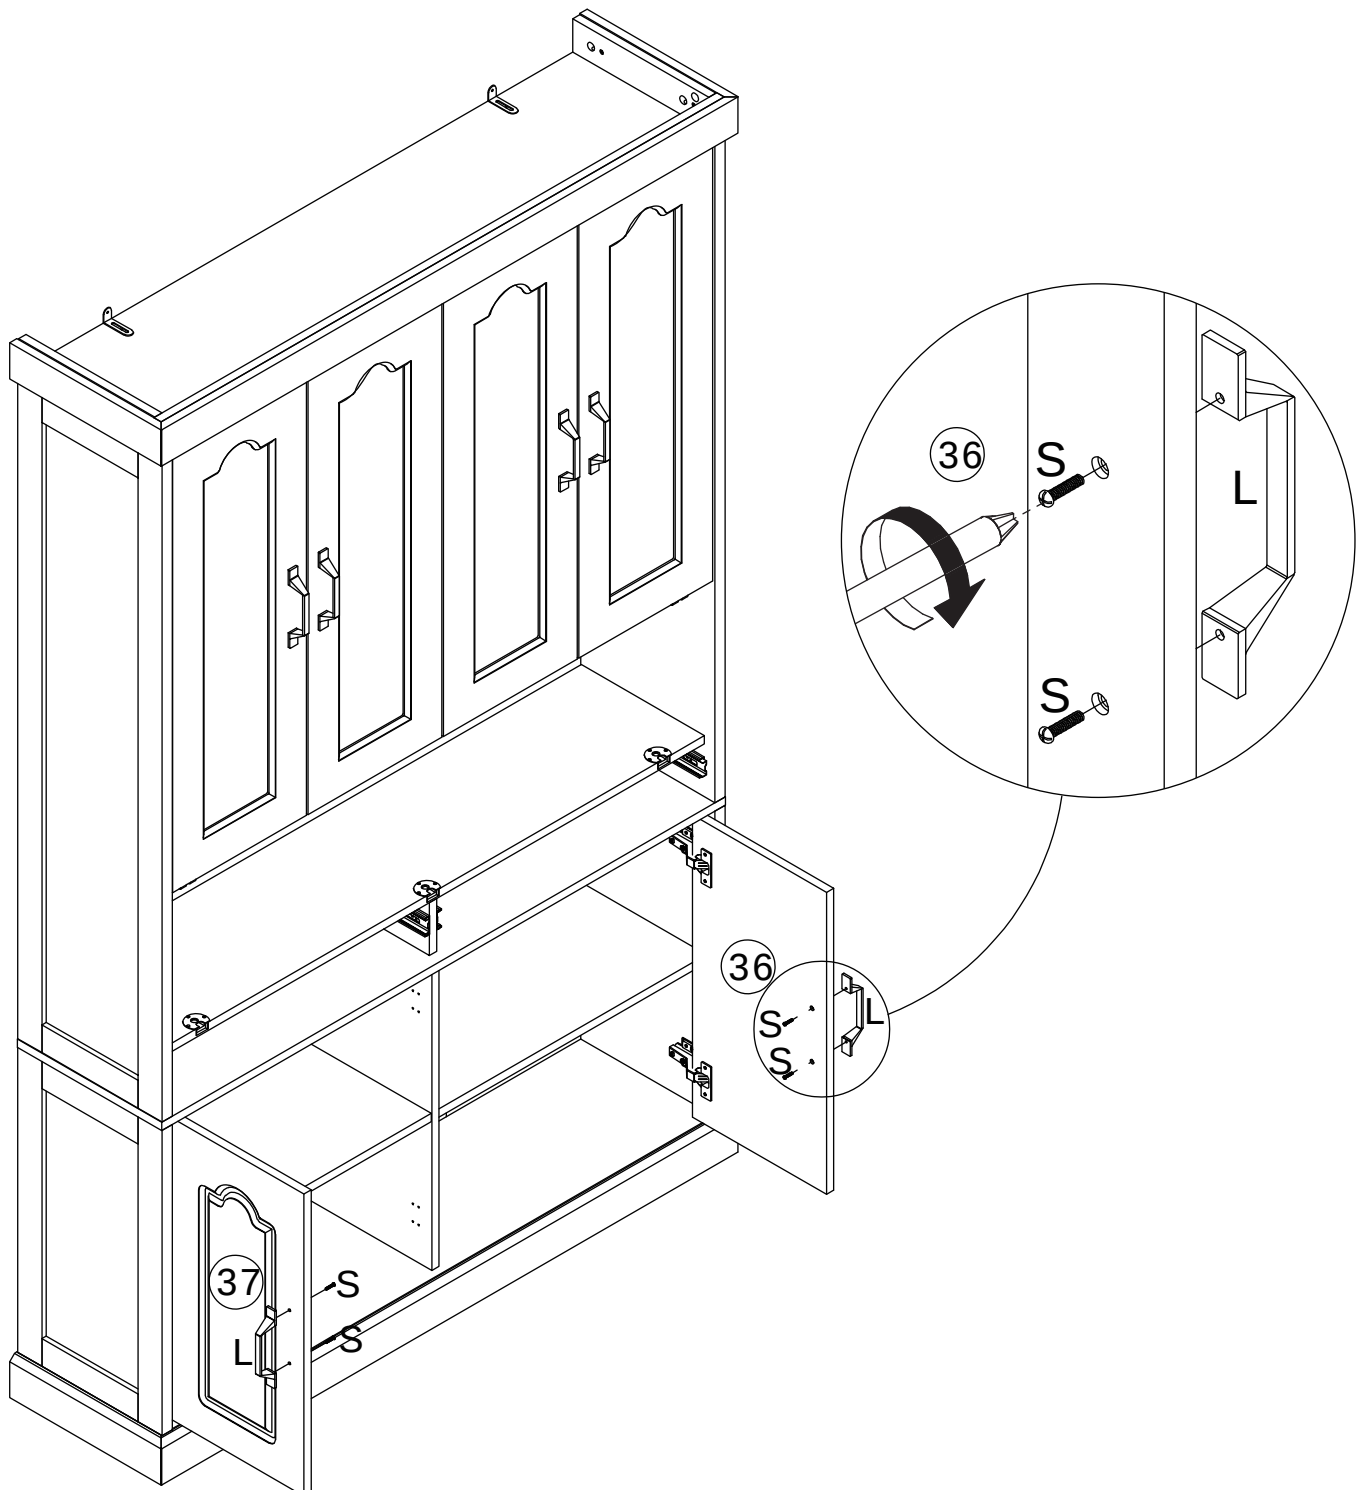




54

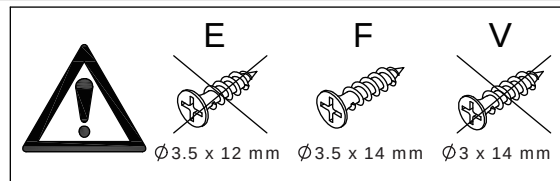 

 
Secure hinge (W) to Panels 36 and 37 using screw (F).

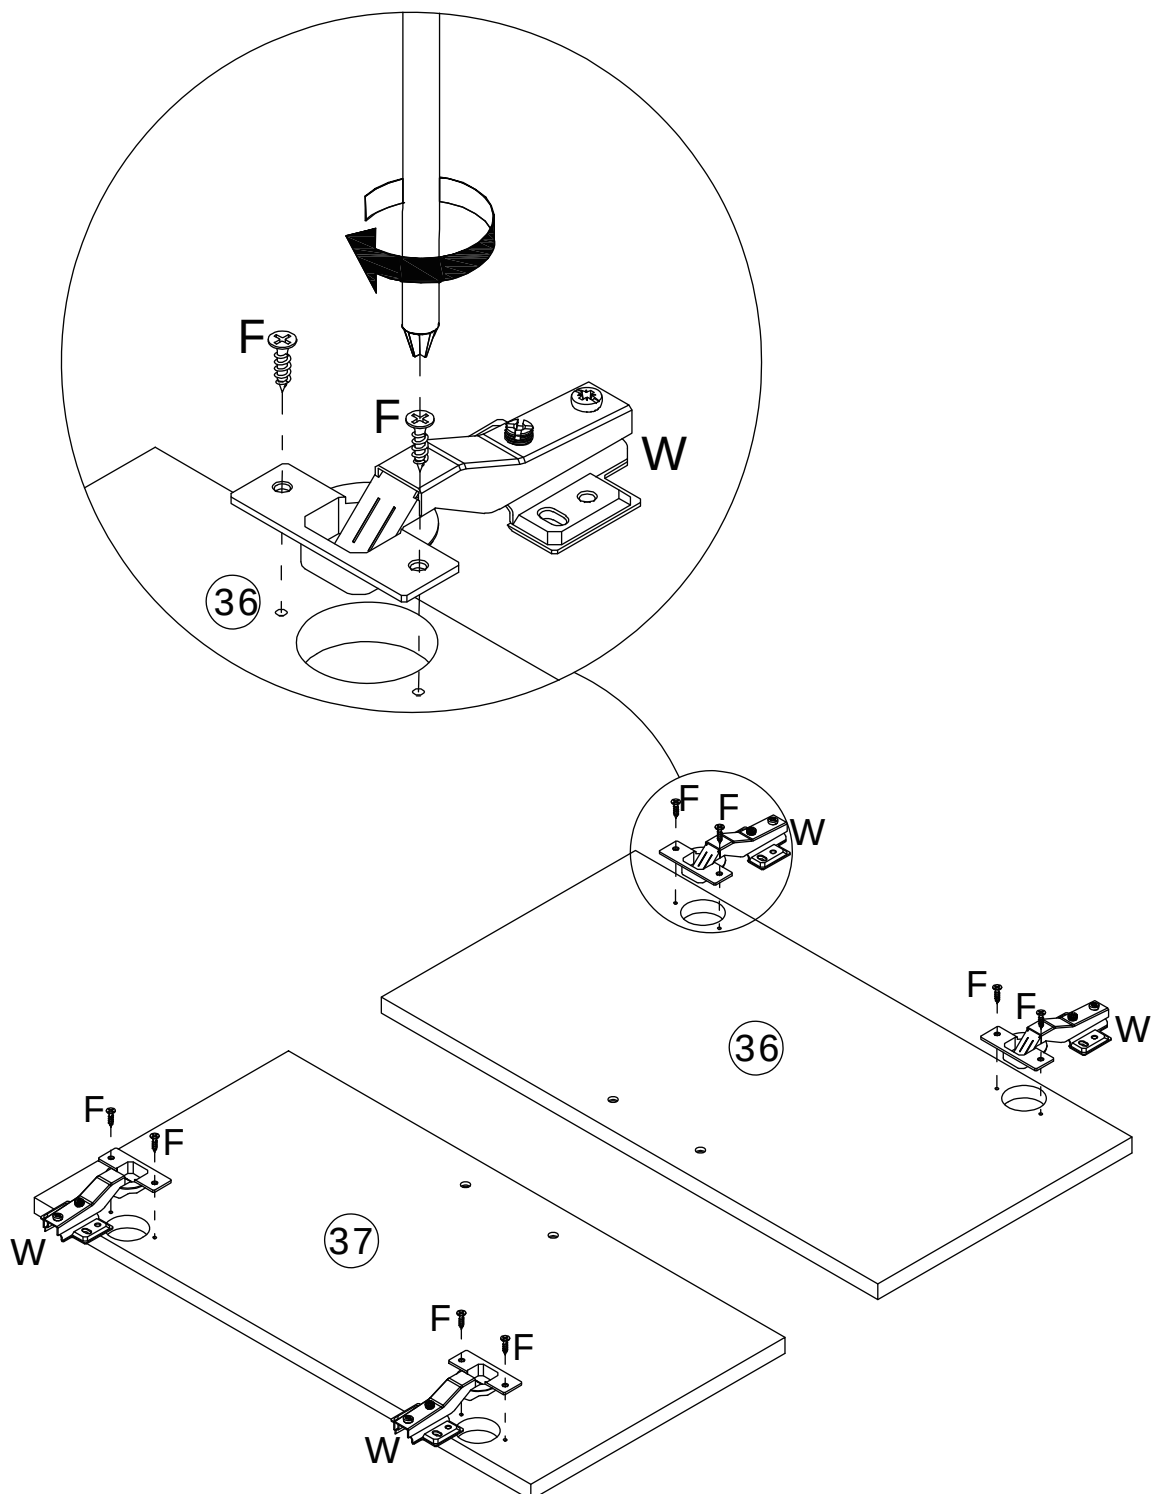

55

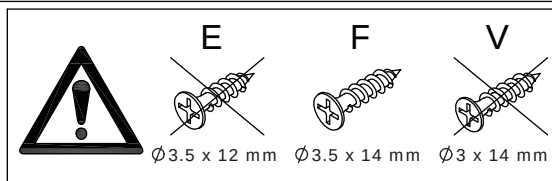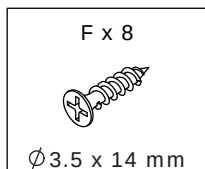   

 
Connect Panel 37 to Panel 29 via the hinges using screw (F).

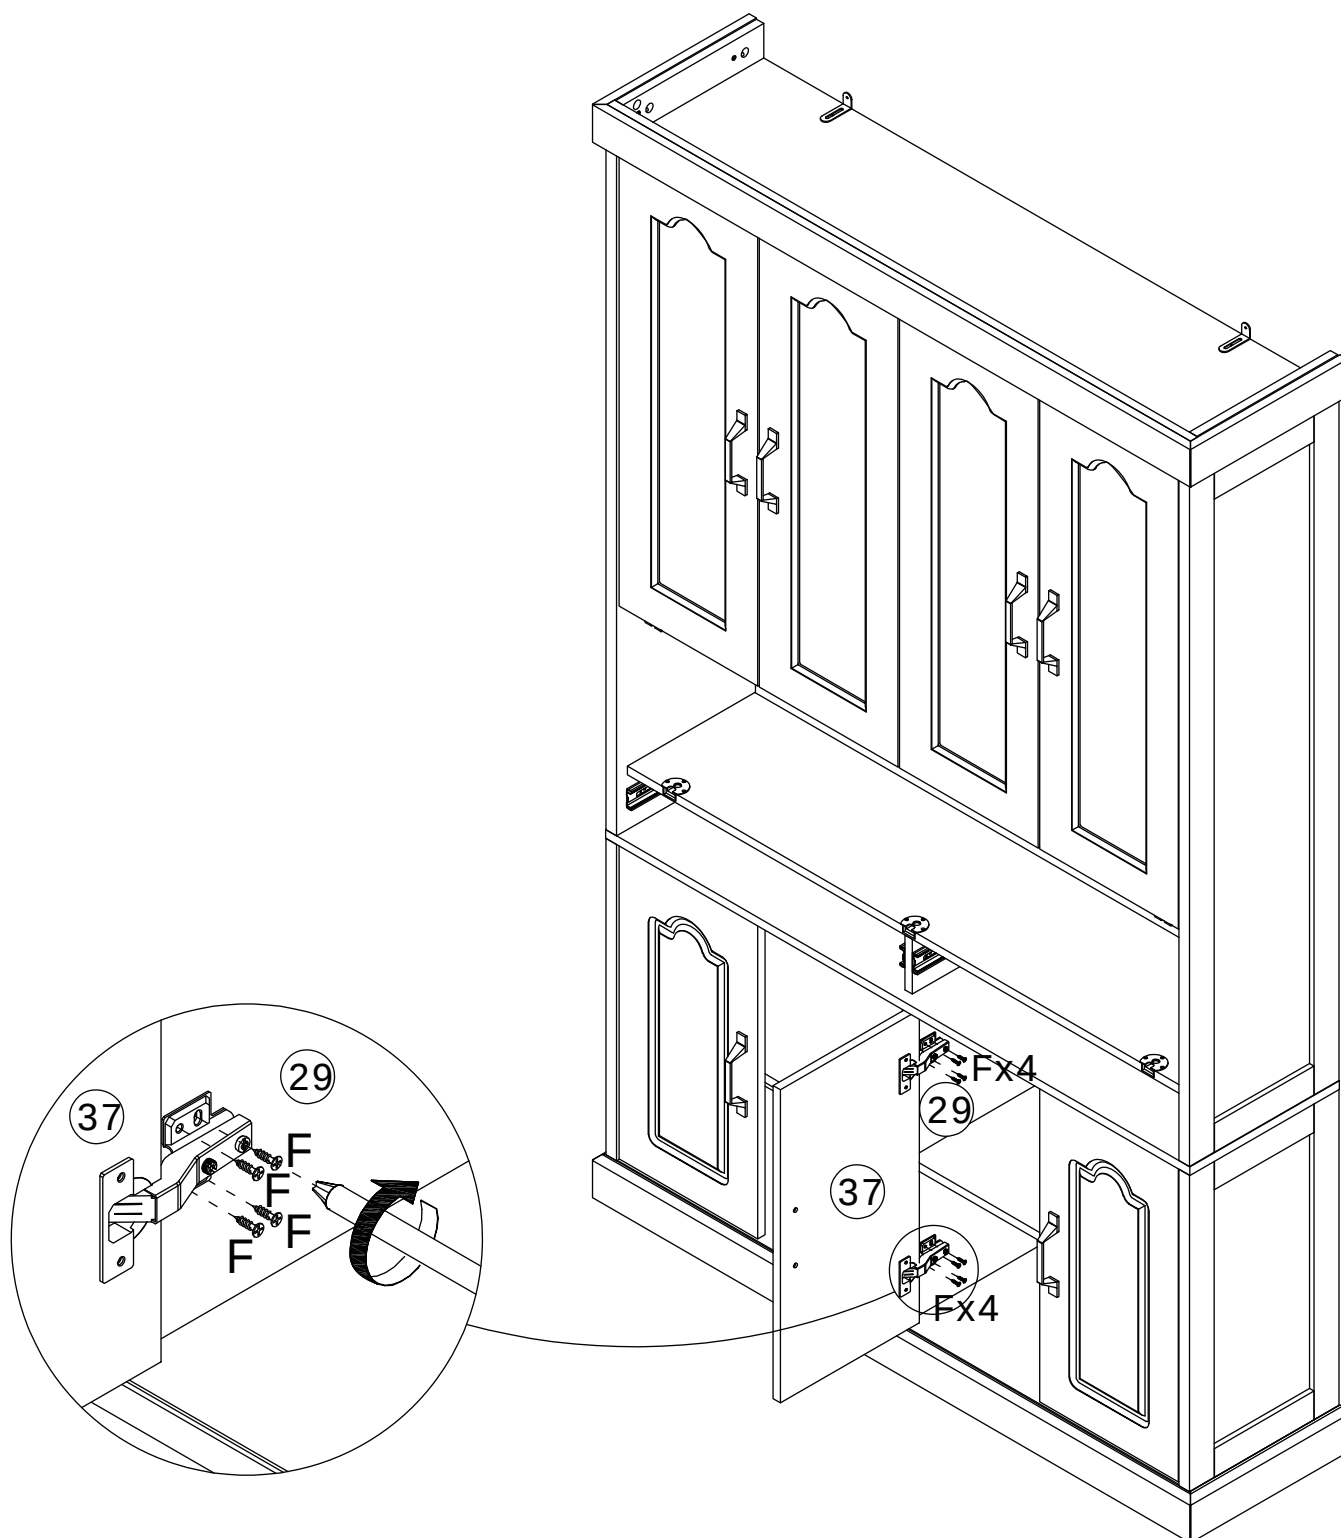



56





 
Secure handle (L) to Panel 37 using screw (S).

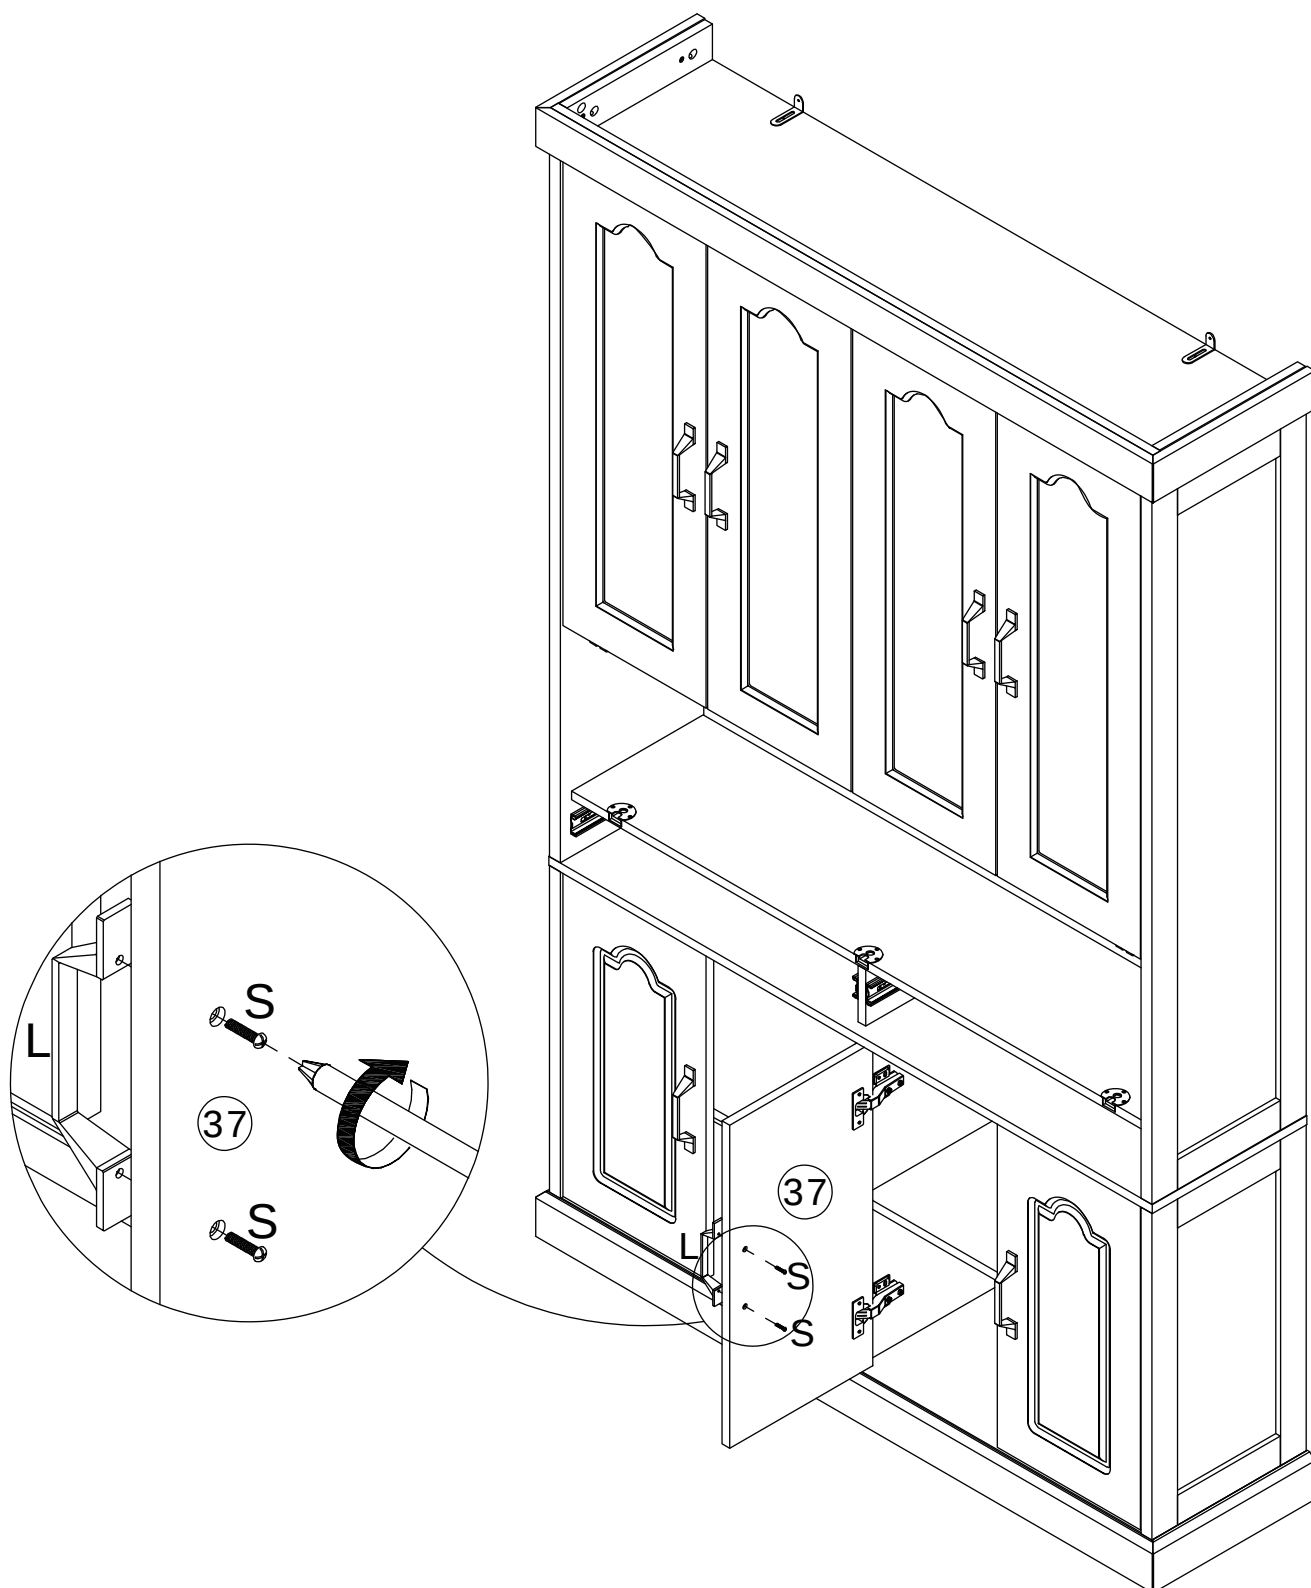


57

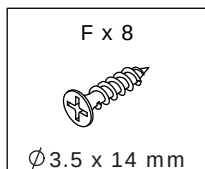  

   
Connect Panel 36 to Panel 29 via the hinges using screws (F).

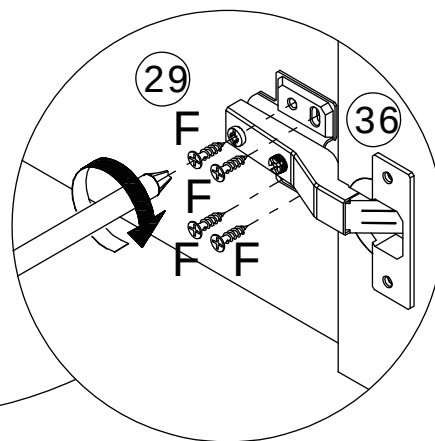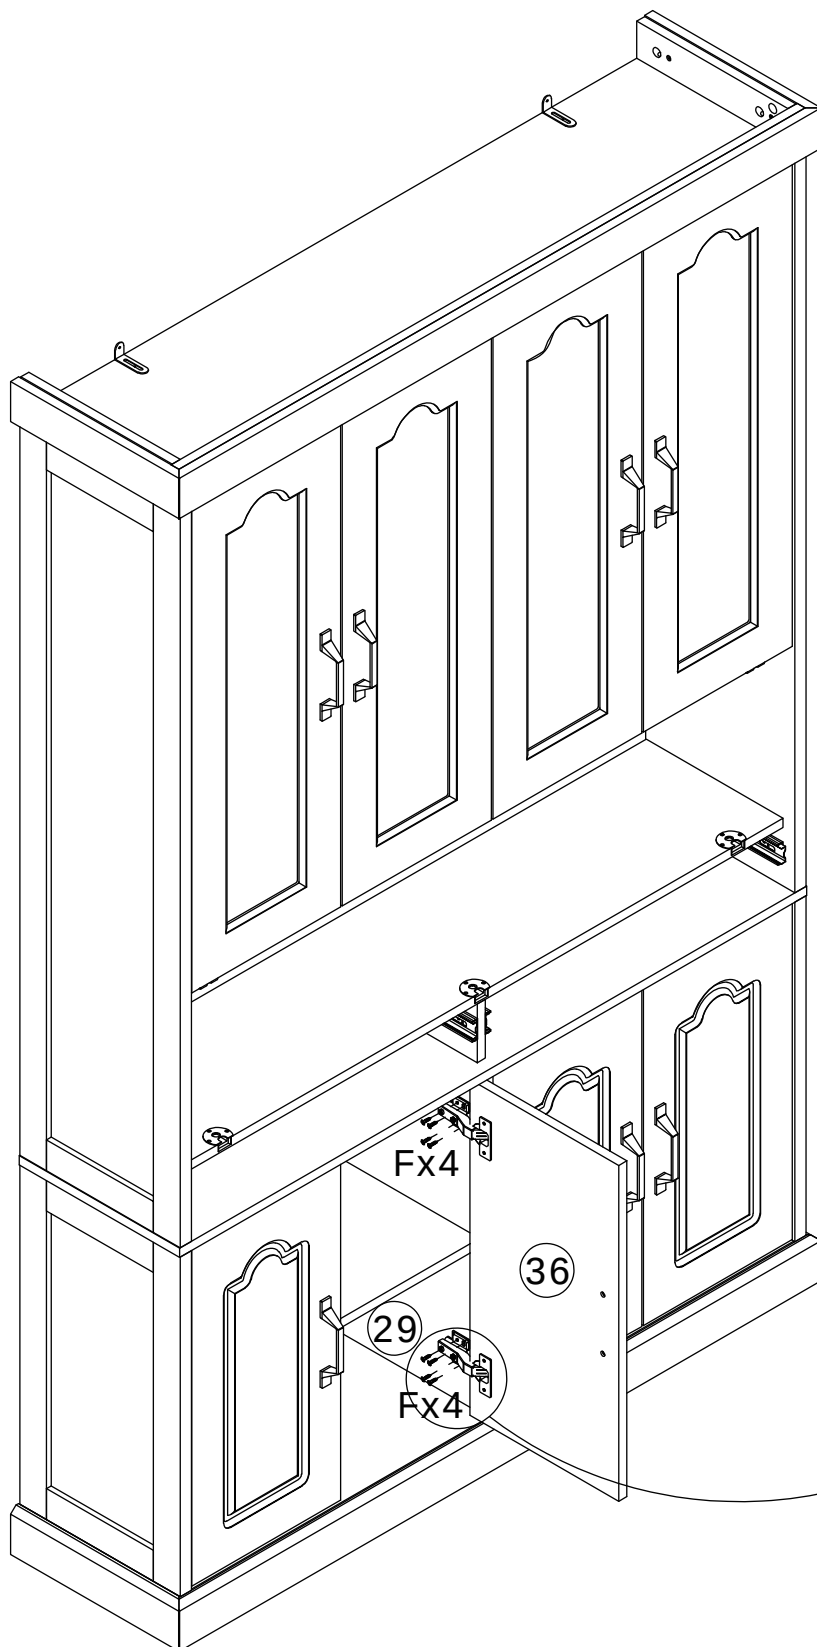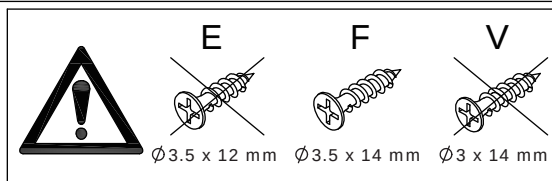



58

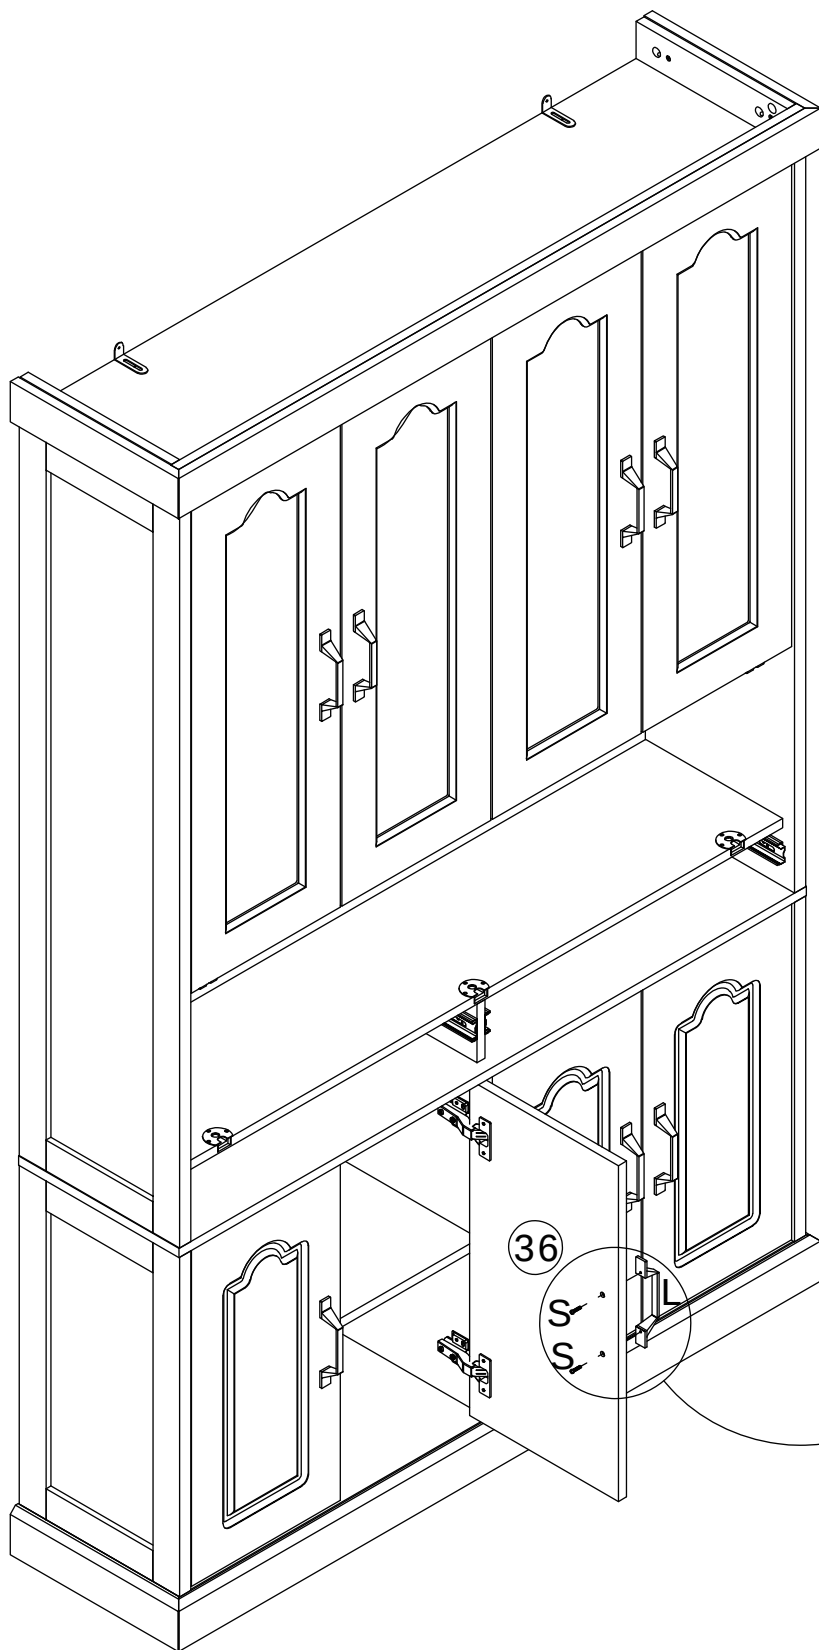 

 
Secure handle (L) to Panel 36 using screw (S).

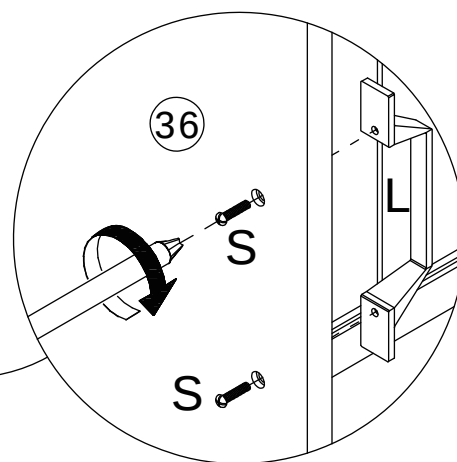

59

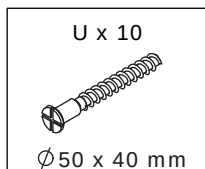  


 Connect Panels 13, 15 and 21 to Panel 19 using screw (U).

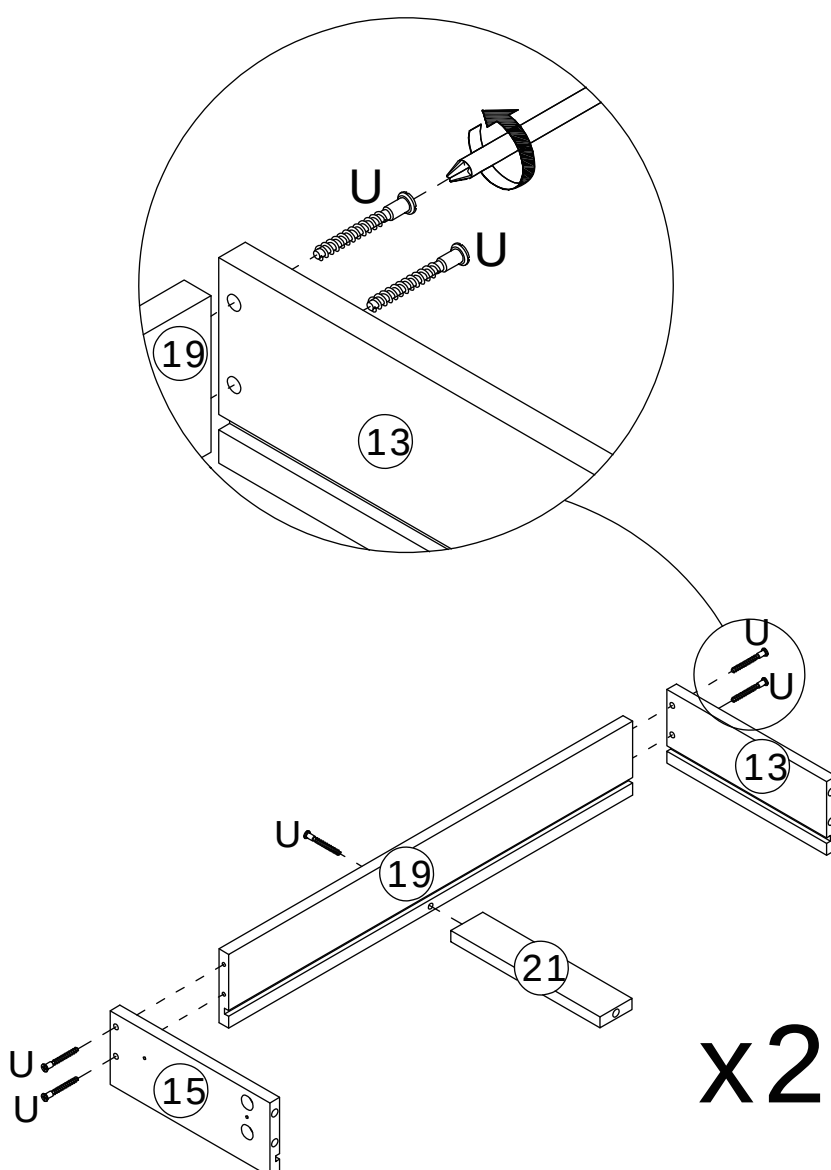

60

 Insert Panel 20 along the available slots.

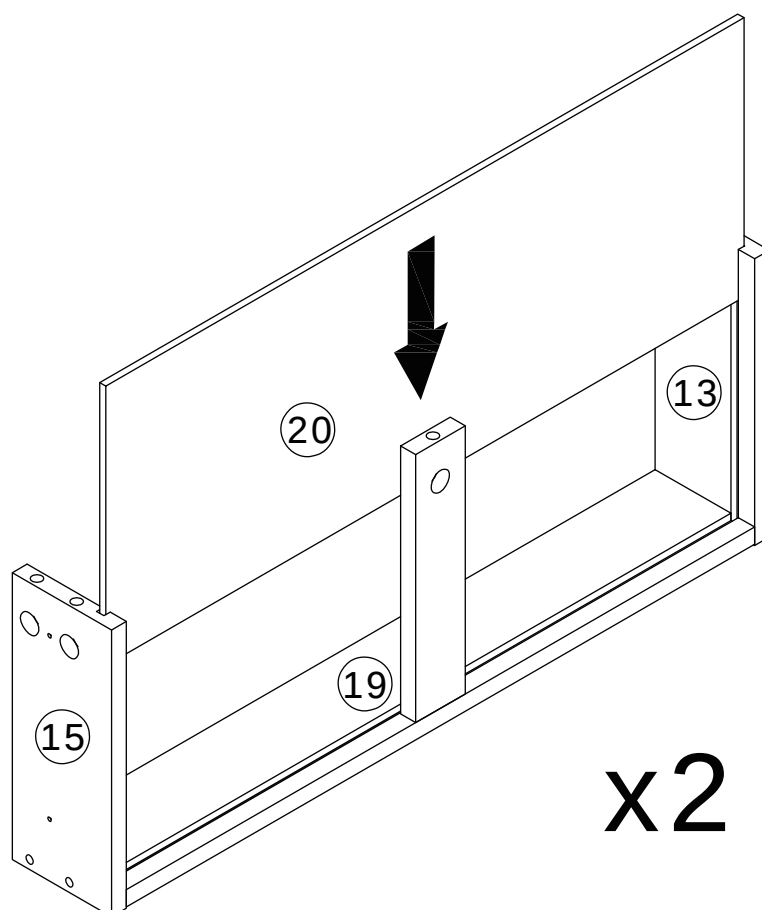



61

B x 10








Ø 6 x 35 mm


 
 
D x 10



   
 
 
Insert plug (D) into Panels 16 and 17, then screw self-tapping bolt (B) into Panels 16 and 17.

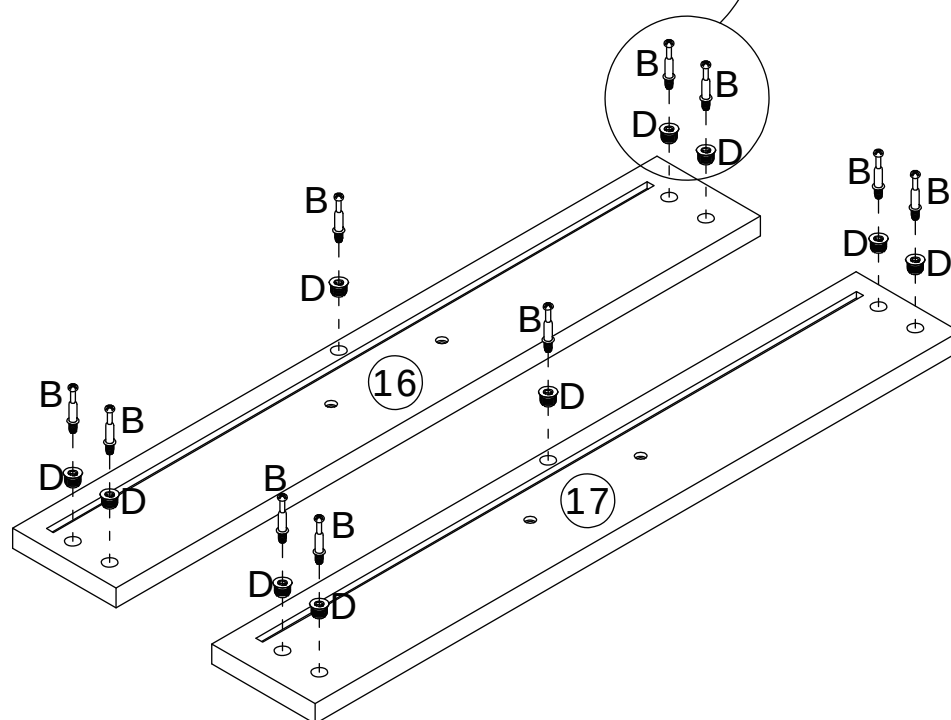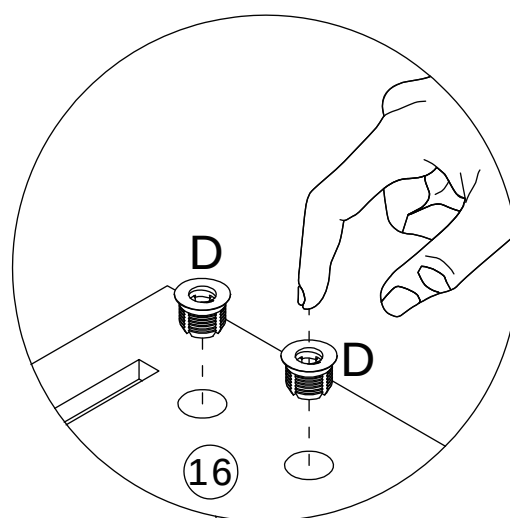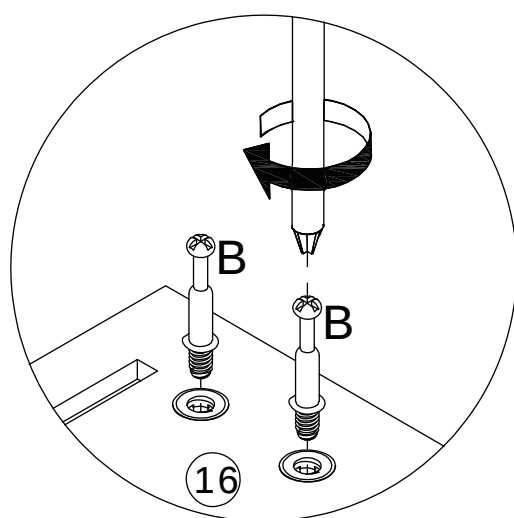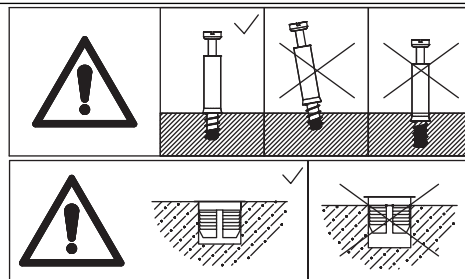

62

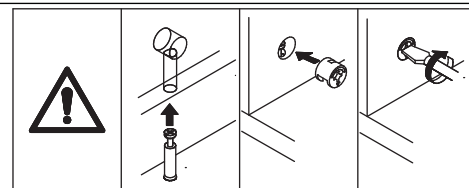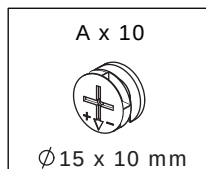   




 
 
 
Connect Panels 16 and 17 to Panels 13, 15 and 21, then tighten by turning cam lock (A) clockwise.

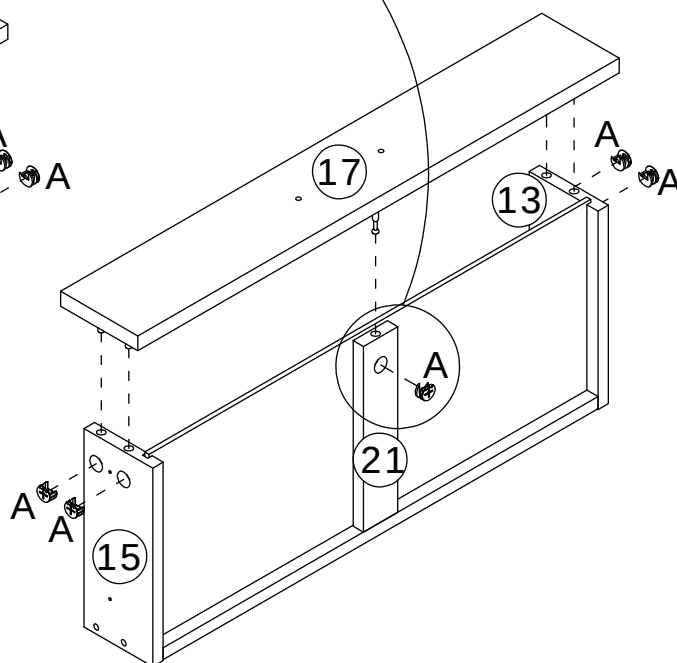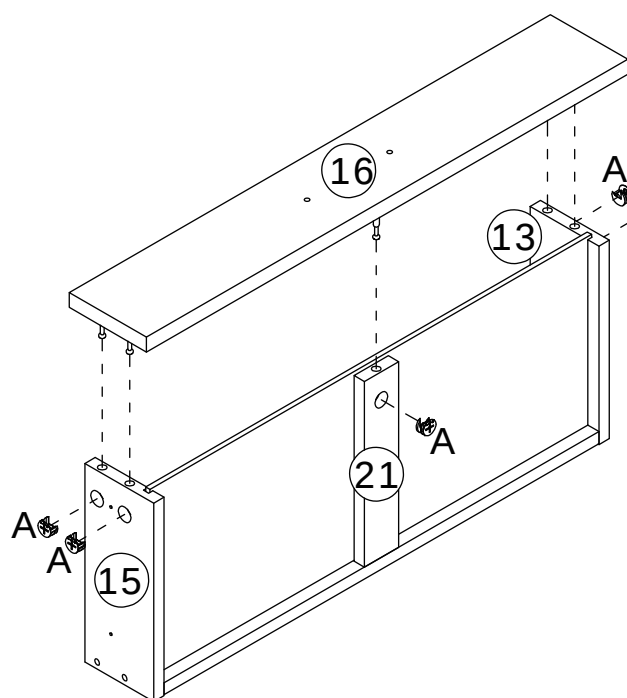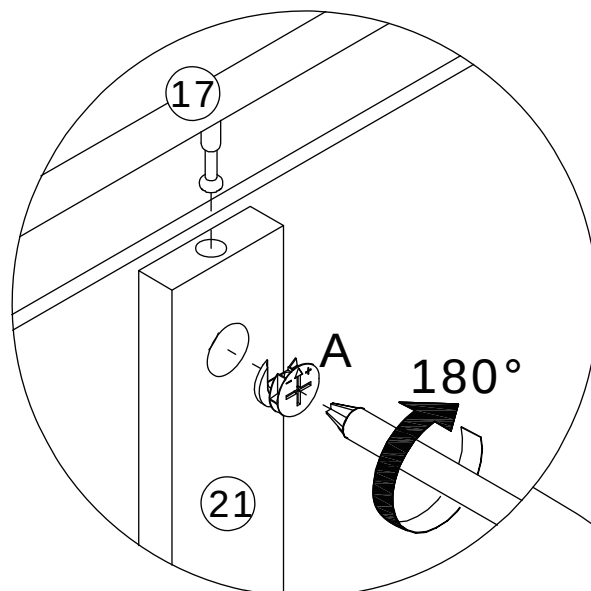

63



      
Secure slide rail (Y-2) to Panels 13 and 15 using screw (E).

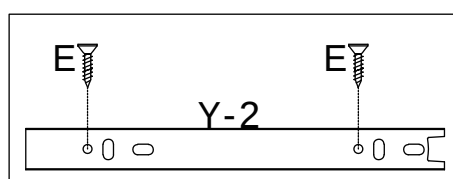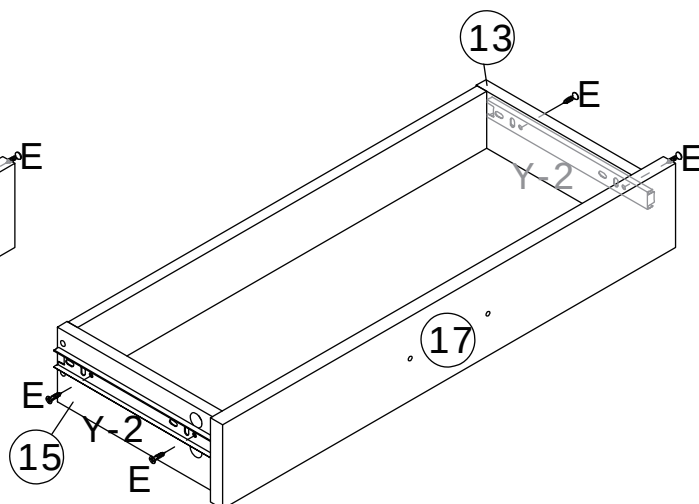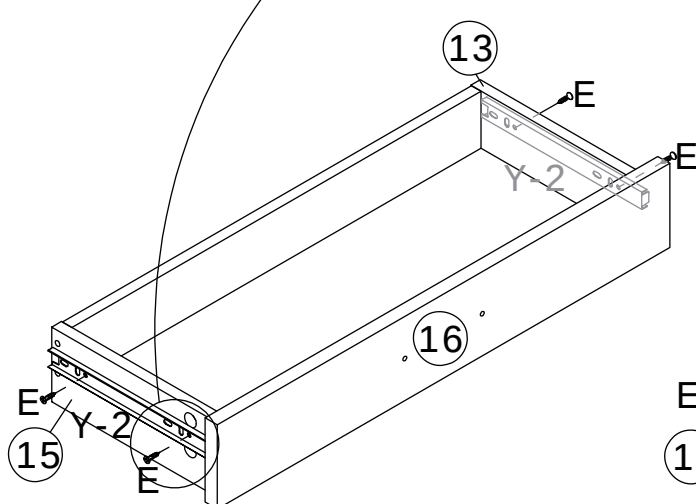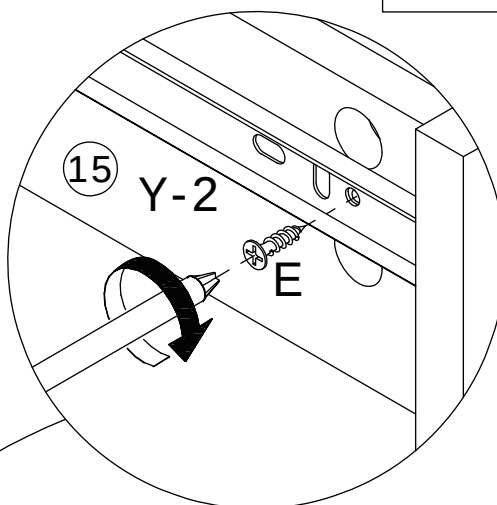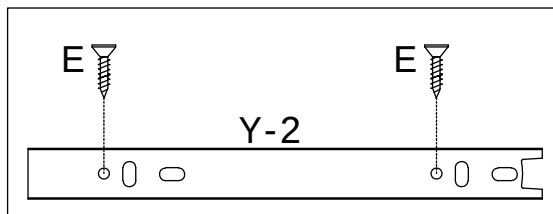
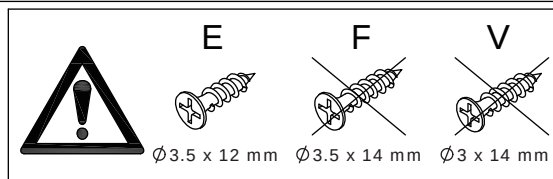


64





   Secure handle (L) to Panels 16 and 17 using screw (S).

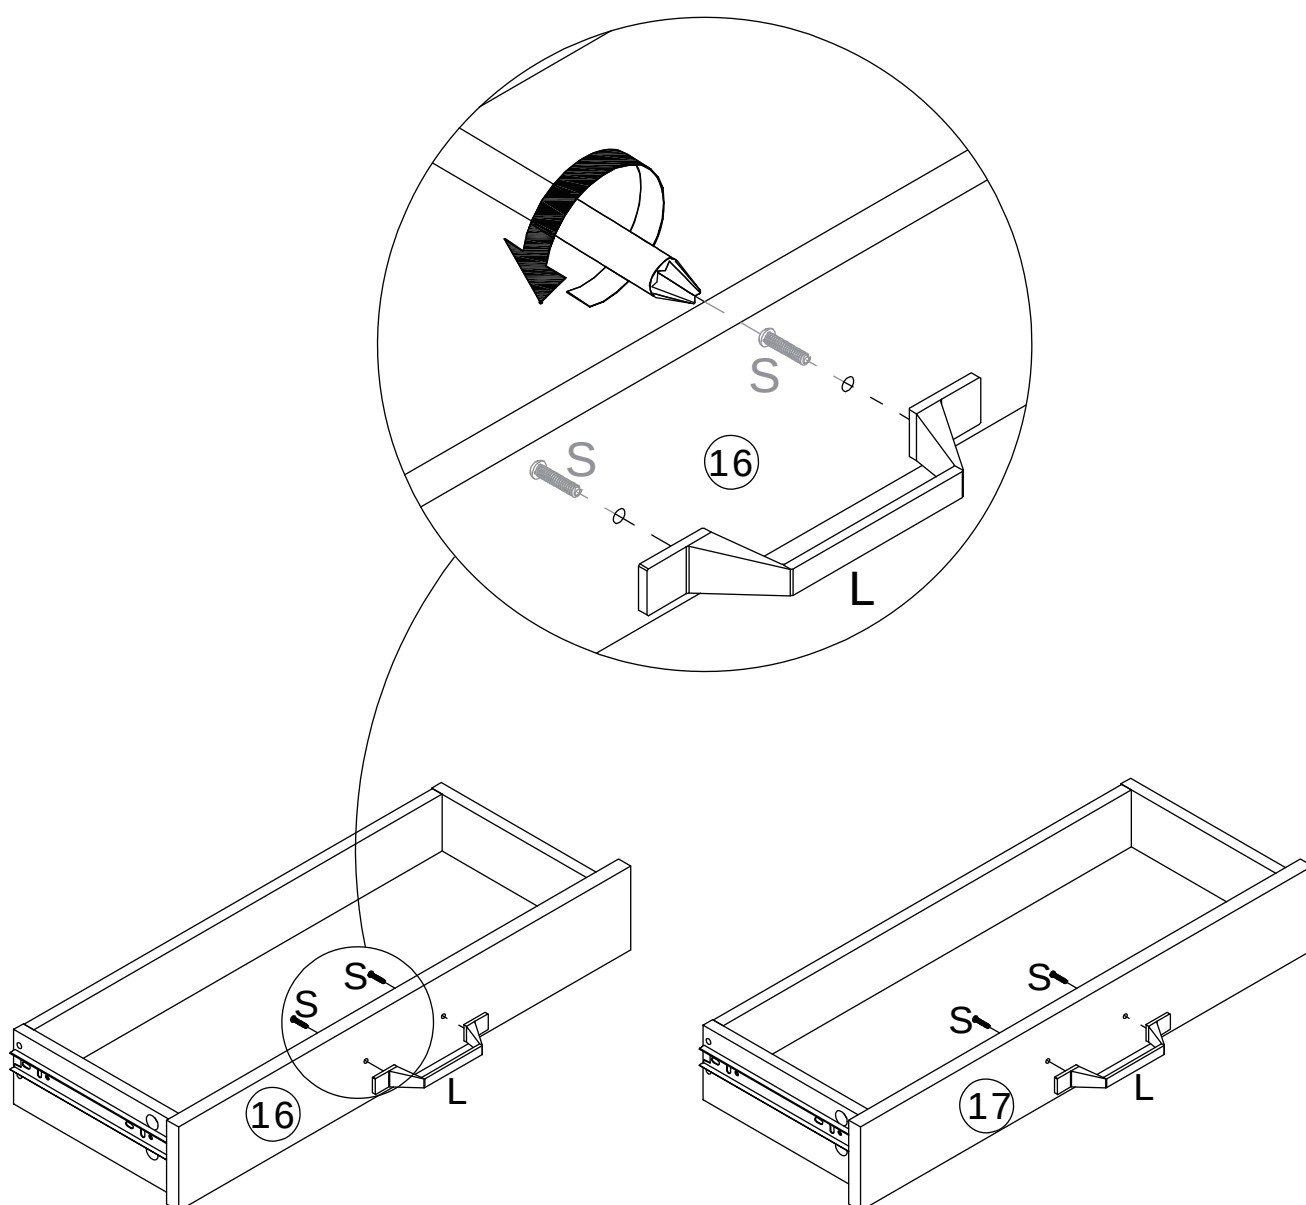


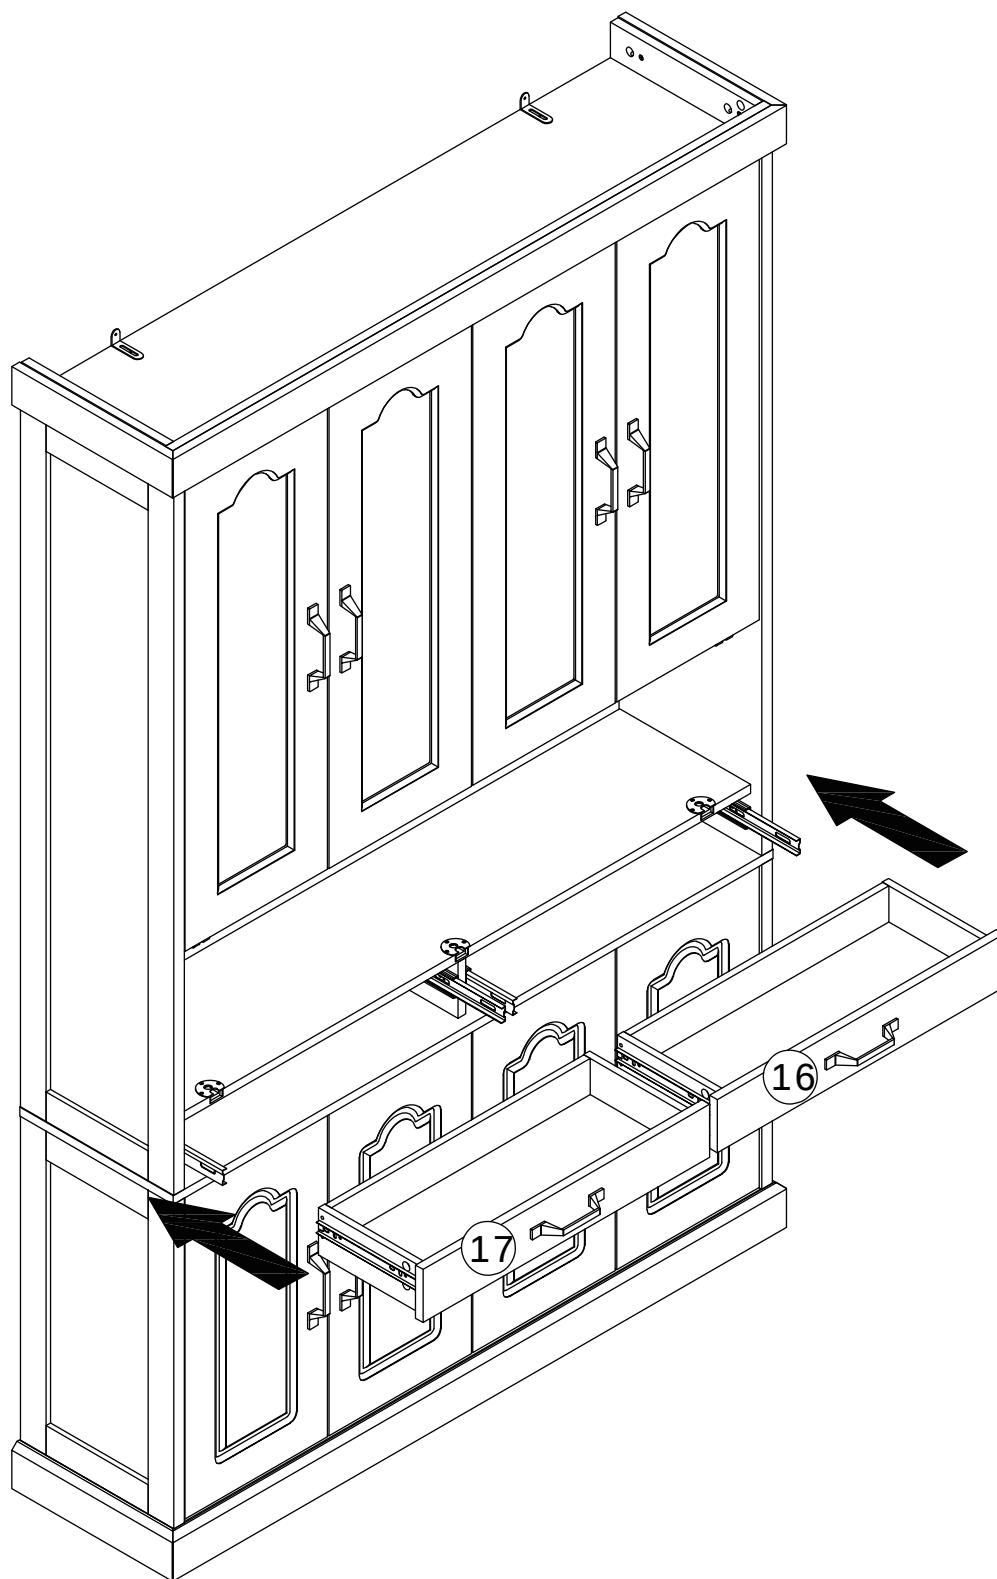


66

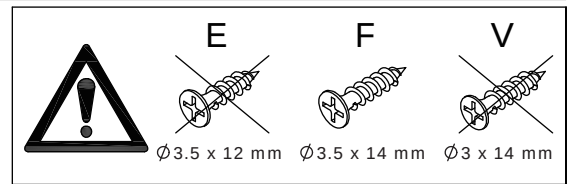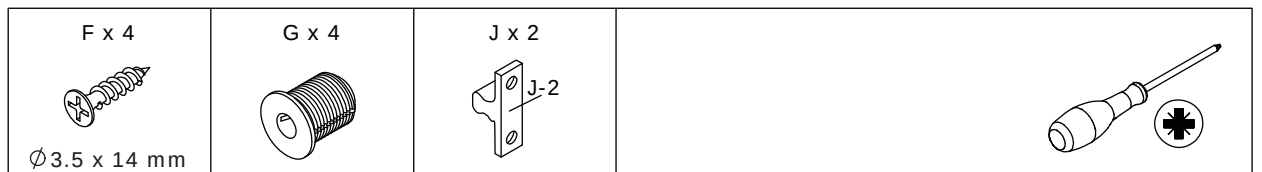  

 
Secure part (J-2) to Panel 1 using screw (F), then insert part (G) into Panel 1.

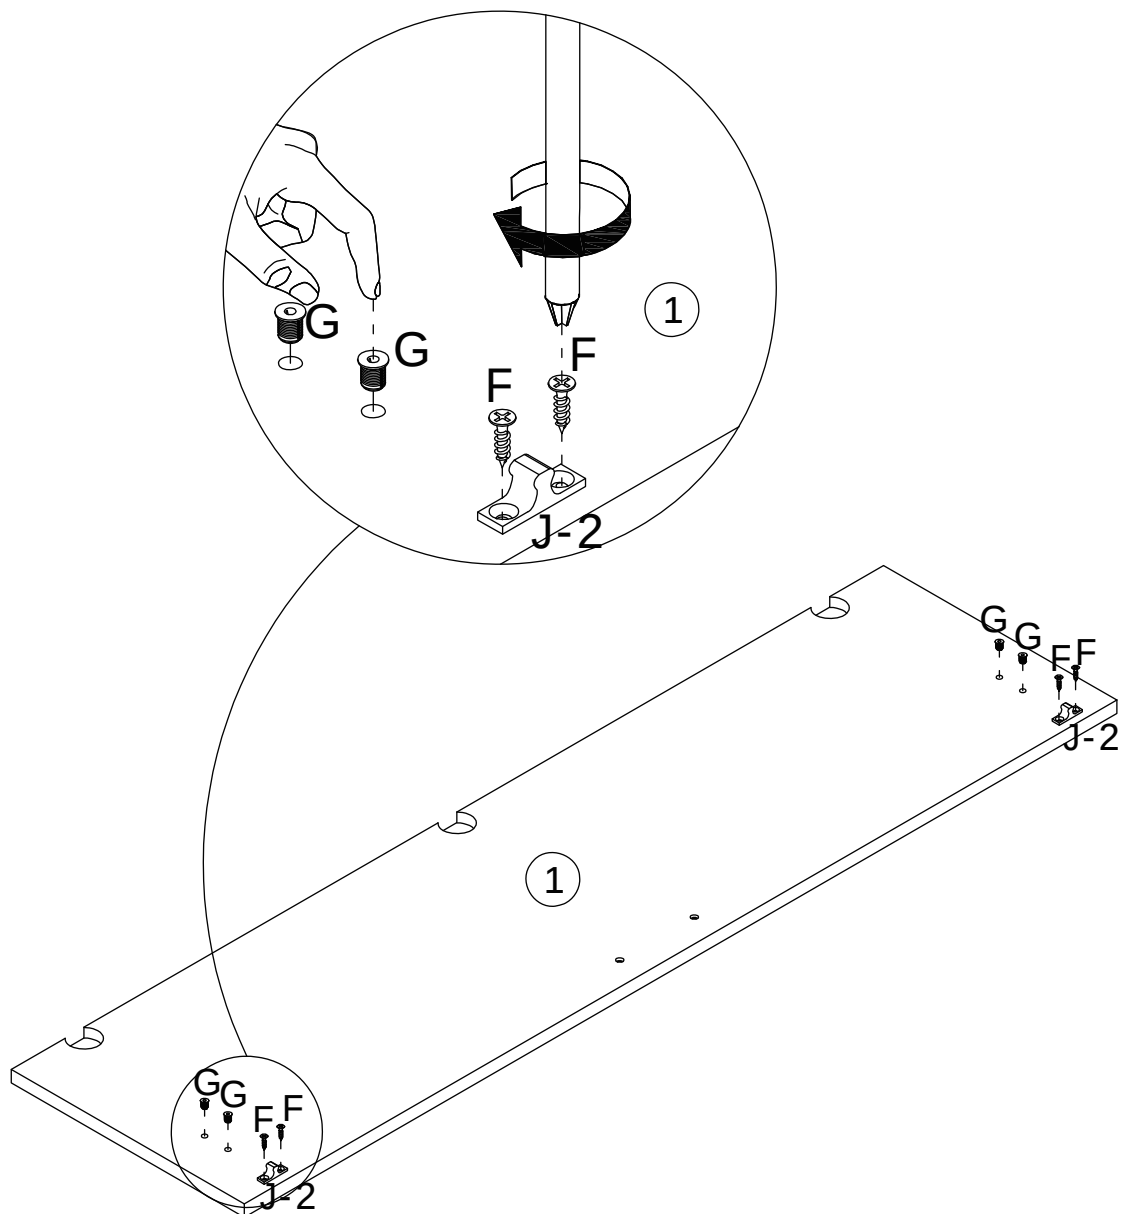


67

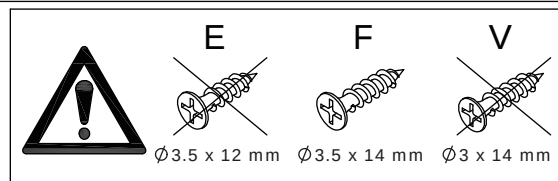 

 
Secure part (K-2) to Panel 1 using screw (F).

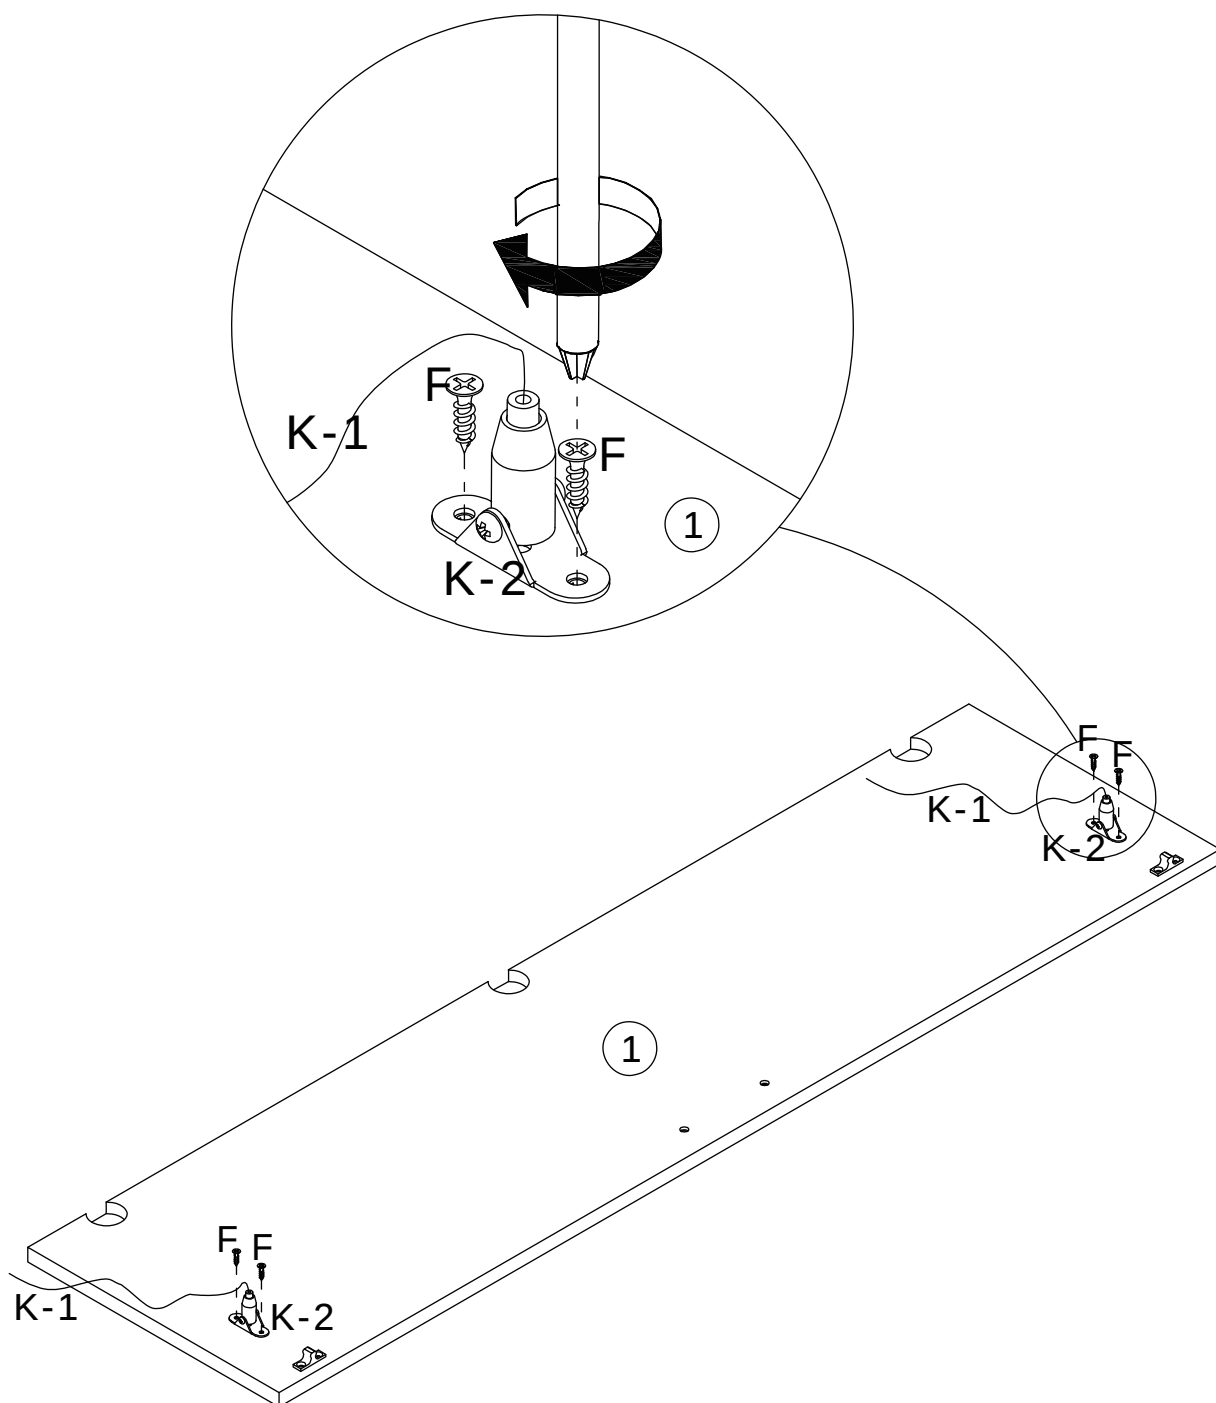


68

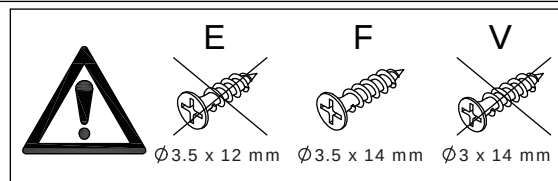 

  Secure part (H-2) to Panel 1 using screw (F).

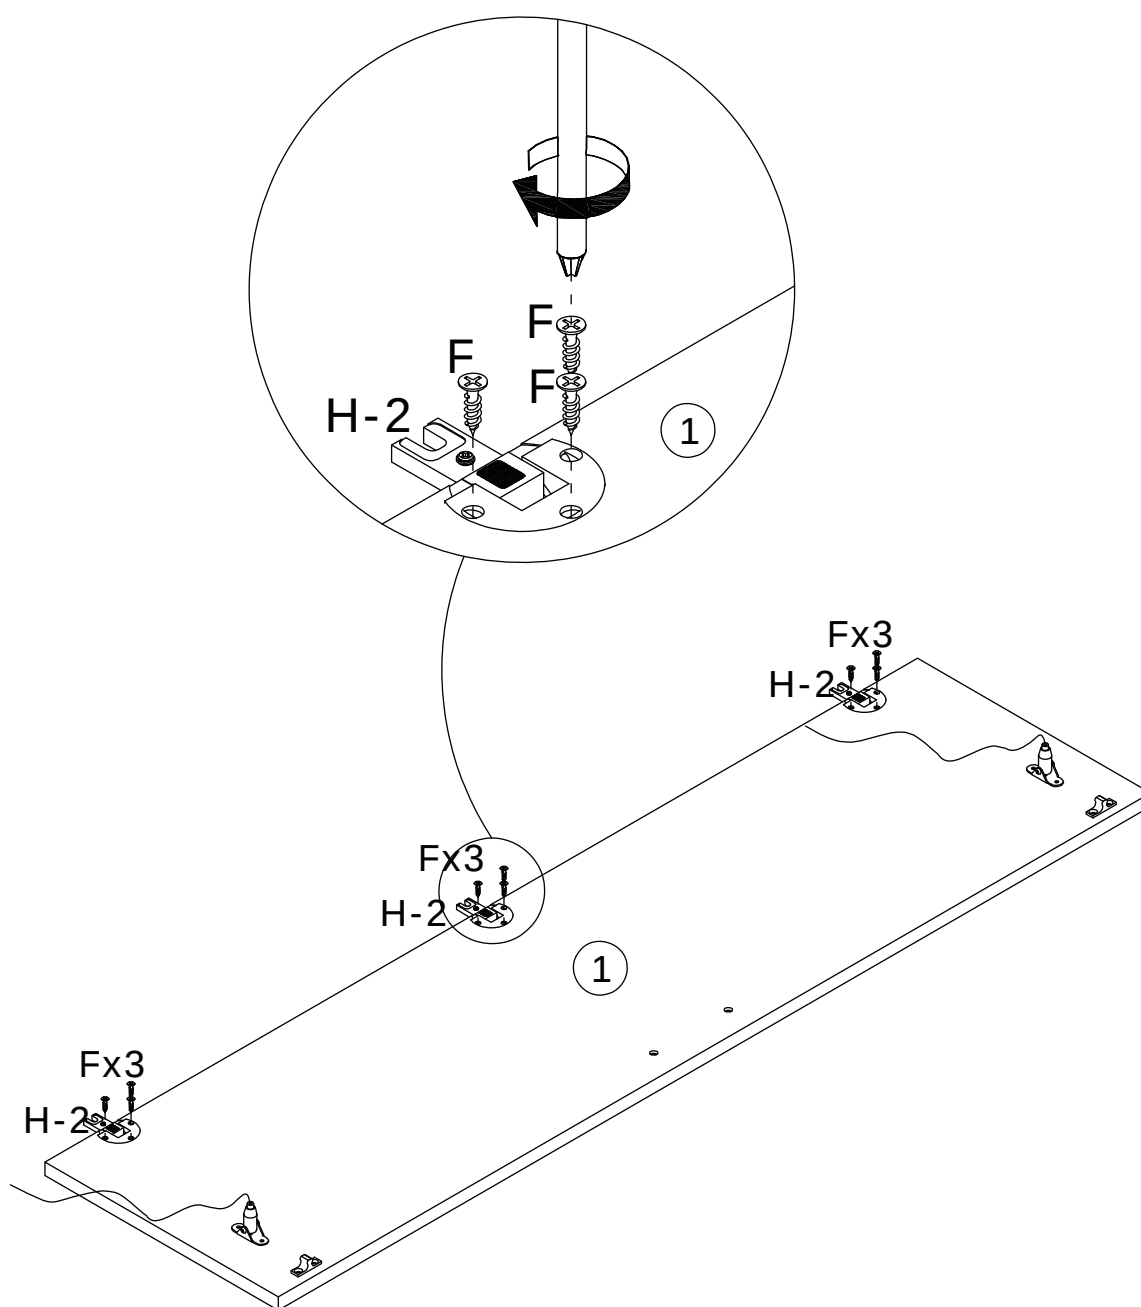


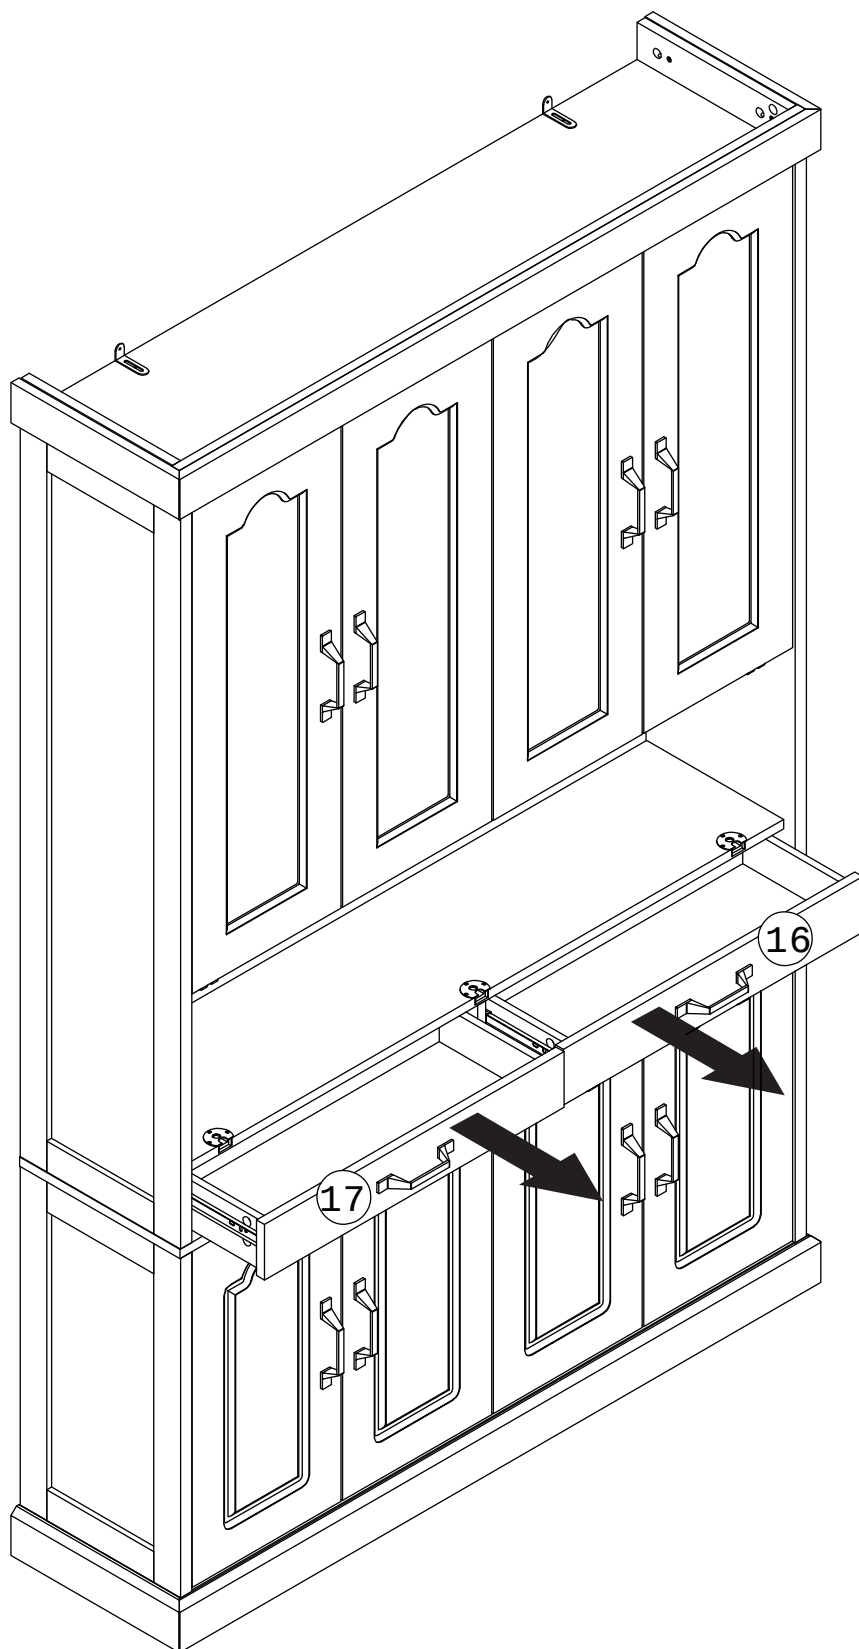



70

Insert part (H-2) into part (H-1).

 Two or more adults are required to complete this assembly step.


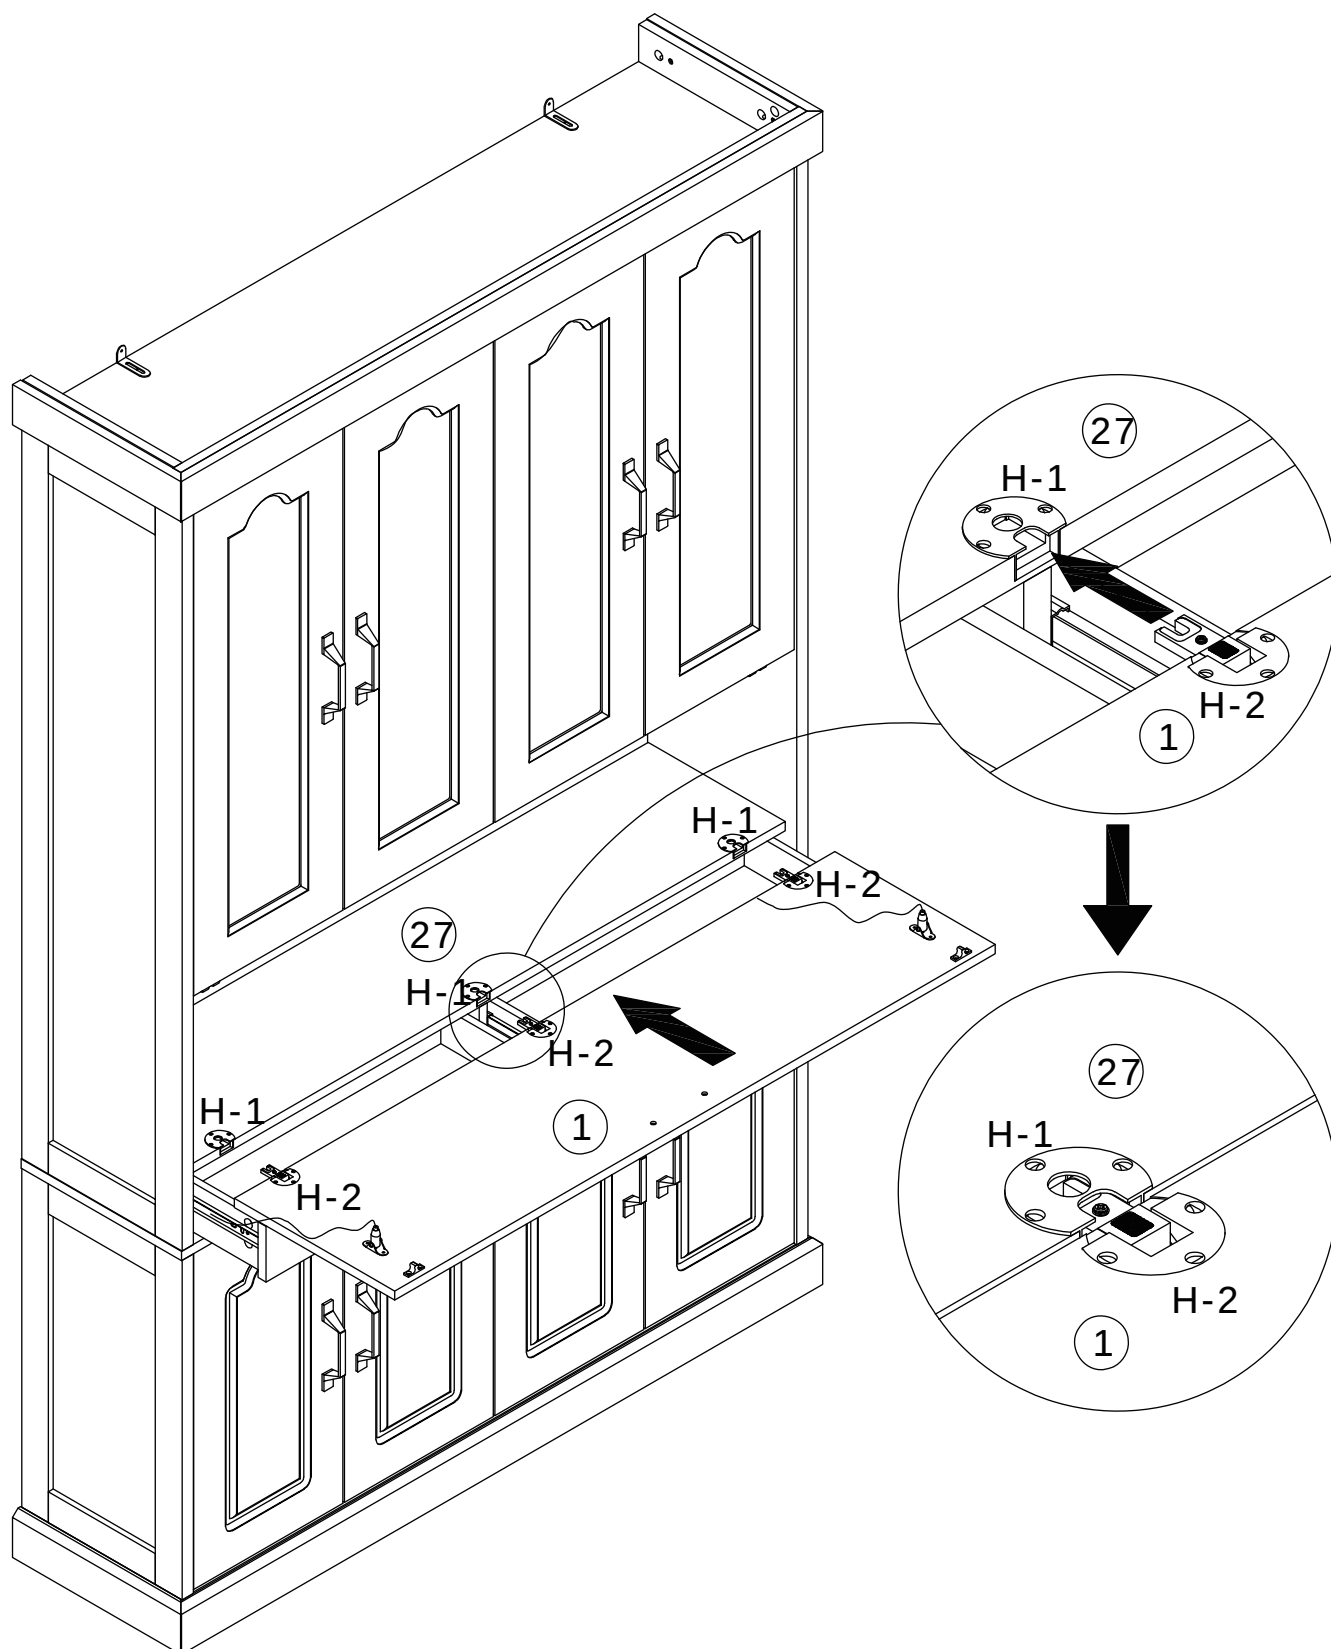


71

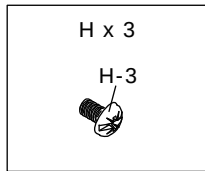  


Secure part (H-1) and (H-2) together using part (H-3).

  Two or more adults are required to complete this assembly step.

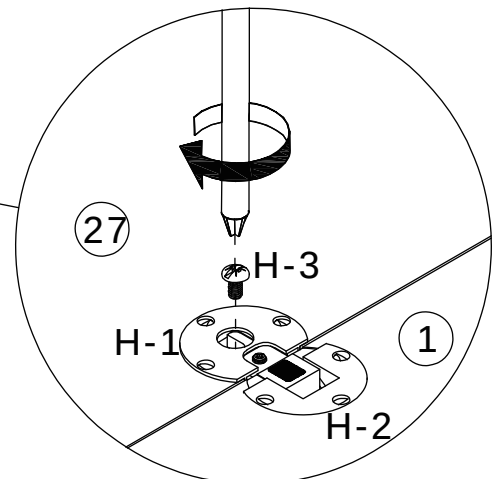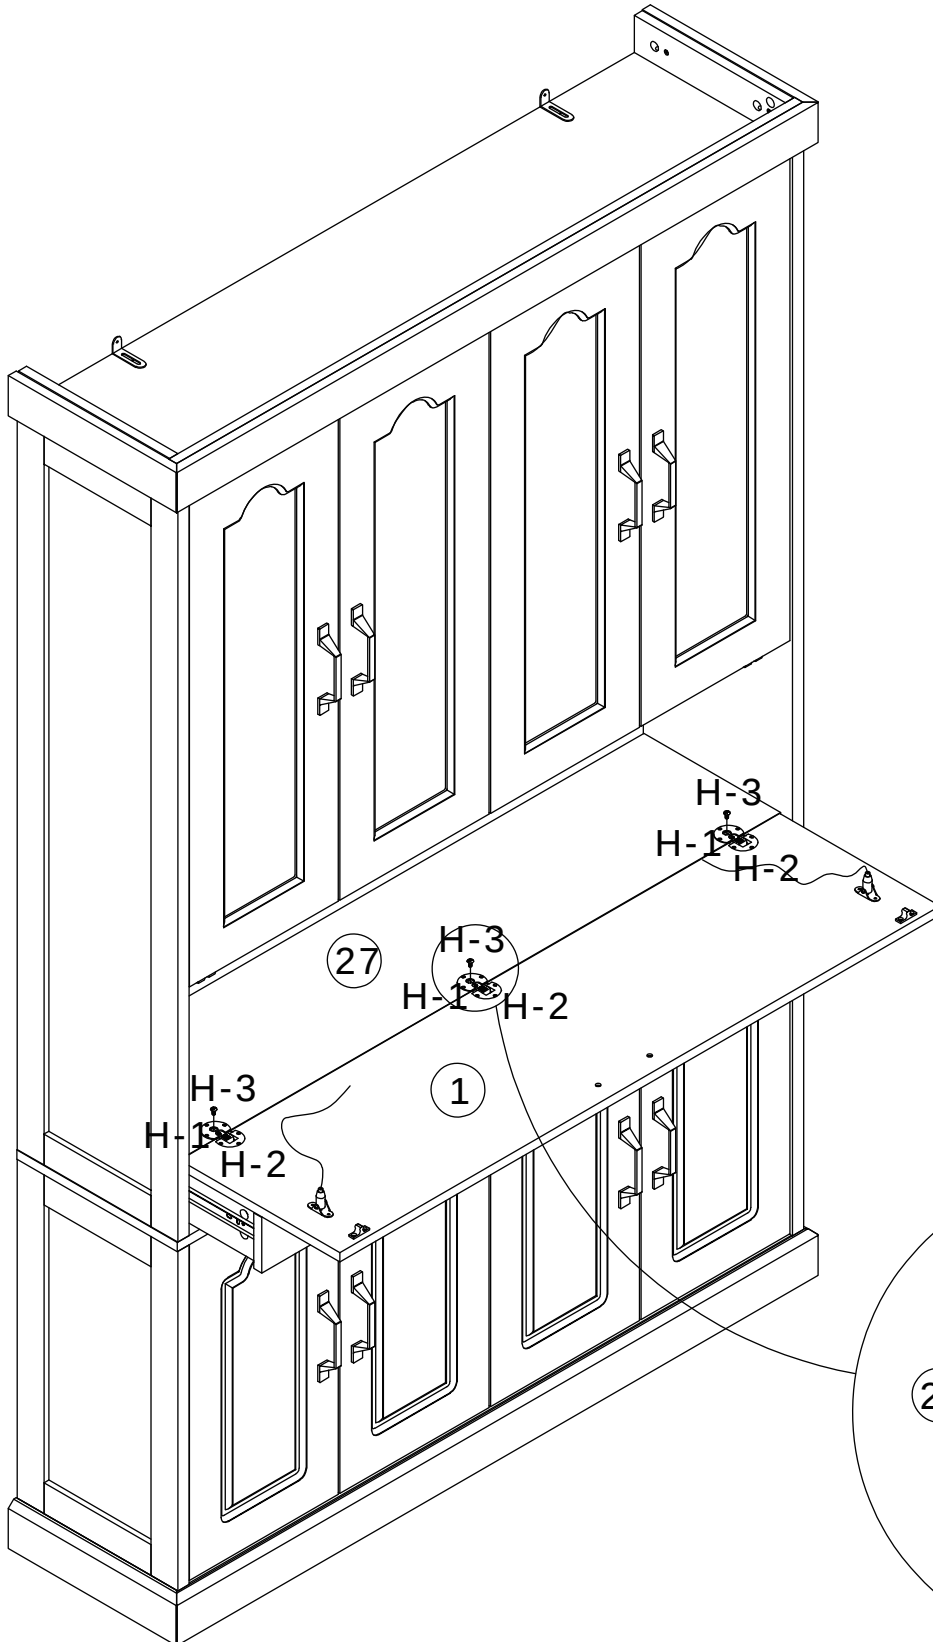


Thread part (K-1) through part (K-2).

 Two or more adults are required to complete this assembly step.

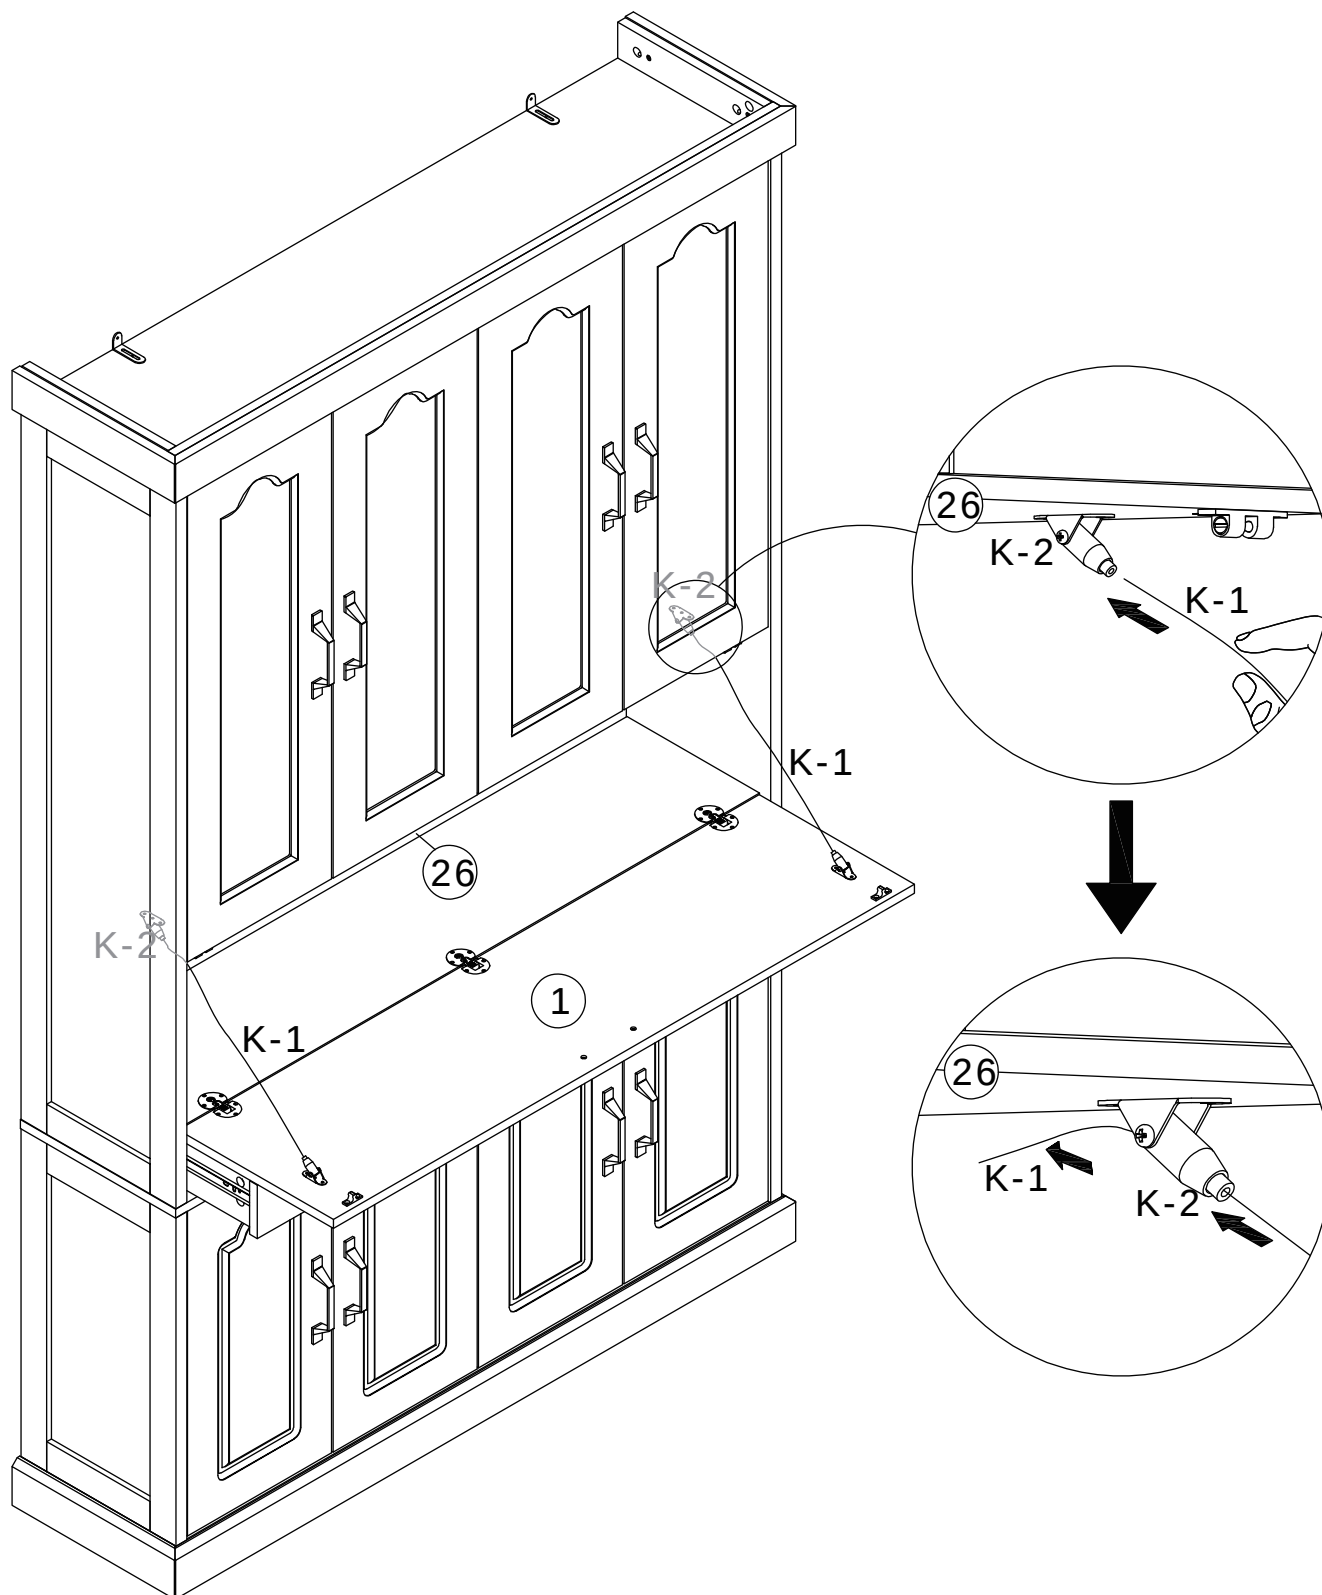


 
Note: To prevent injury from part (K-1), pull part (K-1) at Panel 1 to its shortest position.

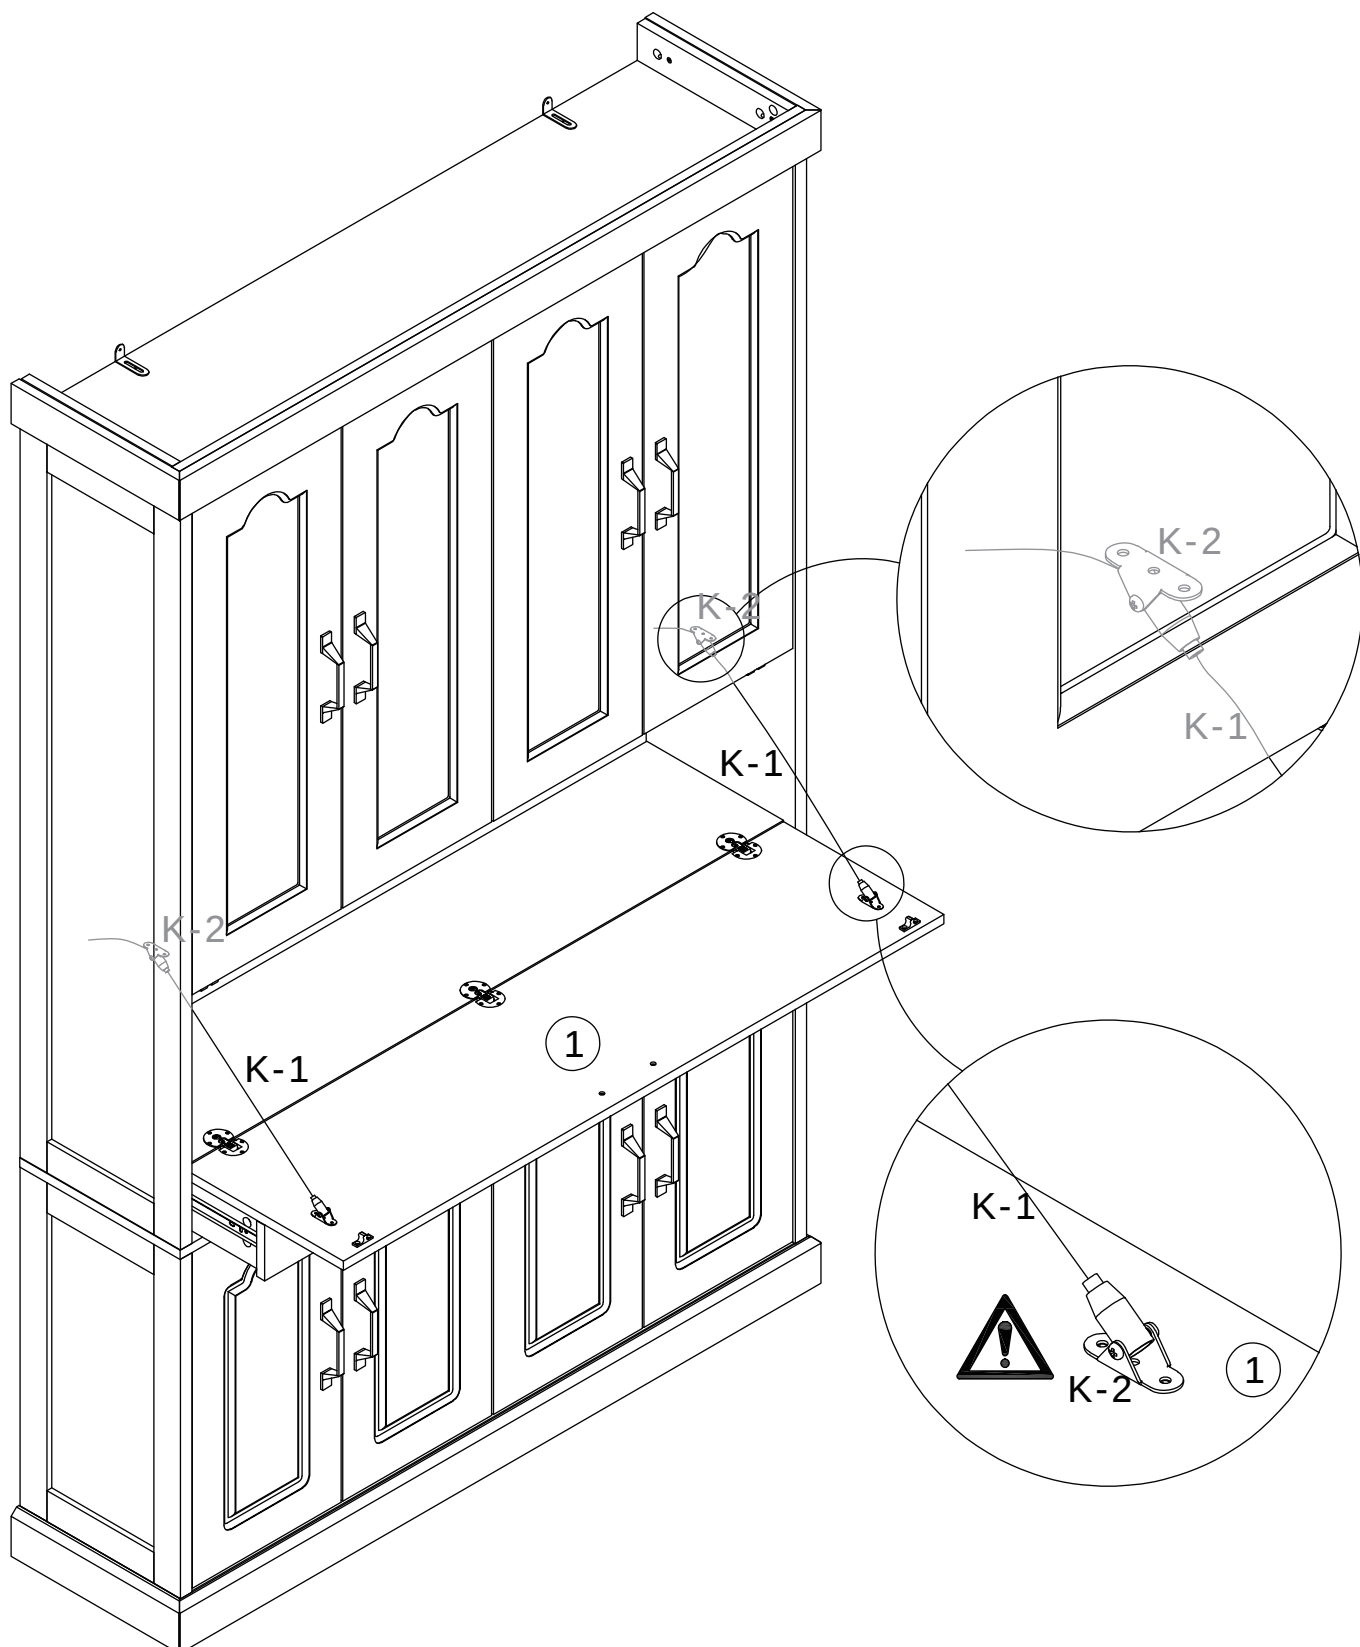







74



        
Secure handle (L) to Panel 1 using screw (S).

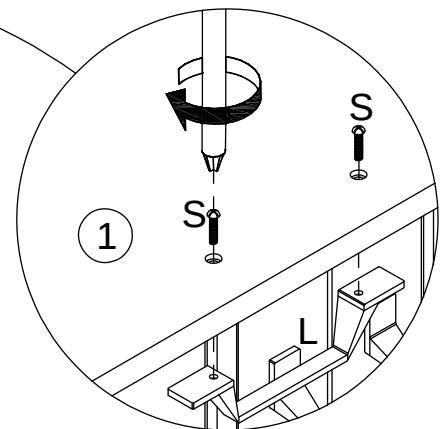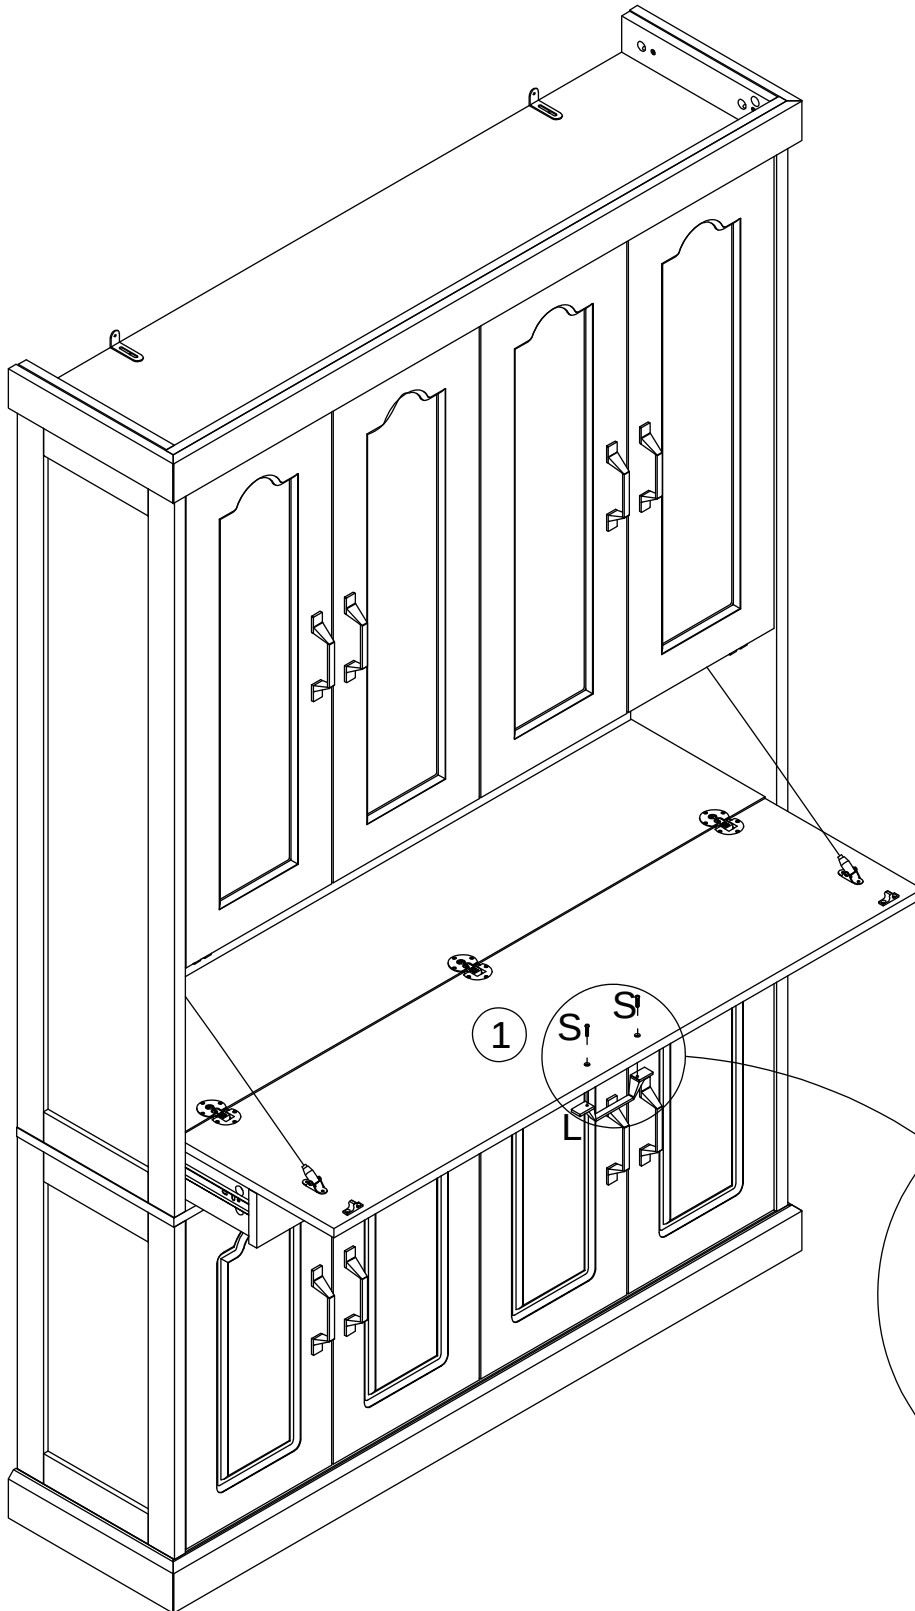

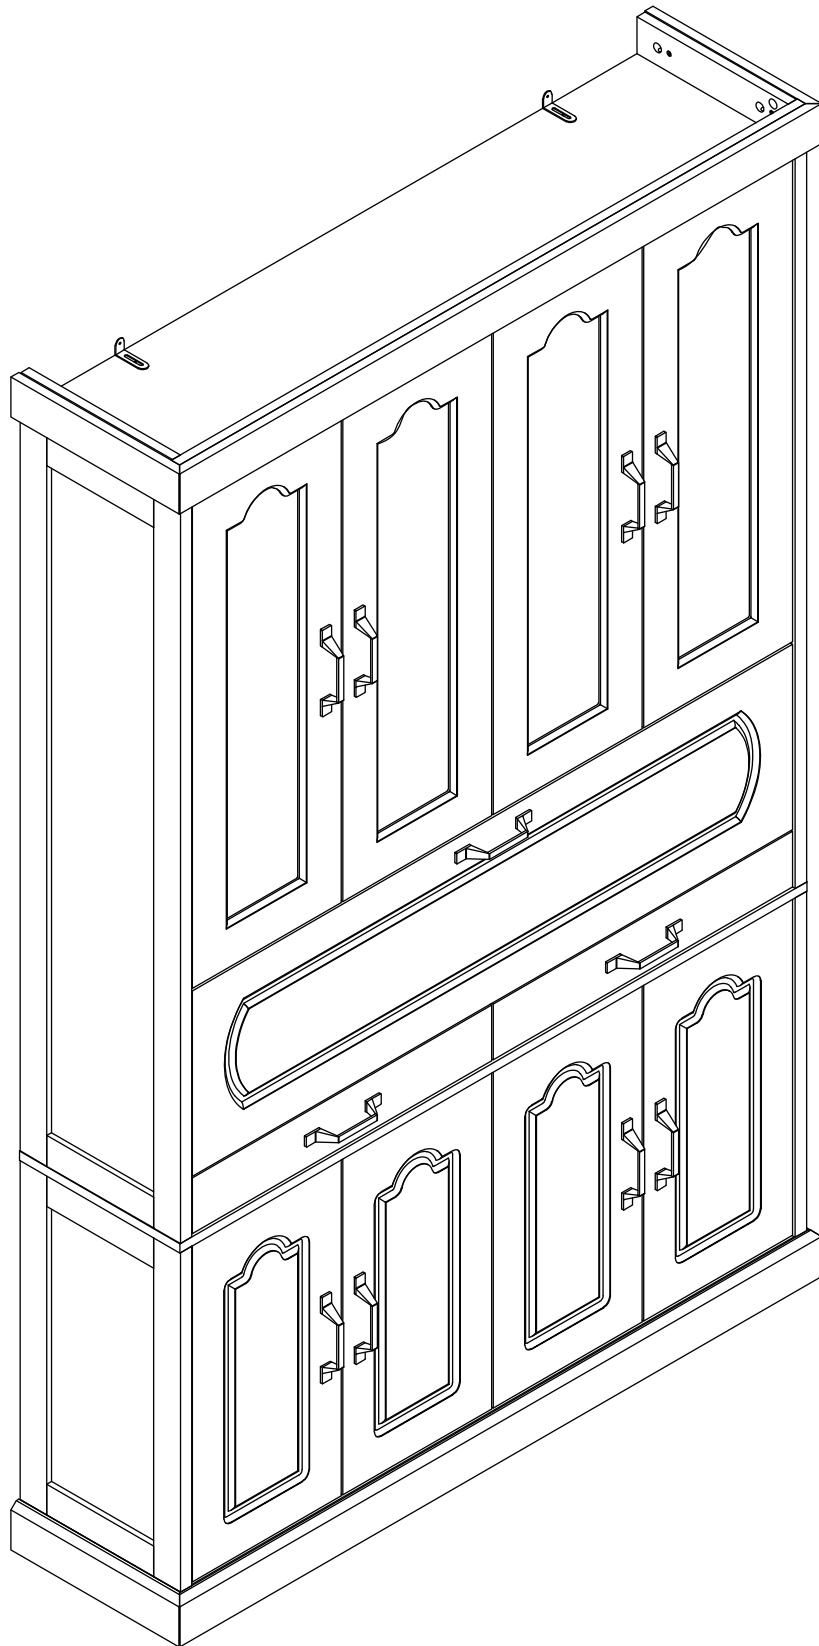


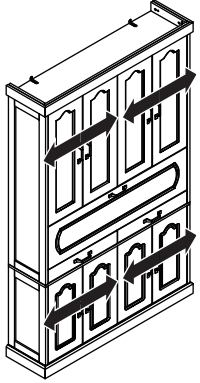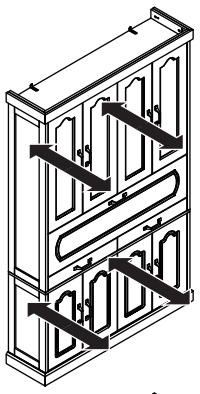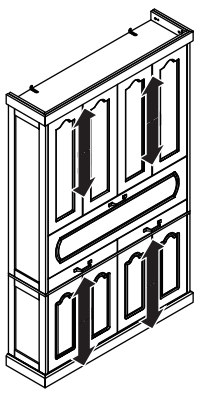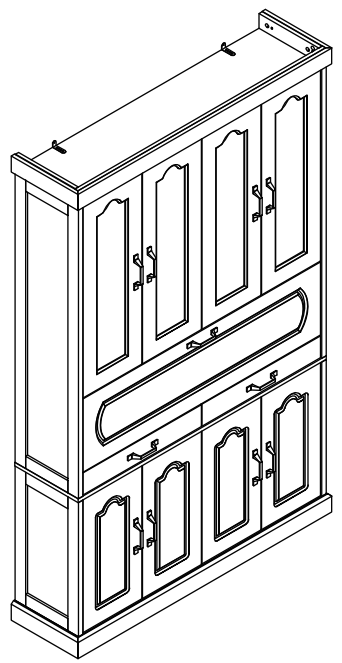


I

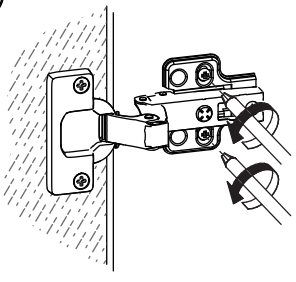 


II

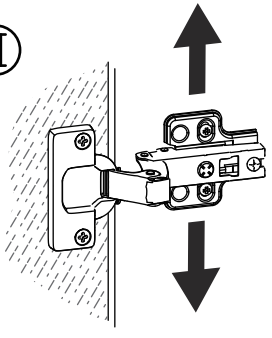 


III

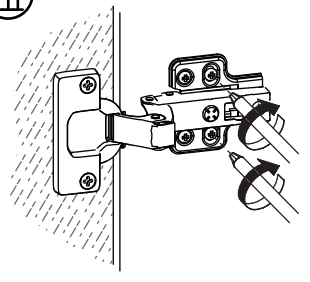 


I

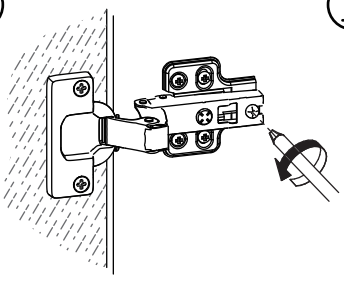 


II

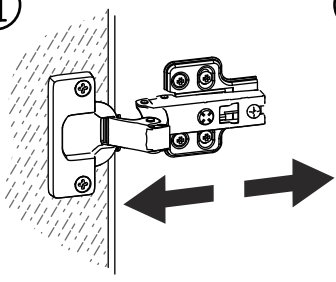 


III

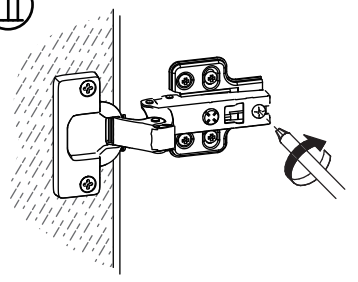 

I

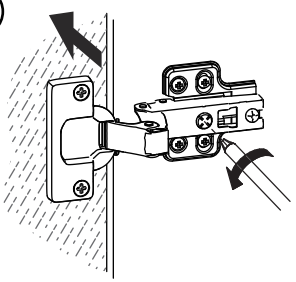 

II

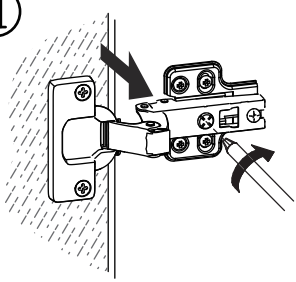 

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.