AIR-800-D (AIR/HYDRAULIC 800 LBS. DOUBLE SCISSOR LIFT TABLE)

	-000-D (AIII/III	DIC	1UL	IC 800 LBS. DO	UDL	E S	CISSON LIFT TE	וער
No.	Description	Q'ty	No.	Description	Q'ty	No.	Description	Q't
1	Table	1	57	Plug	1	(43	O-ring	1
2	Up Link Assembly	1	58	C-ring	1	(44	Plug	1
3	C-ring	8	59	Switch Wrench	1	(45	Top Rod	1
4	Bushing	4	60	Set Nut	1		Steel Ball	1
5	Shaft	2	61	Screw	1	_	Spring Seat	1
6	Shaft	2	62	Plug Tie-in	1		Adjust Pressure Spring	1
7	Down Link Assembly	1	63	O-ring	1	`	O-ring	1
8	Flat Washer	4	64	Enter Air Mouth	1		Adjust Pressure Spring	1
9	Spring Washer	4	65	Tie-in	1		Plug	1
10	Bolt	4	66	Rubber Cover	2		Lowering Valve	1
11	Shaft	2	67	Support Rod	2	(53	Spring Pin	1
12	Roller Guide	4	68	Washer	2	(54	Big Pump Piston	1
13	Seat	1	69	Set Nut	2	(55	Dust Cover	1
14	Hex Cap Bolt	2				(56	Oil Seal	1
15	Shaft Cover	2	(1	Valve	1	(57	Big Spring	1
16	Dust Cover	2	<u> </u>	Hex Cap Bolt	3	_	Bushing	1
17	Bearing	8	(3	Spring Washer	3		O-ring	1
18	Wheel	4	(4	Top Nut	1		Hex Cap Bolt]
_		-		Rubber Cover	-		•	-
19	Set Nut	4	(5		1		Spring Pin]
20	Hex Cap Bolt	8	(6	Piston Cover	1	_	Screw	1
21	Flat Washer	8	(7	Small Piston	1	_ `	Screw]
22	Swivel Wheel Holder	2	(8	Oil Seal	1	(64	Flat Washer	1
23	Spring Washer	8	(9	Big Piston	1	(65	Stop Block	1
24	Hex Cap Bolt	8	(10	O-ring	2	(66	Steel Ball	1
25	Hex Cap Bolt	2	(11	Rubber O-ring	2	(67	Spring	1
26	Brake Pedal	2	(12	Cylinder Body	1		Link Block	1
27	Brake Slice	2		Hex Cap Nut	1	<u> </u>	Shaft	2
28	Protect Cover	2		Spring Seat	1	_ `	Bushing	1
29	Flat Washer	2		Small Lift Piston	1		Bushing	1
30	Spring Washer	2		Big Spring	1	(72	Shaft	1
31	Semicircle Screw	2	(17	Plug Cover	1		Press Wheel Seat	1
32	Bushing	2		Cylinder Body	1	_	Press Wheel	1
33	Handle	1		Hex Cap Nut	1	(75		1
34	Big Washer	2		Bushing	1		Shaft]
35	Spring Washer	2	(21	Oil Seal	1	(77	Shaft]
36	Hex Cap Bolt	2	(22	Pump Cylinder Body	1	(78	Foot Pedal Petiole]
37	Hex Cap Bolt	2	(23	O-ring	1	(79	Cylinder	1
38	Flat Washer	2	(24	Plug Cover	1	(80	Safe Valve]
39	Spring Washer	2	(25	Taper Spring	1	(81	O-ring]
40	Hex Cap Nut	2	(26	Steel Ball	1	_ `	Oil Pipe Tie-in]
41	Oil Box	1	(27	Hex Cap Plug	2	_ `	High Press Oil Pipe	
42	Hex Cap Bolt	2	(28	O-ring	2		C-ring	
43	Spring Washer	2	(29	Fix Shaft	1		Shaft	1
		_	⊢ `		-			
44	Hex Cap Nut	2		Spring Seat	1		Nut]
45	Oil Pipe	1		Spring	1		Washer	1
46	Lock Pin	1	(32	Steel Ball	1		Oil Seal	1
47	Air Pipe Tie-in	1		Plug Cover	1		Piston	1
48	O-ring	2	(34	Taper Spring	1		Lift Piston]
49	Plug	1	(35	Steel Ball	1	(91	Shaft	1
50	Air Pipe	1	(36	Oil Pipe Tie-in	2	(92	O-ring	1
51	Enter Air	1	(37	O-ring	2		Top Nut	1
52	Spring	1		Plug	1		Plug	1
53	Oil Seal	1	(39	Spring	1		O-ring]
54				Steel Ball	1	-	Oil Seal	
	Valve Core	1	(40]
55	O-ring	1	(41	C-ring	1		O-ring	1
56	O-ring	1	(42	O-ring	2	(98	Dust Cover]

AIR-800-D

