


ASSEMBLY INSTRUCTIONS

ENTERTAINMENT CONSOLE

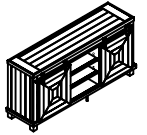

Read instruction carefully prior for assembly

Thank you for purchasing this quality product. check carefully for small parts which may have come loose during shipment. Remove all components from pack and place on soft surface to prevent scratching the finish during assembly .Identify and count all parts as specified below.


Hardware List

| No. | Item | Picture | Q'ty |
|-----|---------------------------|---------|------|
| 1 | Allen Key M4 | | 1 |
| 2 | Bolt 5/16"*80mm | | 4 |
| 3 | Spring Washer 21/64"*13mm | | 4 |
| 4 | Flat Washer 21/64"*19*2mm | | 4 |

Part List


| No. | Item | Picture | Q'ty |
|-----|----------------|---------|------|
| A | Console | | 1 |
| B | Bun foot | | 4 |
| C | Center support | | 1 |

STEP 1

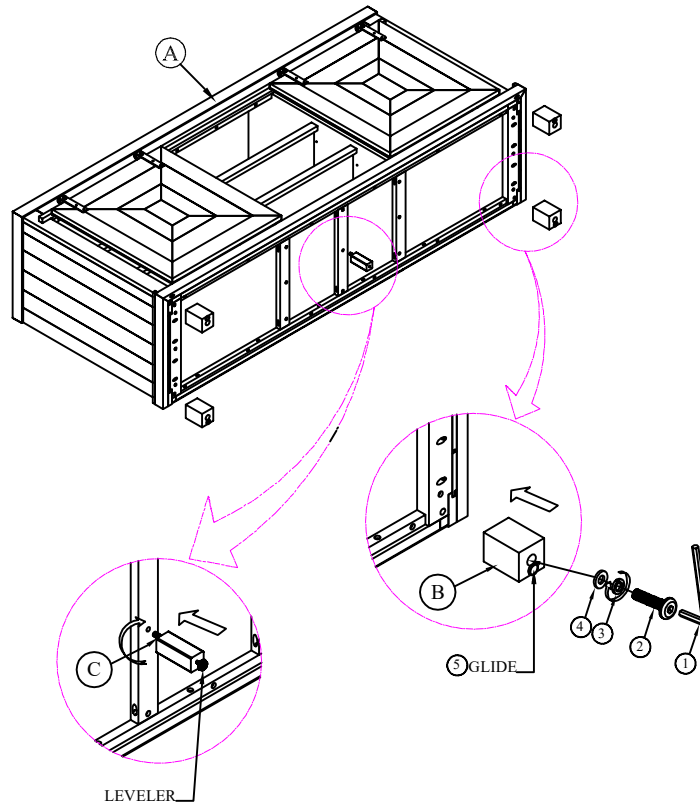

Attach Legs (B) with Console (A).
Attach Support Leg (C) with Console (A)

STEP 2

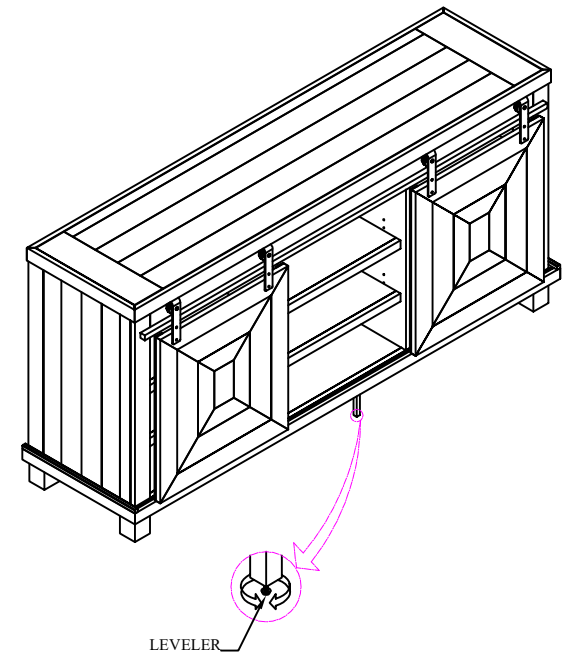

Adjust leveler if needed