

285x210mm



TIPS:

Your suggestions and comments for are really important to us!
We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be quite encouraging if you could kindly do so like below:

★★★★★ Great products so far
February 24, 2018
Great product so far. Fast delivery, easy setup, and working without any issues.

With your inspiring rating, we will be more consistent to offer you EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!



USER'S MANUAL
Free Standing Electric Fireplace

Getting Started


- Remove the appliance from the box.
- Remove any packaging from the product.
- Place the packaging inside the box and either store or dispose of safely.

Contents of Carton

- Heater
- 1 Instruction Manual
- Four legs
- Screw package

- Before operating this unit, please read these instructions completely and save them for the future use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- In order to avoid any danger, the cable must be changed by the special person from manufacture, maintain department or relative department if the cable there is any broken.

Features of products

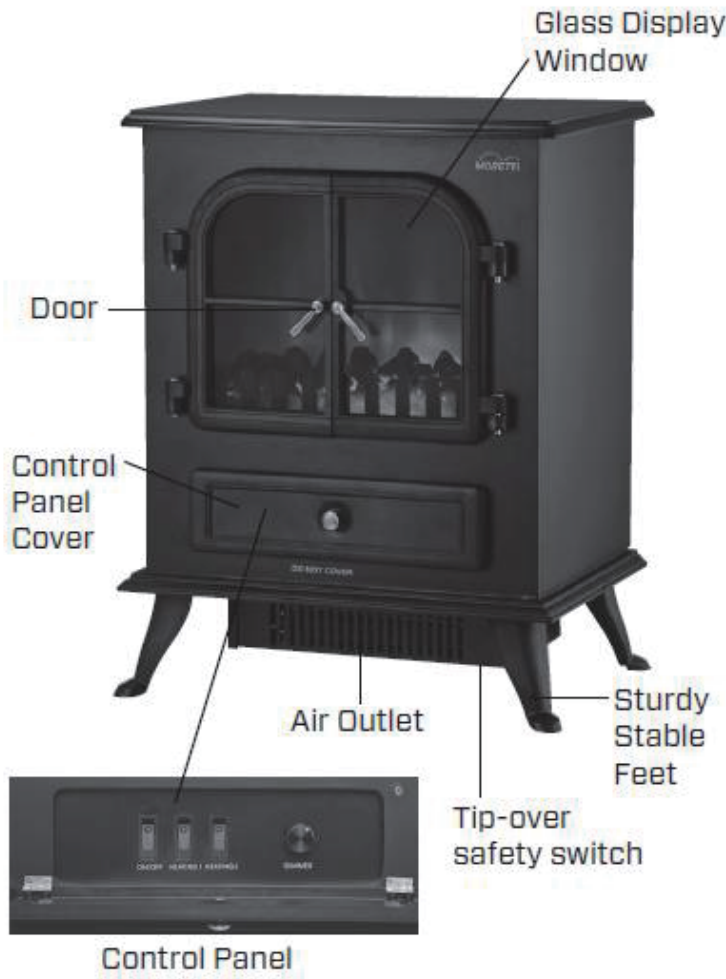

Control Panel


Your flame effect heater provides the look of a wood stove without any of the inconvenience.



1. On/Off switch
2. Heating I, 900W power switch
3. Heating II additional 900W power switch, a total 1800W when both switches 1 & 2 are On together
4. Adjustable fire illumination control

Assembling

Insert the leg buckles into the holes located on the base of the stove. Fasten the legs using the screws (1 screw per leg) and tighten with a Phillips head screwdriver, as followed picture.

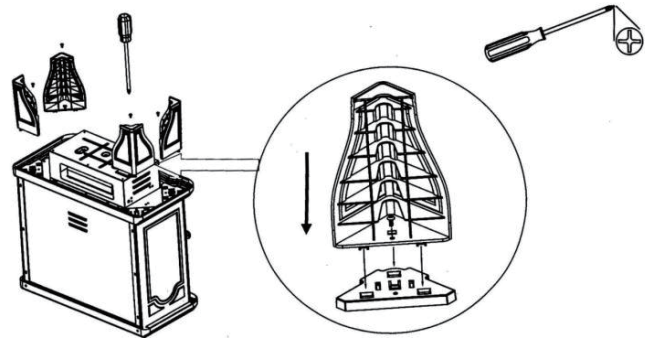

Safety Instruction

When using appliance, basic safety precautions should always be followed:

1. Check that the voltage indicates on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. Children should be supervision to ensure that they do not play with the appliance.
4. If the supply cord is damaged, it must be replaced by a qualified engineer on order to avoid hazard.
5. The appliance must not be located immediately below a socket outlet.
6. Keep furniture, curtains and other flammable material at least one meter away from the appliance.
7. Keep out of reach of children and do not allow them to operate this appliance.
8. Do not operate this appliance after a malfunction or after being dropped or damaged in any way.

Cleaning:

- Turn heater OFF and unplug from electrical outlet before any cleaning or maintenance is performed. Wait at least 10 minutes to allow all components to cool properly.
- Use a vacuum or duster to keep heater and vent area clean from dust and dirt.
- The exterior of the fireplace should be cleaned with a damp cloth or duster.
- Do not use abrasive cleaners or liquid sprays.

⚠ WARNINGS AND CAUTIONS

WARNING To avoid electrical shock not open the back panel of the insert unless the Power has been turned off. And the insert has been unplugged.

WARNING Any electrical repairs,to this electric fireplace. Should only be Performed by a qualified technician.

WARNING Any electrical wiring repairs should only be performed by a qualified Technician. And also must comply with local buildings codes.

WARNING Discontinue use of this electric fireplace if any of the follow has

Occurred: Water damage. If insert has been or dented. If power cord has Become broken. If power cord becomes hot to touch, if unit smokes or Smells like smoke.

Note: When the heat functions is used for the first time. A slight odor may be Present. This is normal and should be occur again unless heater is not used For extended periods of time and dust is allowed to accumulate on heater Element.

Technical Specification
Supply: 220-240V/ 50HZ
Rated power:900W/1800W

Safety Cut-Off

- This appliance is fitted with a safety cut-off which will operate if the fire overheats (e.g. due to blocked air vents) .For safety reasons, the fire will NOT automatically reset.
- To reset the appliance, disconnect the appliance from the mains supply for at least 15 minutes. Reconnect the supply to the mains and switch on the appliance.

Troubleshooting

Symptom	Solution
No operation/no fan,	Check fuse by replacement, Check for safety cut-off operation,
No fire effect light,	Check the LED light with technician.



Meaning of crossed –out wheeled dustbin:
Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.
Contact you local government for information regarding the collection systems available.
If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.
When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposals at least free of charge.