

Installation Manual for 4 -Tier Welding Cart



① X 1



② X 2



③ X 2



④ X 2



⑤ X 4



⑥ X 1



⑦ X 1



⑧ X 1



⑨ X 2



⑩ X 1



⑪ X 2



⑫ X 2



⑬ X 2



⑭ X 1



⑮ X 2



⑯ X 33



⑰ X 2



⑱ X 2

Installation Manual for 4 -Tier Welding Cart

