



We strive to ensure that our products are of the highest quality and free of manufacturing defects or missing parts. However, if you have any problems with your new product,

DO NOT RETURN IT TO THE STORE,

please contact us toll free @:

1-888-996-2729

FAX: 1-866-873-3535

gameroom@escaladesports.com

Or write to:

Escalade Sports
Customer Service Department
P.O. Box 889
Evansville IN 47706

Please visit our Web site at:

www.escaladesports.com

Please have your model number when inquiring about parts.

When contacting Escalade Sports please provide your model number, date code (if applicable), and part number if requesting a replacement part. These numbers are located on the product, packaging, and in this owners manual.

Your Model Number: **M01483W**

Date Code: **2-M01483W- -GR**

Purchase Date: _____

PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

**IMPORTANT! READ EACH STEP
IN THIS MANUAL BEFORE YOU
BEGIN THE ASSEMBLY.**

IMPORTANT!

THE DRAWINGS IN THIS
MANUAL MAY BE
EXAGGERATED OR MODIFIED
TO SHOW DETAILS.



TWO (2) ADULTS ARE REQUIRED TO ASSEMBLE THIS ATOMIC SLAM DUNK PC BACKBOARD DOUBLE SHOOTOUT

Tools Needed:

Allen Wrench (provided)
Wrench (provided)
Phillips Screwdriver

IMPORTANT !

Make sure you understand the following tips before you begin to assemble your basketball shootout.

1. This game (with Mechanical Scoring Arm) can be played outdoors in dry weather - but must be stored indoors.
2. Tighten hardware as instructed.
3. Do not over tighten hardware, as you could crush the tubing.
4. Some drawings or images in this manual may not look exactly like your product.
5. **To prevent damage to the electronics or to your wall, do not place this unit any closer than six inches from the wall.**



WARNING:

- 1) Do not mix old and new batteries.
- 2) Do not mix alkaline, standard (carbon zinc), or rechargeable (ni-cad, ni-mh, etc.) batteries.
- 3) Do not dispose of batteries in fire, batteries may explode or leak.

 


WARNING:


**READ AND FOLLOW ALL ASSEMBLY, OPERATION, AND
SAFETY INSTRUCTIONS CAREFULLY. AT LEAST TWO
ADULTS ARE NEEDED TO PUT THIS BASKETBALL
SHOOTOUT TOGETHER.**

HARDWARE IDENTIFIER


(To Scale)




H1 - M6 x 20mm
Allen Head Bolt
(16 pc)

 


H2 - M6 x 35mm
Allen Head Bolt
(1 pc)

 


H3 - M6 x 45mm
Allen Head Bolt
(2 pcs)

 


H4 - M6 x 50mm Allen Head Bolt (10 pcs)

 

H5 - M6 x 70mm
Allen Head Bolt
(6 pcs)

 

H6 - M6 x 75mm
Allen Head Bolt
(8 pcs)

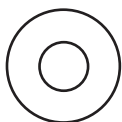

H7 - M6
Flat Washer
(70 pcs)



H8- M6
Plastic Flat
Washer (14 pcs)



H9 - M6
Lock Nut
(43 pcs)

 


H10 - Plastic
Bushing
(8 pcs)

(Packed in with Scorer Box)




H11 - 3.5 x 8mm
Phillips Head Bolt
(4 pcs)



(Not to Scale)


T1 - Allen Wrench
(1 pc)

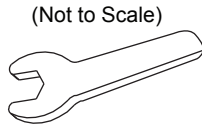


(Not to Scale)

T2 - Wrench
(1 pc)


PARTS IDENTIFIER (Not to Scale)

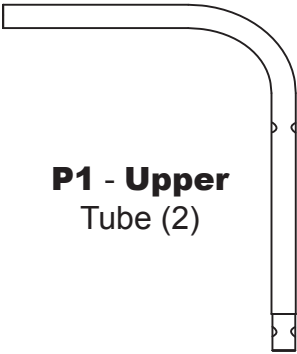

P1 - Upper
Tube (2)

 


P2 - Middle Back Upright Tube (2)

 


P3 - Left Lower Back Upright Tube (1)




P4 - Right Lower Back Upright Tube (1)

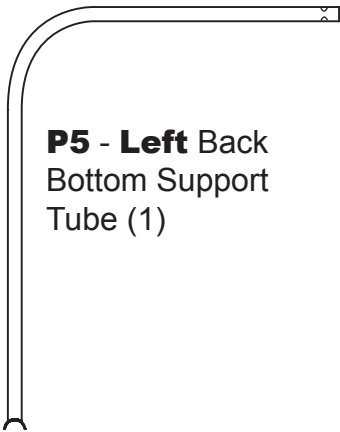

P5 - Left Back
Bottom Support
Tube (1)

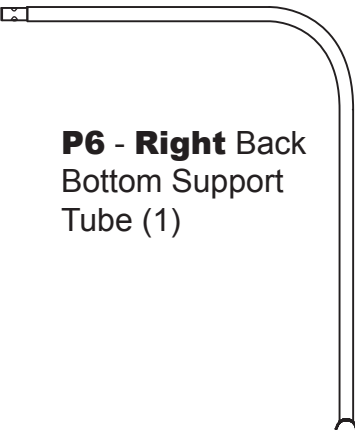


P6 - Right Back
Bottom Support
Tube (1)

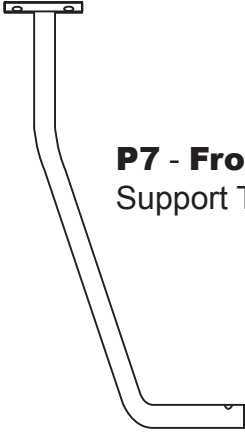

P7 - Front
Support Tube (2)



 
P8 - Front Upright Tube (2)




P9 - Left Top Connect Tube (1)



 P10 - Right Top Connect Tube (1)



P11 - Bottom Connect Tube (2)

 


P12 - Connect Tube (4)



P13 - Base Upright Tube (2)

PARTS IDENTIFIER (Not to Scale)

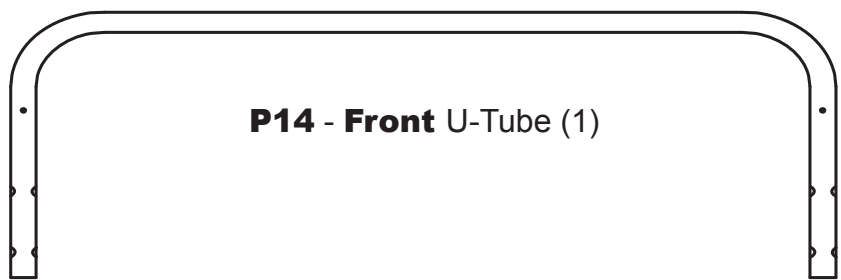


P14 - Front U-Tube (1)




P15 - Long Support Tube (3)




P16 - Short Support Tube (2)

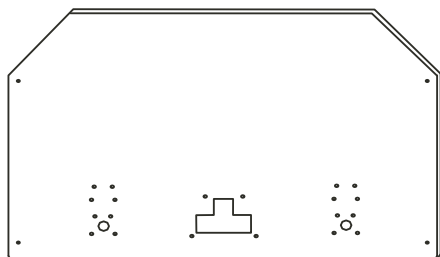


P17 - PC Backboard (1)

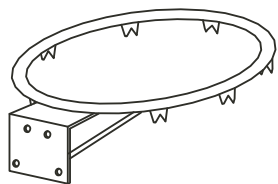


P18 - Rim (2)

 


P19 - Rim Net (2)

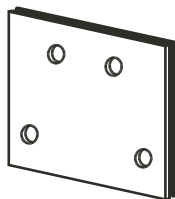

P20 - Rim Support Plate (2)

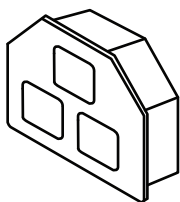


P21 - Electronic Scorer Display (1)

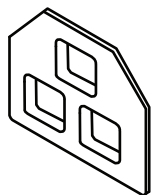


P22 - Electronic Scorer Face Plate (1)



P23 - Mechanical Scoring Arm (2)

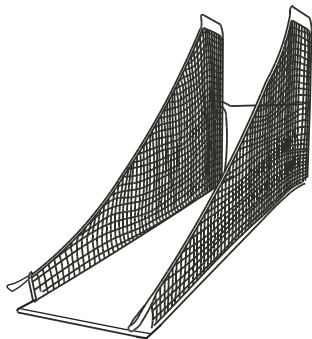


P24 - Ramp Chute (1)

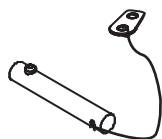

P25 - Locking Pin (2)

 ACCESORY IDENTIFIER (Not to Scale)



A1 - Air Pump with Needle (1)



A2 - Basketball (4)

Remove all the parts from the box and verify that you have all of the listed parts as shown on the Parts List.

PARTS REQUIRED:

2 pcs - **P2 Middle** Back Upright Tube
1 pc - **P3 Left** Lower Back Upright Tube
1 pc - **P4 Right** Lower Back Upright Tube

2 pcs - **P7 Front** Support Tube
2 pcs - **P8 Front** Upright Tube

STEP 1

Connect **P3 - Left** and **P4 - Right** Lower Back Upright Tube to **P2 - Middle** Back Upright Tube using Spring Lock as shown in **FIGURE 1**.

Connect **P8 - Front** Upright Tube to **P7 - Front** Support Tube using Spring Lock as shown in **FIGURE 1**.

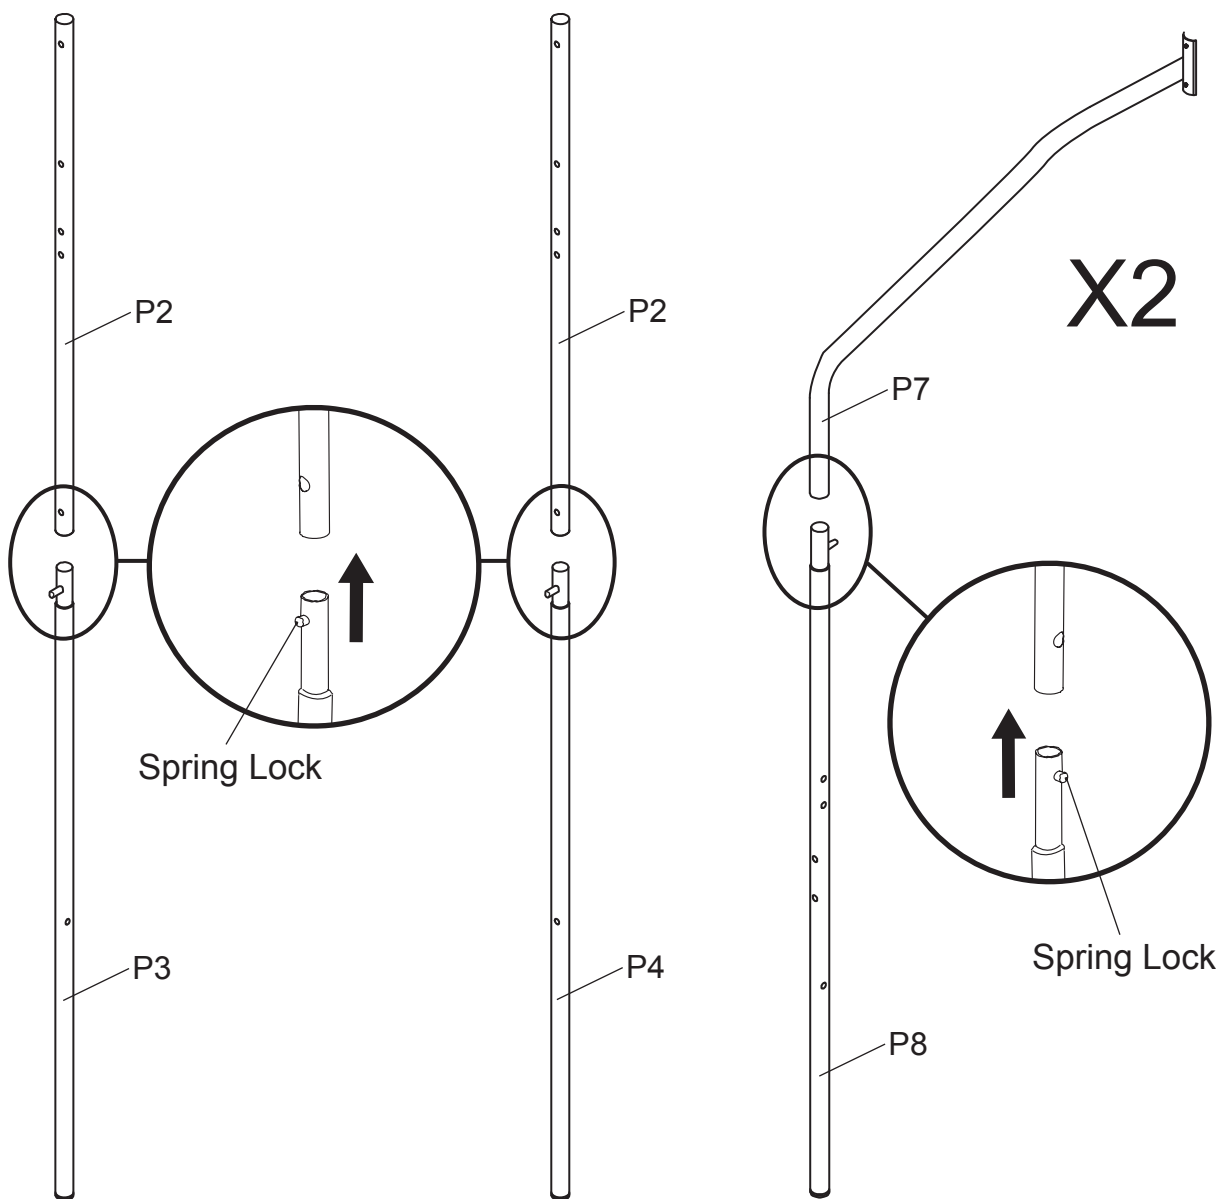


FIGURE 1


PARTS REQUIRED:

1 pc - **P5 Left** Back Bottom Support Tube

1 pc - **P6 Right** Back Bottom Support Tube

STEP 2

Slide **P6 - Right** Back Bottom Support Tube to **P5 - Left** Back Bottom Support Tube as shown in **FIGURE 2**.

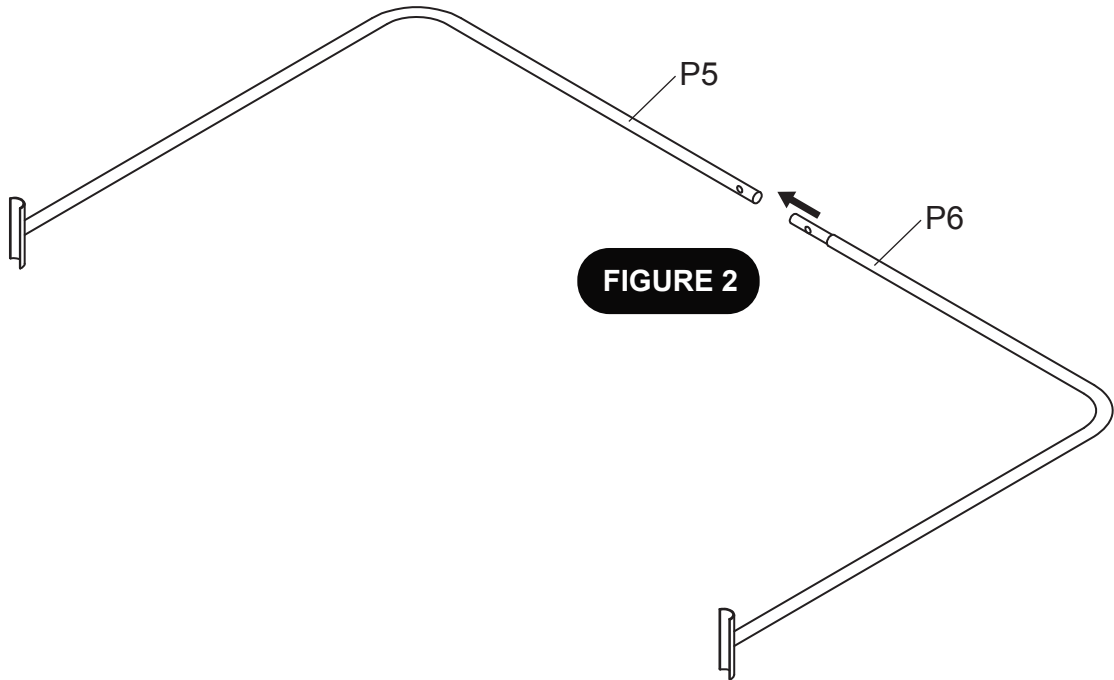

PARTS REQUIRED:

1 pc - **P9 Left** Top Connect Tube

2 pcs - **P11 Bottom** Connect Tube


1 pc - **P10 Right** Top Connect Tube

4 pcs - **P12 Connect** Tube

STEP 3

Connect **P12 - Connect** Tubes to **P9 - Left** and **P10 - Right** Top Connect Tube using Spring Lock as shown in **FIGURE 3**.

Connect **P12 - Connect** Tubes to **P11 - Bottom** Connect Tube using Spring Lock as shown in **FIGURE 3**.

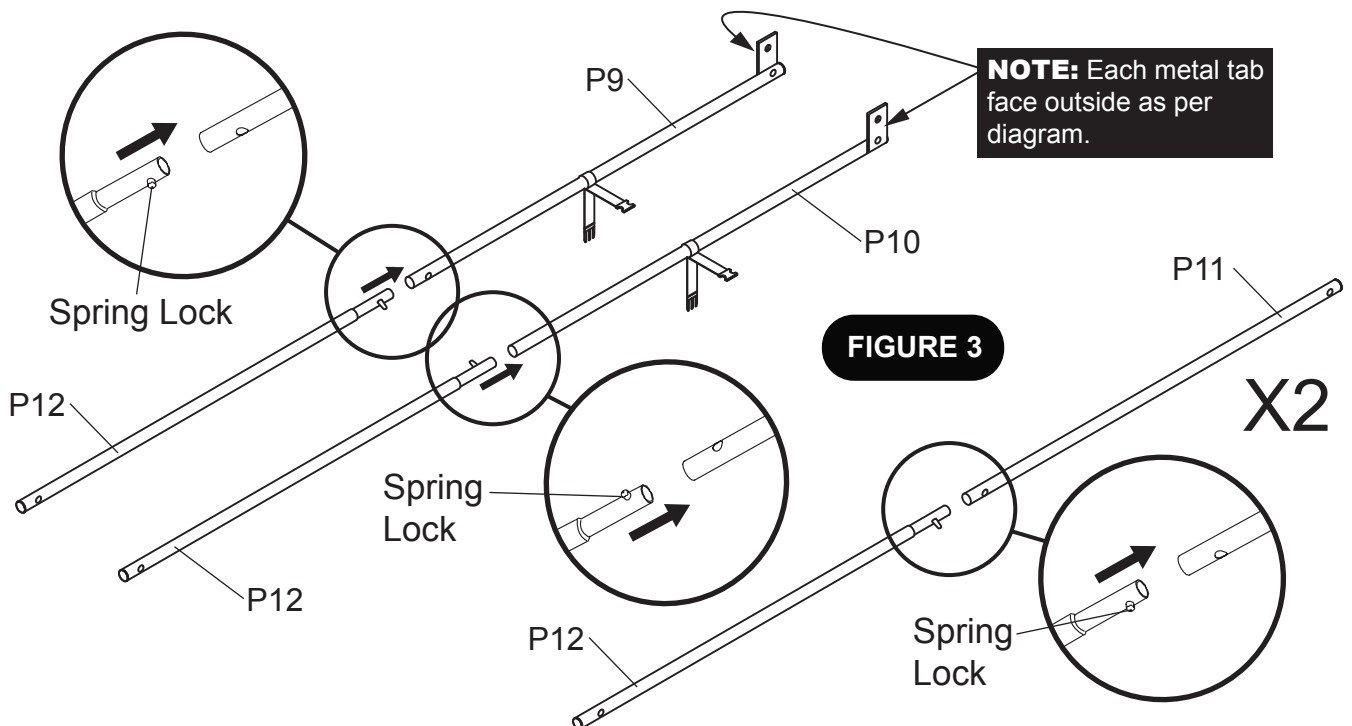

PARTS REQUIRED:

8 pcs - **H4** M6 x 50 mm Allen Head Bolt
2 pcs - **H5** M6 x 70 mm Allen Head Bolt
20 pcs - **H7** Flat Washer
10 pcs - **H9** Lock Nut

1 pc - **P15** Long Support Tube
1 pc - **T1** Allen Wrench
1 pc - **T2** Wrench

STEP 4

Attach **P5/P6** - Back Bottom Support Tube to **P3/P4** Lower Back Upright Tube using **H5** Bolts, **H7** Washers and **H9** Lock Nuts as shown in **FIGURE 4** and **DETAIL A**. **Do not tighten H5 Bolts on this step.**

Attach **P5/P6** - Back Bottom Support Tube to **P8** Front Upright Tubes and **P15** Long Support Tube using **H4** Bolts, **H7** Washers and **H9** Lock Nuts as shown in **FIGURE 4** and **DETAIL B**. **Do not tighten H4 Bolts on this step.**

Attach **P7** - Front Support Tubes to **P2** Middle Back Upright Tubes using **H4** Bolts, **H7** Washers and **H9** Lock Nuts as shown in **FIGURE 4** and **DETAIL C**.

Use T1 Allen Wrench and T2 Wrench to tighten all Bolts and Nuts.

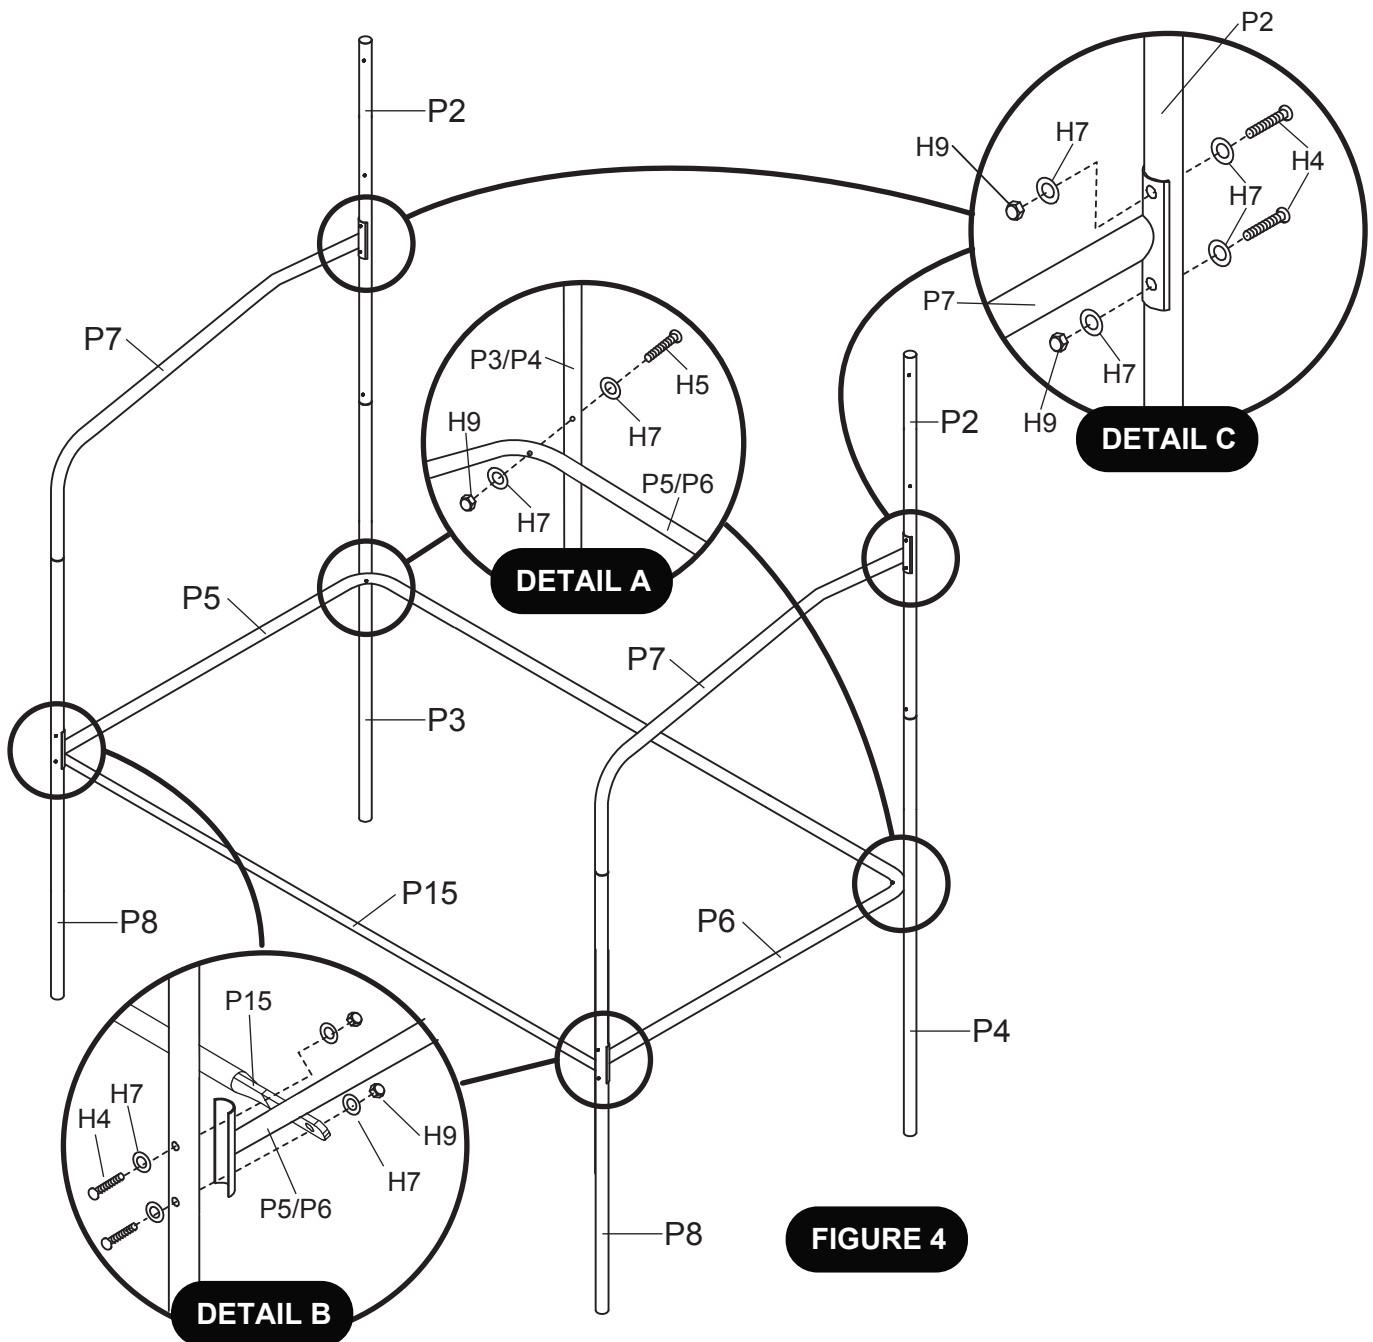


FIGURE 4

PARTS REQUIRED:

1 pc - **H2** M6 x 35 mm Allen Head Bolt
2 pcs - **H4** M6 x 50 mm Allen Head Bolt
6 pcs - **H7** Flat Washer
3 pcs - **H9** Lock Nut

1 pc - **P15** Long Support Tube
1 pc - **P16** Short Support Tube
1 pc - **T1** Allen Wrench
1 pc - **T2** Wrench


STEP 5

Attach **P15** - Long and **P16** - Short Support Tubes to **P2** - Middle Back Upright Tubes using **H4** Bolts, **H7** Washers and **H9** Lock Nuts as shown in **FIGURE 5**, **DETAIL D** and **DETAIL E**.

Do not tighten H4 Bolts on this step.

Attach other end of **P16** - Short Support Tubes to **P5/P6** Back Bottom Support Tubes using **H2** Bolts, **H7** Washers and **H9** Lock Nuts as shown in **FIGURE 5** and **DETAIL F**.

Use T1 Allen Wrench and T2 Wrench to tighten all Bolts and Nuts.

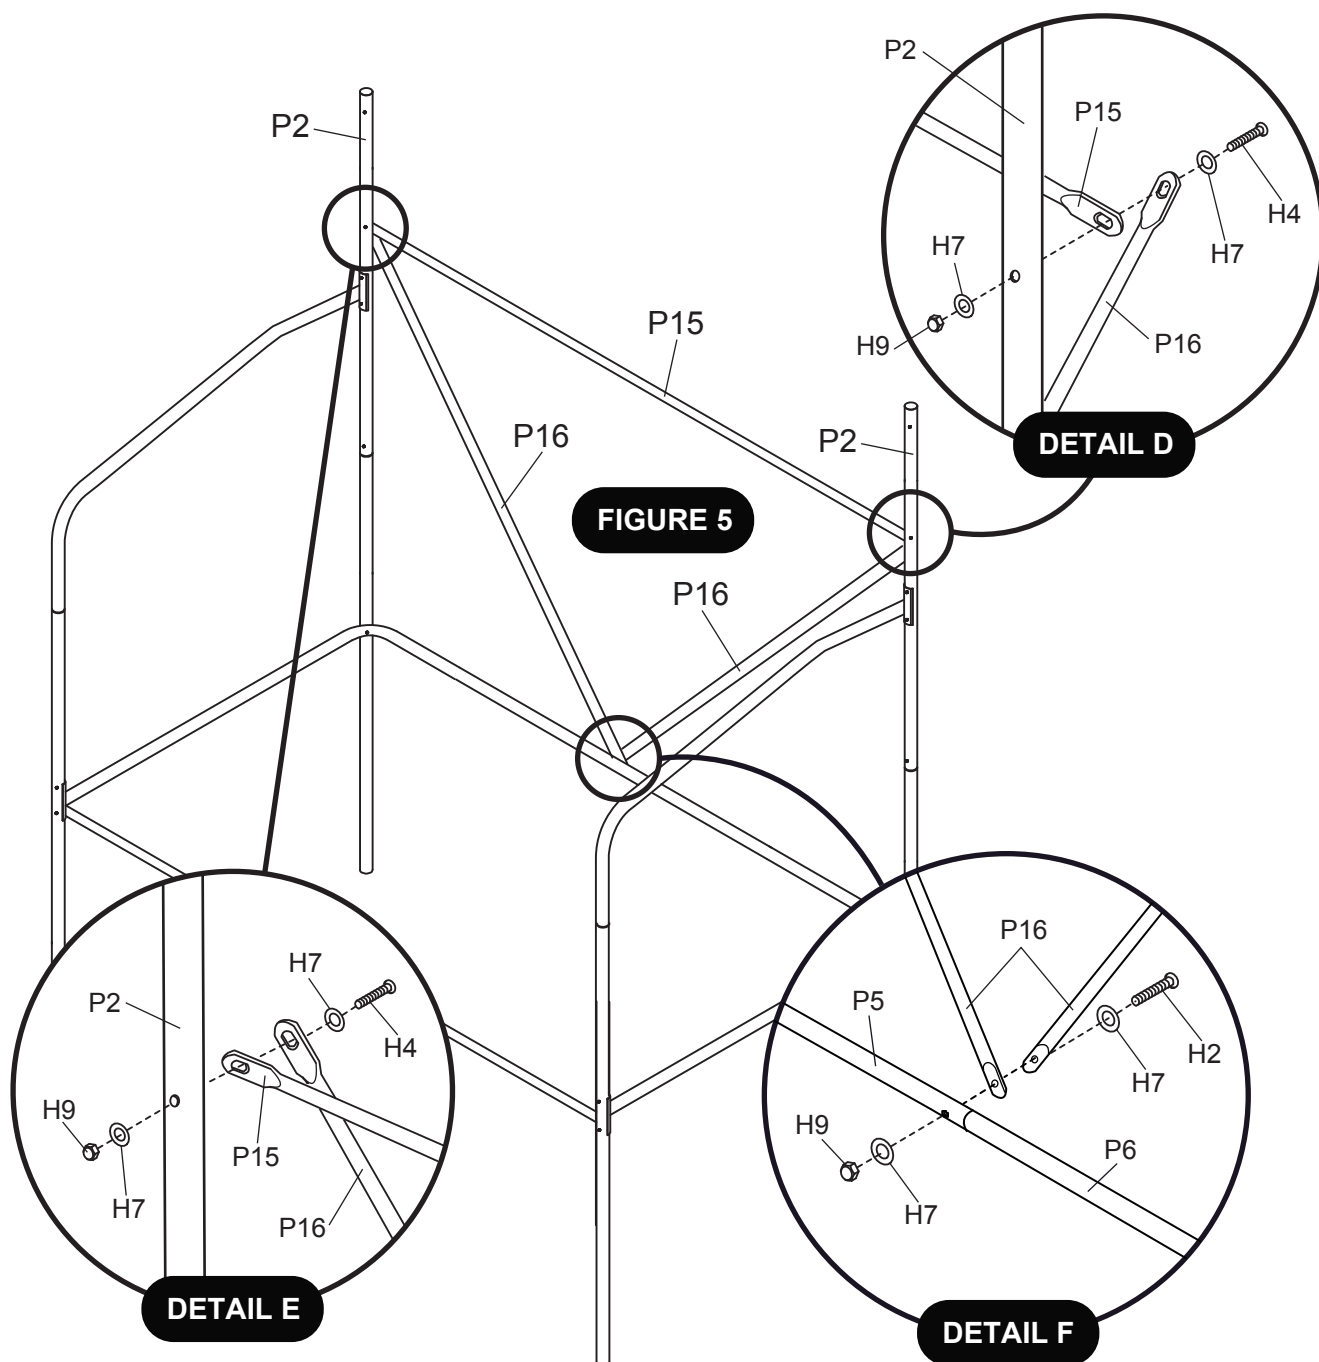

PARTS REQUIRED:


2 pcs - **P1 Upper Tube**
2 pcs - **P13 Base Upright Tube**
1 pc - **P14 Front U-Tube**

STEP 6

Attach **P1 - Upper Tubes** to **P2 - Middle Back Upright Tubes** as shown in **FIGURE 6**.

Attach **P13 - Base Upright Tubes** to **P14 - Front U-Tube** as shown in **FIGURE 6**.

FIGURE 6

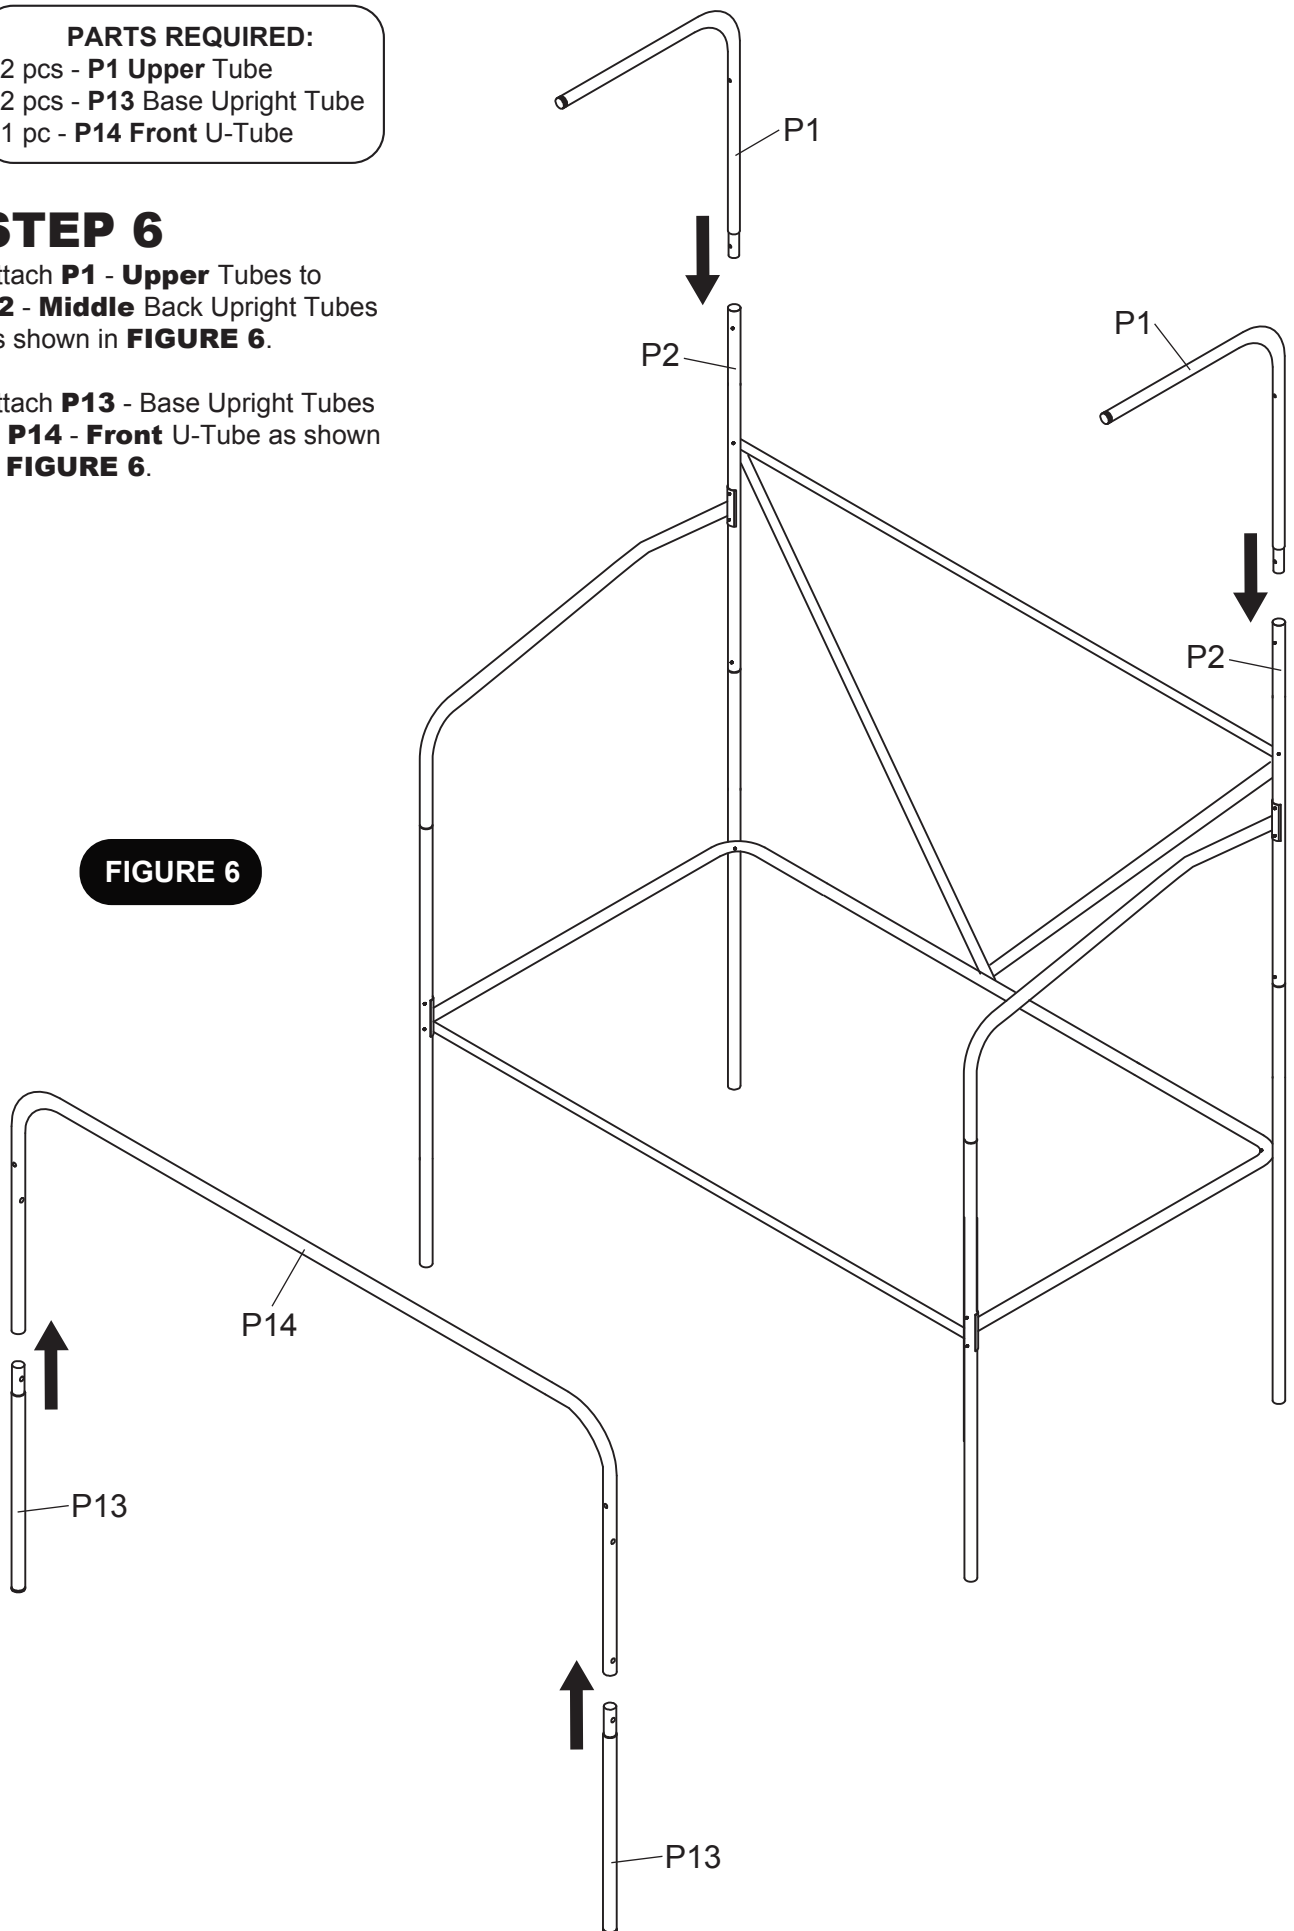

PARTS REQUIRED:

4 pcs - **H6** M6 x 75 mm Allen Head Bolt
6 pcs - **H7** Flat Washer
4 pcs - **H9** Lock Nut


4 pcs - **H10** Plastic Bushing
2 pcs - **P25** Locking Pin
1 pc - **T1** Allen Wrench
1 pc - **T2** Wrench

STEP 7

Attach **P9/P12** assembly tube and **P10/P12** assembly tube from **STEP 3** to **P8 - Front Upright Tubes** using **H6** Bolts, **P25** Locking Pins, **H10** Plastic Bushings, **H7** Flat Washers and **H9** Lock Nuts as shown in **FIGURE 7, DETAIL G** and **DETAIL H**.

Attach **P11/P12** assembly tubes from **STEP 3** to **P8 - Front Upright Tubes** using **H6** Bolts, **H7** Flat Washers, **H10** Plastic Bushing and **H9** Lock Nuts as shown in **FIGURE 7, DETAIL G** and **DETAIL H**.

Note: This is a pivot point. "Snug" tighten H9 Nuts only. Make sure this assembly pivots freely.

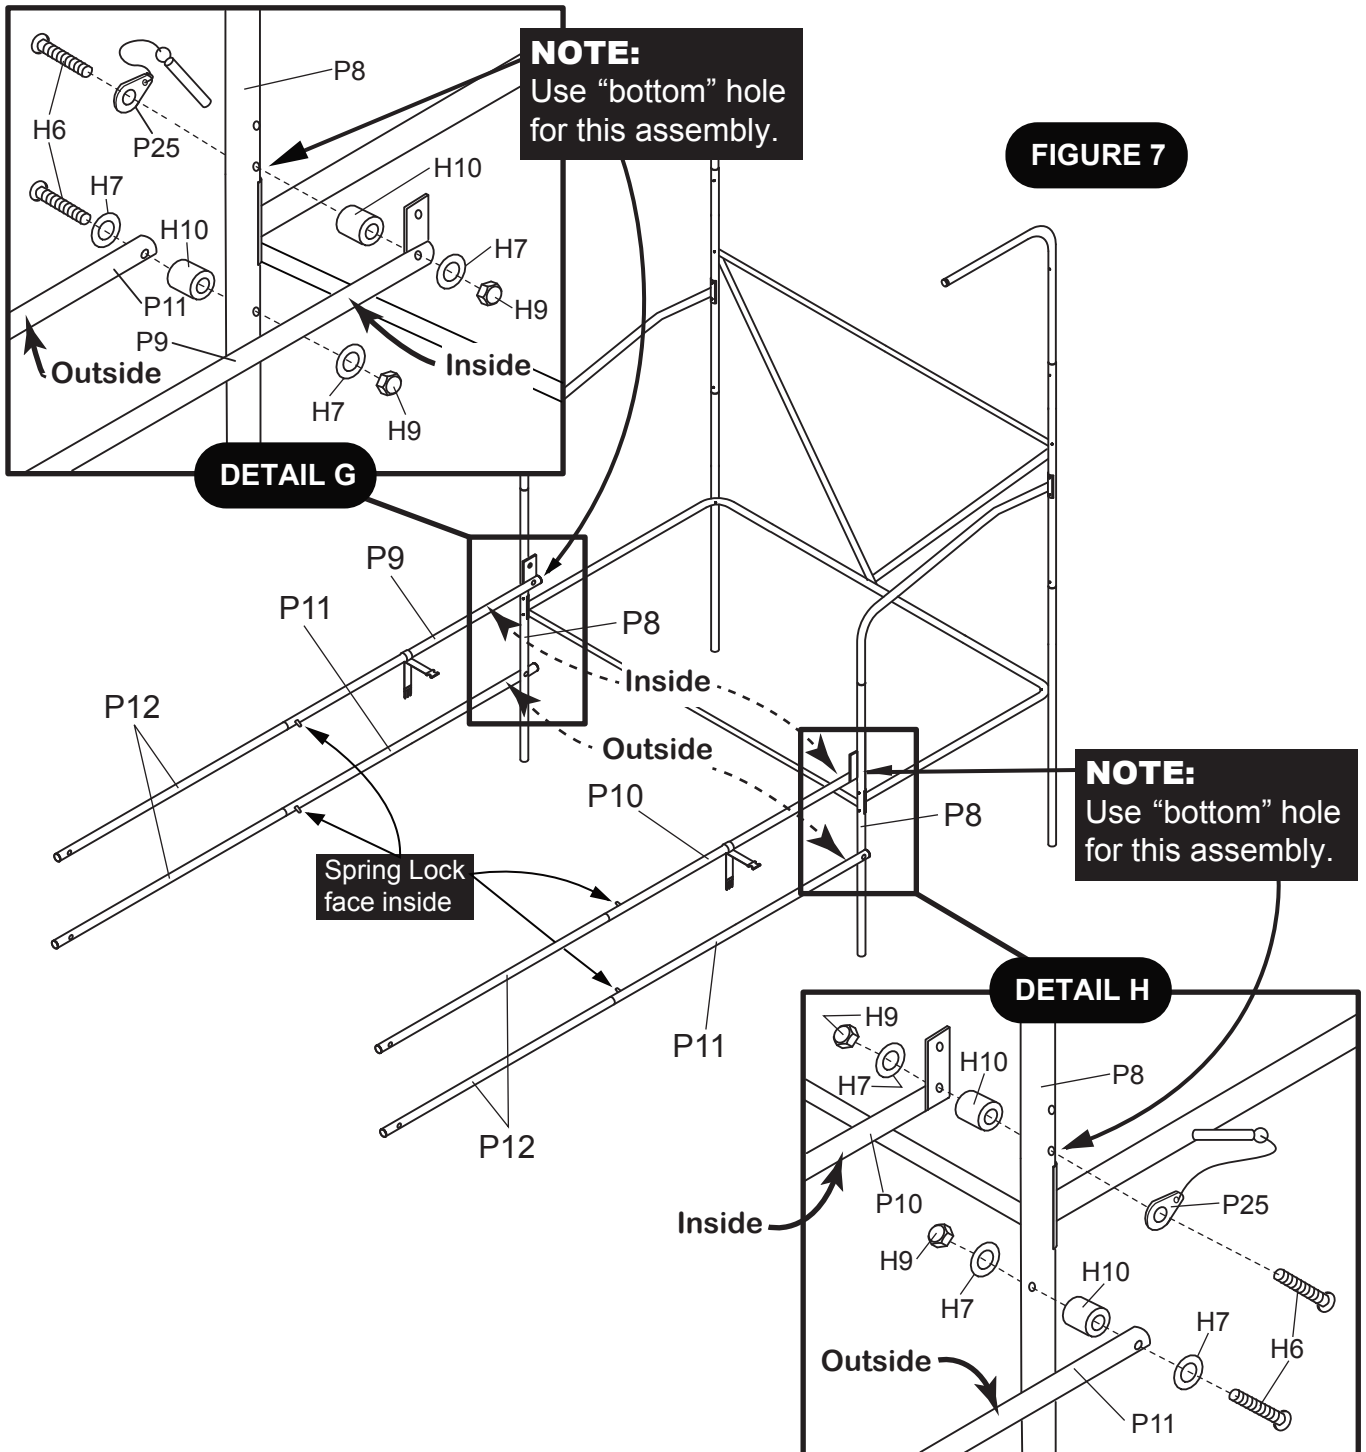

PARTS REQUIRED:

16 pcs - H1 M6 x 20 mm Allen Head Bolt	2 pcs - P18 Rim
24 pcs - H7 Flat Washer	2 pcs - P20 Rim Support Plate
8 pcs - H8 Plastic Flat Washer	2 pcs - P23 Mechanical Scoring Arm
16 pcs - H9 Lock Nut	1 pc - T1 Allen Wrench
1 pc - P17 Backboard	1 pc - T2 Wrench

STEP 8

Attach **P18** Rims and **P20** Rim Support Plates to the **P17** Backboard using **H1** Bolts, **H7** Washers and **H9** Lock Nuts as shown in **FIGURE 8**.


Attach **P23** Mechanical Scoring Arms to **P17** Backboard using **H1** Bolts, **H7** Washers, **H8** Plastic Washers and **H9** Lock Nuts as shown in **FIGURE 8**.

Use **T1** Allen Wrench and **T2** Wrench to tighten **H1** Bolts & **H9** Nuts.

NOTE:

P23 Mechanical Scoring Arm sensor plug must pass through **P17** Backboard before attaching the scoring arm.

NOTE: Use **H8** Plastic Flat Washers for **P23** Scoring arm only.

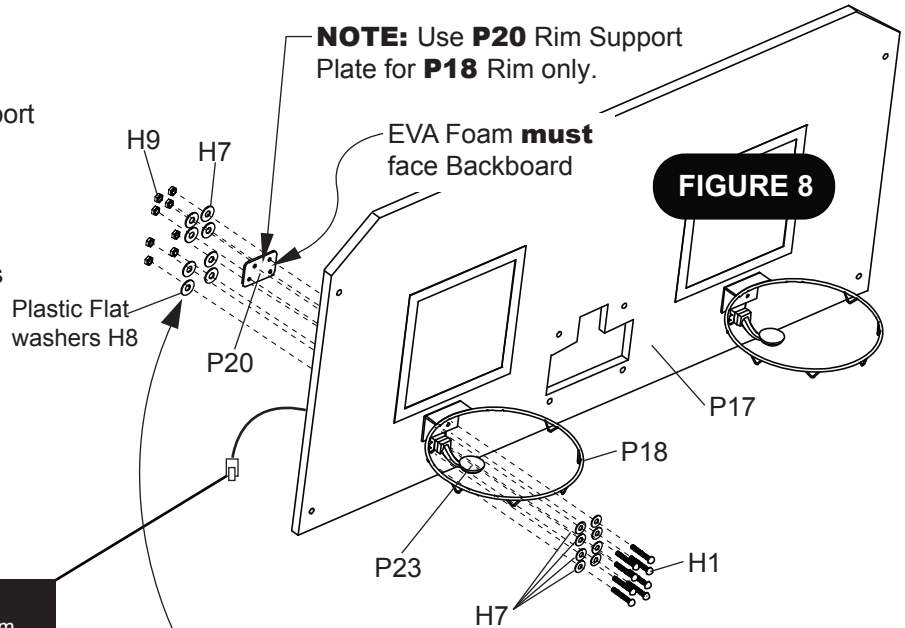

PARTS REQUIRED:

4 pcs - H11 3.5 x 8 mm Phillips Round Head Bolt
2 pcs - P19 Rim Net
1 pc - P21 Electronic Scorer Display
1 pc - P22 Electronic Scorer Face Plate

STEP 9

Attach **P21** Electronic Scorer Display and **P22** Electronic Scorer Face Plate to **P17** Backboard using **H11** Bolts as shown in **FIGURE 9**.

DO NOT Strip out **H11** Screws.

Loop the **P19** Rim Net through the ram horns on the **P18** Rims as shown in **FIGURE 9**.

Net does have a top and bottom, The long loops go to the top

Note: This is a special rim & net designed to avoid entanglement with the mechanical scoring arm.




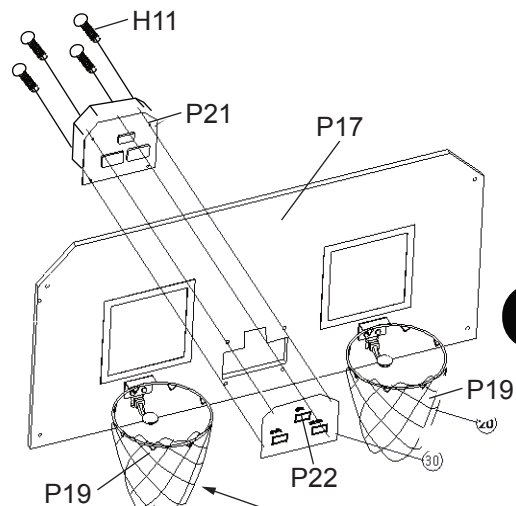


FIGURE 9

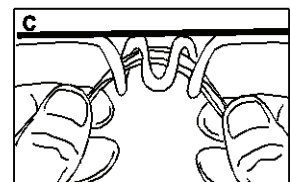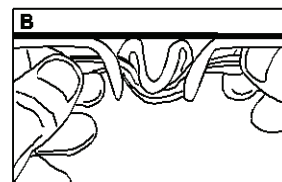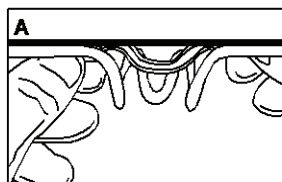

PARTS REQUIRED:

2 pcs - **H3** M6 x 45 mm Allen Head Bolt
4 pcs - **H6** M6 x 75 mm Allen Head Bolt
12 pcs - **H7** Flat Washer
6 pcs - **H9** Lock Nut

4 pcs - **H10** Plastic Bushing
1 pc - **P15 Long** Support Tube
1 pc - **P24** Ramp Chute
1 pc - **T1** Allen Wrench
1 pc - **T2** Wrench

STEP 10


Slide elastic loop and sleeve of **P24** Ramp Chute onto the **P1 - Upper** Tube as shown in **FIGURE 10** and **DETAIL I**.

Slide **P13/14** Tube assembly into the front sleeve of **P24** Ramp Chute as shown in **FIGURE 10** and **DETAIL J**.

Attach **P9/P12**, **P10/P12** and **P11/P12** assembly tubes from **STEP 3** to **P14 - Front** U-Tubes using **H6** Bolts, **H7** Flat Washers, **H10** Plastic Bushings and **H9** Lock Nuts as shown in **FIGURE 10** and **DETAIL K**.
Note: This is a pivot point. "Snug" tighten H9 Nuts only. Make sure this assembly pivots freely.

Place **P15 Long** Support Tube over the front sleeve of **P24** Ramp Chute and attach to **P14 - Front** U-Tubes using **H3** Bolts, **H7** Flat Washers and **H9** Lock Nuts as shown in **FIGURE 10** and **DETAIL L**.

Use T1 Allen Wrench and T2 Wrench to tighten H4 Bolts & H9 Nuts.

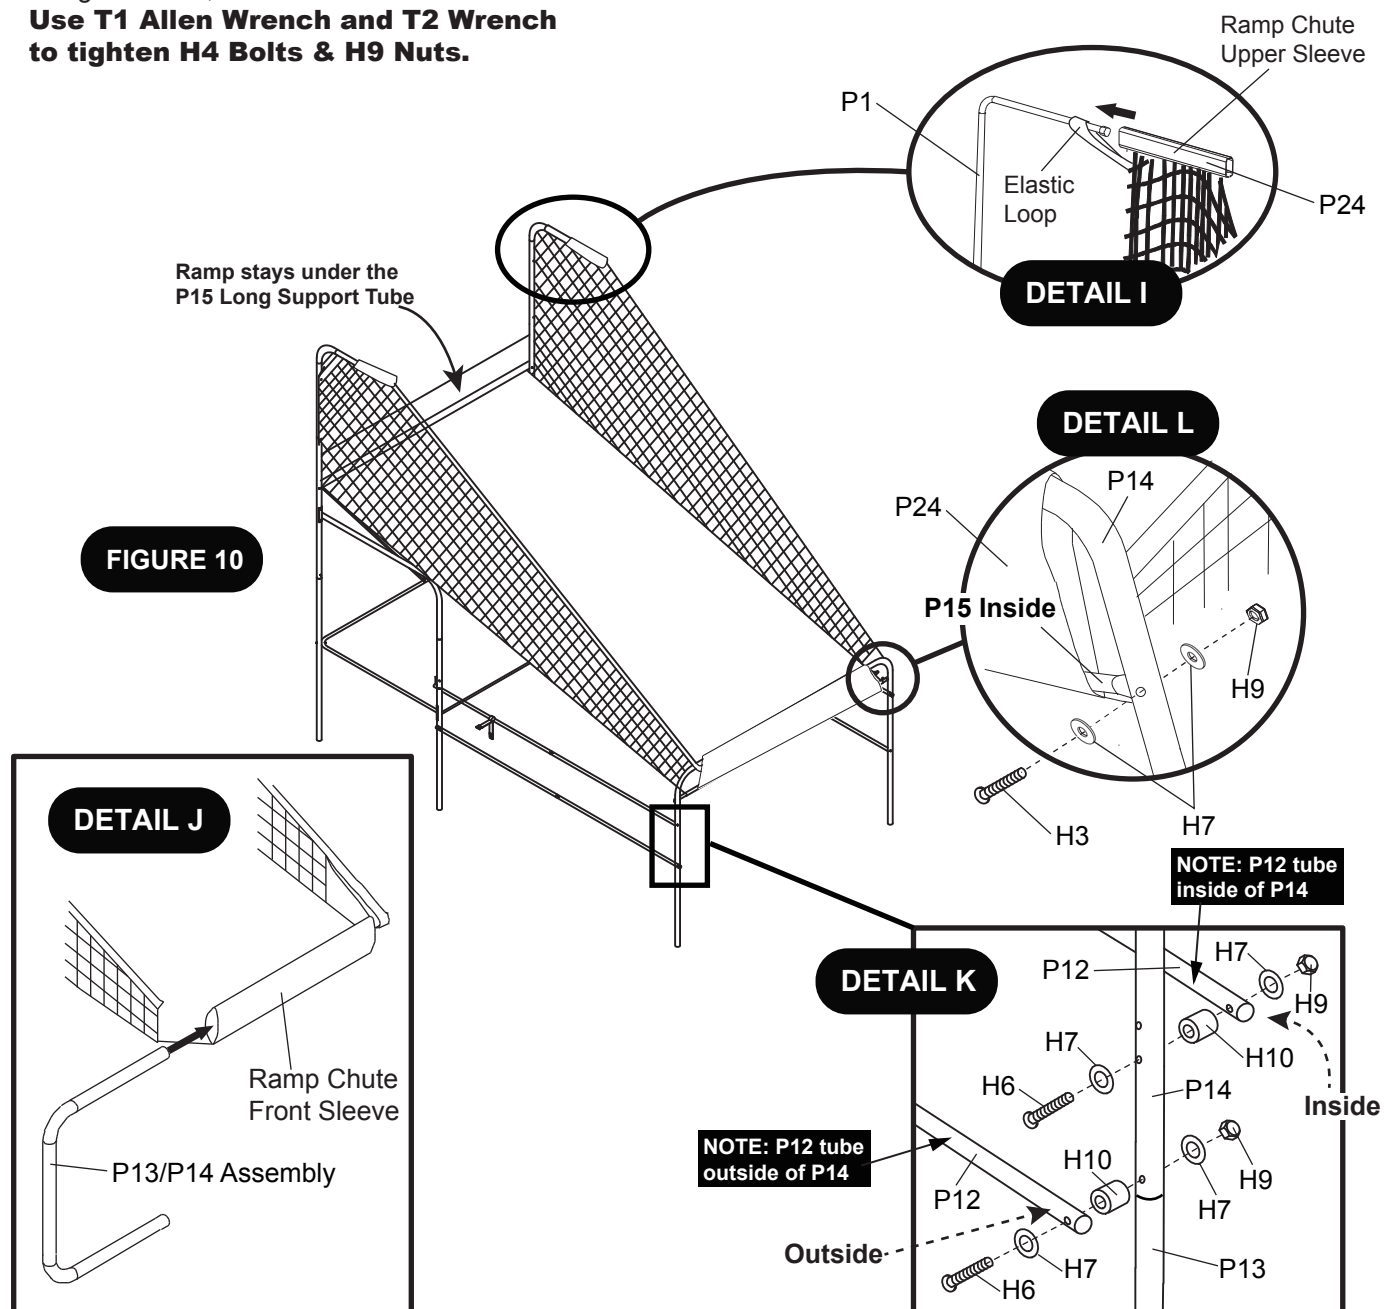

PARTS REQUIRED:

4 pcs - **H5** M6 x 70 mm Allen Head Bolt
2 pcs - **H7** Flat Washer
6 pcs - **H8** Plastic Flat Washer


4 pcs - **H9** Lock Nut
1 pc - **T1** Allen Wrench
1 pc - **T2** Wrench

STEP 11

With the help of another adult, Attach **P17** Backboard to **P1** - **Upper** Tube using **H5** Bolts, **H8** Plastic Washers, **H7** Flat Washers and **H9** Lock Nuts as shown in **FIGURE 11** and **DETAIL M**.

At each bottom hole of the backboard, attach ramp tabs of **P24** Ramp Chute using **H5** Bolts, **H8** Plastic Washers, and **H9** Lock Nuts as shown in **FIGURE 11** and **DETAIL N**.

Use T1 Allen Wrench and T2 Wrench to tighten H5 Bolts & H9 Nuts.

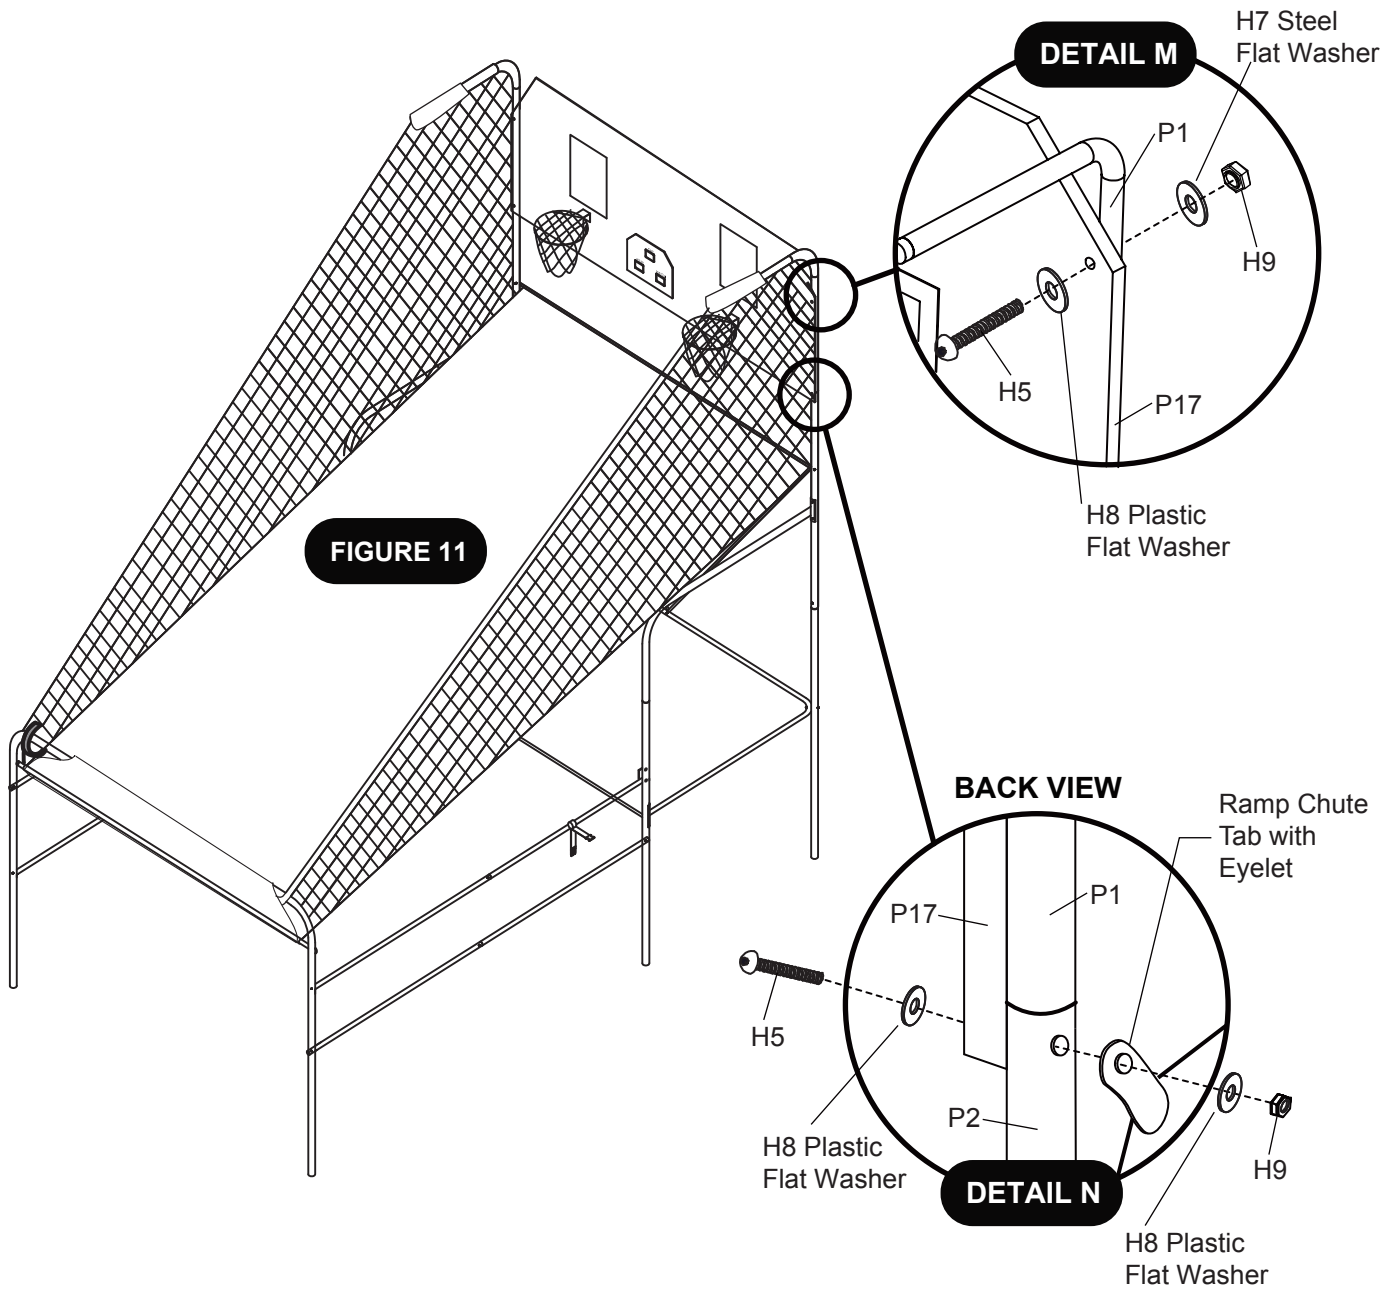


STEP 12

Connect **P23** Mechanical Scoring Arm sensor wires to **P21** Electronic Scorer as shown in **FIGURE 12**. Secure Elastic Loops from **P24** Ramp Chute to the back of **P17** Backboard as shown in **FIGURE 12**.


Insert 3(three) pieces “AA” batteries at the backside of electronic scoreboard.
Plug the mechanical scoring arm plug into backside of the electronic scoreboard.
Press on/off button at the bottom backside of the electronic scoreboard to play and stop the game.
Turn off **P21** Electronic Scorer when not in use.

See” **FIRST TIME BATTERY INSTALLATION AND NOTICE** “ , before installing batteries, located on **page 17**

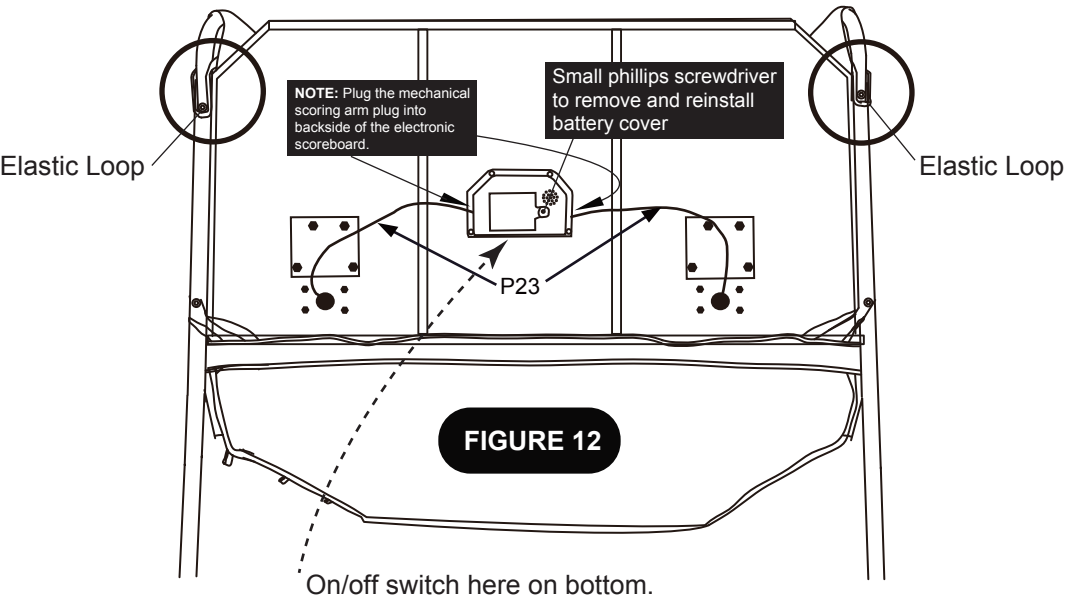

FOLDING THE BASKETBALL DOUBLE SHOOTOUT

First remove **P25** Locking Pin, then attach the Safety Straps (Pre-installed) together to prevent the sides from falling. Repeat procedure for the other side.

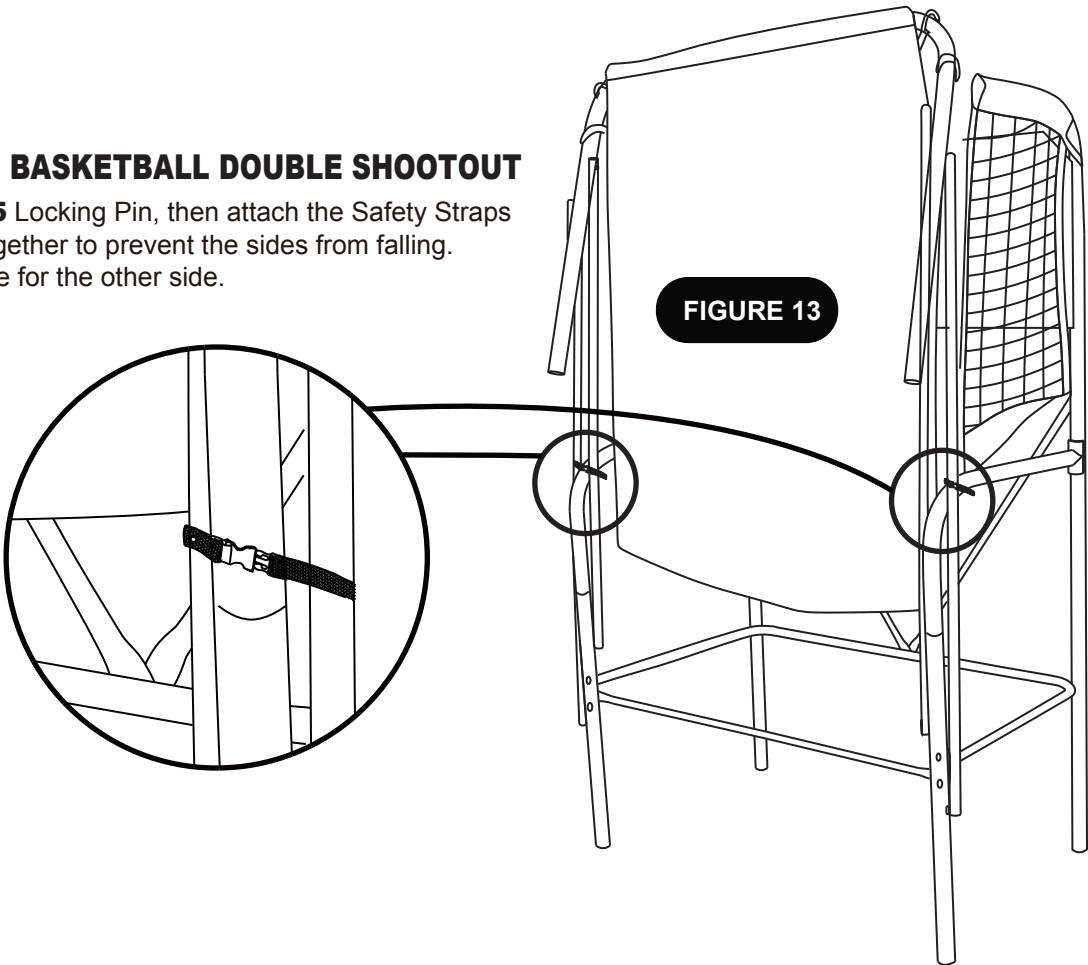

Congratulations! You have now assembled your Double Shootout.
Please note the Care and Use instructions below.

CARE AND USE OF YOUR SHOOTOUT

1. Product can be used **OUTDOORS** - but must be stored **INDOORS**.
2. **DO NOT** sit, climb or lean on the unit.
3. **DO NOT** drag the unit when moving it, This will damage the legs.
4. **DO NOT** place backside of this product against wall as during play, the backside of product could become damaged or your wall could become damaged.

USE OF YOUR SHOOTOUT

Insert 3(three) pieces "AA" batteries at the backside of electronic scoreboard.

Plug the mechanical scoring arm plug into backside of the electronic scoreboard.

Press on/off button at the bottom backside of the electronic scoreboard to play and stop the game.

PRODUCT PARTS LIST

M01483

KEY	PARTS	DESCRIPTIONS	QTY
H1	01483GRH1	M6 x 20 mm Allen Head Bolt	16
H2	01483GRH2	M6 x 35 mm Allen Head Bolt	1
H3	01483GRH3	M6 x 45 mm Allen Head Bolt	2
H4	01483GRH4	M6 x 50 mm Allen Head Bolt	10
H5	01483GRH5	M6 x 70 mm Allen Head Bolt	6
H6	01483GRH6	M6 x 75 mm Allen Head Bolt	8
H7	01483GRH7	M6 Flat Washer	70
H8	01483GRH8	M6 Plastic Flat Washer	14
H9	01483GRH9	M6 Lock Nut	43
H10	01483GRH10	Plastic Bushing	8
H11	01483GRH11	3.5 mm x 8 mm Phillips Round Head Bolt	4
T1	01483GRT1	Allen Wrench	1
T2	01483GRT2	Wrench	1
A1	01483GRA1	Air Pump with Needle	1
A2	01483GRA2	Basketball	4
P1	01483GRP1	Upper Tube	2
P2	01483GRP2	Middle Back Upright Tube	2
P3	01483GRP3	Left Lower Back Upright Tube	1
P4	01483GRP4	Right Lower Back Upright Tube	1
P5	01483GRP5	Left Back Bottom Support Tube	1
P6	01483GRP6	Right Back Bottom Support Tube	1
P7	01483GRP7	Front Support Tube	2
P8	01483GRP8	Front Upright Tube	2
P9	01483GRP9	Left Top Connect Tube	1
P10	01483GRP10	Right Top Connect Tube	1
P11	01483GRP11	Bottom Connect Tube	2
P12	01483GRP12	Connect Tube	4
P13	01483GRP13	Base Upright Tube	2
P14	01483GRP14	Front U-Tube	1
P15	01483GRP15	Long Support Tube	3
P16	01483GRP16	Short Support Tube	1
P17	01483GRP17	PC Backboard	1
P18	01483GRP18	Rim	2
P19	01483GRP19	Rim Net	2
P20	01483GRP20	Rim Support Plate	2
P21	01483GRP21	Electronic Scorer Display	1
P22	01483GRP22	Electronic Scorer Face Plate	1
P23	01483GRP23	Mechanical Scoring Arm	2
P24	01483GRP24	Ramp Chute	1
P25	01483GRP25	Locking Pin	2
C1	01483GRC1	Safety Strap (Pre-Installed)	2
K1	01483GRK1	Hardware Kit	1
M1	01483GRM1	Owner's Manual	1

First Time Battery Installation:

Locate battery compartment for this product .

Use alkaline batteries for maximum performance .

Using a small Philips head screwdriver – loosen and remove the battery compartment cover screw(s).

Remove battery compartment cover .

Install new batteries only after reading the “ Battery Information NOTICE“ !

Replace compartment cover and secure cover with the cover screw . Do not over tighten and strip out the screw .

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries must be installed / replaced by an adult .

Notice:

1. Remove and replace batteries when the electrical features of this product work slowly or are not functional .
2. Do not mix old and new batteries .
3. Do not mix different types of batteries : Alkaline , Standard (Carbon-Zinc) , or rechargeable (Nickel-Cadmium batteries) .
4. Use Alkaline Batteries for maximum performance .
5. Do not use damaged batteries .
6. Use only batteries of the same or equivalent type as recommended.
7. Install new batteries as per matching the battery polarity guide (+ & - , positive and negative) inside of the battery compartment . Correct battery polarity installation is critical as to not damage the internal electrical components as well as insuring the correct functionality of the product .
8. Do not short circuit the battery terminals .
9. Always remove exhausted , leaking, weak , and batteries from long periods of nonuse from the product . Battery leakage and corrosion can cause damage .
10. Check the battery terminals are clean and bright before installing new batteries.
11. Dispose of old batteries safely and per local battery disposal codes .
12. Do not dispose of batteries into a fire as they may explode or leak.
13. If removable rechargeable batteries are used , they are to be charged under adult supervision .
14. Rechargeable batteries are to removed from the product before they are charged .
15. If you use a battery charger, it should be examined regularly for damage to the cord , plug, enclosure, and other parts. Do not use a damaged or malfunctioning charger until it is properly repaired.
16. Non rechargeable batteries must not be recharged .
17. Always remove batteries from this product for extended storage and or non-use .
18. Should this product cause , or be affected by, local electrical interference , move it away from other electrical equipment . Reset (switching off and back on again and or removing and reinserting the batteries) if necessary .

90 DAY LIMITED WARRANTY

This consumer warranty extends to the original consumer purchase of any ESCALADESPORTS Product (hereinafter referred as the "Product").

WARRANTY DURATION: This Product is warranted to the original consumer purchase of a period of 90 days from the original purchase.

WARRANTY COVERAGE: ESCALADE SPORTS warrants to the original Consumer Purchaser that any Product of its manufacture is free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

WARRANTY PERFORMANCE: During the above 90 day warranty period, ESCALADESPORTS shall repair or replace with a comparable model, and Product, or component thereof, which may prove defective under normal use and proper care, and which our examination shall disclose to our satisfaction to be thus defective, please contact our Warranty Dept.

1-888-996-2729 / Warranty Dept.

Or Write us at:

Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706

Attn: Warranty Dept.

Or E-mail us at:

gameroom@escaladesports.com

Other than shipping requirements no charge will be made for such repair or replacement of in-warranty Products. ESCALADE SPORTS strongly recommends that the Product is insured for value prior to mailing.

WARRANTY DISCLAIMERS: ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE 90 DAY PERIOD. ESCALADE SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.