 


TV Stand

Assembly Instruction – Please keep properly for future reference.

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

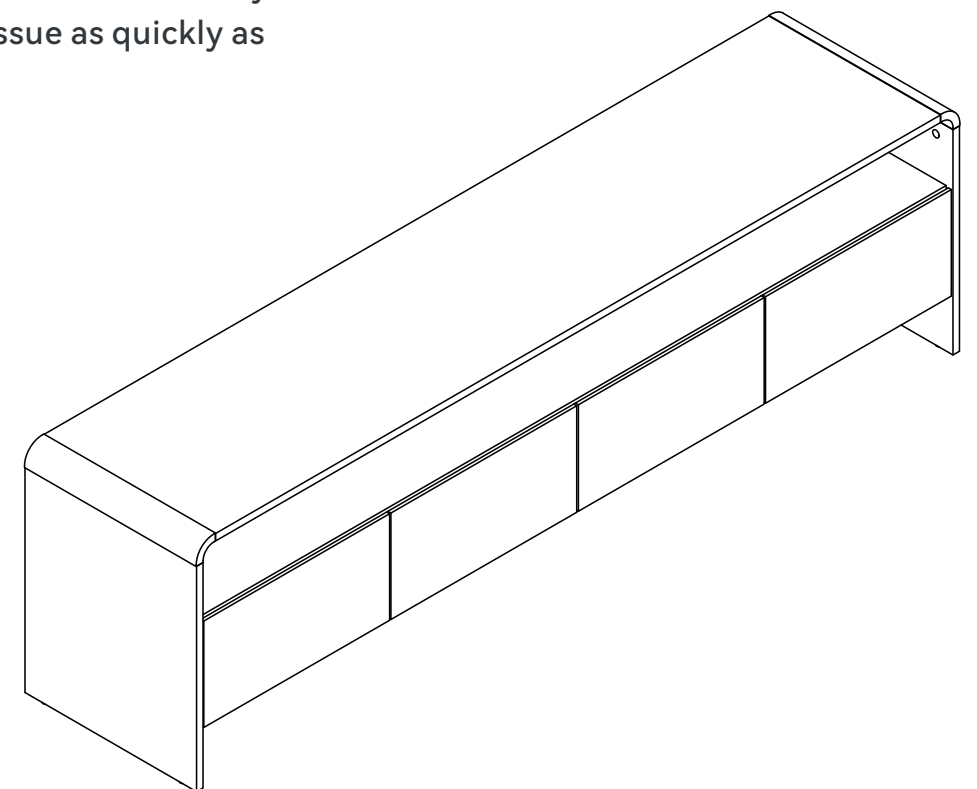

THE FOLLOWING INFORMATION:

- Order number
- Purchase platform
- Purchase date
- Detailed description of the issue along with photos (if applicable)

Important – Please read these instructions carefully before starting the installation.

Before Assembly



Thank you for choosing our product!

To ensure a smooth installation process, please read this guide carefully to familiarize yourself with the required tools, materials, and installation steps.

Follow the relevant sections to avoid any damage caused by improper installation, and make sure to review all operation and safety guidelines for correct installation procedures.

Packaging Notice:

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

Safety and Care Advice



Important :

Please read these instructions fully before starting assembly.

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and Maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal center.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightened properly.

Warning

In order to help prevent overturning, please follow these instructions.

- Use the anti tip strap or wall fixing method provided (if applicable).
- Do not allow children to climb or hang on the furniture.
- Do not open more than one drawer at a time.
- Do not place heavy items in the top drawers.
- Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose.
- Please note that only the anti tip strap is provided. You will need to provide wall plugs and screws applicable for your wall type.

Customer Service Guide



Thank you for choosing our product! We are committed to providing you with excellent service. If you find any missing parts, damaged packaging, or product damage after receiving all packages, please follow the steps below to quickly contact our customer service team. We will do our best to resolve your issue.

1. Missing Parts

Verify Parts:

1. Refer to the “Parts List” in the manual to verify the name, specifications, and quantity of the missing parts.
2. Take a clear photo of the parts list and mark the missing parts with detailed information, e.g., “Missing 5 pieces of M6×30mm screws.”

Contact Us:

The subject line “Missing Parts Issue.” Include the following in the email:

- A description of the missing parts and a photo of the parts list.
- Order details (order number, purchase platform, purchase date).

2. Product or Packaging Damage

If it affects normal use:

Steps:

1. Take clear photos or videos showing the damaged parts and the extent of the damage (multi-angle shots are recommended).
2. Email the photos/videos along with order details, with the subject line “Product Damage Issue.”

Resolution:

After verification, we will arrange for a replacement part, product exchange, or refund as quickly as possible.

If it does not affect normal use:

Steps:

1. Contact our customer service team.
2. Provide a description of the damage and include relevant photos or videos.

Resolution:

We will provide repair guidance or an appropriate compensation plan based on the specific situation.

Helpful Tips

To process your issue efficiently, please prepare the following information:

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
- Order details (order number, purchase platform, purchase date).
- Clear photos or videos.
- We are committed to providing quick and professional solutions, no matter the size of the issue, to ensure your satisfaction.

Thank you for your trust and support!
We hope you enjoy using our product!

Parts List - Panels





Please check you have all the panels listed below.

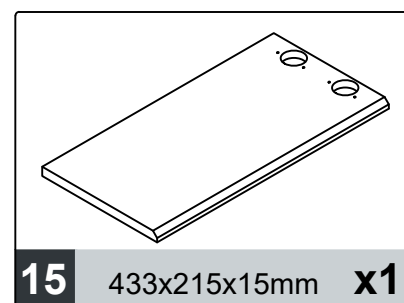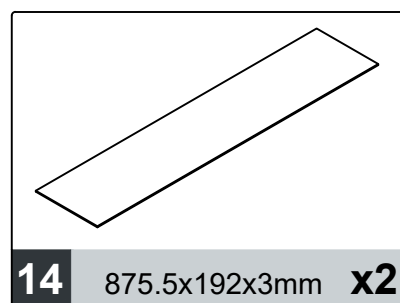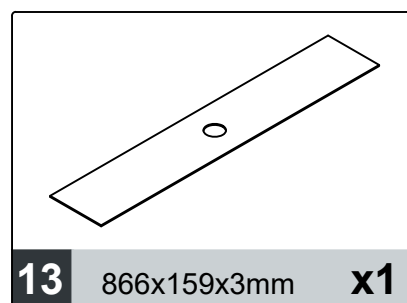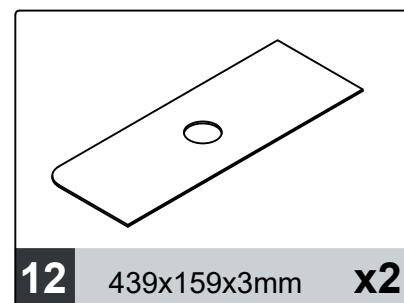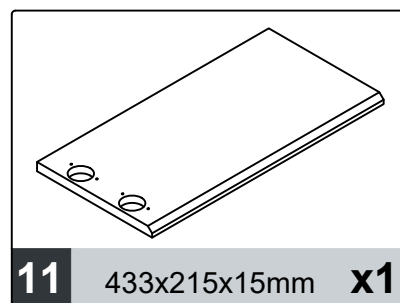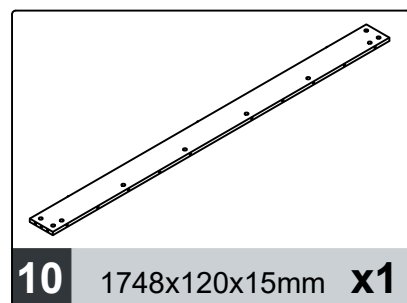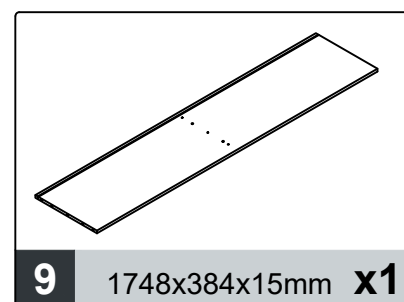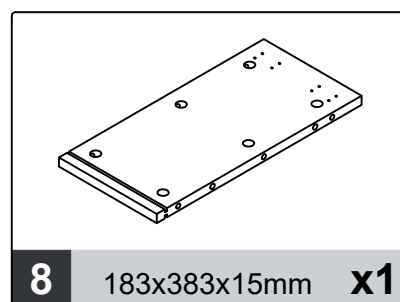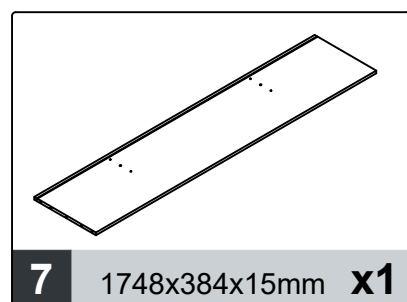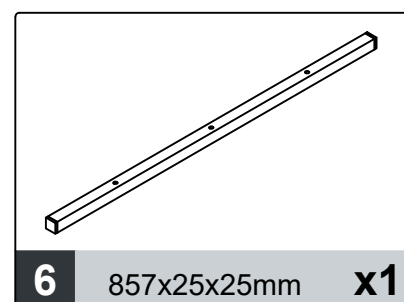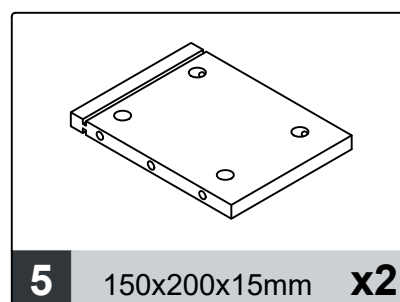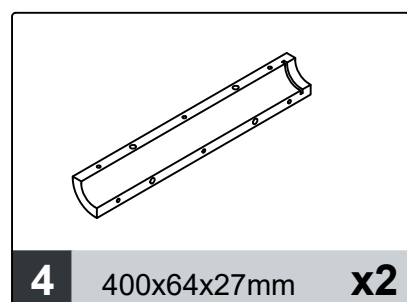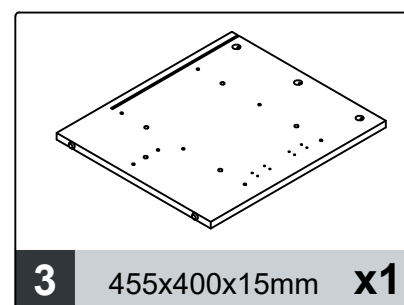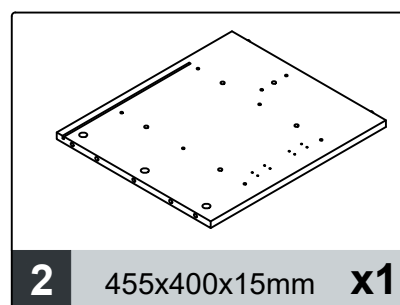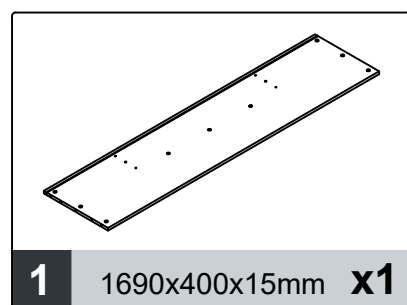

Parts List - Panels



  Please check you have all the panels listed below.








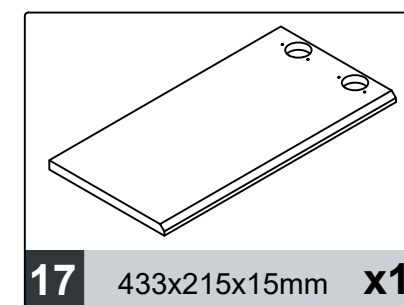
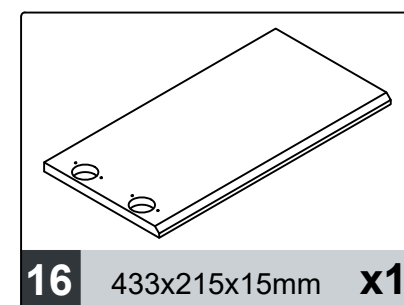


Parts List - Fittings




Please check you have all the fittings listed below.

         Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied are required.

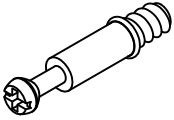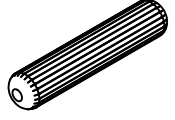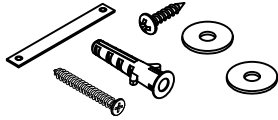
A  Ø15x9.5 48+3	B  Ø6.5x35 48+3	C  Ø8x30 30+3
D  Ø3.5x12 48+3	E  M6x35 3+1	F  Ø35 4
G  Ø35 4	H  Ø3x14 19+1	I  Ø21 48+3
J  Ø70x30x5 1	K  x2set	

Cam Lock Fastening System

 
Inset the cam bolt into the hole first, then inset the cam lock and lock it.

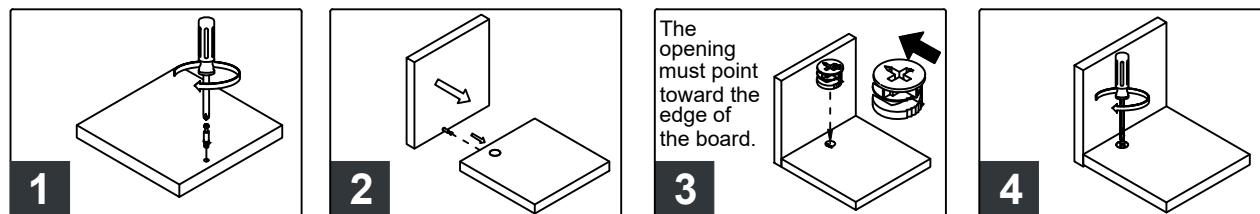

Assembly Instructions

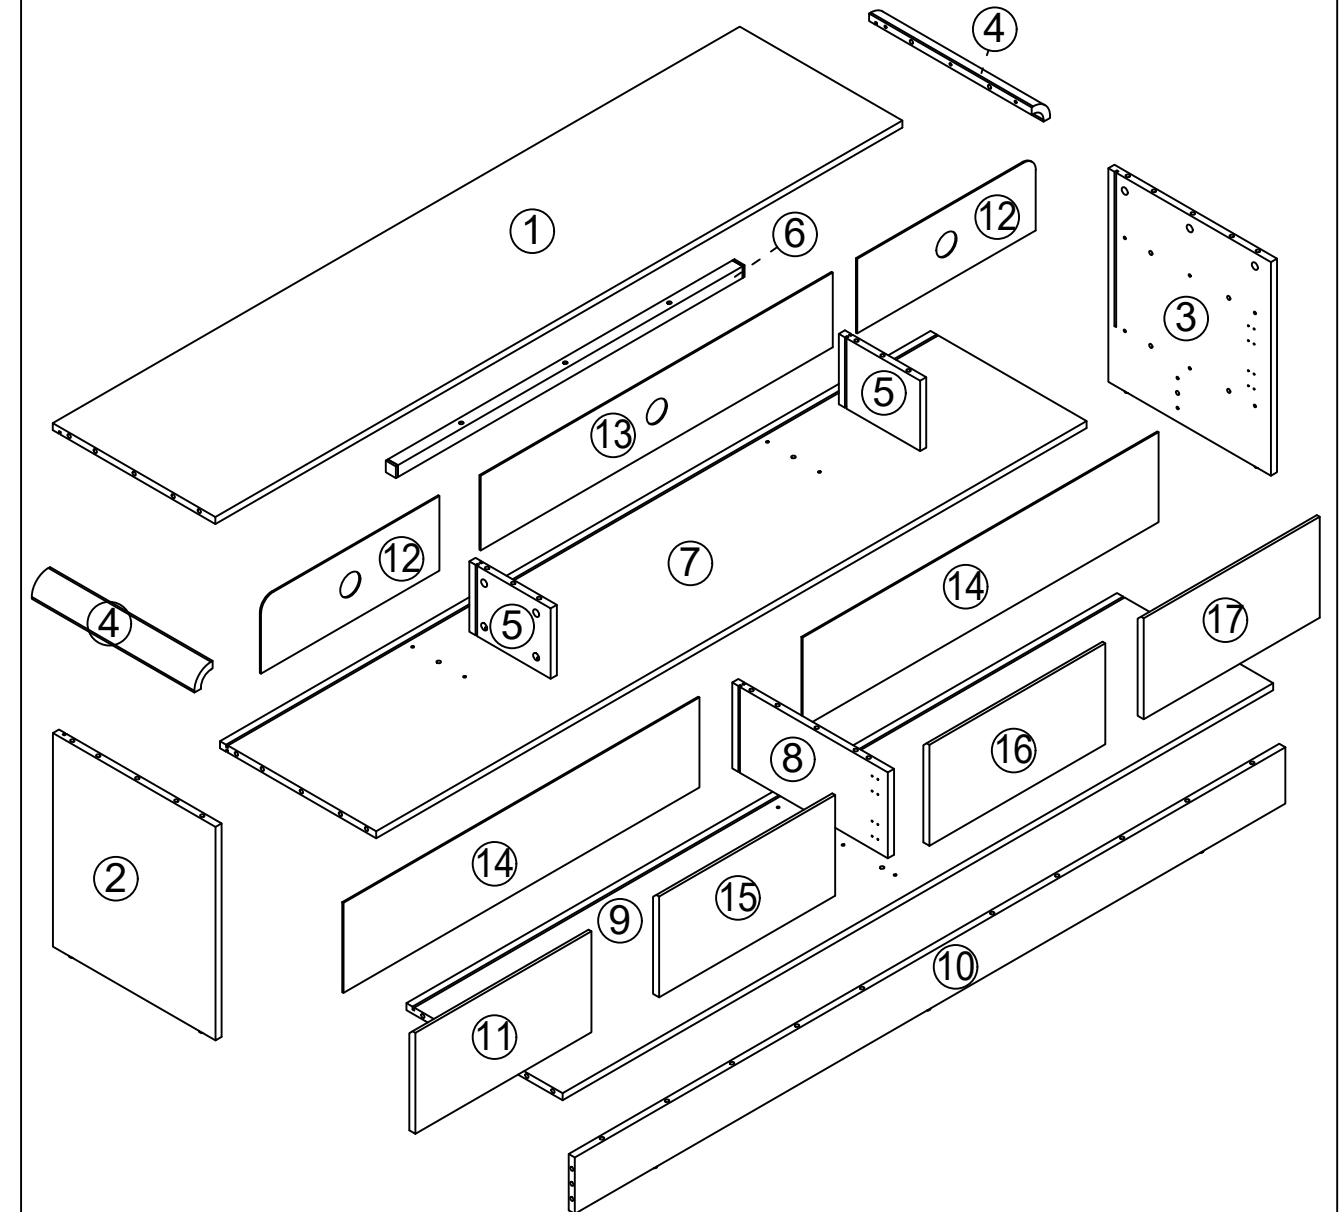 


 Step 1

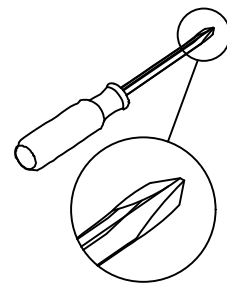


Fix accessory (B) onto panels (7) and (9).

(B)	X12
Ø6.5*35	

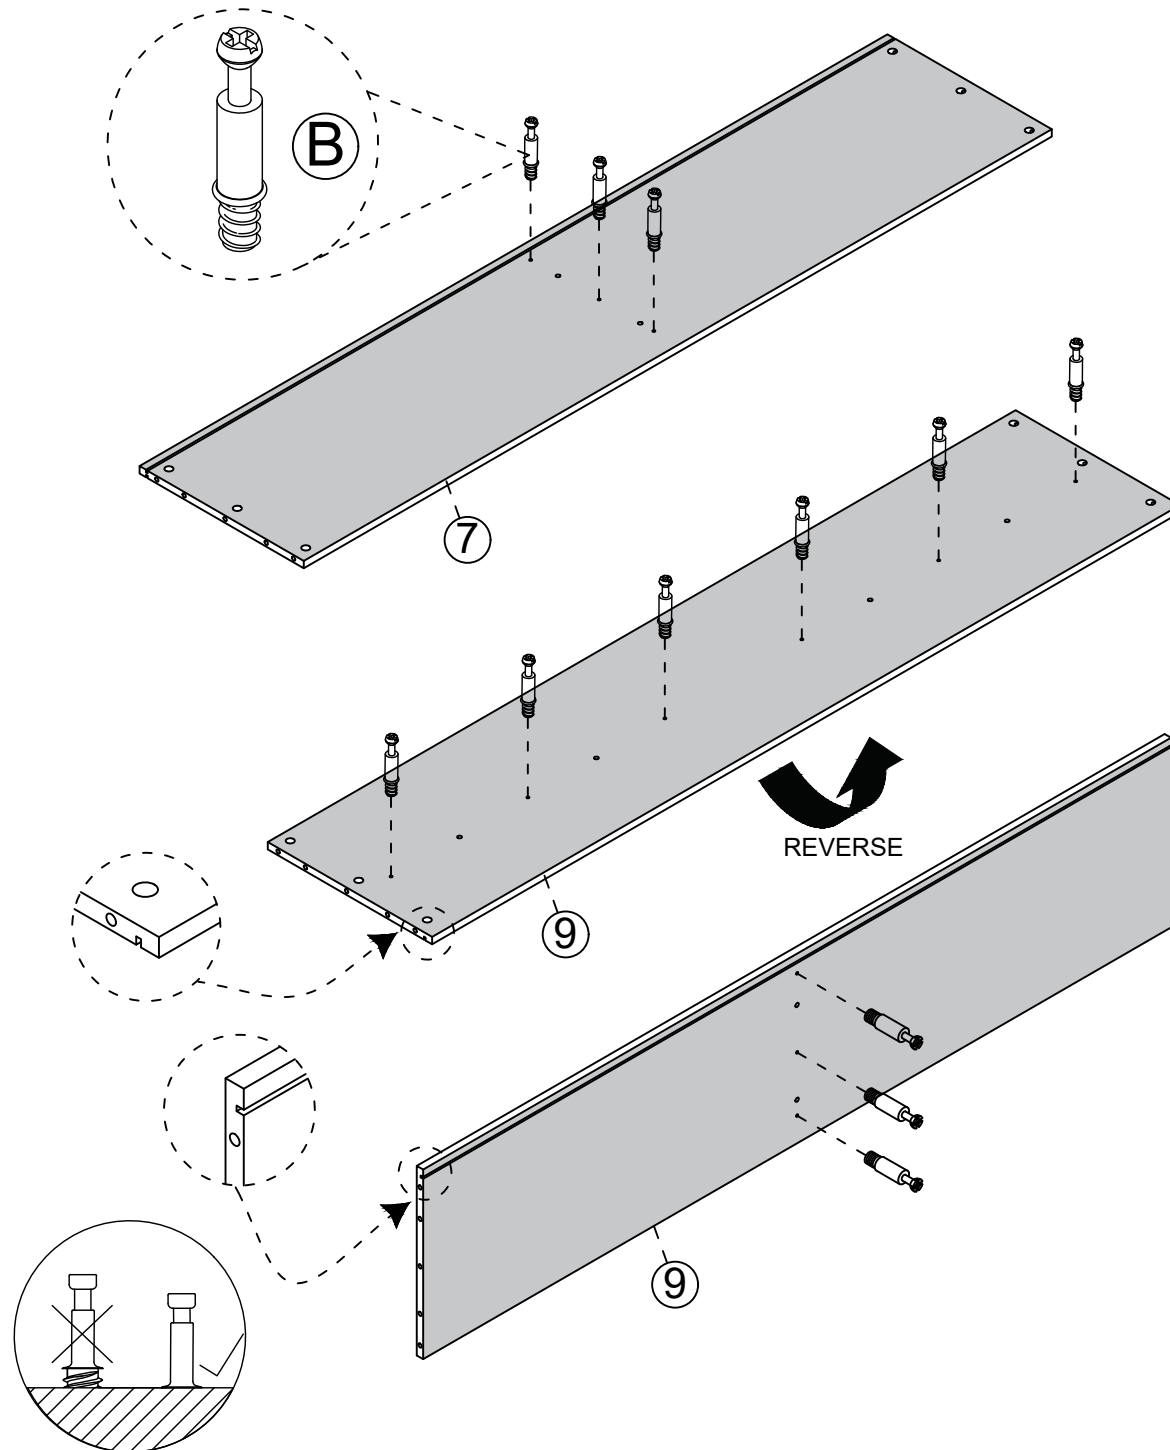 

 
Step 2

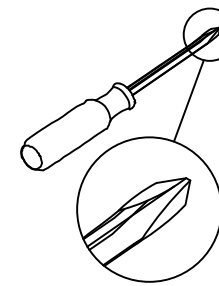




Insert accessory (C) into the holes of panel (8) to connect panels (7) and (9), then secure with accessory (A).

(A)	X6
Ø15*9.5	


(C)	X4
Ø8*30	

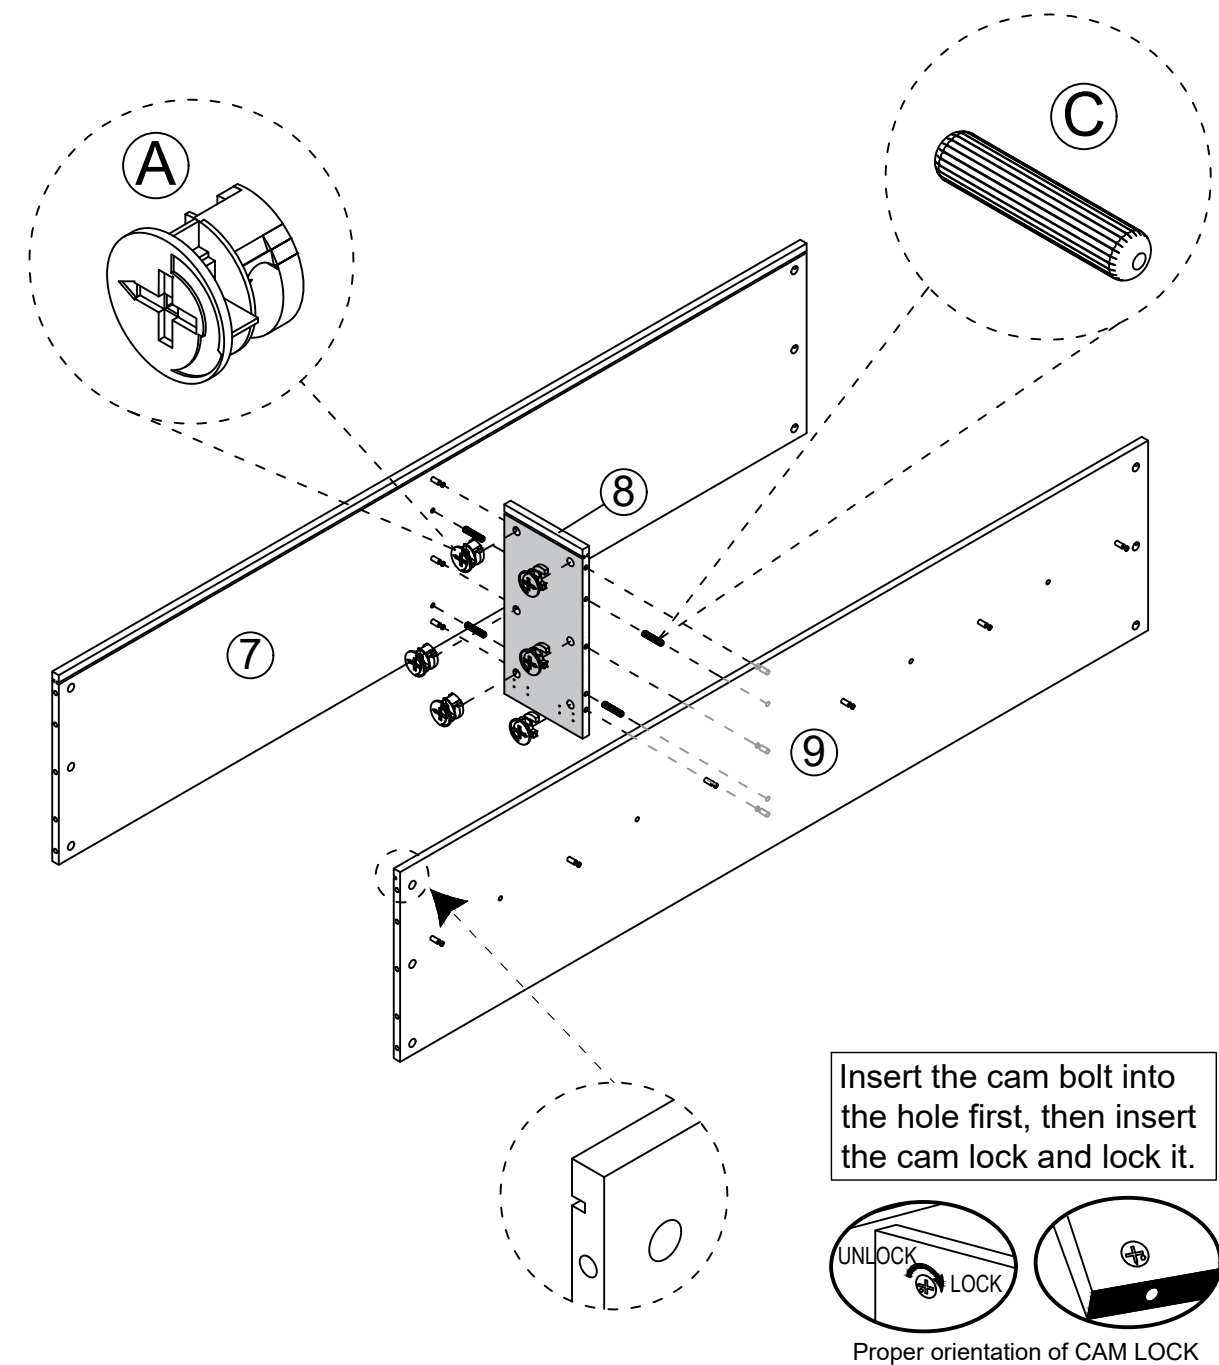 

   Step 3

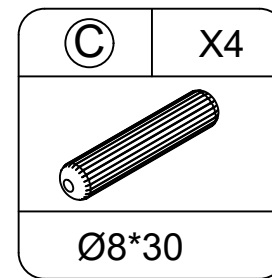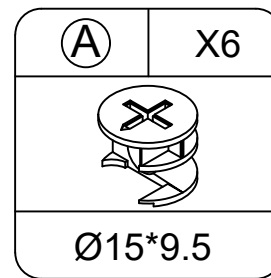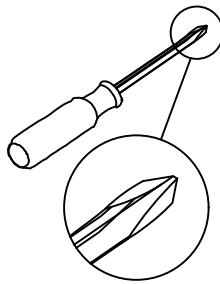


 Insert accessory (C) into the holes of panel (10) to connect to panel (9), then secure with accessory (A).


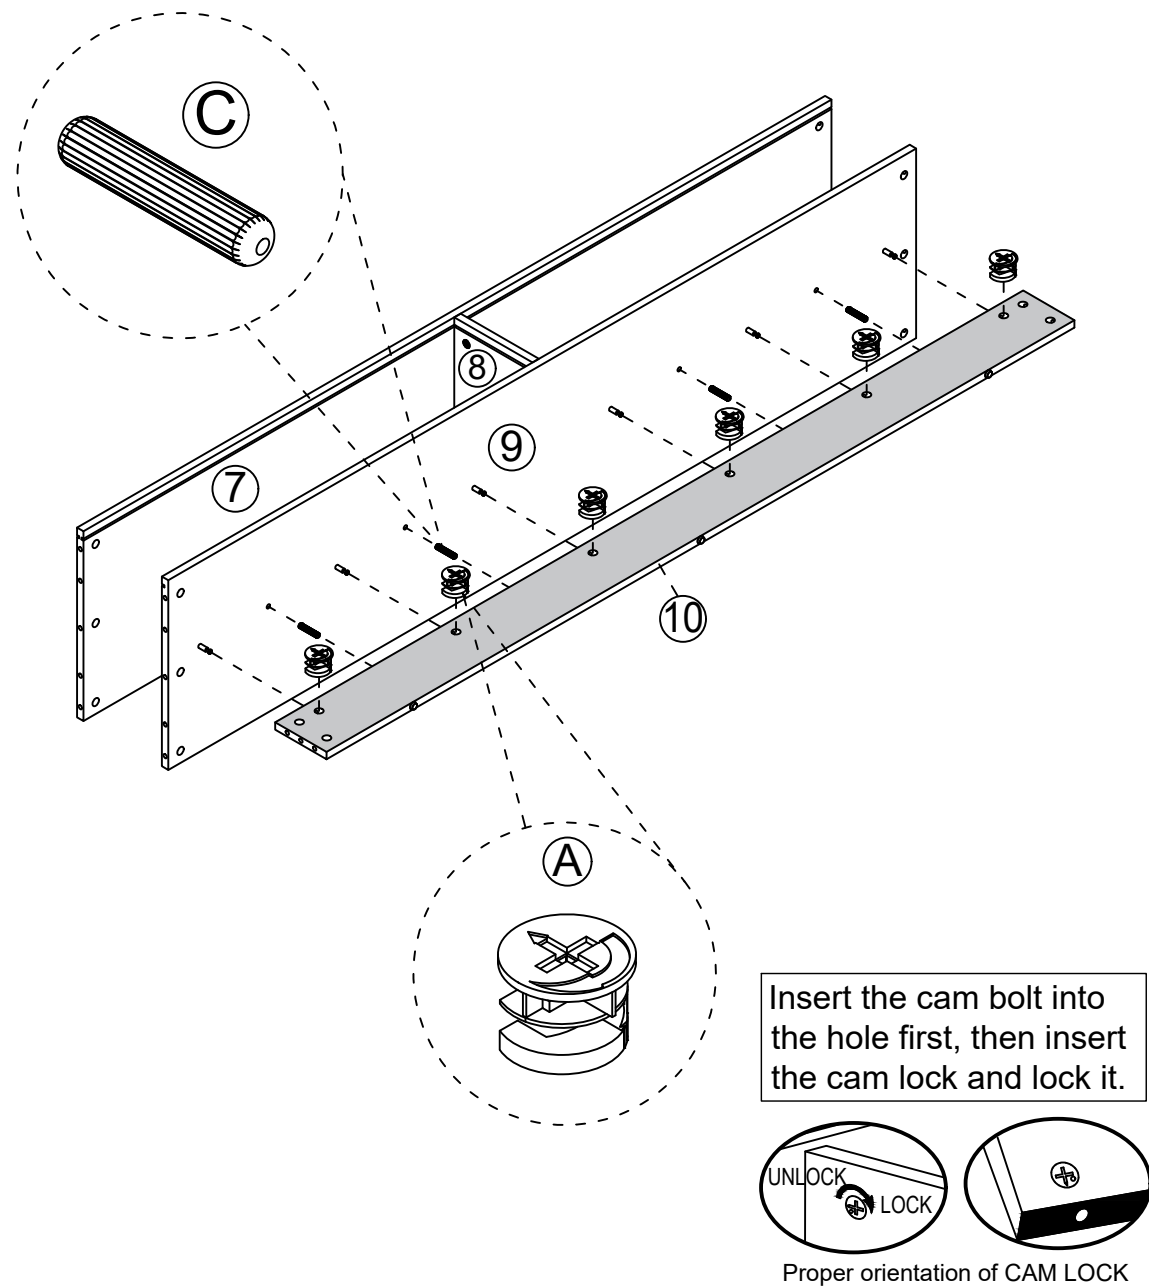


Step 4


 
Slide panel (14) along the grooves of panels (7) and (9).

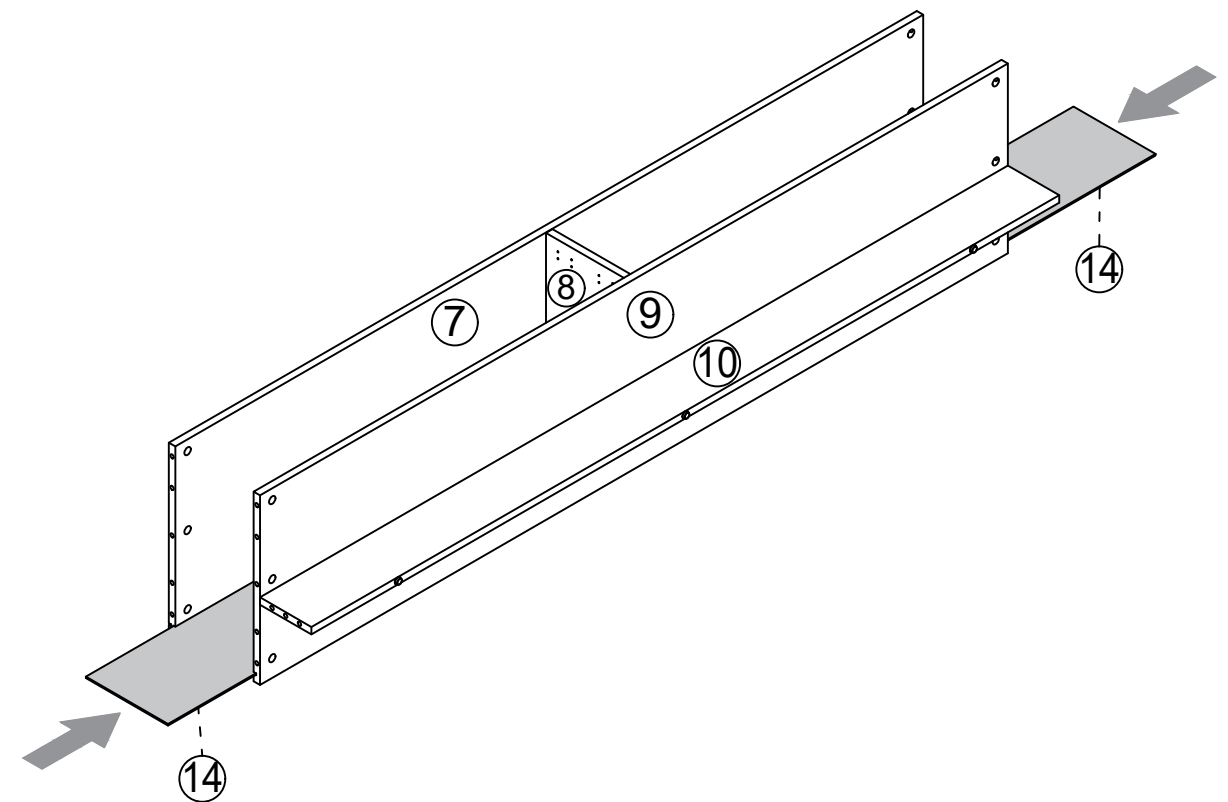


 
 
Step 5

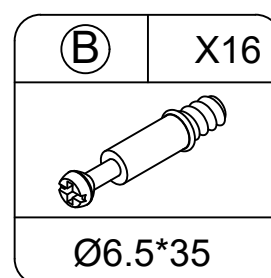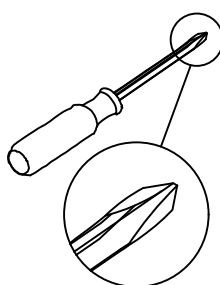

  
Fix accessory (B) onto panels (2) and (3).

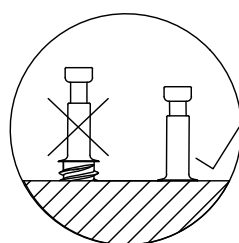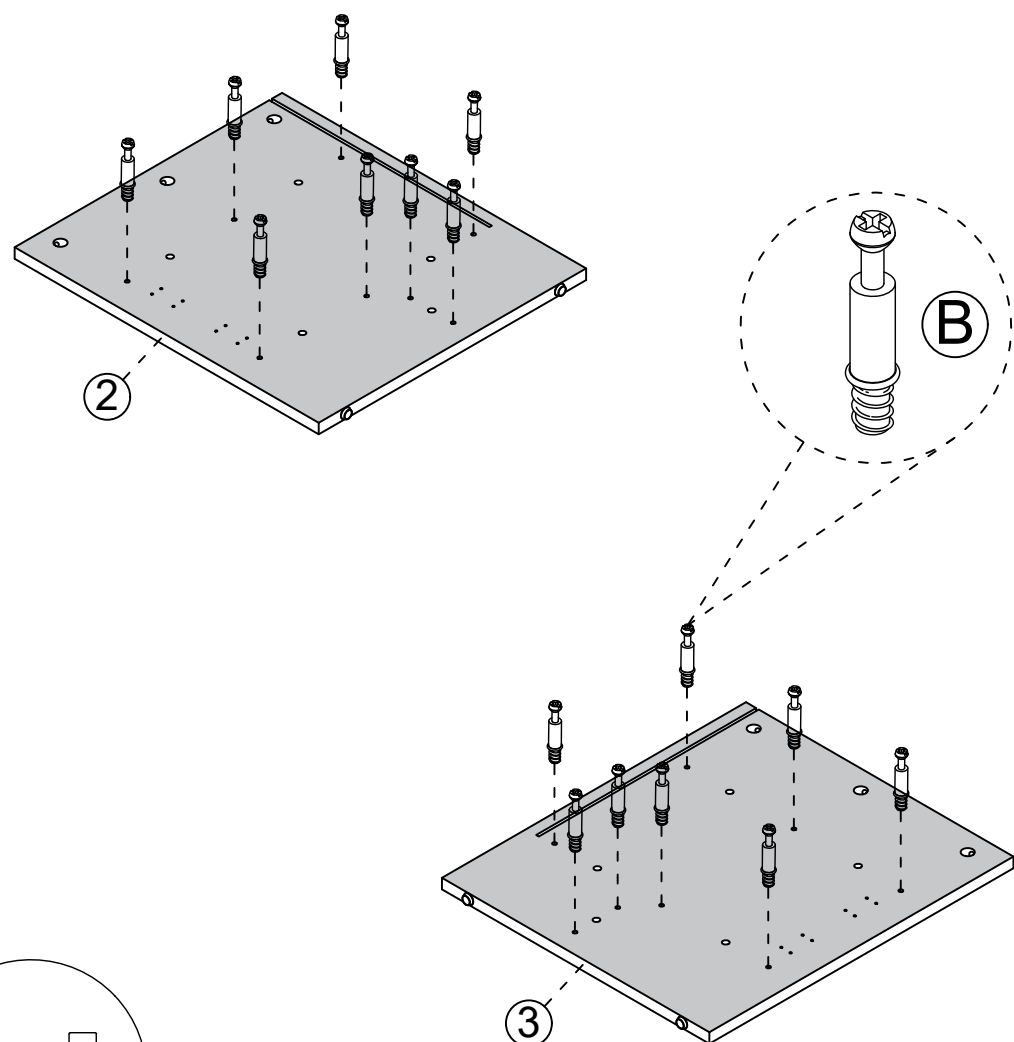

   
Step 6

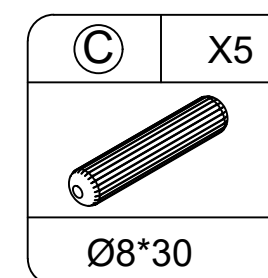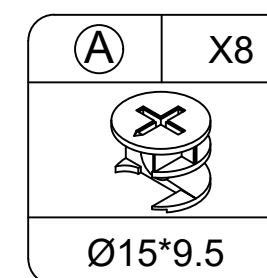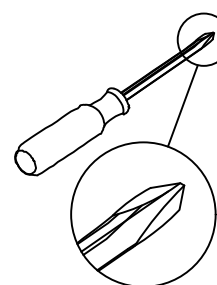

 Insert accessory (C) into the holes of panels (7), (9), and (10) to connect to panel (2), then secure with accessory (A).



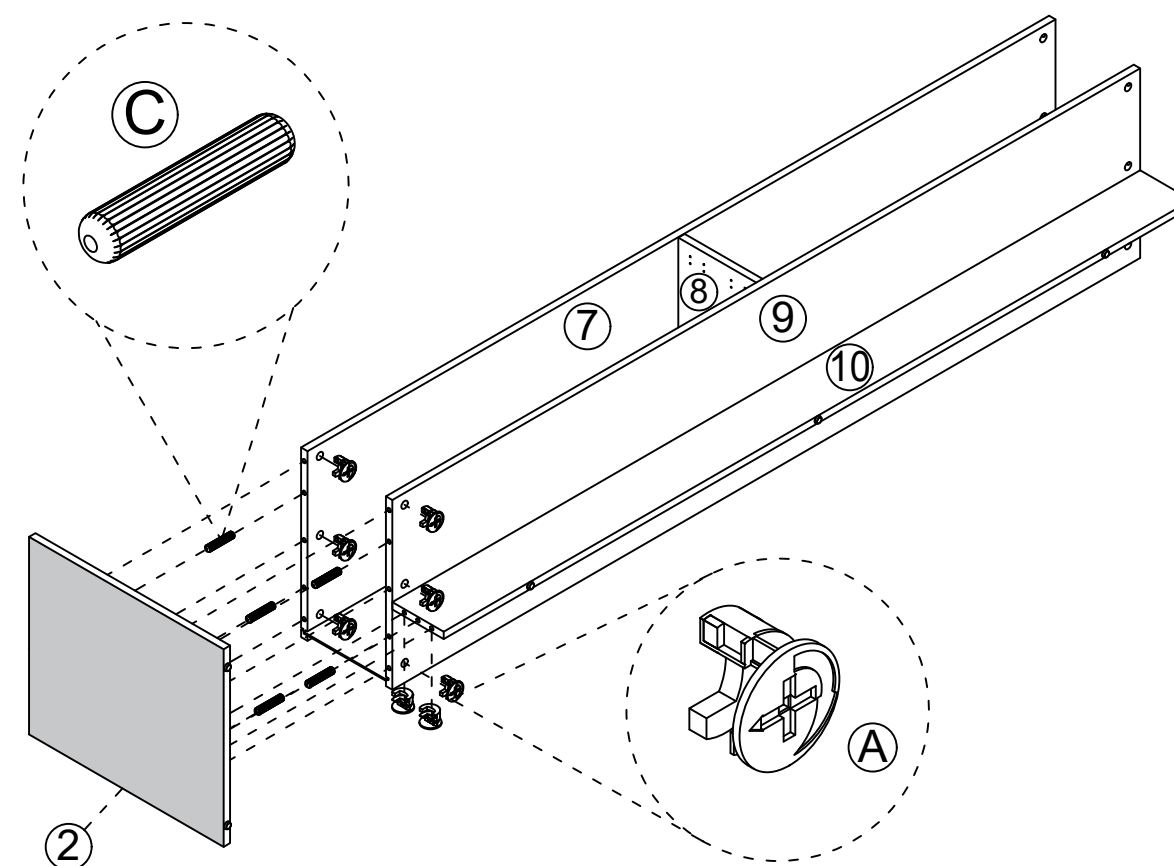


 Insert the cam bolt into the hole first, then insert the cam lock and lock it.

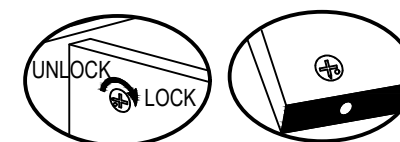


Proper orientation of CAM LOCK

   
Step 7

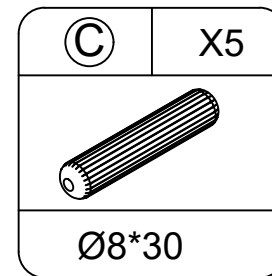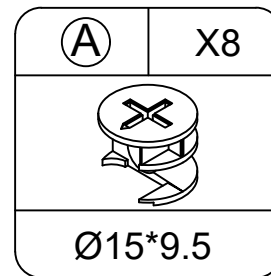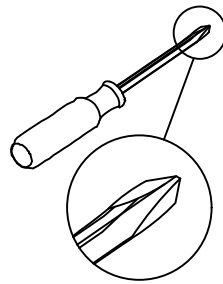



 
Insert accessory (C) into the holes of panels (7), (9), and (10) to connect to panel (3), then secure with accessory (A).

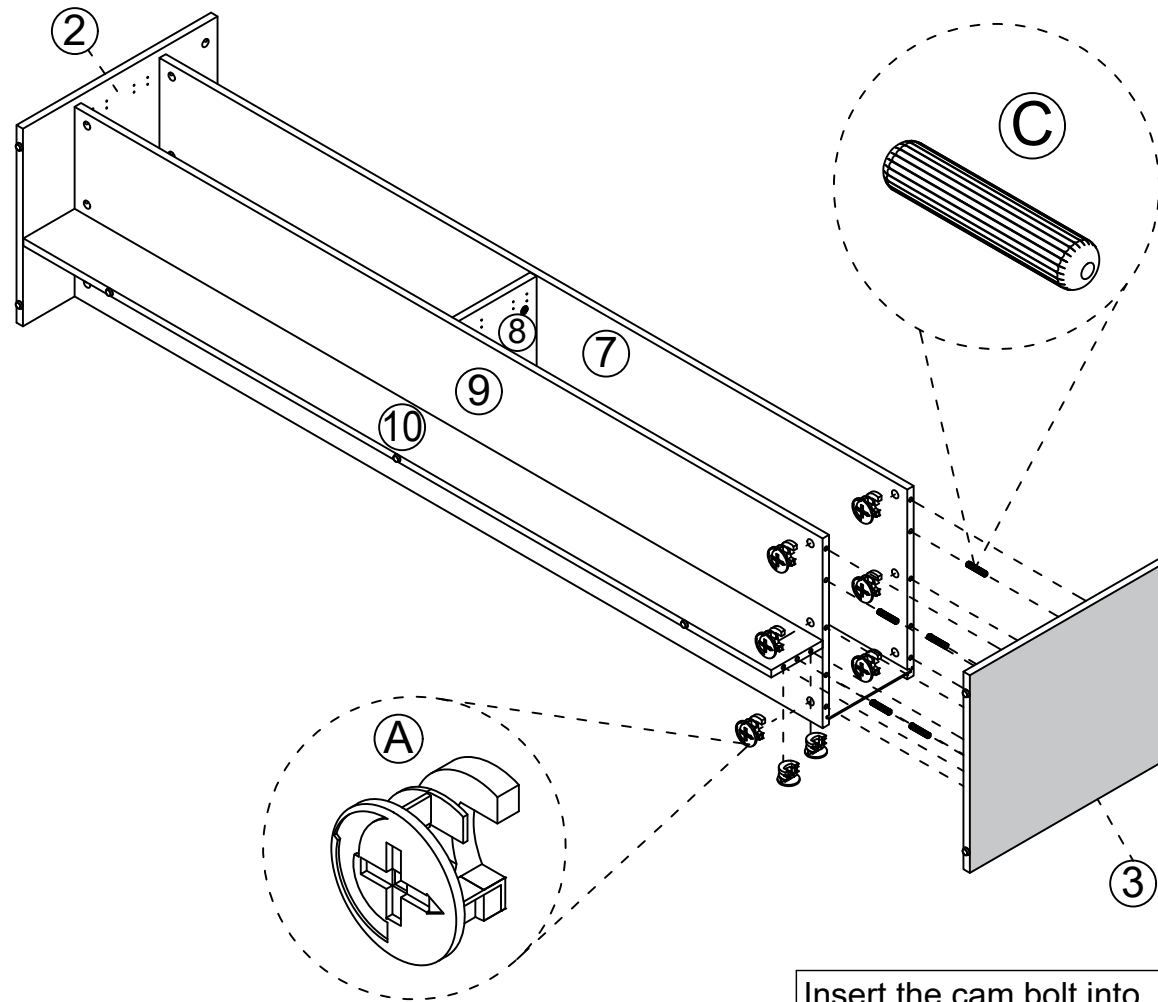


 
Insert the cam bolt into the hole first, then insert the cam lock and lock it.

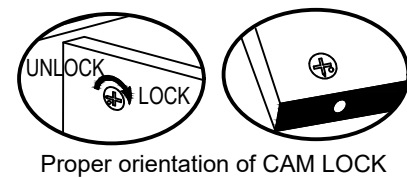

  
 
Step 8

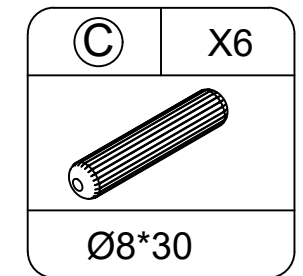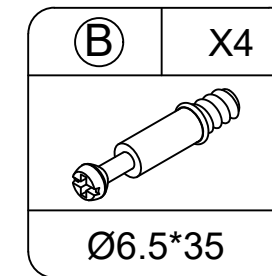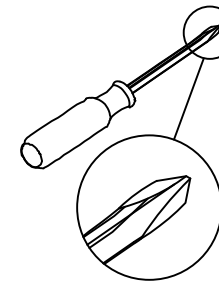

  
Fix accessory (B) onto panel (7), then insert accessory (C) into the holes of panels (2), (3), and (7).

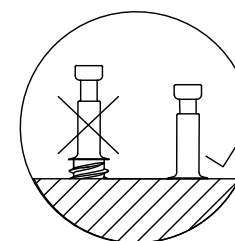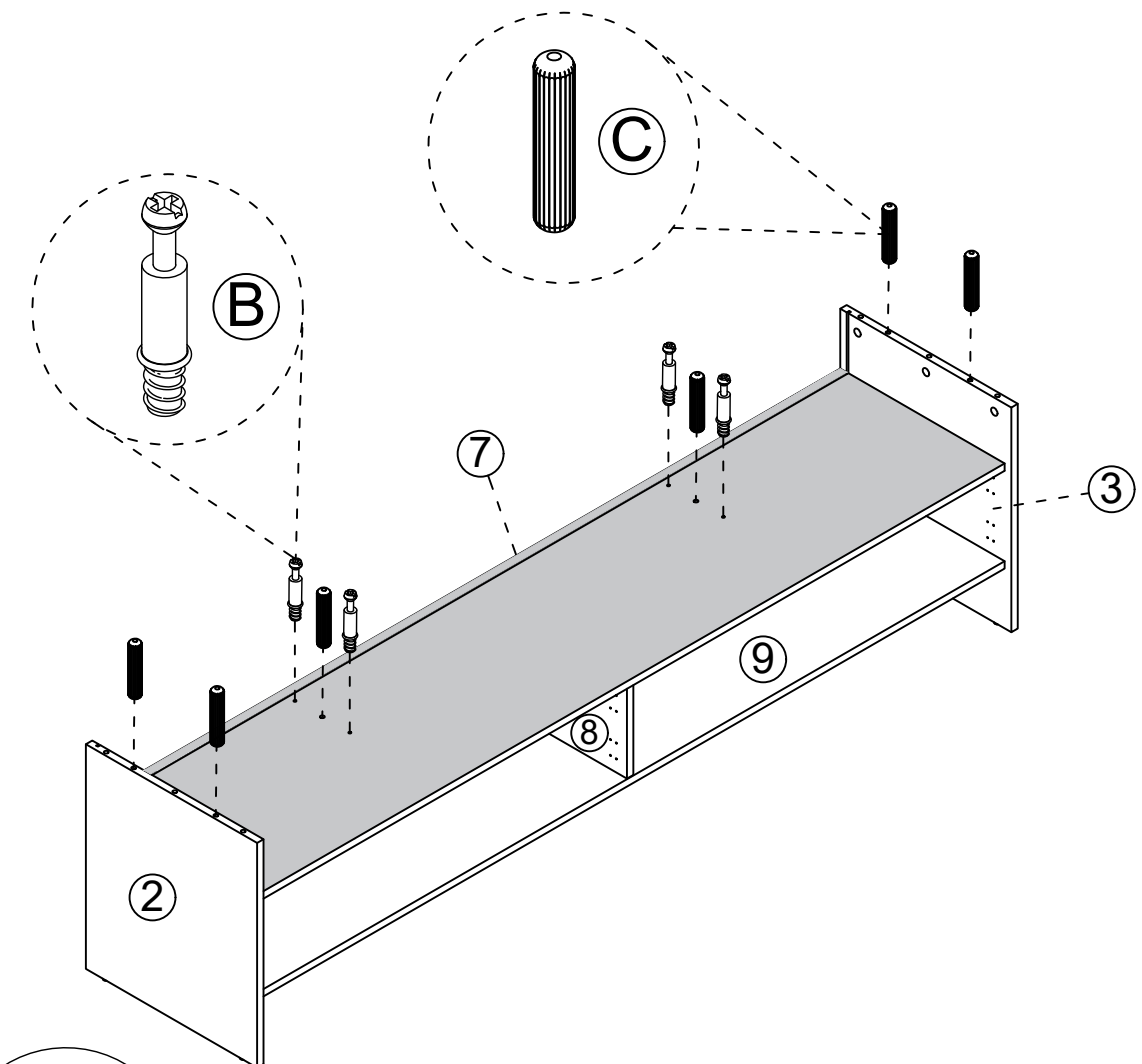

  
Step 9

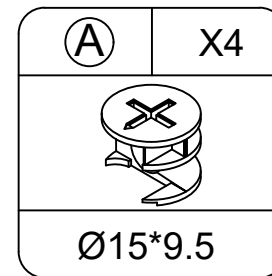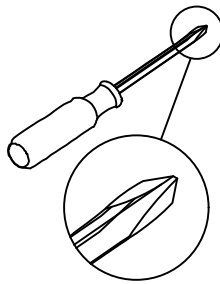

 Connect panel (5) to panel (7), then secure with accessory (A).

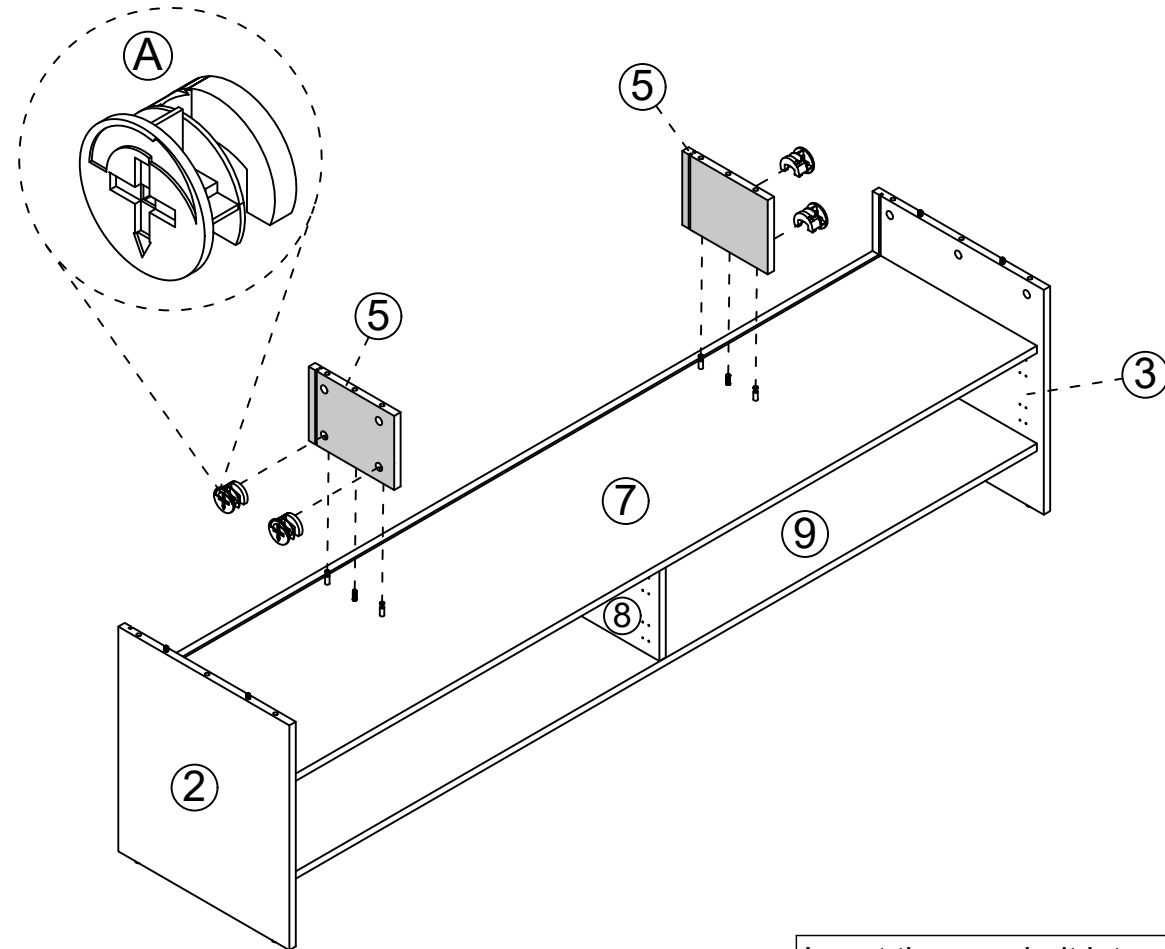

 
Insert the cam bolt into the hole first, then insert the cam lock and lock it.

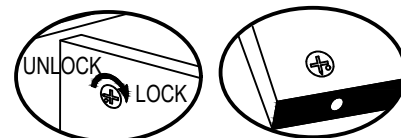




Proper orientation of CAM LOCK

Step 10


 
Slide panels (12) and (13) along the grooves of panels (2), (3), and (5).

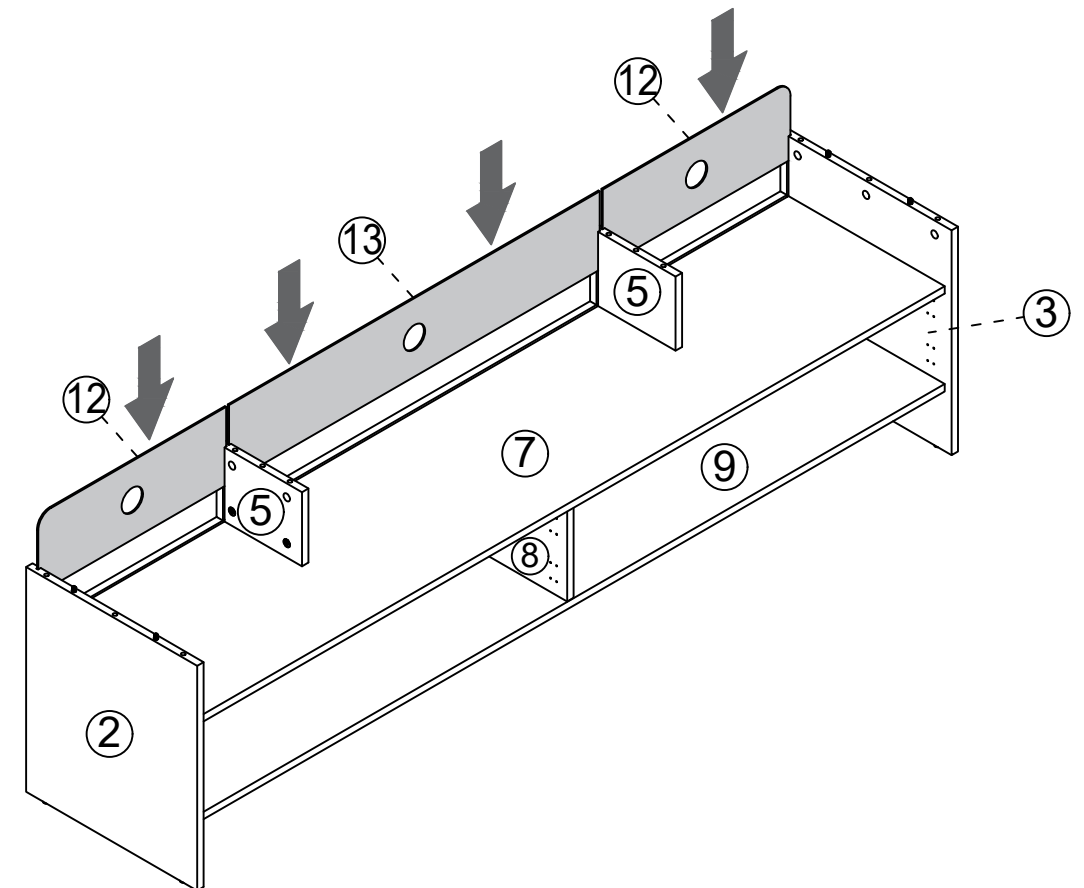

 
 
 
Step 11

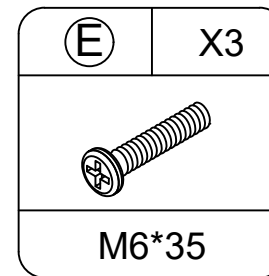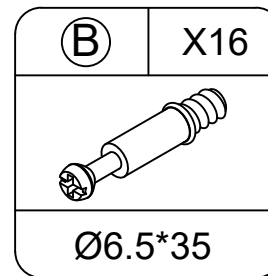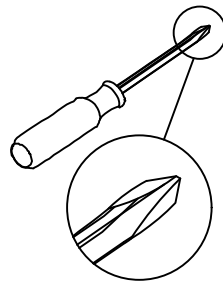

  
Fix accessory (B) onto panels (1) and (4), then connect panel (6) to panel (1) and secure with accessory (E).

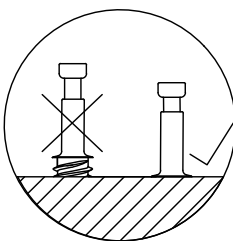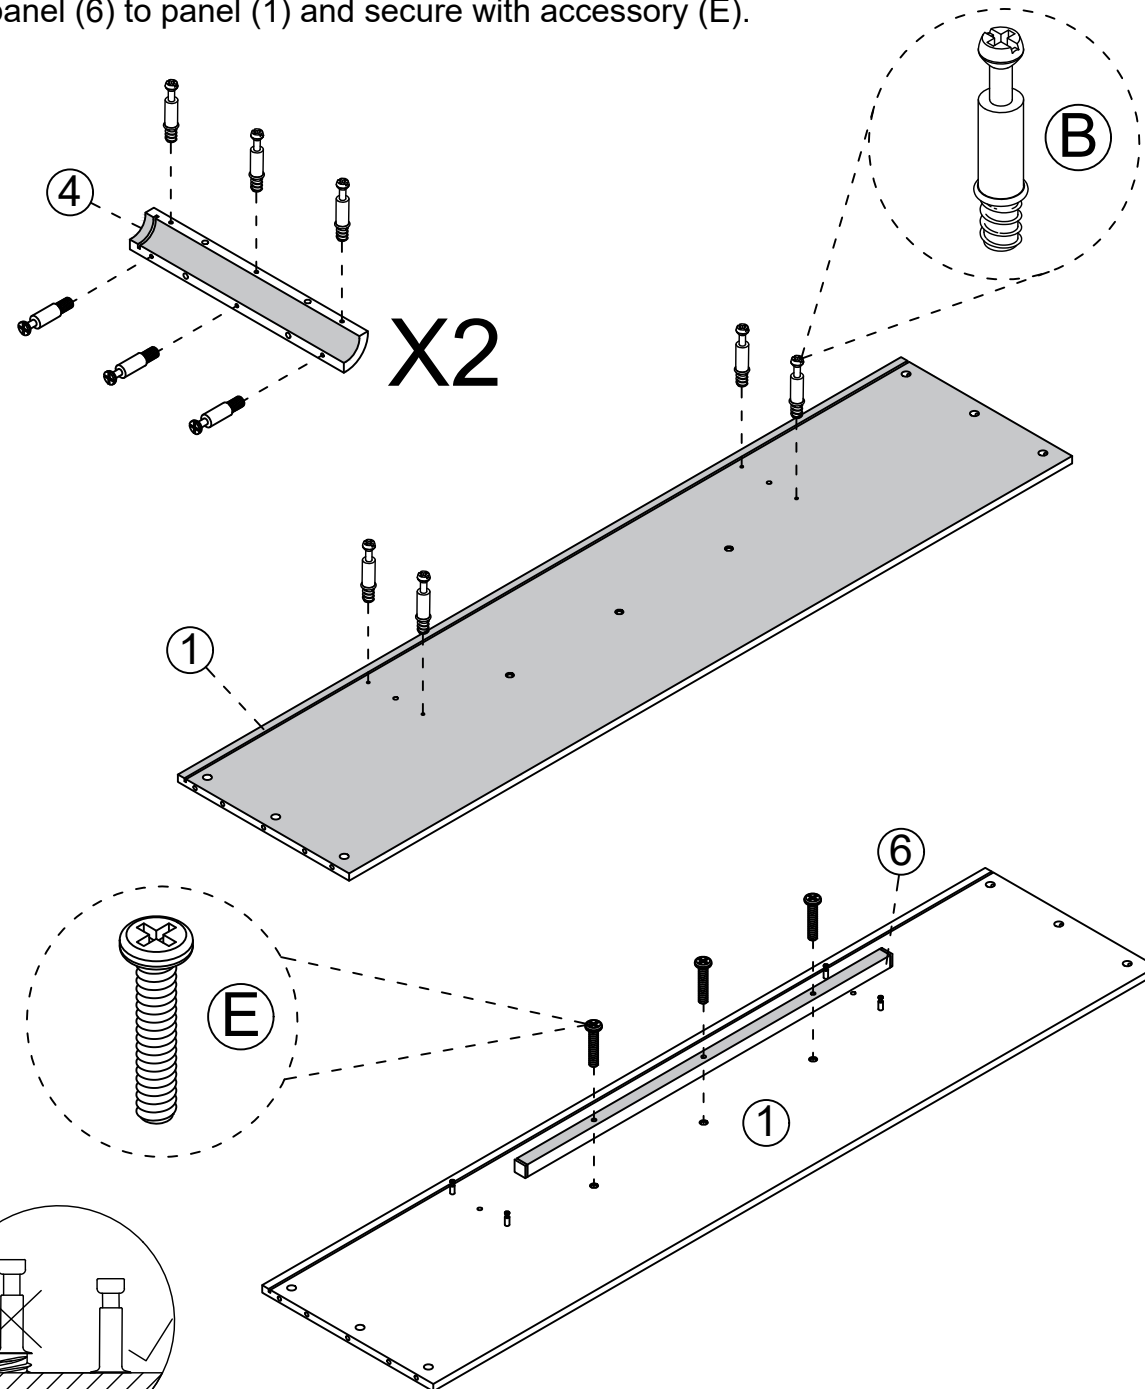

   
Step 12

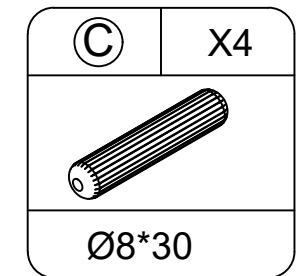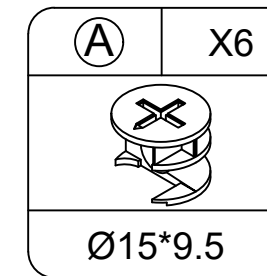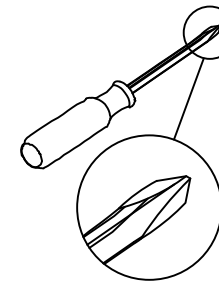

 Insert accessory (C) into the hole of panel (1) to connect to panel (4), then secure with accessory (A).



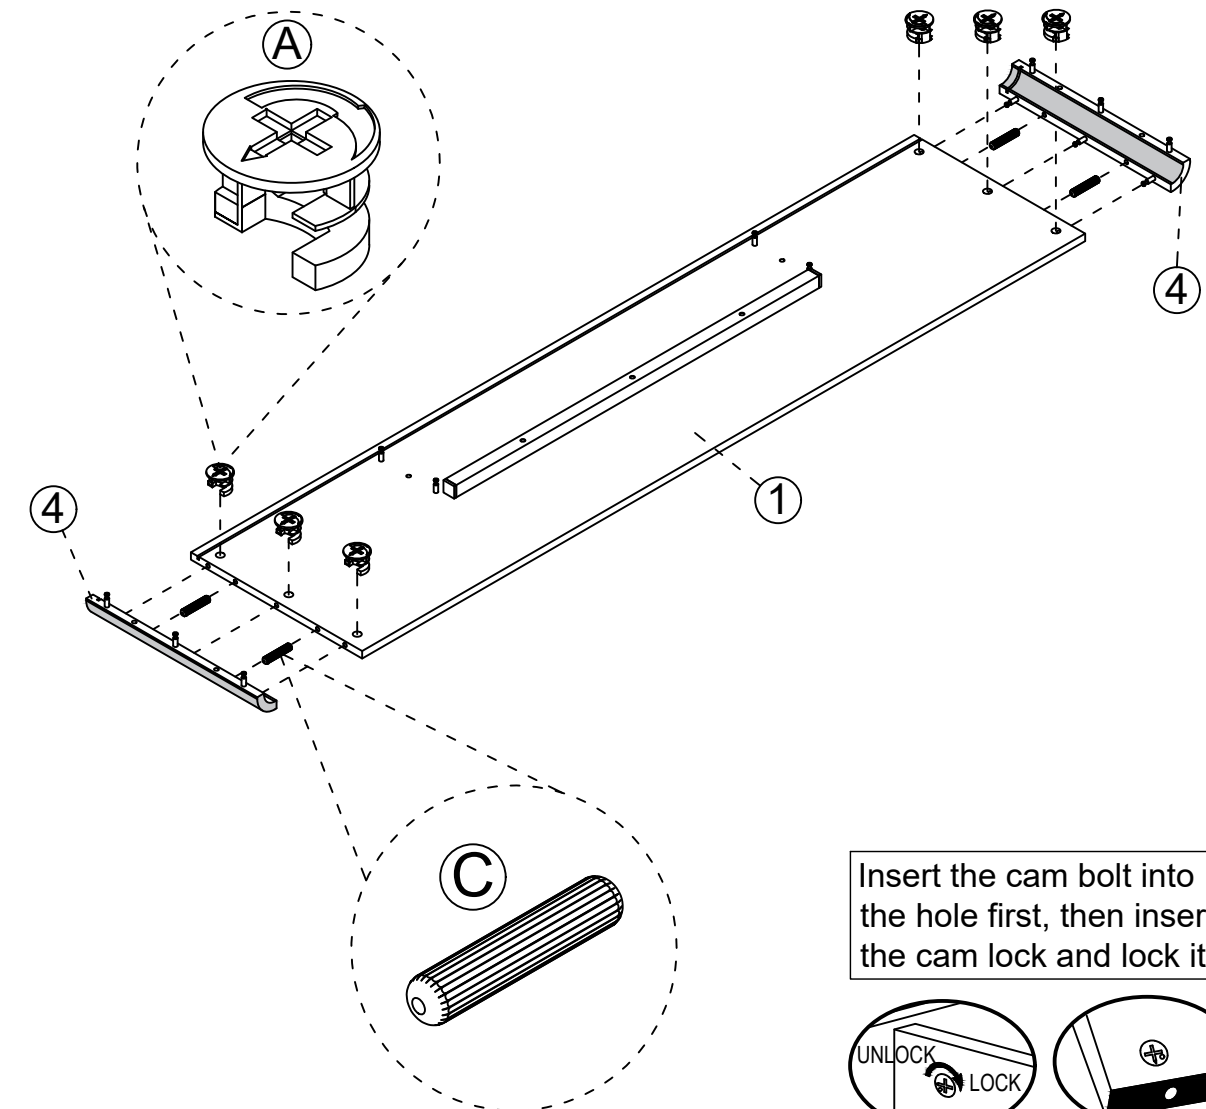


 Insert the cam bolt into the hole first, then insert the cam lock and lock it.

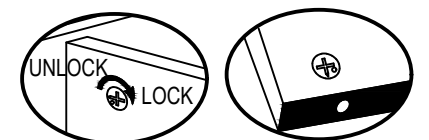


Proper orientation of CAM LOCK

   Step 13

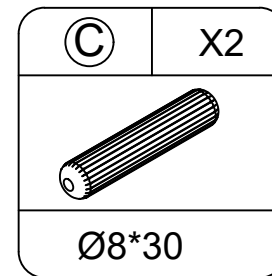
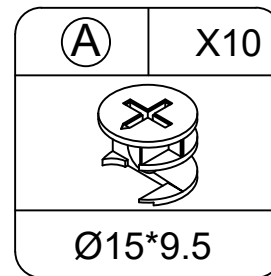
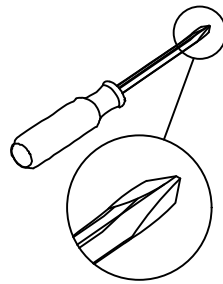


THIS STEP REQUIRES 2 PEOPLE

 
Insert accessory (C) into the hole of panel (5) to connect to panel (1), then secure with accessory (A).

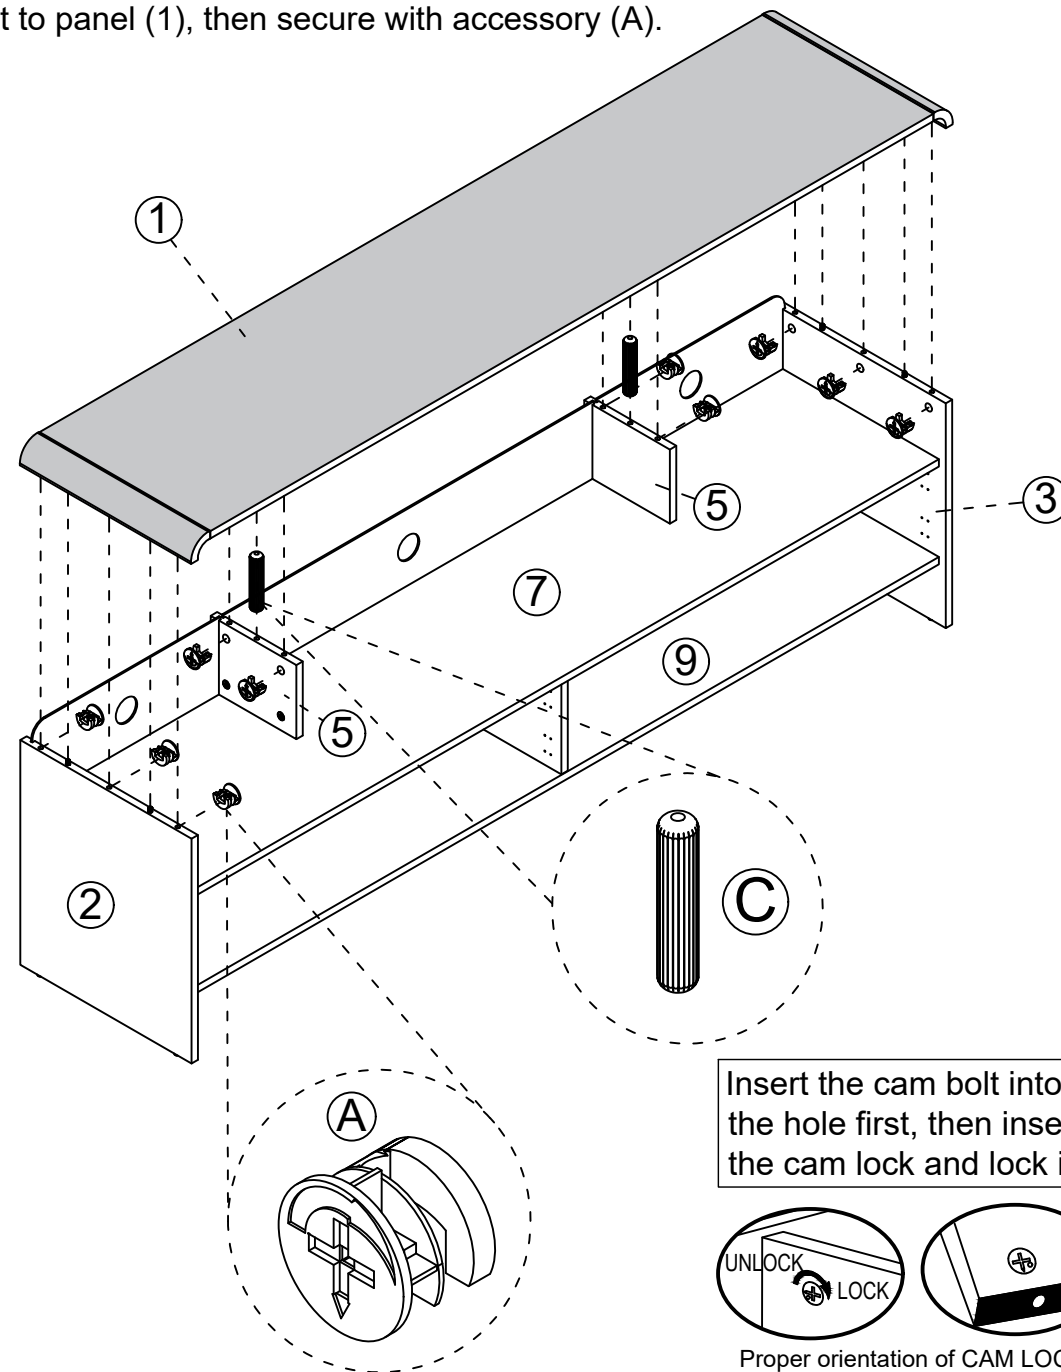

   
Step 14

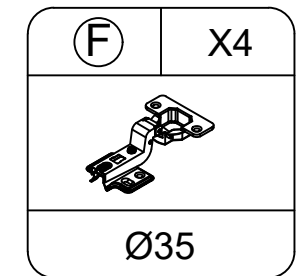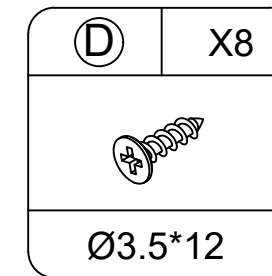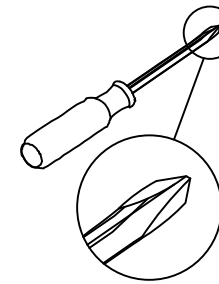

 Use screws (D) to fix accessory (F) separately onto panels (11) and (17).

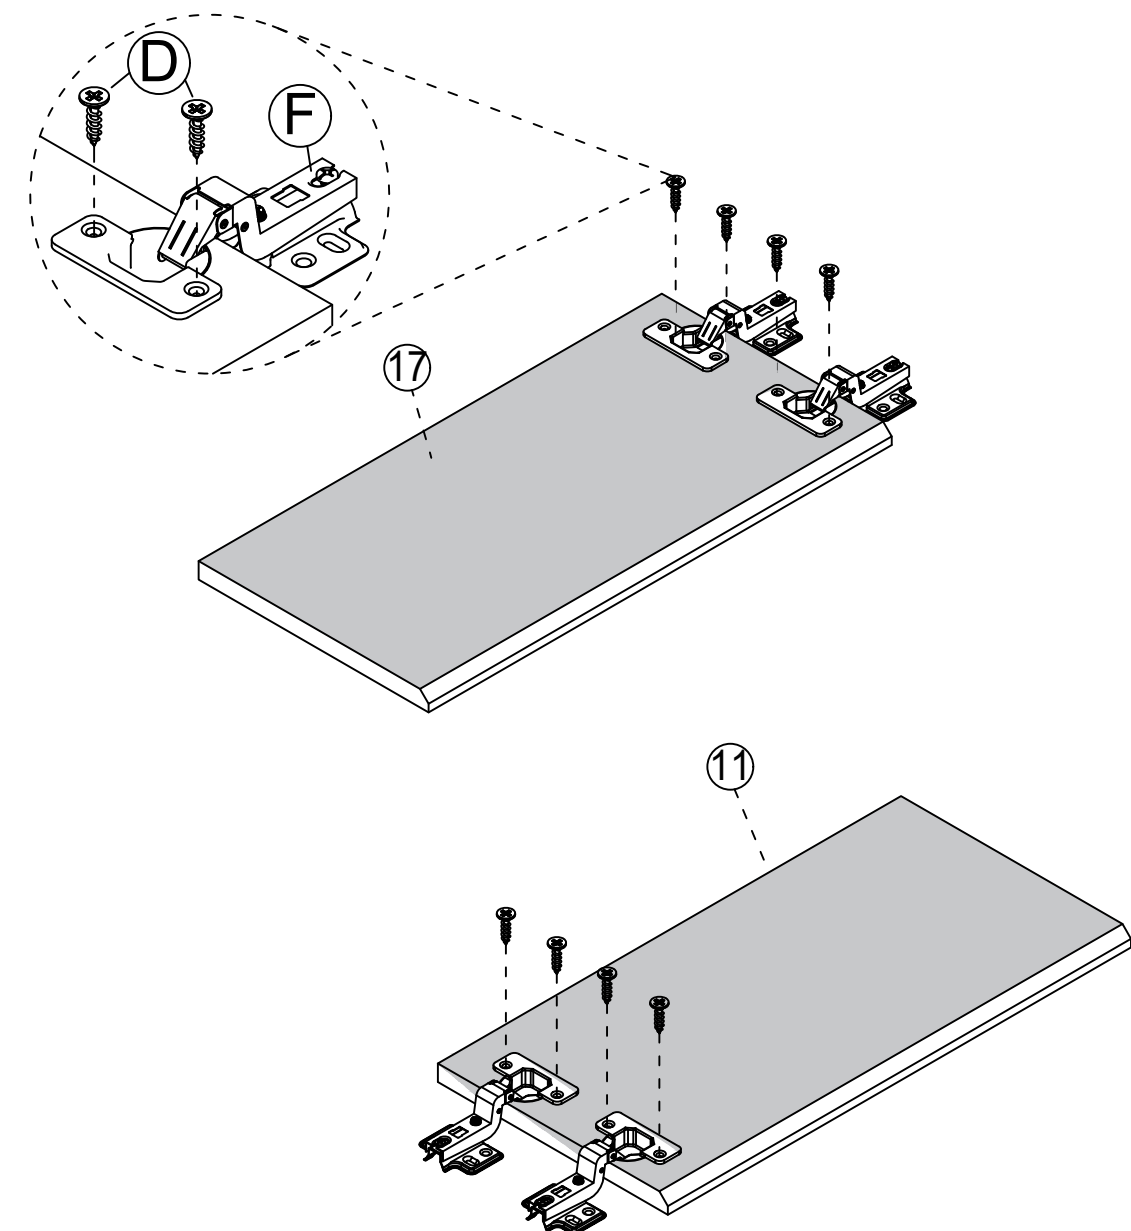


 Step 15

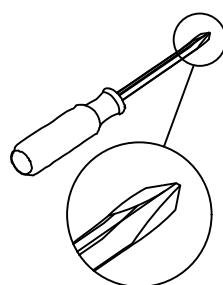


(D)	X16
Ø3.5*12	

 Use accessory (F) to connect cabinet doors (11) and (17) to panels (2) and (3), then secure with screws (D).

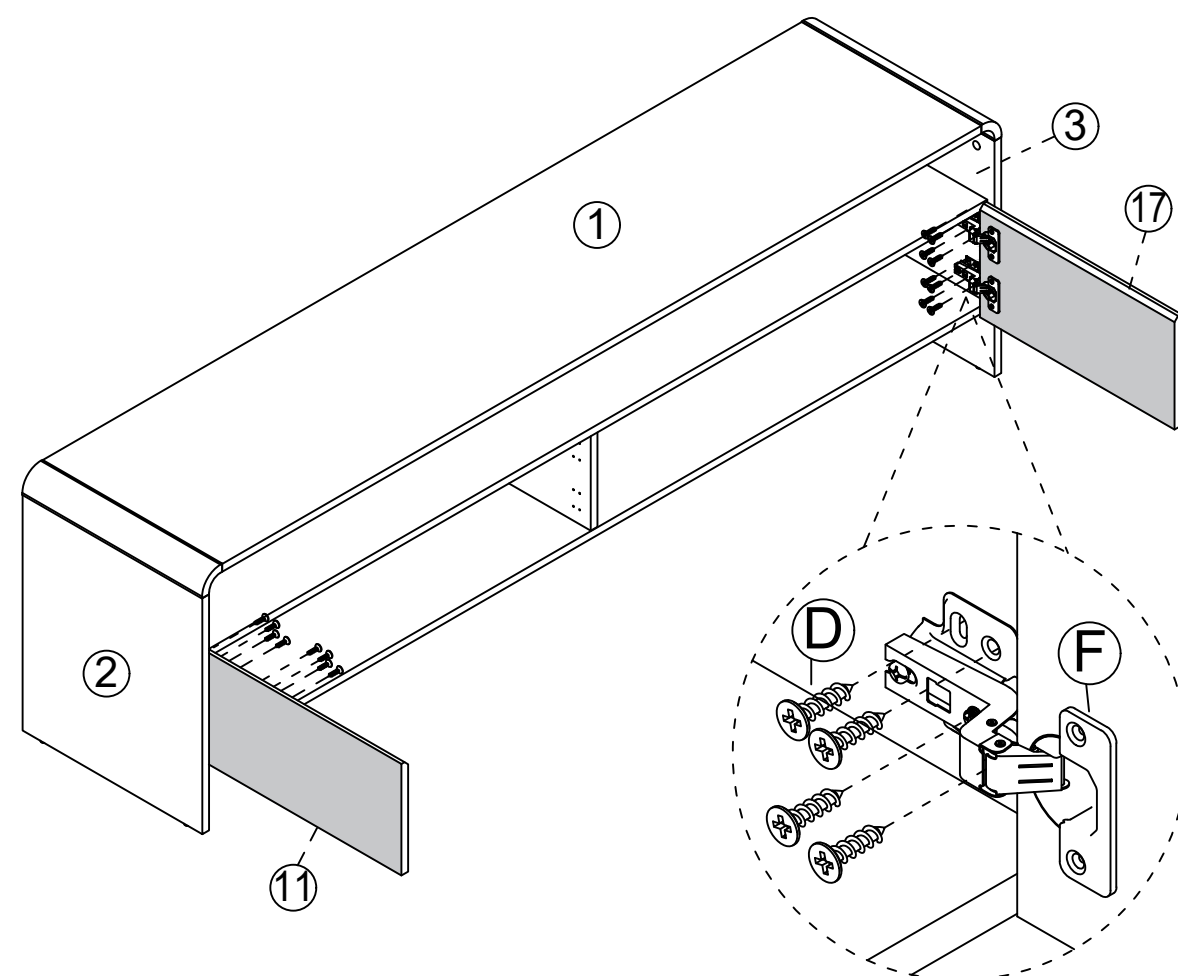

 
Step 16

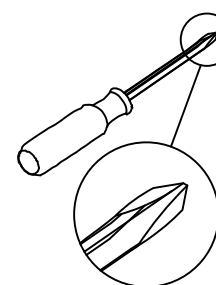


(D)	X8
Ø3.5*12	

(G)	X4
Ø35	

 Use screws (D) to fix accessory (G) separately onto panels (15) and (16).

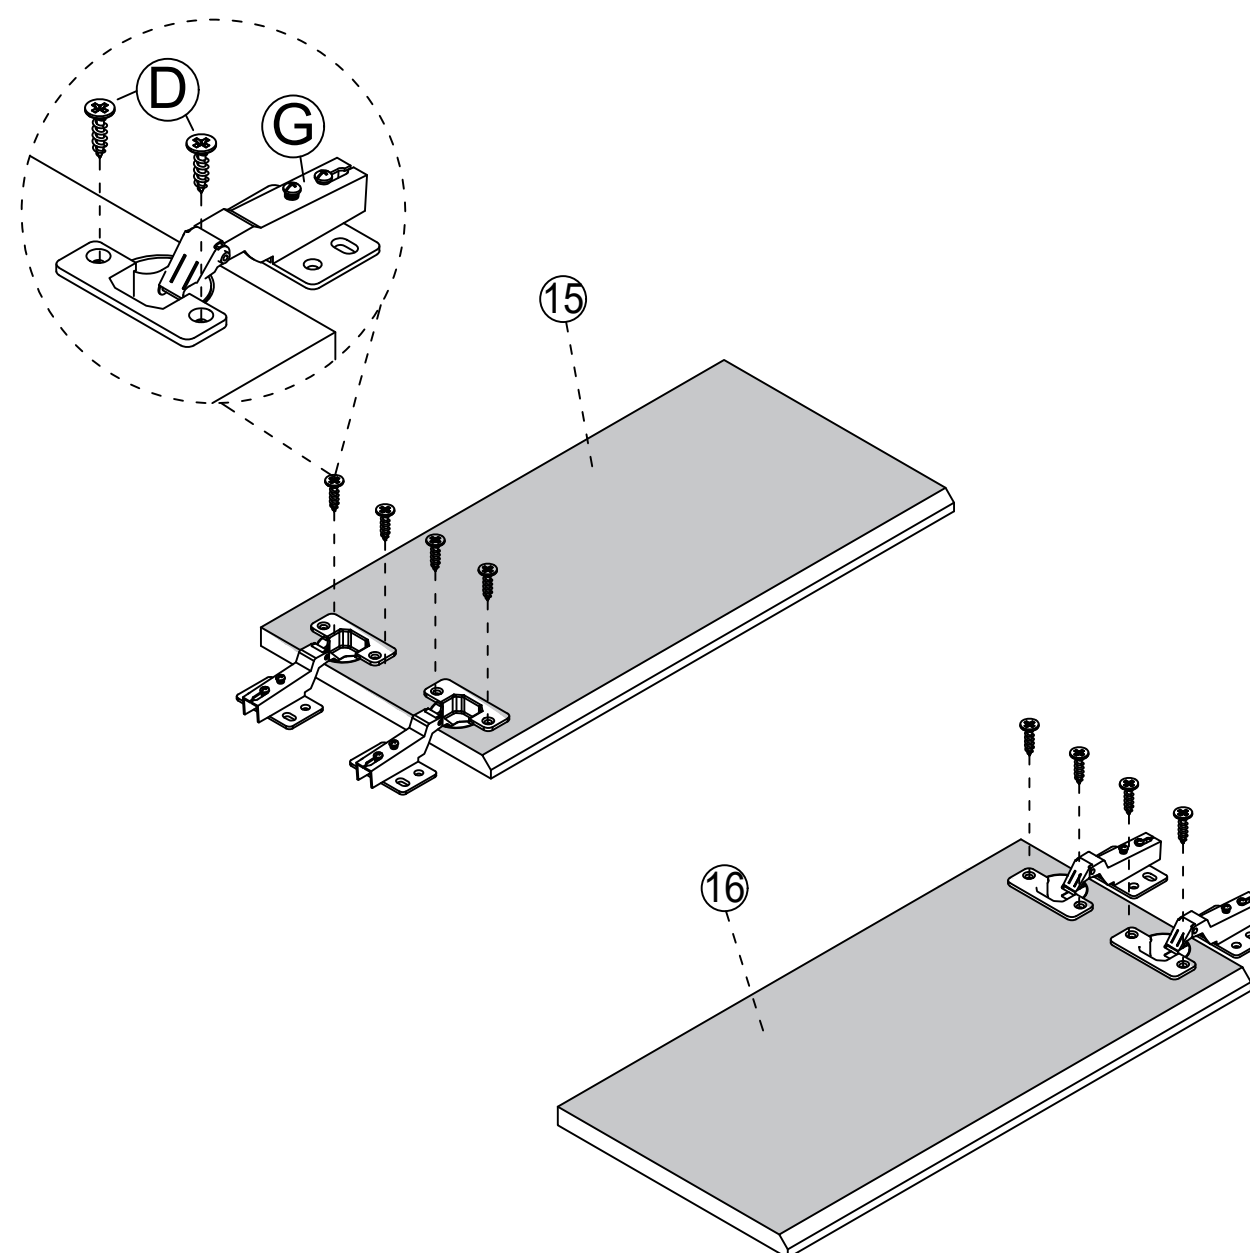

 
Step 17

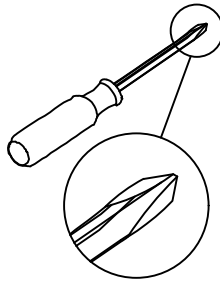


(D)	X8
Ø3.5*12	

Use accessory (G) to connect cabinet door (15) to panel (8), then secure with screws (D).

 Note: Opening cabinet door (11) before assembling cabinet door (15) will make the assembly process easier.

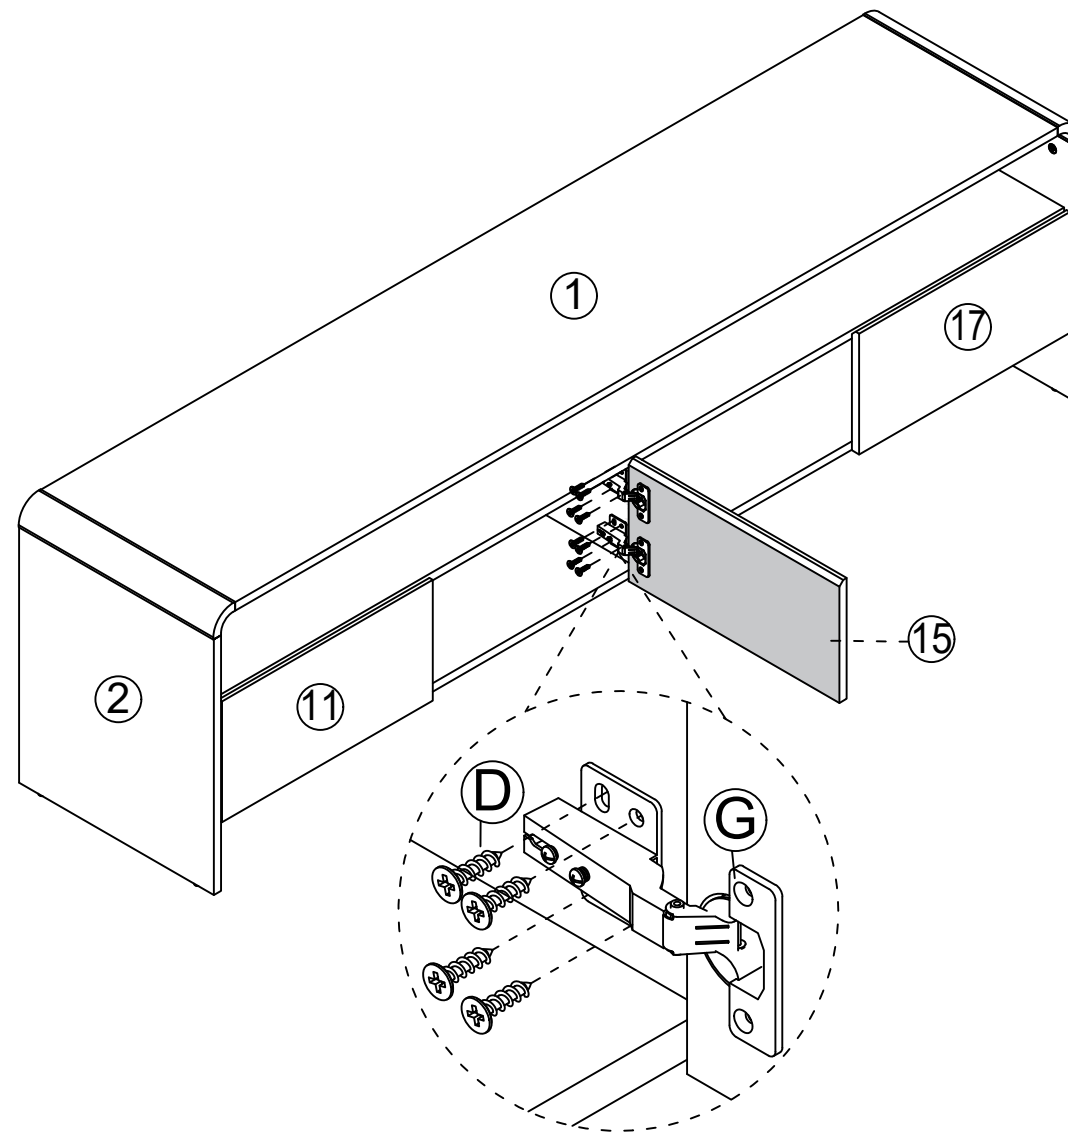

 
Step 18

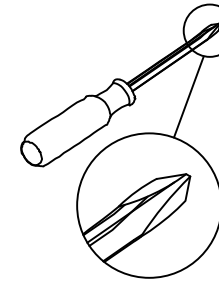

(D)	X8
Ø3.5*12	


Use accessory (G) to connect cabinet door (16) to panel (8), then secure with screws (D).

 Note: Opening cabinet door (17) before assembling cabinet door (16) will make the assembly process easier.

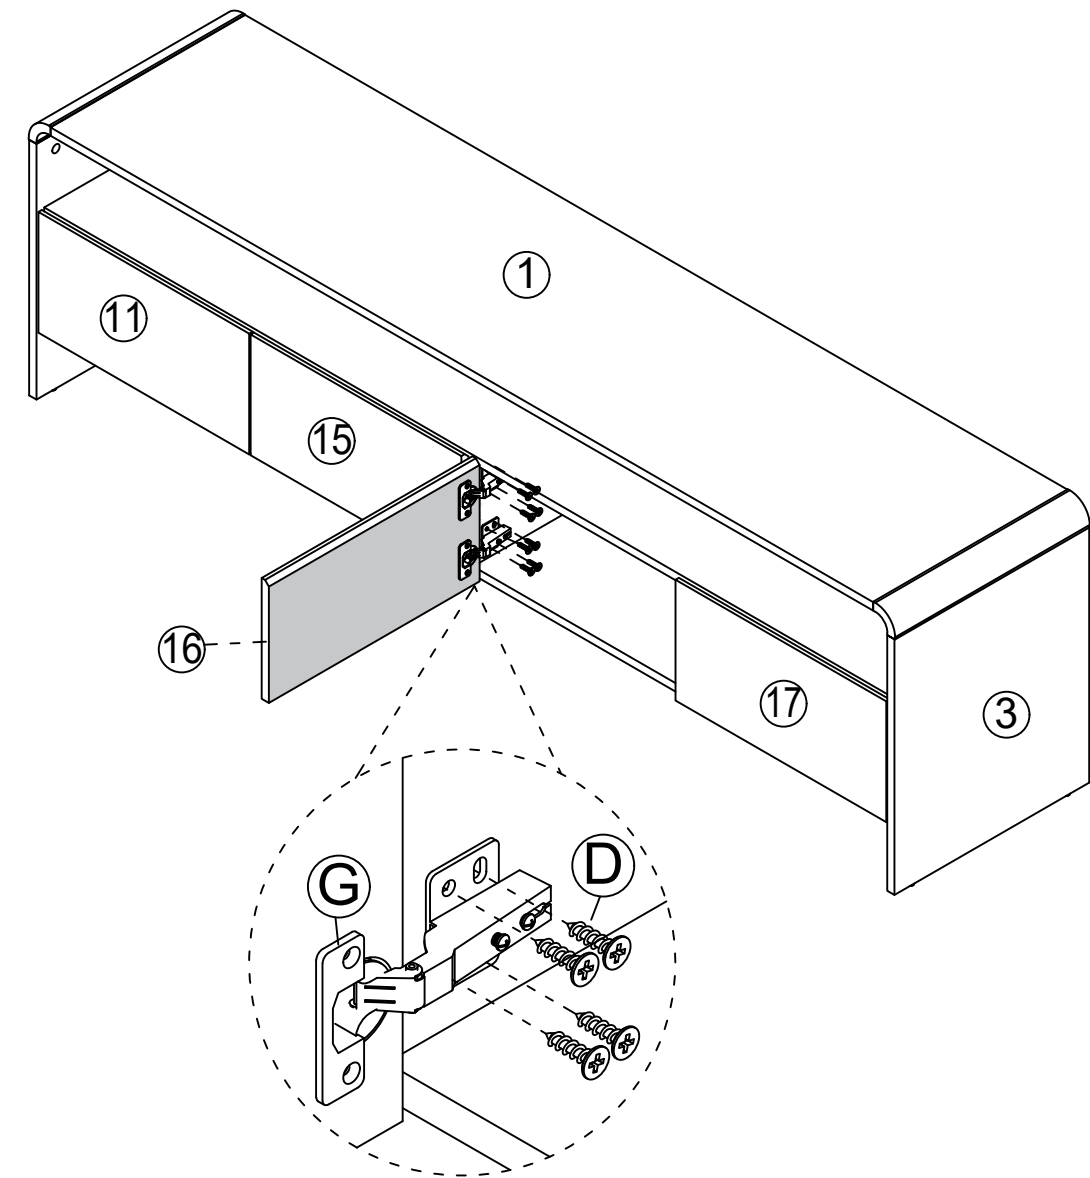


Step 19

 If the cabinet door is too high or too low

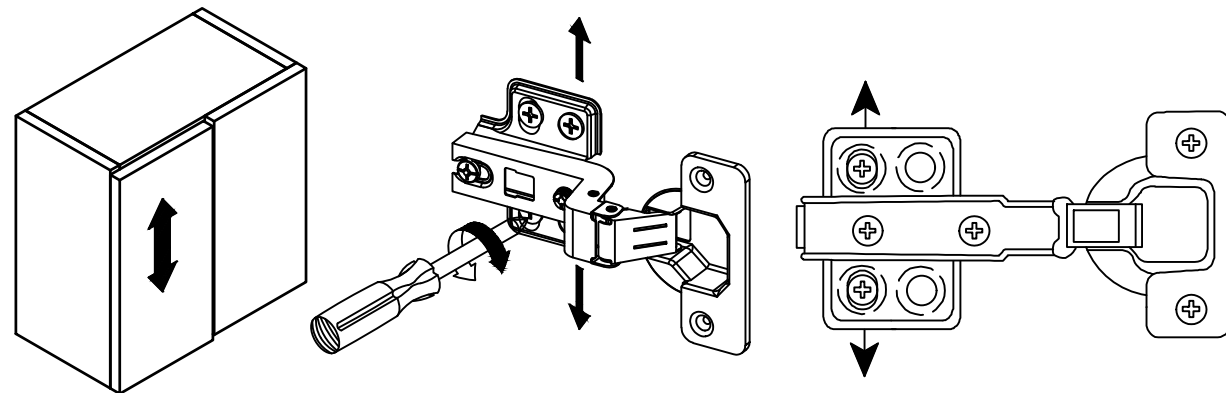


loosen the height adjustment screws, move the door up or down until level, then tighten the screws.

 If the four sides of the cabinet door are not flush with the cabinet

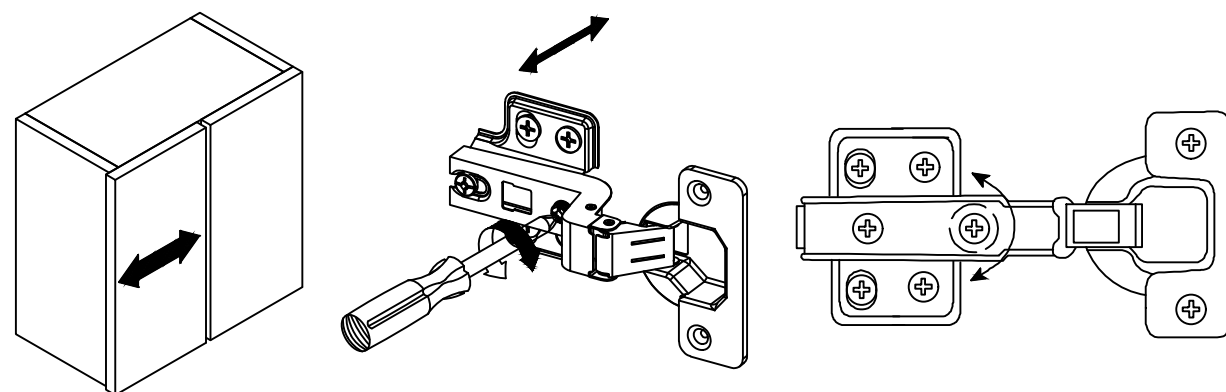



adjust the lateral screws: rotate clockwise to increase the hinge gap, or counterclockwise to reduce it, until aligned.

 If the gap between the hinge and the cabinet is too large or too small

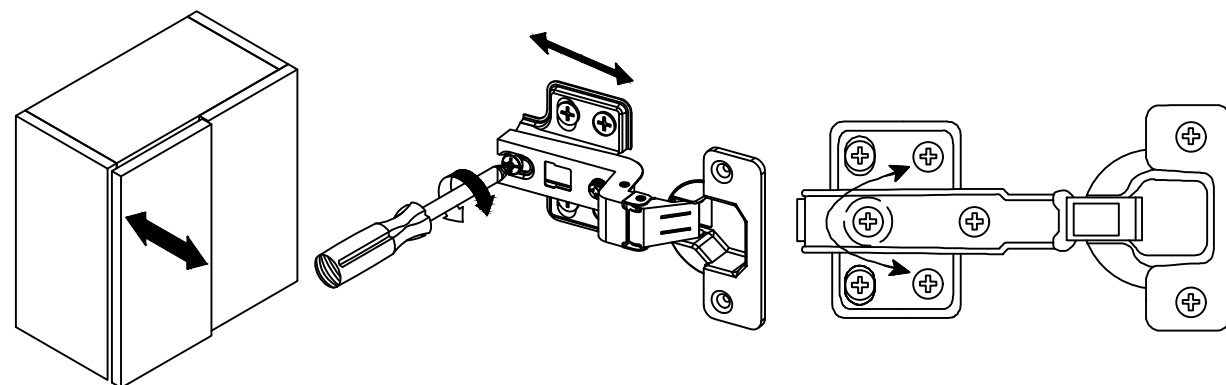


loosen the in-and-out screws, adjust the gap evenly, then tighten the screws.

 
 
Step 20

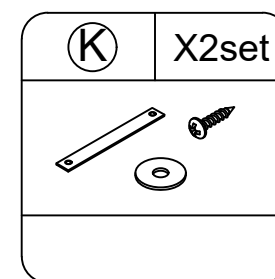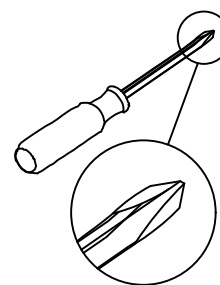

 
Install accessory (K) onto panel (1) as shown in the diagram.

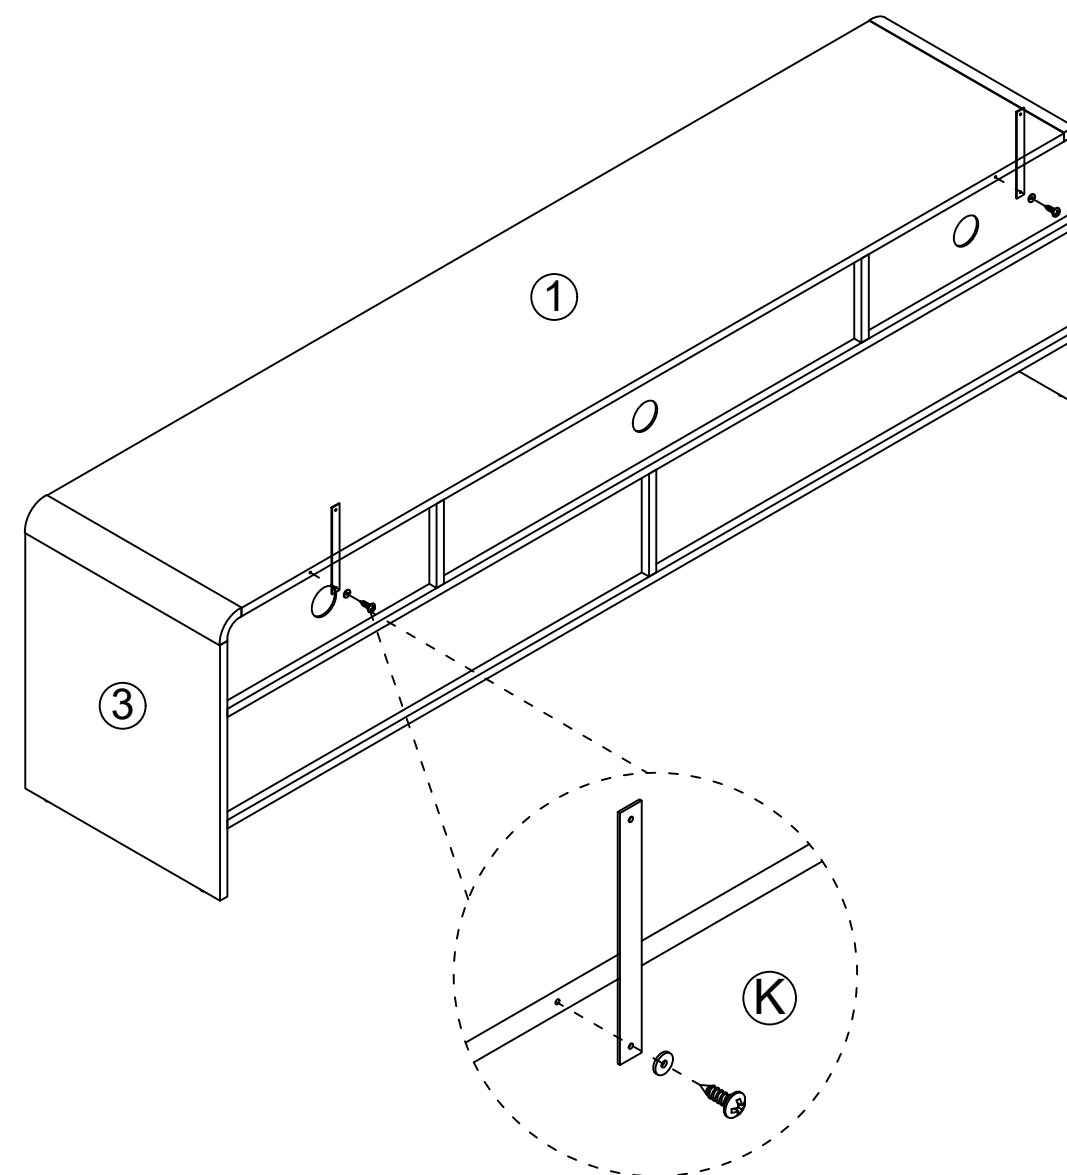

  
Step 21

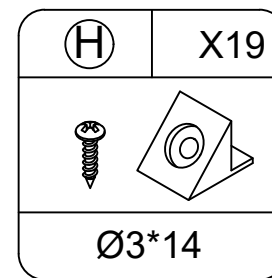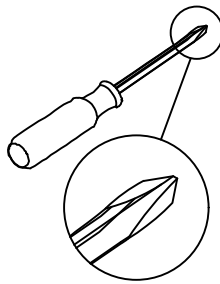

 
Insert plastic clips (H) into the grooves of back panels (12), (13), and (14), then tighten through the holes of the clips to lock them in place.

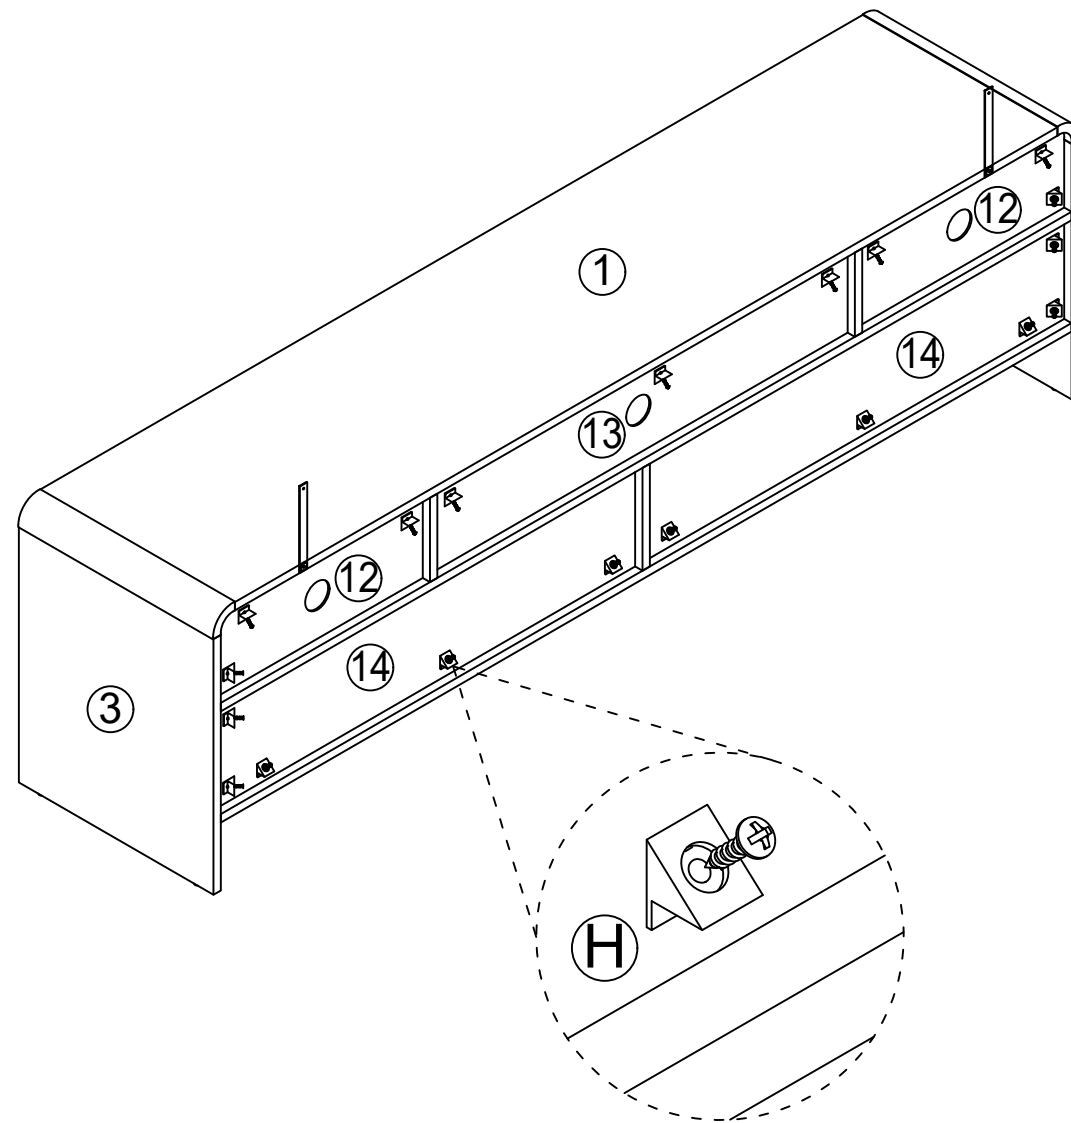

 
Step 22

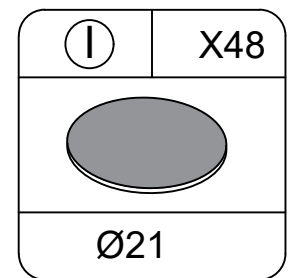

 Apply 48 screw hole stickers (I) to cover exposed screws and improve the overall appearance. This step may be skipped if desired.

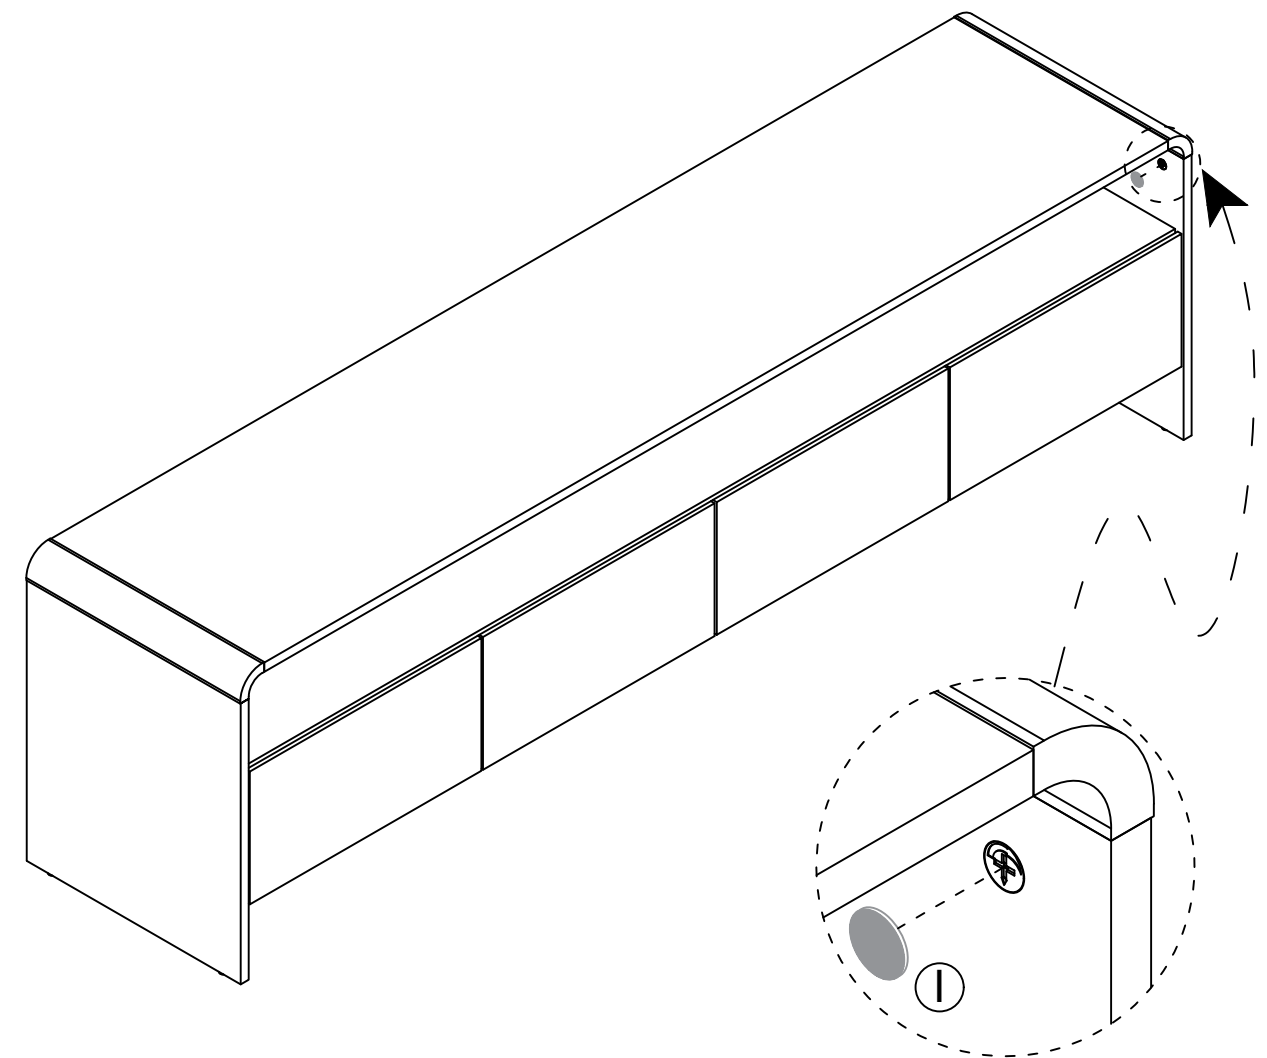

 Step 23

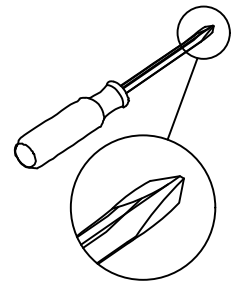

⚠ WARNING

 
 


Children have died from furniture tipover. To reduce the risk of furniture tipover:


- ALWAYS install Anti-tip device provided.
- Maximum TV Size 70" Maximum Load: 50 kg/ 110 lb
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!


Install the tipping restraint hardware

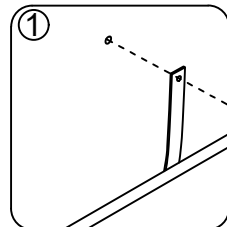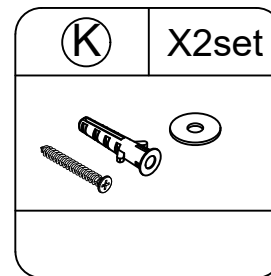

 
1. make mark on the wall

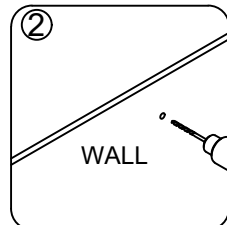

 2. drill two Ø6 holes on the wall

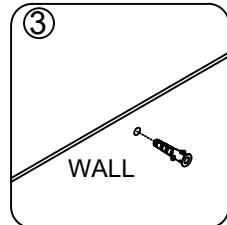

 3. put two anchors in the holes

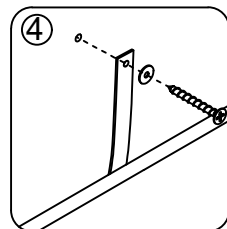

4. fix the device on the wall by the long screws

